



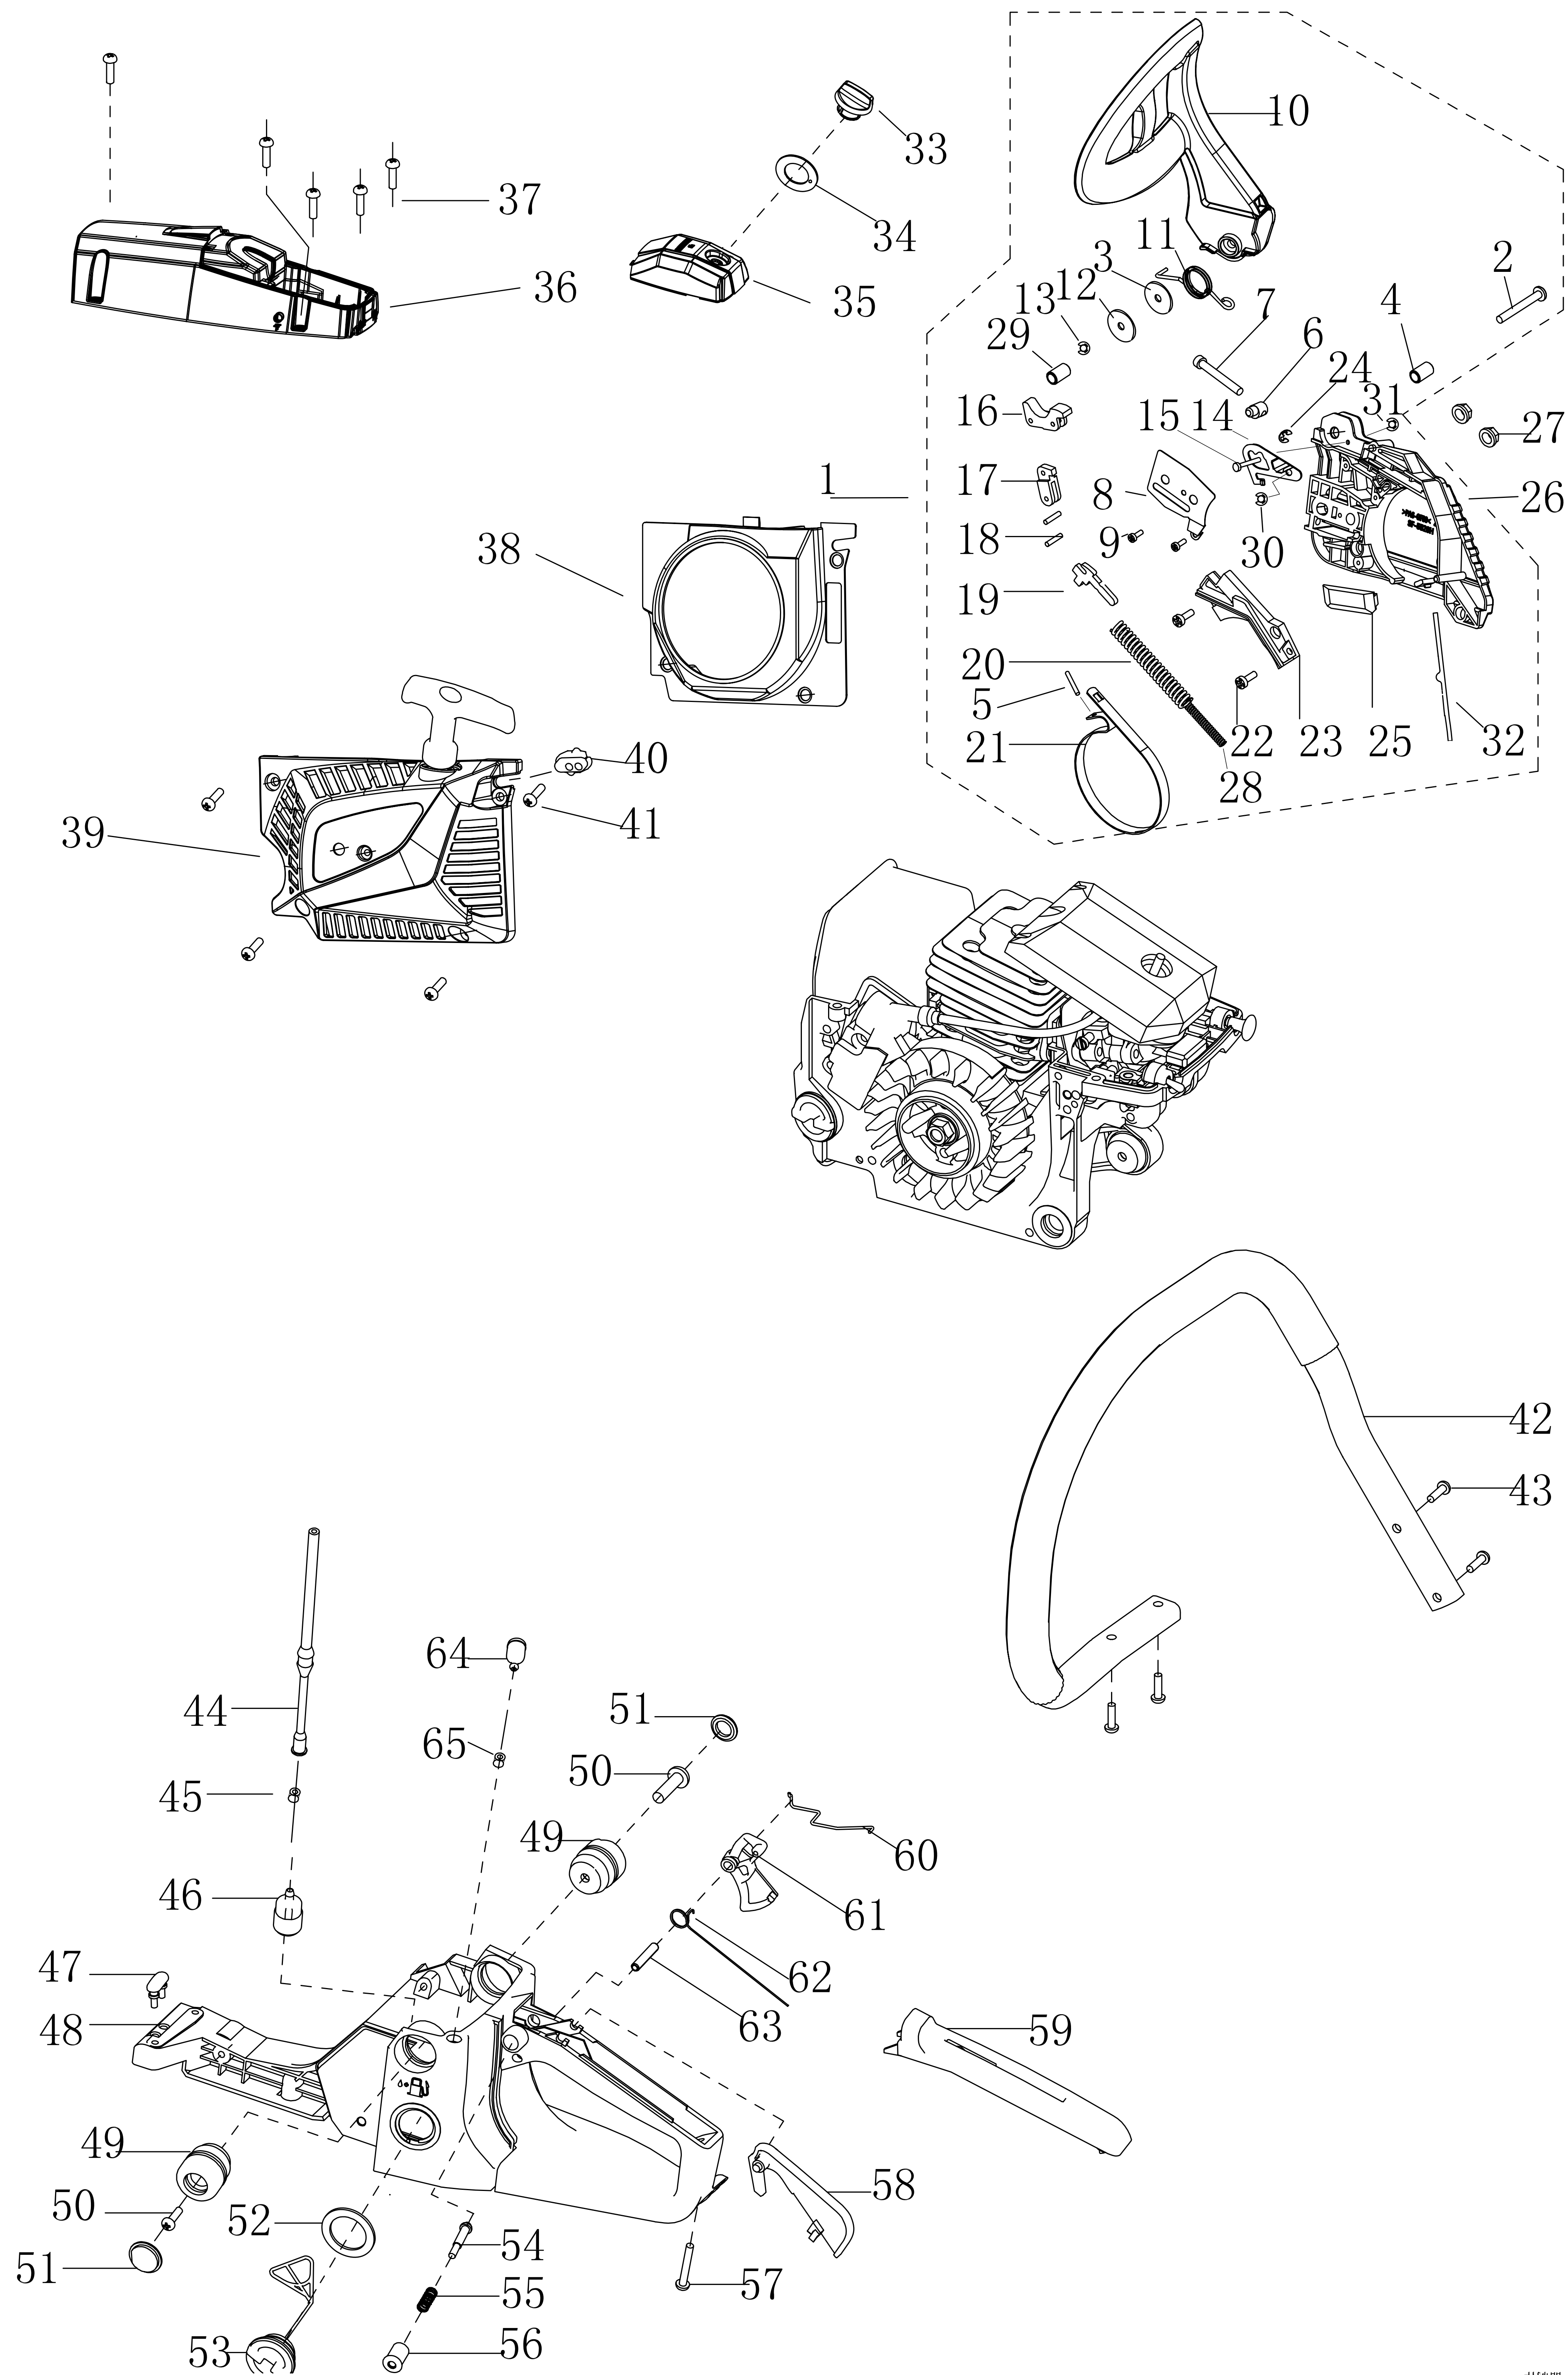

1	YD-58.4	刹车总成 Brake assembly	1	41	GB/T 70.1	Screw M5×18	4
2	YD-58.4-2	4600前挡板销 4600 Head board pin	1	42	YD-58.2	4600提把总成 Handle ass'y	1
3	1E34F-13	波形垫 Corrugated gasket	1	43	YD-58-1	梅花一字开槽自攻钉 Tapping Screw	4
4	YD-58.4-14	4600挡板销套 4600 Baffle pin sets	1	44	YD-58.3-2	4600燃油管 fuel pipe	1
5	GB/T 879	销3*10 Pin3*10	1	45	YD-58.3-13	配重块 Clump weight	1
6	YD-58.4.1-1	涨紧螺钉杆 Distensible bolt	1	46	1E48F.9.3	过滤器Fuel Cleaner Cover	1
7	YD-58.4.1-2	调节销 Adjust pin	1	47	YD-58.3-8	4600双钉减震 Double damping	1
8	YD-58.4-11	4600涨紧被动齿轮压板 4600 Tensioning Cover plate	1	48	YD-58.3-1	油箱 fuel tank	1
9	GB/T 845	Tapping Screw ST4.2×6.5	2	49	YD-58.3-7	4600减震套Damping set	1
10	YD-58.4-1	前挡板 Head board	1	50	GB/T 70.1	Screw M5×12	2
11	YD-58.4-6	4600刹车扭簧 brake spring	1	51	YD-58-5	防尘盖(大) Dust cap (Big)	2
12	GB/T 96	Φ6 Washer	1	52	YD-58.3-14	燃油箱盖密封圈 Fuel Tank Lid Seal ring	1
13	GB/T 896	Φ4开口挡圈 Split washer	1	53	YD-58.3.1	燃油盖总成Fuel Tank Lid	1
14	YD-58.4-5	4600限位板 (A) Limit board A	1	54	YD-58.3-9	按钮轴 Button shaft	1
15	YD-58.4-3	4600限位销 Spacer pin	1	55	YD-58.3-10	辅助启动按钮弹簧 Button Spring	1
16	YD-58.4-12	主杠杆 Main lever	1	56	YD-58.3-11	按钮 Button	1
17	YD-58.4-13	副杠杆 Auxiliary lever	1	57	GB/T 845	Tapping Screw ST4.8×22-F	1
18	GB/T 119	圆柱销3*8 Pin 3*8	2	58	YD-58.3-4	扳机控制臂 trigger arm	1
19	YD-58.4-7	4600刹车控制杆Brake lever	1	59	YD-58.3-3	手柄盖 Handle Gland	1
20	YD-58.4-9	4600刹车大弹簧Big brake spring	1	60	YD-58-3	5800油门拉杆 Throttle Operating Lever	1
21	YD-58.4-10	4600刹车带 (0.8) Brake Reed	1	61	YD-58.3-6	扳机 trigger	1
22	GB/T 845	Tapping Screw ST4.2×9.5	3	62	YD-58.3-5	4600扳机扭簧Trigger spring	1
23	YD-58.4-15	刹车弹簧压板 Spring Cover Plate	1	63	GB/T 119	圆柱销6*24 pin6*24	1
24	YD-58.4.1-3	限位块 Stop block	1	64	YD-45-E.14	空气平衡器 Admitting Valve	1
25	YD-58.1-2	导链块 Leading Chain Block	1	65	YD-58.3-12	燃油平衡器座 Fuel balancer aseat	1
26	YD-58.4.2	三角右侧板Triangle right plate	1				
27	GB/T 6177	Nut M8	2				
28	YD-58.4-8	4600刹车小弹簧Little brake spring	1				
29	YD-58.4-4	挡板橡胶垫圈Baffle rubber washer	1				
30	GB/T 896	Φ3.5开口挡圈 3.5Split washer	1				
31	GB/T 896	Φ3开口挡圈 3 Split washer	1				
32	YD-58.4-11	4600右侧盖挡油板 oil baffle plate	1				
33	YD-58.5	空滤器罩锁钉Air filltercover lock	1				
34	YD-58-11	空滤器罩锁定垫片Air filltercover lockgasket	1				
35	YD-58-13	空滤器小盖Small cover of air fillter	1				
36	YD-58-12	空滤器大盖Big cover of air fillter	1				
37	GB/T 70.1	Screw M5×14	5				
38	YD-58-7	导流罩Air Guidance Board	1				
39	YD-58.6	易起动器Starter Ass'y	1				
40	YD-58-6	启动器4600L-H护套 L-H jacket	1				

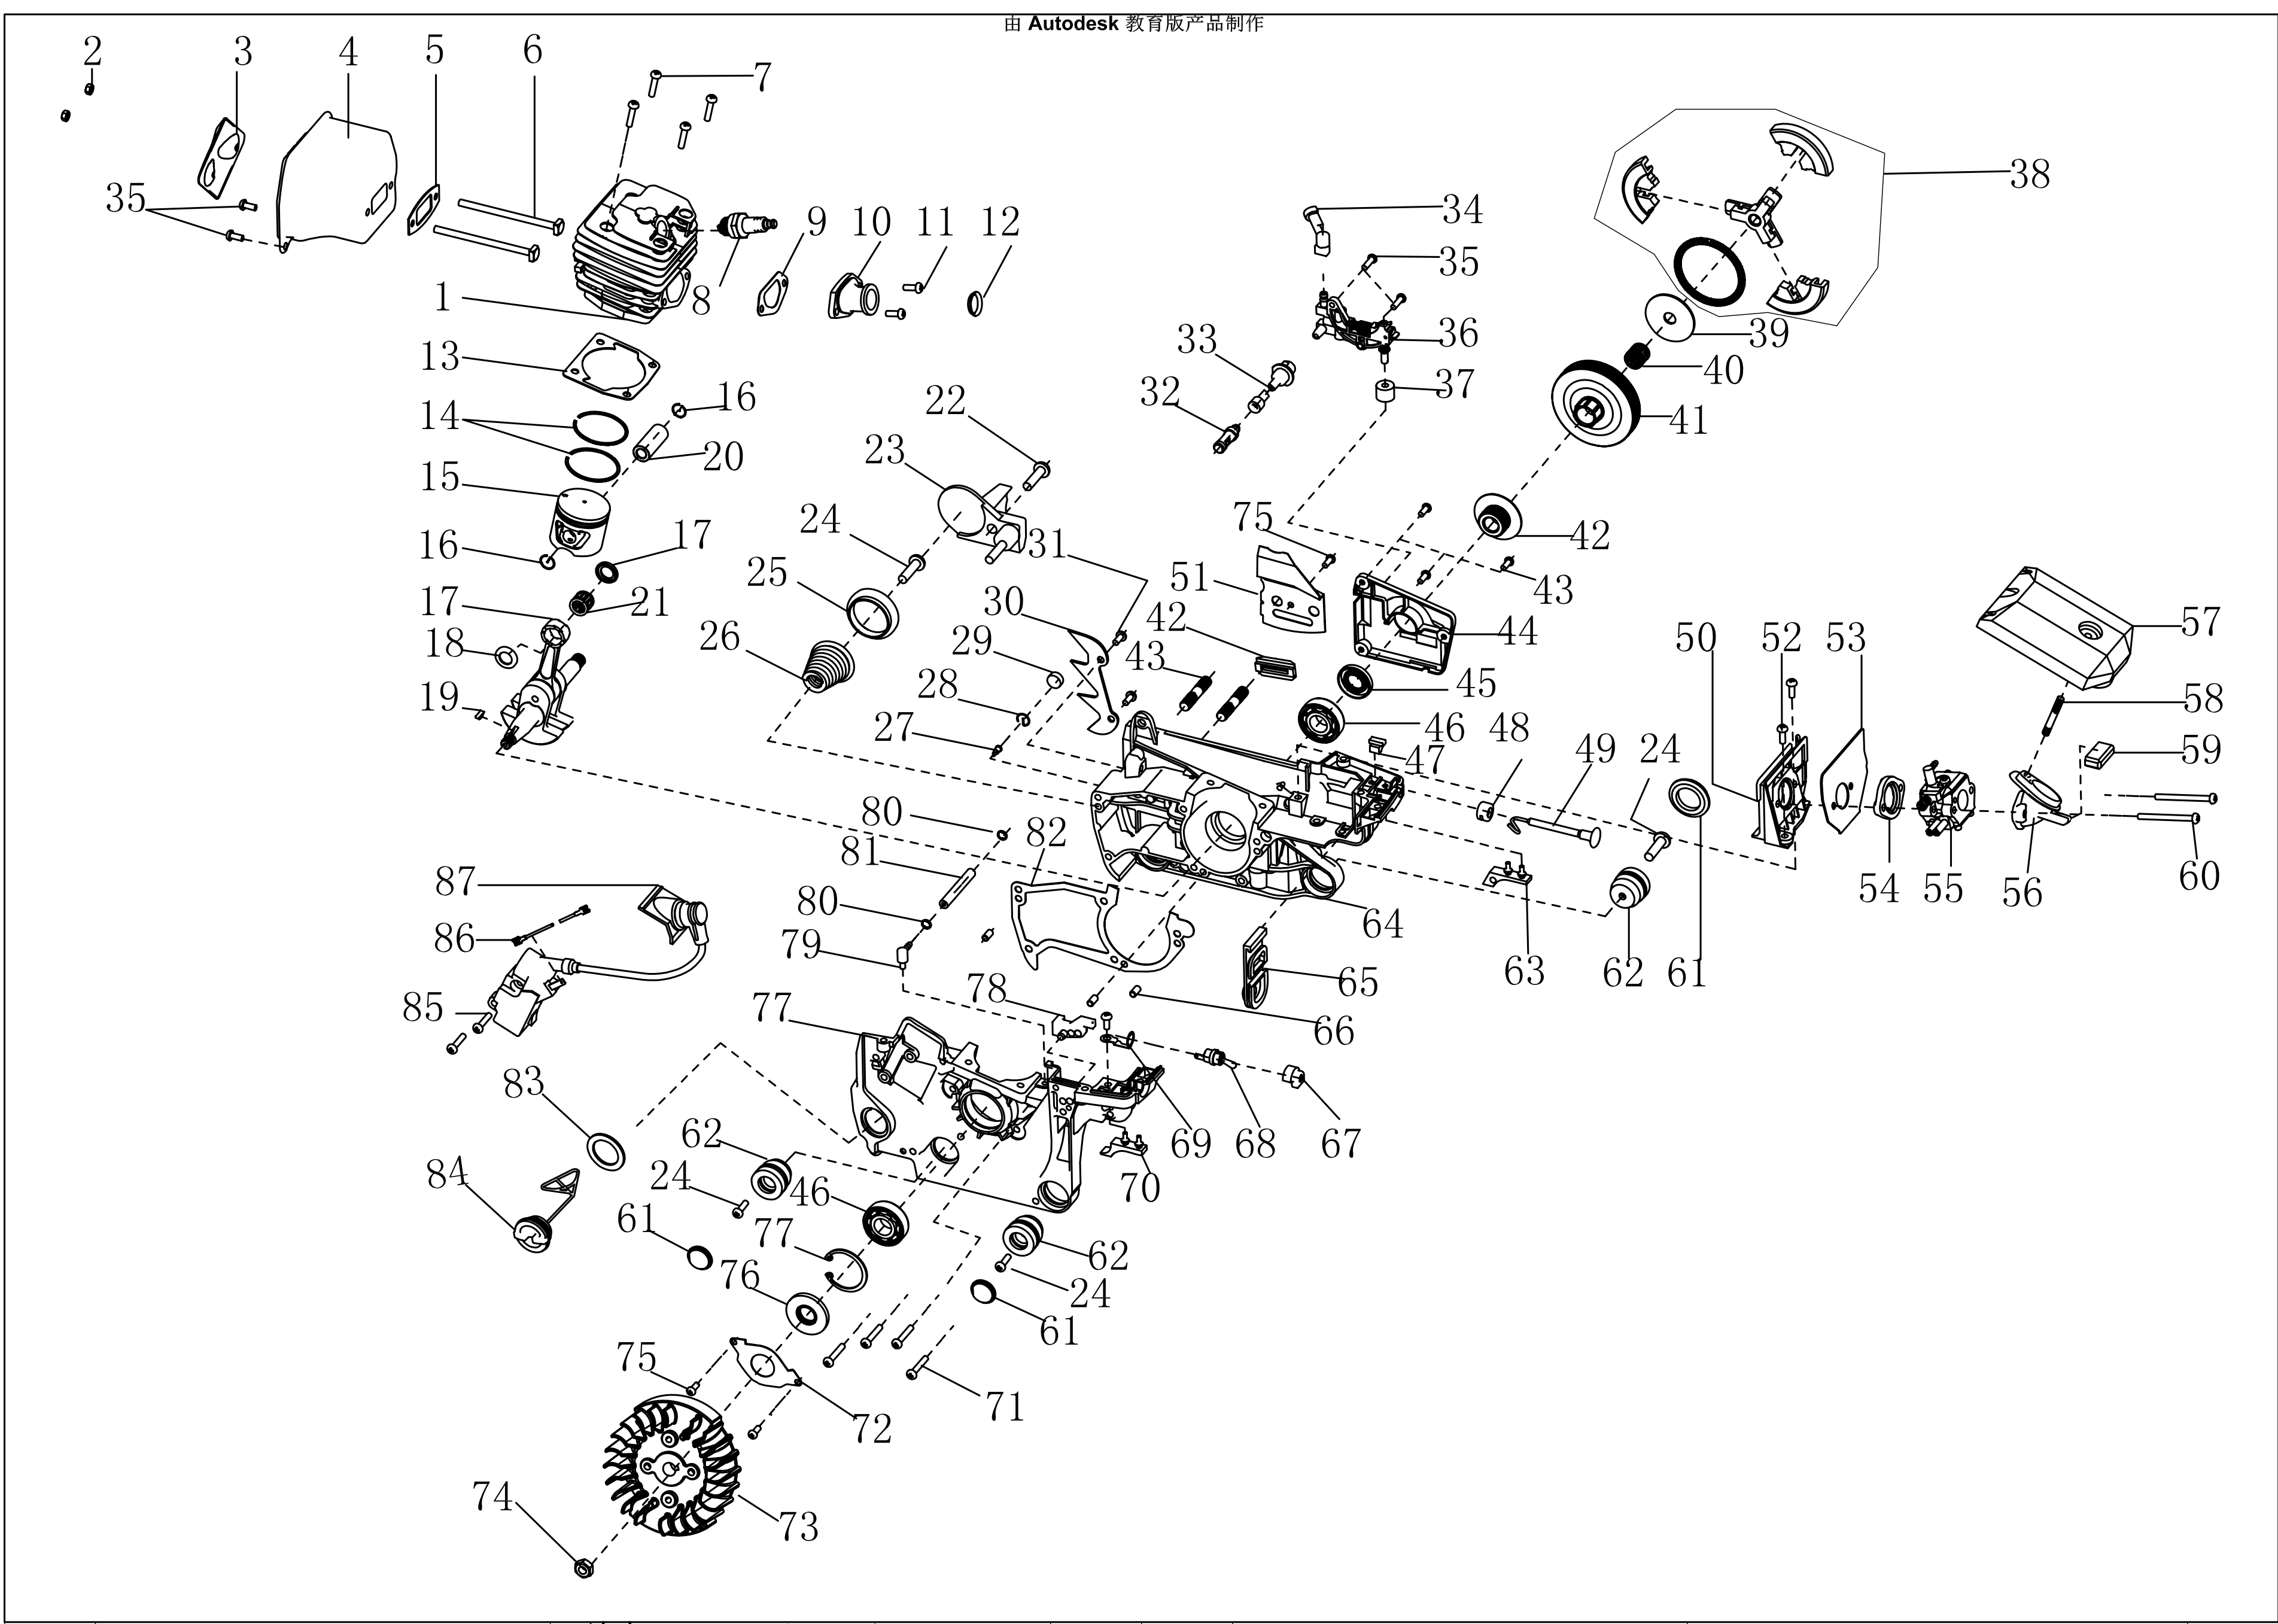

1	YD-58.1-11	汽缸Φ45.2 (5800) Cylinder	1	41	YD-45-E.1-13	被动盘 Driven Friction Disk	1
2	GB/T 6177.1	螺母M5 Nut M5	2	42	YD-58.1.18.2	机油泵蜗杆组件 Oil Pump Worm Gear	1
3	YD-58.1-14	4600消音器盖板 Muffler cover plate	1	43	GB/T 70.1	内六角螺钉M4*10 Screw M4×14	3
4	YD-58.1-16	5800消音器组件 Muffler	1	44	YD-58.1-4	机油泵盖板 Oil Pump Cover	1
5	YD-58.1-36	5800消音器垫片 Muffler gasket	1	45	YD-45-E.1.13	前油封 Oil-Seal	1
6	YD-58.1-11	M5*87方头消音器螺栓 Muffler bolt	2	46	GB276 6202/P5	轴承 Bearing 6202/P5	2
7	GB/T 70.1	内六角螺钉M5*20 Screw M5×20	4	47	YD-58.1-21	风门拉杆减震 Throttle lever damping	1
8	L8RTC	火花塞 Spark Plug	1	48	YD-58.1-22	风门拉杆减震套 Throttle lever damping set	1
9	YD-58.1-37	4600进气管纸垫 Admission Pipe Gasket	1	49	YD-58.1.4	风门拉杆组件 Throttle lever	1
10	YD-58.1.17	4600进气管总成 Admission Pipe	1	50	YD-58.1.13	进气管支架 Admission Pipe support	1
11	GB/T 70.1	内六角螺钉M5*12 Screw M5×12	2	51	YD-58.1-15	机油出油口盖板 Oil outlet cover plate	1
12	YD-58.1-19	Φ16进气管衬圈 Admission Pipe ring gasket	1	52	GB/T 70.1	内六角螺钉M5*14 Screw M5×14	2
13	YD-58.1-38	4600汽缸垫片 Cylinder gasket	1	53	YD-58.1-42	4600隔热垫板 Heat insulation plate	1
14	YD-58.1.12-4	活塞环 Piston Ring	2	54	YD-58.1-5	隔热垫片 Heat insulation gasket	1
15	YD-58.1.12-1	活塞 Piston	1	55	YD-58.1.10	化油器 Carburetor	1
16	YD-58.1.12-2	G型挡圈 Check Ring	2	56	YD-58.1.1-2	进气弯管总成 Inlet elbow	1
17	YD-58.1.12.1	曲轴连杆组 MAGNETO ROTOR COMP.	1	57	YD-58.1.8	空滤器 Air Filter	1
18	YD-58.1.12-5	小头减磨垫 Antifriction mat	2	58	YD-58.1.1-1	进气弯管双头螺钉 Inlet elbow bolt	1
19	GB/T 1099	半圆键3*3.7*10 Key	1	59	GB/T 70.1	内六角螺钉M5*50 Screw M5×50	2
20	YD-58.1.12-3	活塞销 Piston Pin	1	60	YD-58.1-23	4600进气弯管减震 Inlet elbow bolt damping	1
21	YD-58.1.12.2	K11*15*12.5滚针 Bearing	1	61	YD-58-2	防尘盖(小) Dust cap (small)	3
22	YD-58-14	一字减震螺钉 Damping Bolt	1	62	YD-58.1-25	4600安装橡胶套 Mounting rubber jacket	3
23	YD-58.7	挡链块 Block chain	1	63	YD-58.1-30	右减震块 Right damping block	1
24	YD-58-1	梅花一字开槽自攻钉 Tapping Screw	1	64	YD-58.1-13	4600右箱体 Right Crank Case	1
25	YD-58-10	锥型环座 Conical seat	1	65	YD-58.1-26	4600防尘胶块 Dustproof piece	1
26	YD-58-9	4600塔型弹簧 Tower type spring	1	66		箱体定位销 Pin	2
27	YD-58.1-29	4600机油平衡器 Check valve	1	67	YD-58.1-27	4600熄火开关护套 Flame rollout switch jacket	1
28	YD-58.1-40	4600滤棉 Filter pulp	1	68	YD-58.1.20	4600钮子熄火开关 Flame rollout switch	1
29	1E40F-030201	活塞销G型挡圈 Check Ring	1	69	YD-58.1-17	4600接地片 Earth tag	1
30	YD-58-4	4600钉板 Tacking	1	70	YD-58.1-31	左减震块 Left damping block	
31	GB/T 70.1	内六角螺钉M5*10 Screw M5×10	2	71	GB/T 70.1	内六角螺钉M5*25 Screw M5×25	5
32	YD-58.1.18.1	机油过滤器 Cleaner Cover	1	72	YD-58.1-18	4600油封压板 Oil seal clamp	1
33	YD-58.1.18-2	4600机油泵进油管 Oil Pump Fuel Pipe	1	73	YD-58.1.11.2	转子 MAGNETO ROTOR COMP.	1
34	YD-58.1.18-1	4600机油泵出油管 Oil Pump outlet Fuel Pipe	1	74	GB/T 6177.2	螺母M8*1 Nut M8*1	1
35	GB/T 70.1	内六角螺钉M4*14 Screw M4×14	2	75	GB/T 70.1	内六角螺钉M4*6 Screw M4×6	3
36	YD-45-E.1.6.2	机油泵 Oil Pump	1	76	YD-58.1.19	左箱油封 Left Oil-Seal	1
37	YD-58.1-41	4600防尘海绵 Dust proof sponge	1	77	GB/T 893.1	孔用挡圈35 Check ring 35	1
38	YD-45-E.1.7	涨紧块组合 Expander	1	78	YD-58.1-24	4600L-H护套 L-H jacket	1
39	YD-58.1-16	4600飞锤减磨垫 Fly ball antifriction mat	1	79	YD-58.1.2	4600真空管接头组件 Vacuum tube splice	1
40	YD-58.1-35	K12*15*15滚针 Bearing	1	80	P23.12-1	卡簧 Spring	2
				81	YD-58.1-28	4600真空管 Vacuum tube	1
				82	YD-58.1-39	4600曲轴箱垫片 Crank Case Gasket	1
				83	YD-58.1.5-1	4600机油盖密封圈 Oil Tank Lid seal ring	1
				84	YD-58.1.5.1	机油盖总成 Oil Tank Lid	1
				85	GB/T70.1+GB/T93+GB/T97	螺钉组合件M5*20 Screw M5×20	2
				86	YD-58.1.11.3	停车线 Cord COMP.	1
				87	YD-58.1.11.1	定子组合 IGNITION COIL COMP.	1