



汽油机分解图

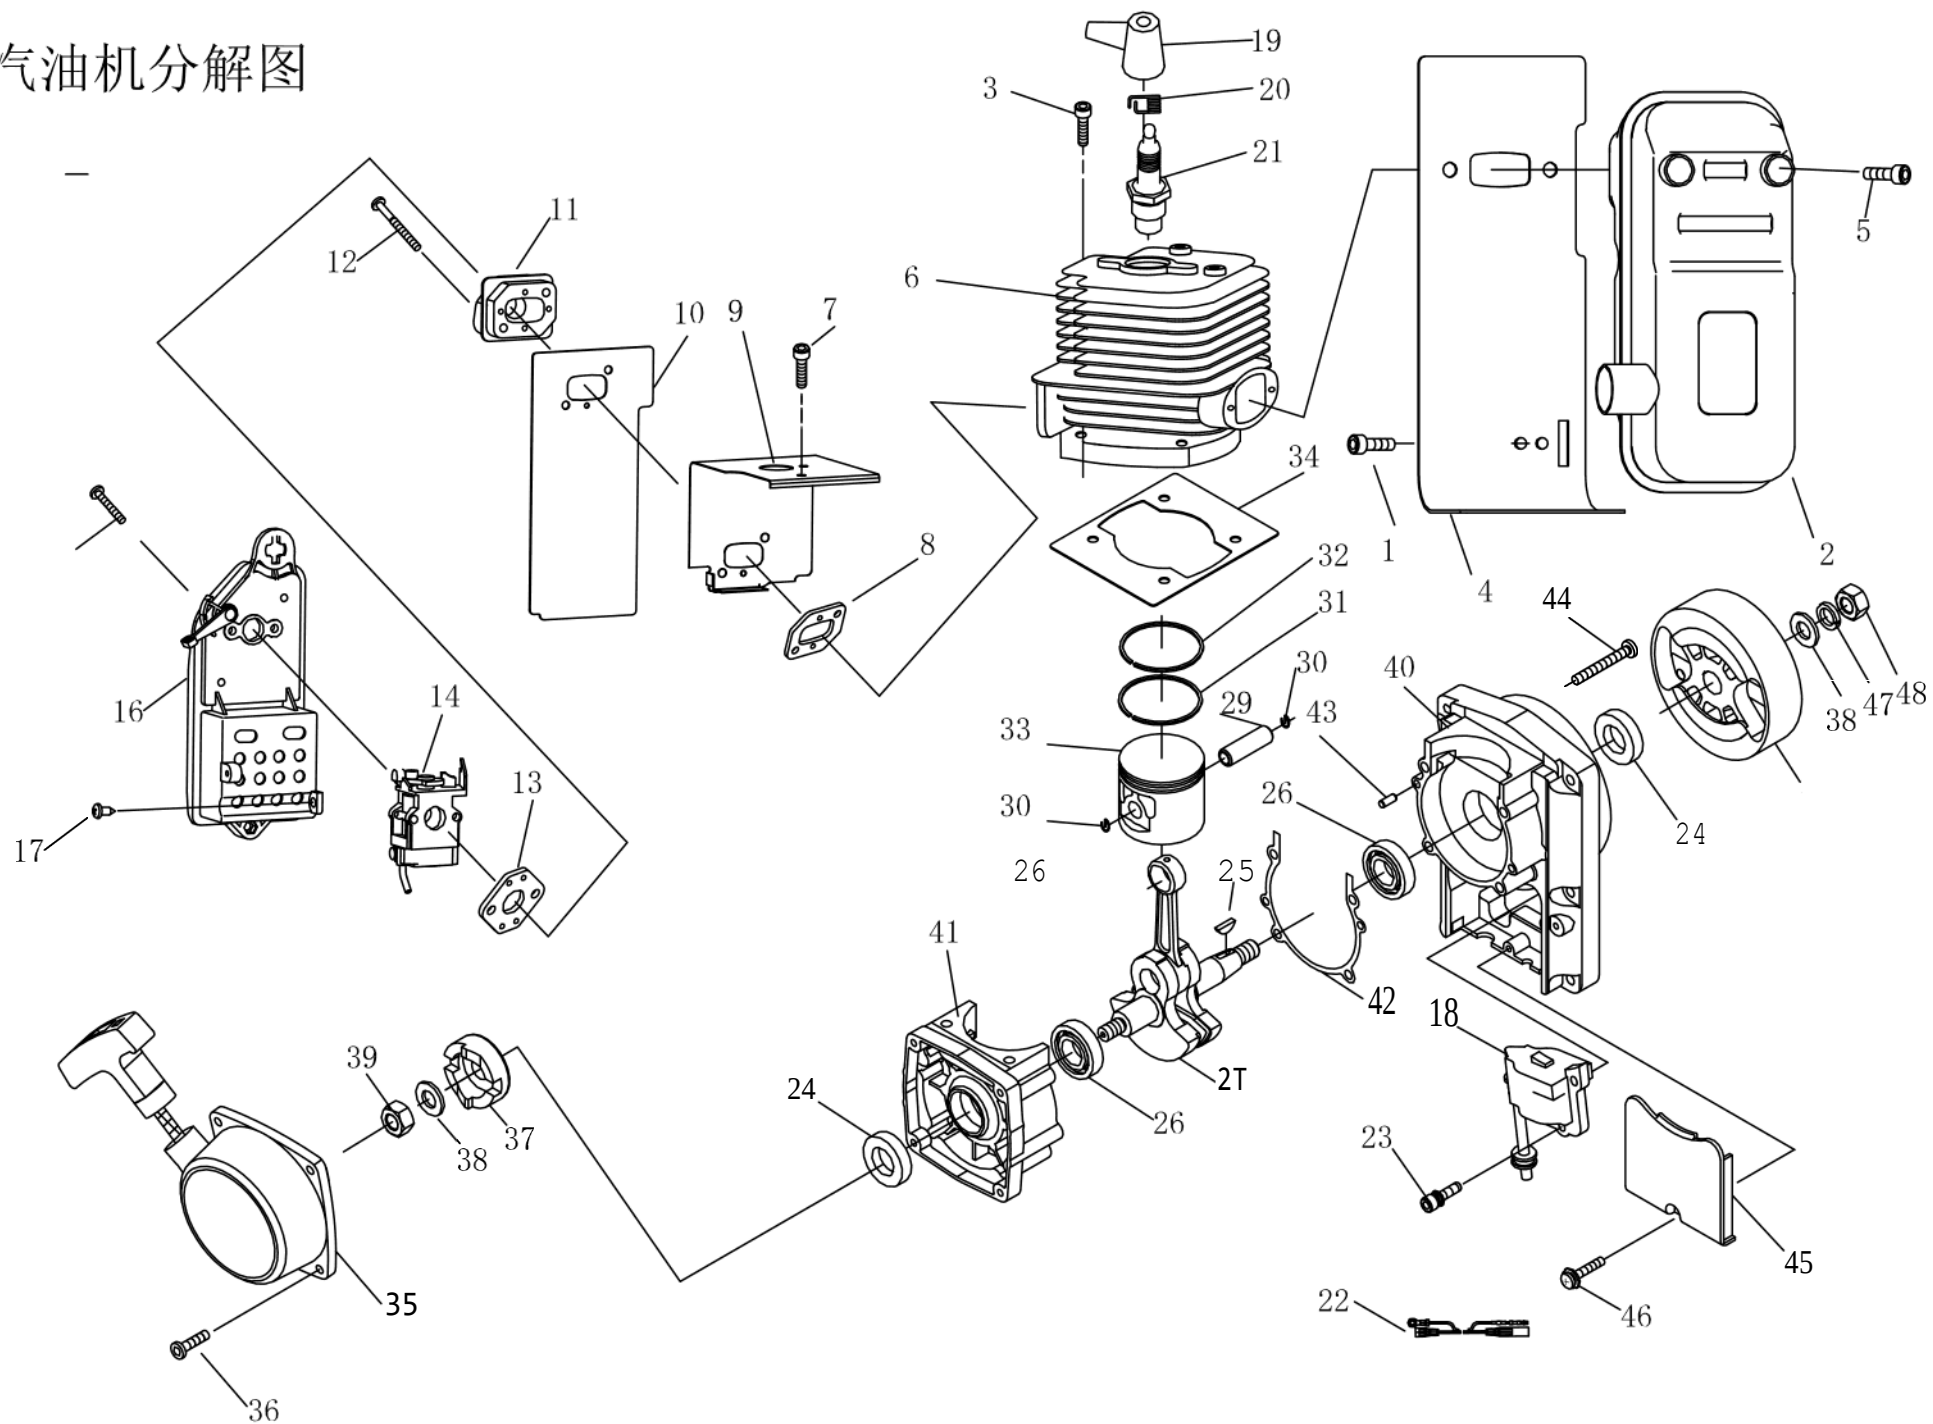

序号	图号	中文名称	数量	序号	图号	中文名称	数量
1	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M6*16	1	25	GB/T1099 3*5*13	KEY	1
2	6MF-16-30.1.4	MUFFLER	1	26	GB/T276 6302/P5	BEARING	2
3	GB/T70.1	BOLT ASSEMBLY M5*20	4	27	1E48FP.5C.1	CRANK SHAFT	1
4	6MF-16-30.1.5	MUFFLER GASKET	1	28	1E44F-2A.2-3	ROLLER BEARING	1
5	GB/T70.1	BOLT ASSEMBLY M6*20-10.9	2	29	1E48FP.5-2	PISTON PIN	1
6	1E48FP-2B	CYLINDER	1	30	1E40F-03.02.01	PISTON PIN CIRCLER	2
7	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*10	2	31	1E48FP.5-4	SECOND PISTON RING	1
8	1E48FP-3	AIR INLET GASKET(1)	1	32	1E48FP.5-3	FIRST PISTON RING	1
9	6MF-16-30.1-1	GUIDE AIR PLATE	1	33	1E48FP.5-5	PISTON	1
10	6MF-16-30.1.6	AIR INLET GASKET	1	34	1E48FP-10	CYLINER GASKET	1
11	1E48FP-5	AIR INLET PIPE	1	35	150BT-M2.8	STARTER	1
12	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*30	2	36	GB/T70+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*20	4
13	1E48FP-6	AIR INLET PIPE GASKET	1	37	1E40FP-3Z-19	RATCHET	1
14	6MF-16-30.1.3	CARBURETOR	1	38	GB/T97.1	WASHER $\phi 10$	2
15	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*50	3	39	1E40FP-3Z-16	NUT M10*1-6H	1
16	6MF-16-30.1.1	CLEAN INSIDE COVER	1	40	1E48FP.6-1	FRONT CRANKCASE	1
17	3WF-20.9-2	SCREW NAIL M5*16	1	41	1E48FP.6-3	BACK CRANKCASE	1
18	EB-500-E.1.4-FSH.1	MAGNETOR	1	42	1E48FP.6-2	CRANKCASE GASKET	1
19	6MF-16-30.1.2-1	CAP	1	43	GB/T119	PIN 4h8*10	2
20	6MF-16-30.1.2-2	SPRING	1	44	GB/T70.1	SCREW NAIL M5*35	4
21	BPMR7A	PLUG	1	45	1E46FP-2	RETAINER	1
22	1E36F-2C.6.1B	STOP WIRE	1	46	GB/T9074.4	BOLT ASSEMBLY M5*20	1
23	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M4*20	2	47	GB/T93	WASHER $\phi 10$	1
24	1E40FP-3Z-11	SMALL SEAL	2	48	GB/T6171	NUT M10*1	1

机具分解图 6MF-16-30

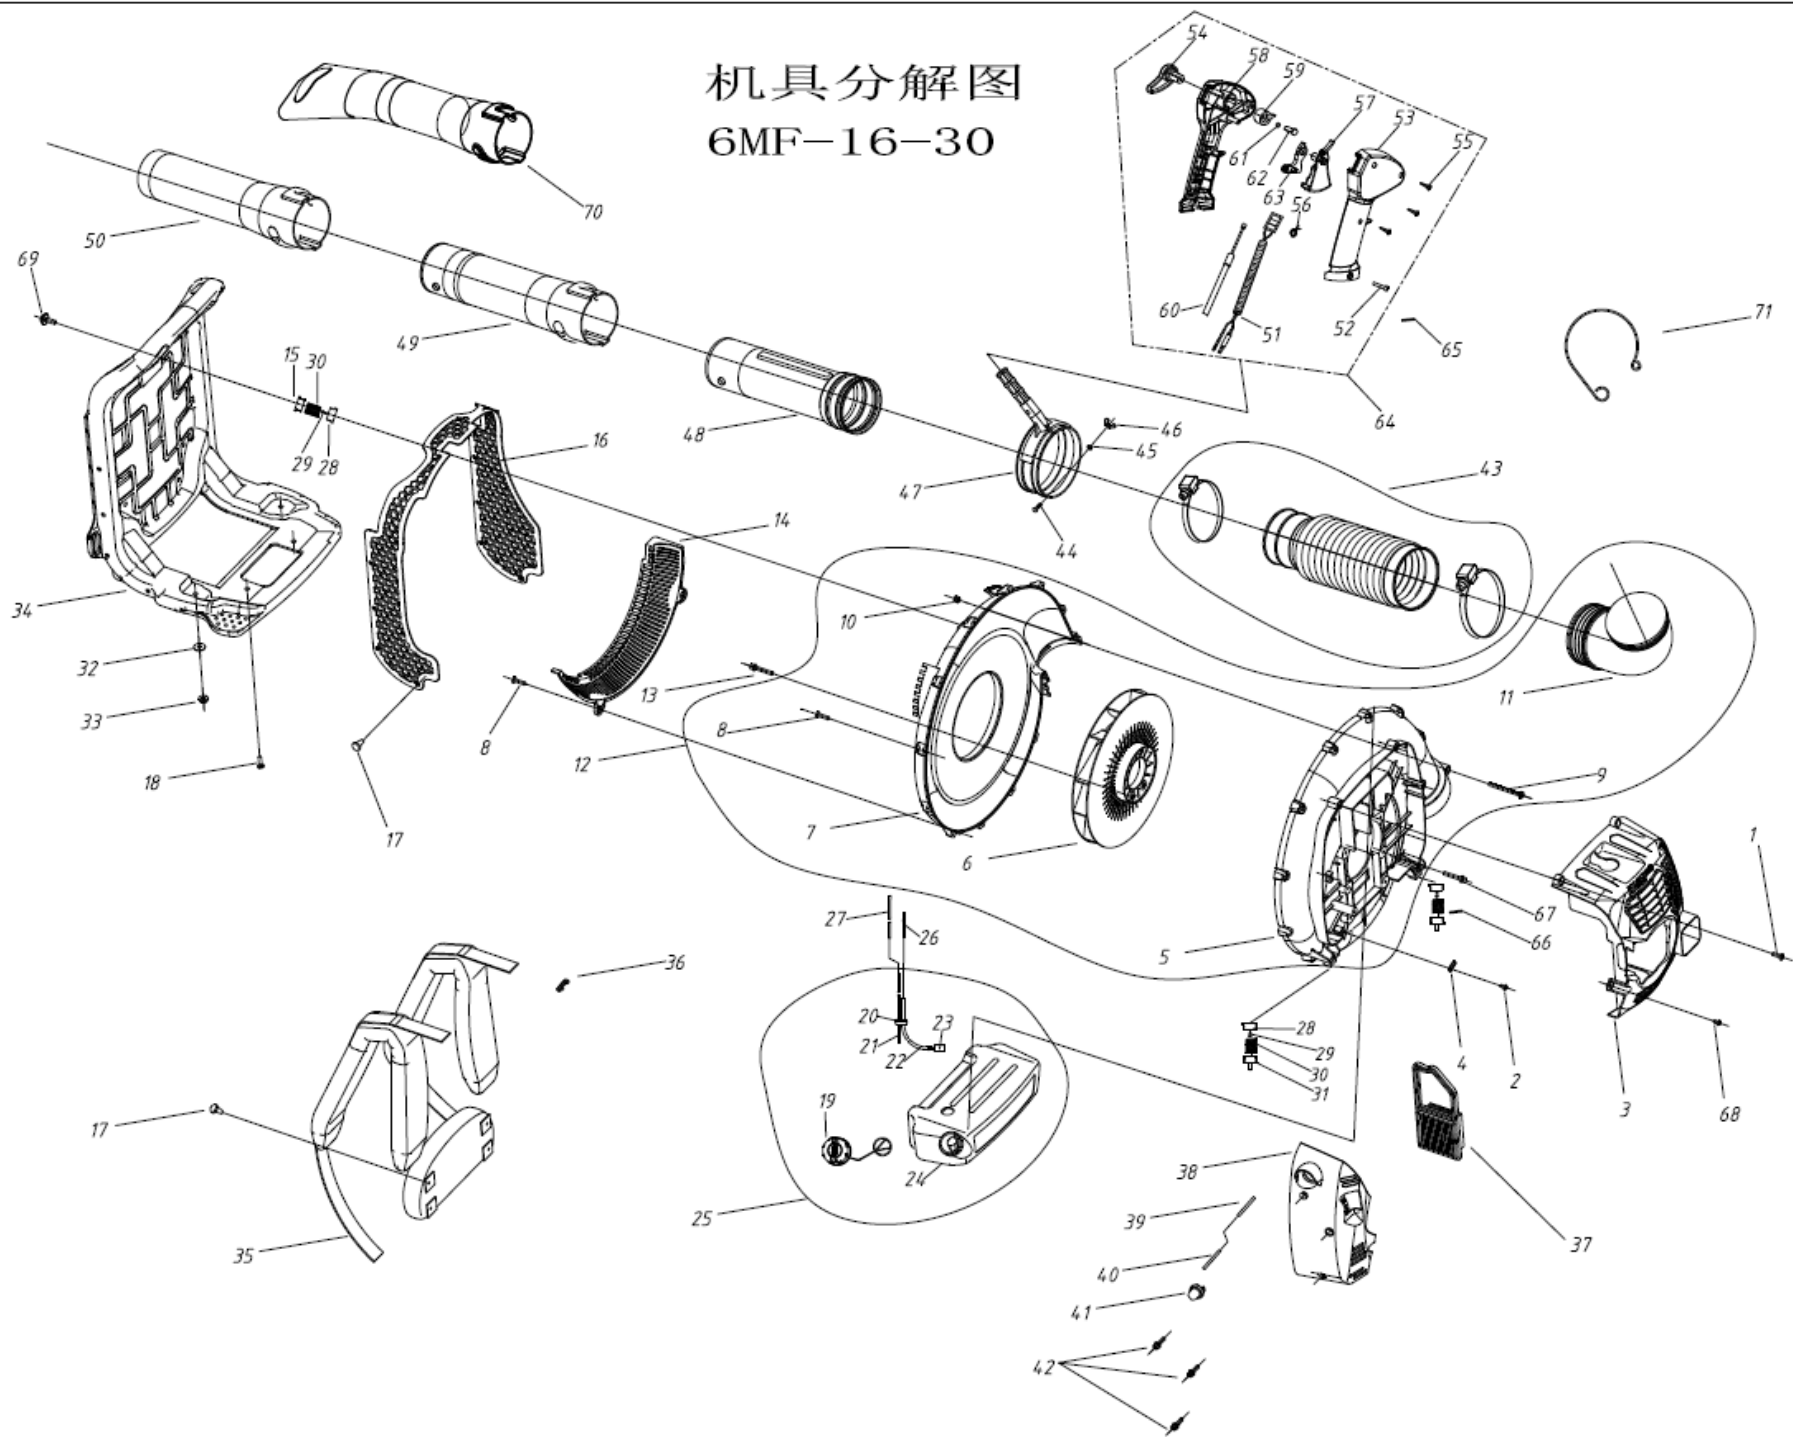

序号	图号	中文名称	数量	序号	图号	中文名称	数量
1	3WF-20.9-2	SCREW NAIL M5*16	4	37	6MF-16-30-4	FILTER	1
2	GB/T845	SCREW NAIL ST3.5*9.5	1	38	6MF-16-30-3	CLEANER OUTSIDE COVER	1
3	6MF-16-30-2	PROTECTION	1	39	EB-415.4.2-4	PIPE	0.1m
4	EBV245A-9	RETAINER	1	40		PROTECT PIPE $\varnothing 6$	0.09m
5	6MF-16-30.2.1	FRONT VOLUTE CASE	1	41	YD-40.6.10-3	OIL CUP	1
6	6MF-16-30.2.3	IMPELLER ASSEMBLY	1	42	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*20	3
7	6MF-16-30.2.2	BACK VOLUTER CASE	1	43	6MF-16-30.3-1-ZH	FLEX PIPE	1
8	XSS46-2.2-5	SCREW NAIL M5*20	13	44	GB/T5783	BOLT M6*45	1
9	GB/T818+GB/T97.1	BOLT ASSEMBLY M5*60	2	45	GB/T97.1	WASHER 6	1
10	GB/T889.1	NUT M5	2	46	GB/T62.1	BUTTERFLY NUT M6	1
11	EB-650.7-1B	FAN JOINT ASSEMBLY	1	47	EB-800-E.4.2-1	HANDLE	1
12	6MF-16-30.2	FAN ASSEMBLY	1	48	EB-800-E.4.1	CONTACTING PIPE	1
13	GB/T70.1+GB/T93+GB/T97.1	BOLT ASSEMBLY M5*35-10.9	4	49	EB-800-E.4-2	PIPE (2)	1
14	6MF-16-30-8	PROTECTION	1	50	6MF-16-30.3-3	PIPE (3)	1
15	6MF-16-30.8-1	SRRING FIXING BASE (DOWN)	1	51	QS15Q63BF.3.1	SWITCH	1
16	6MF-16-30-1	PROTECT NET	1	52	GB/T70.1	SCREW NAIL M5*35	1
17	3WF-2.6B-2	BACK CLIP	14	53	EB-420-E.4.1.2	RIGHT MANIPULATOR	1
18	GB/T823+GB/T96	BOLT ASSEMBLY M6*12	2	54	EB-420-E.4.1-2	HANDLE	1
19	6MF-16-30.4.2	FUEL TANK CAP ASSEMBLY	1	55	GB/T845	SCREW NAIL ST2.9*13	3
20	EB-415.4.2-2	VITTA PLUG	1	56	EB-420-E.4.1-4	SPRING	1
21	EB-415.4.2-4	PIPE	0.290m	57	EB-420-E.4.1.3	THROTTLE CONTROAL HANDLE	1
22	1E34F.9.2-4	PIPE	0.230m	58	EB-420-E.4.1.1	LEFT MANIPULATOR	1
23	P40.12.2-3A	FILTER	1	59	EB-420-E.4.1-3	ROTATING BLOCK	1
24	6MF-16-30.4.1	TANK	1	60	EB-420-E.4.1.4	THROTTLE	1
25	6MF-16-30.4	TANK ASSEMBLY	1	61	GB/T97	WASHER 5	1
26		PROTECT PIPE $\varnothing 6$	0.115m	62	GB/T845	SCREW NAIL ST4.8*16	1
27		PROTECT PIPE $\varnothing 6$	0.245m	63	EB-420-E.4.1-1	THROTTLE ADJUSTMENT BLOCK	1
28	QS18Q76BF.2-1	SRRING FIXING BASE (UP)	3	64	EB-420-E.4.1	CONTROL BOX ASSEMBLY	1
29	YD-45-E.7-4	SCREW NAIL	3	65	250*4.5	CABLE TIES	1
30	QS18Q76BF.2-3	DAMPING SPRING	3	66	BG415-1B 3.5*150	CABLE TIES	1
31	QS18Q76BF.2-2	SRRING FIXING BASE (DOWN)	2	67	GB/T70+GB/T93+GB/T97	BOLT ASSEMBLY M6*35	6
32	GB/T96.1	WASHER 6	2	68	3WF-20.9-1	SCREW NAIL M5*10	1
33	GB/T6177.1	NUT M6	2	69	GB/T29.2+GB/T96	BOLT ASSEMBLY M6*20	1
34	6MF-16-30.5	FRAME	1	70	EB-800-E.4-3B	PIPE	1
35	6MF-16-30.6	BAND	1	71	EB-520-E-5	LATHEDOG	1
36	150BT-M2-4	HANGING SCROLL	4				