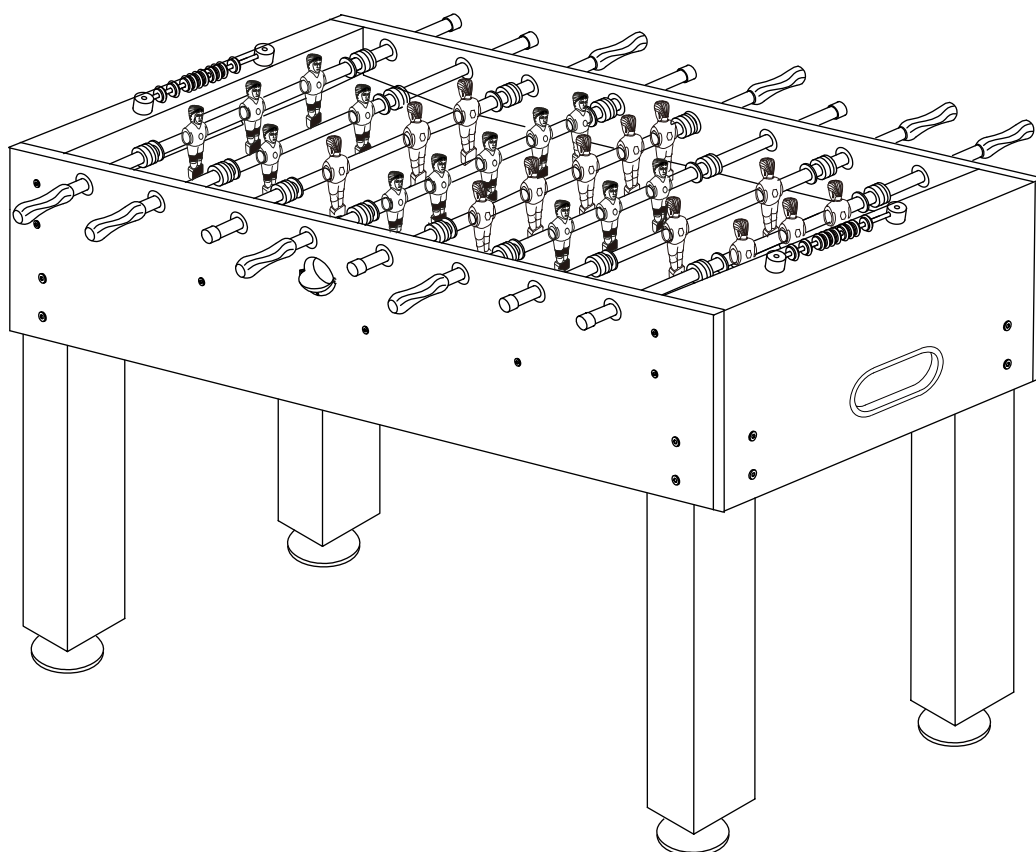 





















FOOTBALL TABLE

ASSEMBLY INSTRUCTIONS



PLEASE KEEP INSTRUCTION SHEET FOR FUTURE REFERENCE.
 please read through this instruction sheet to familiarise yourself to the assembly steps and/or rules.

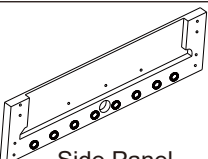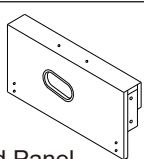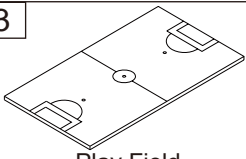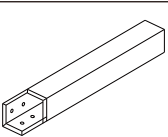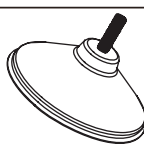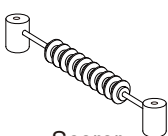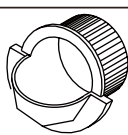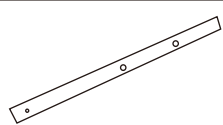                
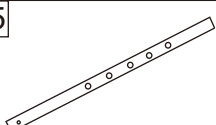 
PARTS LIST

1  Side Panel 2PCS	2  End Panel 2PCS	3  Play Field 1PC	4  Leg 4PCS	5  Play Field Support Brace 3PCS
6  Bolt 5/16"X45mm 24PCS	7  Washer 5/16" 24PCS	8  Screw 3.5X25mm 8PCS	9  Screw 3.5X45mm 4PCS	10  Screw 3.5X12mm 2PCS
11  Nut 1/4" 6PCS	12  Screw 5/32"X25mm 26PCS	13  Nut 5/32" 26PCS	14  Allen key 2PCS	15  Metal Rod 3PCS
16  Leg Leveler 4PCS	17  Hand Grip 8PCS	18  Scorer 2 SETS	19  Ball entry cup 2PCS	20  Safety End Cap 8PCS
21  Rubber Bumper 16PCS	22  Plastic Washer 16PCS	23  3 Hole Player Rod 4pcs	24  2 Hole Player Rod 2pcs	25  5 Hole Player Rod 2pcs
26  Player-Team A 13pcs	27  Player-Team B 13pcs	28  Football 2PCS		



ASSEMBLY INSTRUCTIONS

Recommend to assemble your table on the master carton, or find other clean level place to do assembly.

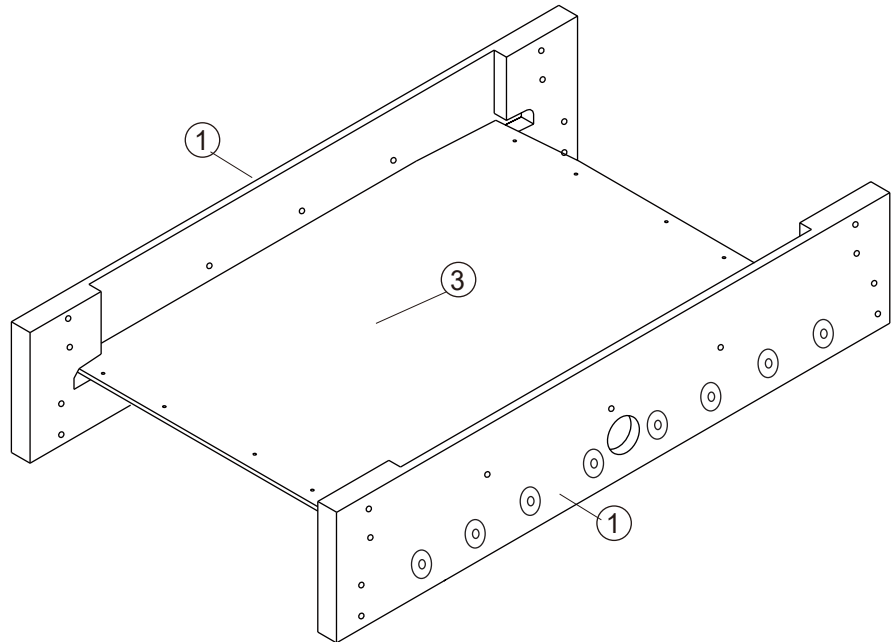 
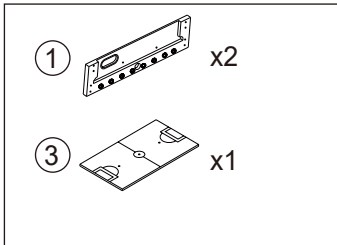 
STEP 1:



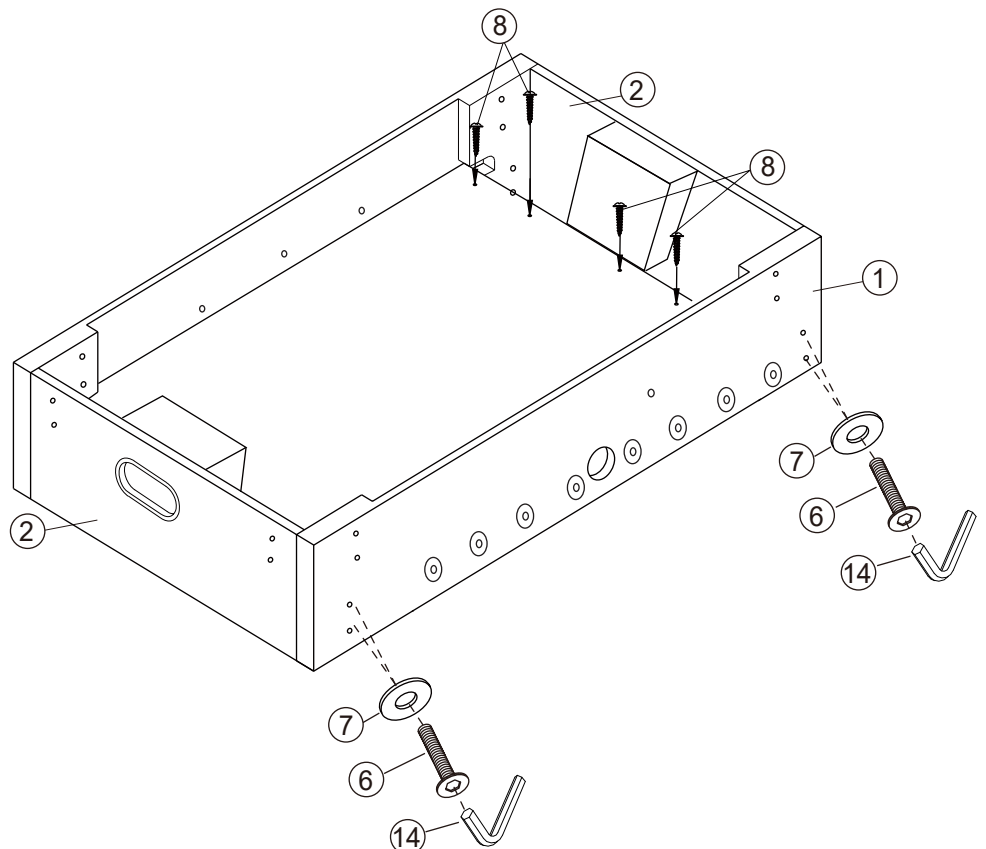 
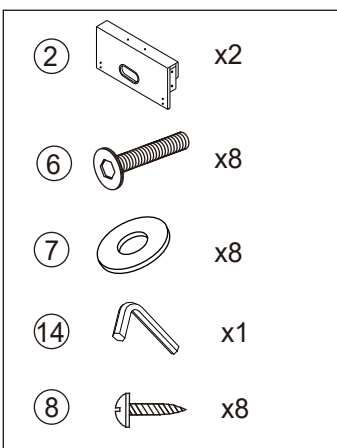 
STEP 2:




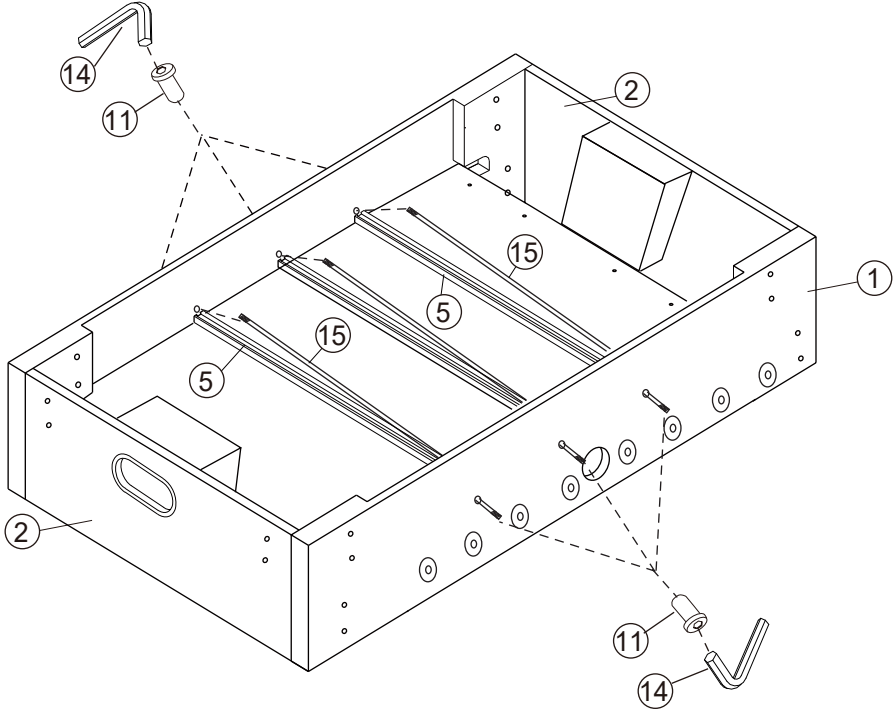 
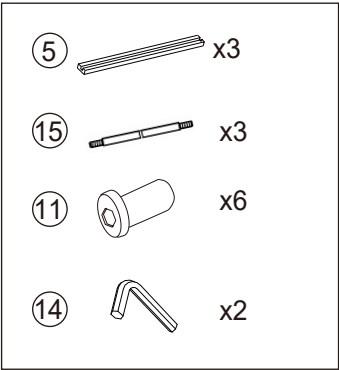 
STEP 3:




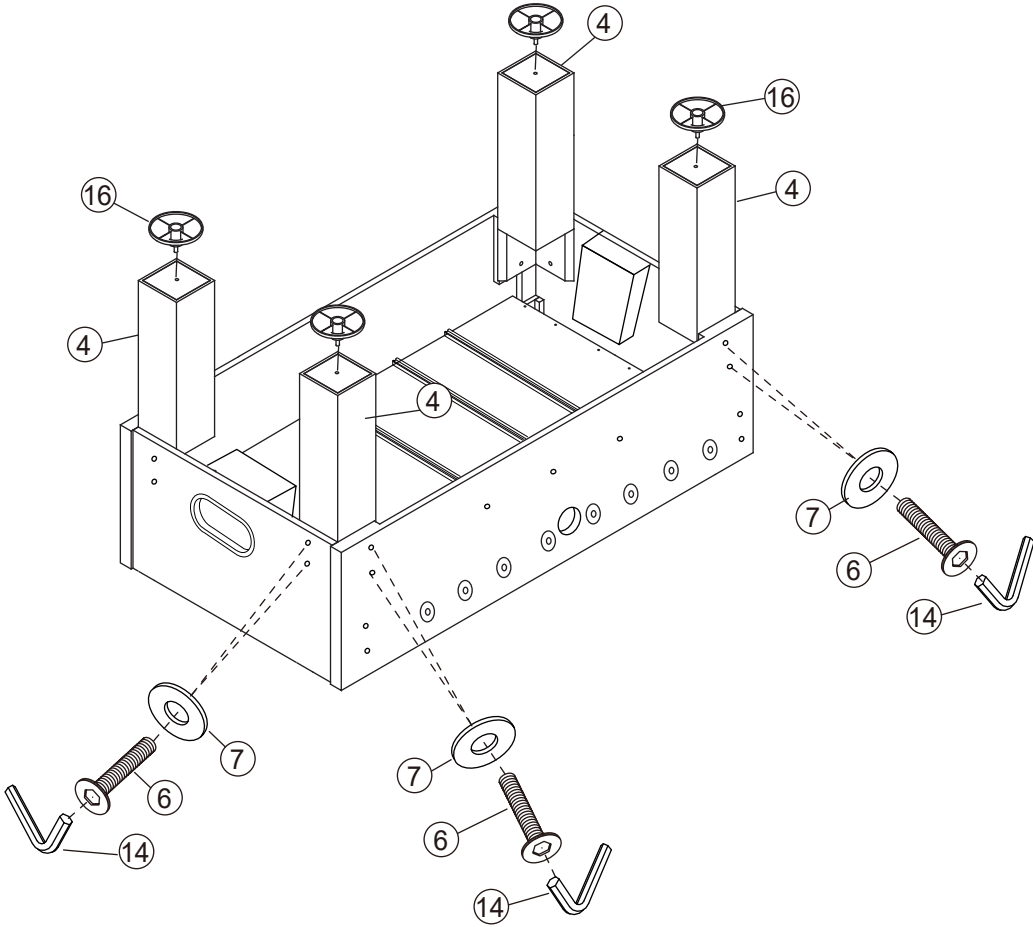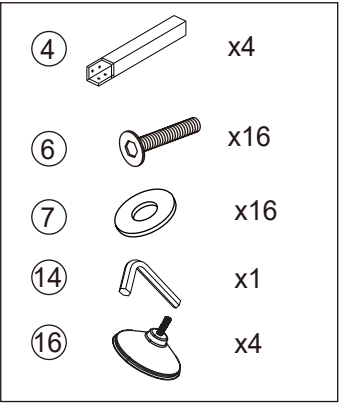  STEP 4:





   
STEP 5:

12		x26
13		x26
21		x16
22		x16
23		x4
24		x2
25		x2
26		x13
27		x13

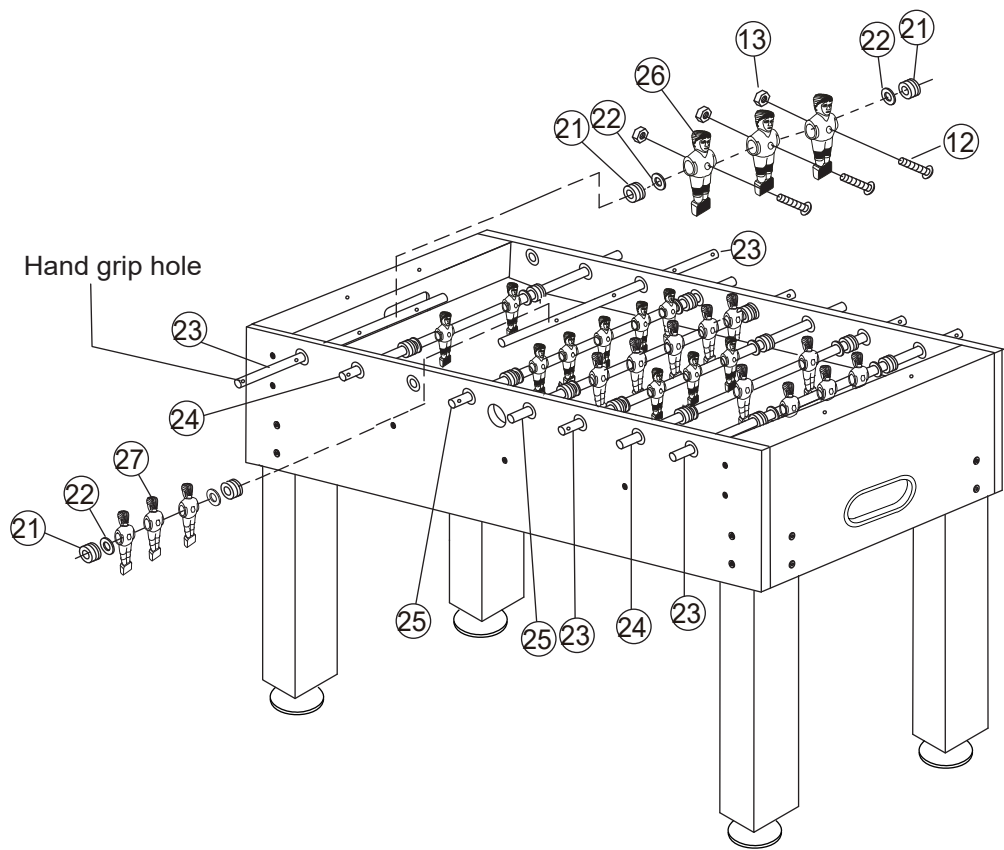 

  STEP 6:

9		x4
10		x2
17		x8
18		x2
19		x2
20		x8

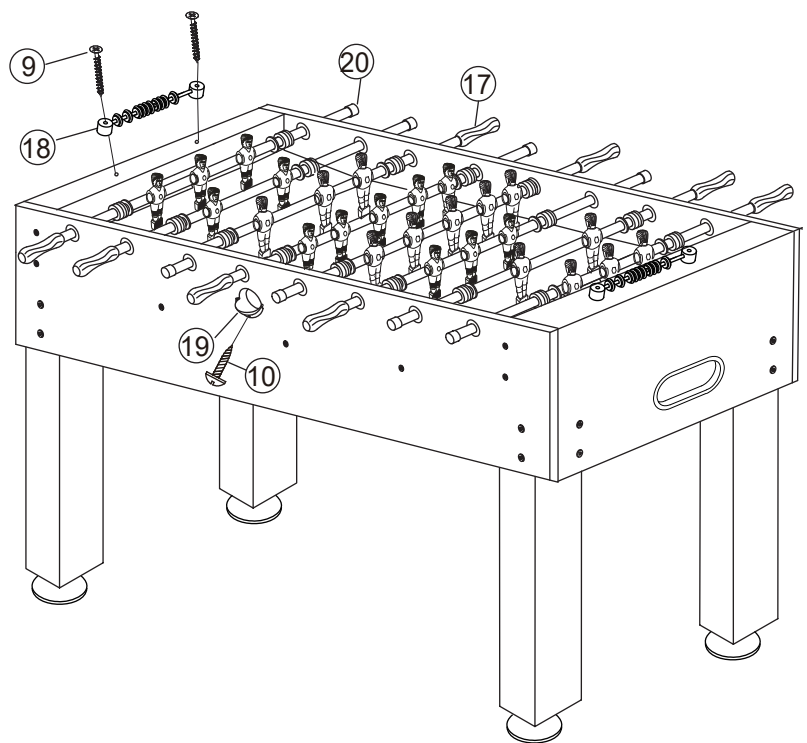 

הוראות בטיחות

לקוחות יקרים,

ברכות לרגל רכישת שולחן כדורגל WHITE.

חשוב!

- יש לקרוא את המדריך היטב לפני כל שימוש.
- בעת השימוש בשולחן מסדרת CROWN
- יש לשמור על מספר כללי בטיחות בסיסיים.
- יש לקרוא את כל הוראות הבטיחות לפני השימוש.

אחריות השולחן בתוקף בתנאים הבאים:

1. השימוש בשולחן הוא למטרת משחק ביתי ולא מסחרי.
2. תוקף האחריות הוא למשך 6 חודשים מתאריך החשבונית.
3. האחריות היא לביצוע תיקון הנדרש לפעולה תקינה של השולחן.
4. אנו מתחייבים להחליף כל חלק בשולחן הטעון החלפה בהקדם האפשרי.
5. אחריות לא תינתן במקרים שבהם השולחן יוצב מחוץ לבית.

6. האחריות לא תחול במקרים הבאים:

- א. הקלקול נגרם עקב שימוש לא נכון.
- ב. קלקול עקב כוח עליון (שריפה, מים, פגיעת ברק וכו').
- ג. שבר מסיבה כל שהיא.
- ד. השולחן תוקן או בוצע ניסיון לתיקון או הוכנסו בו שינויים על ידי אדם שלא הוסמך לכך על ידינו.
- ה. חדירת נוזלים ו/או רטיבות מסוג כל שהוא.
- ו. השימוש בשולחן הינו לשימוש ביתי בלבד ולא מסחרי.
- ז. יש להציב את השולחן אך ורק בתוך הבית ולא מחוץ לבית.

**האחריות תופעל בתנאי שהשולחן
יובא לתיקון בצירוף חשבונית קנייה.**

טלפון לשירות לקוחות:
פולטון בע"מ: 03-5614012