



FIGURE 1

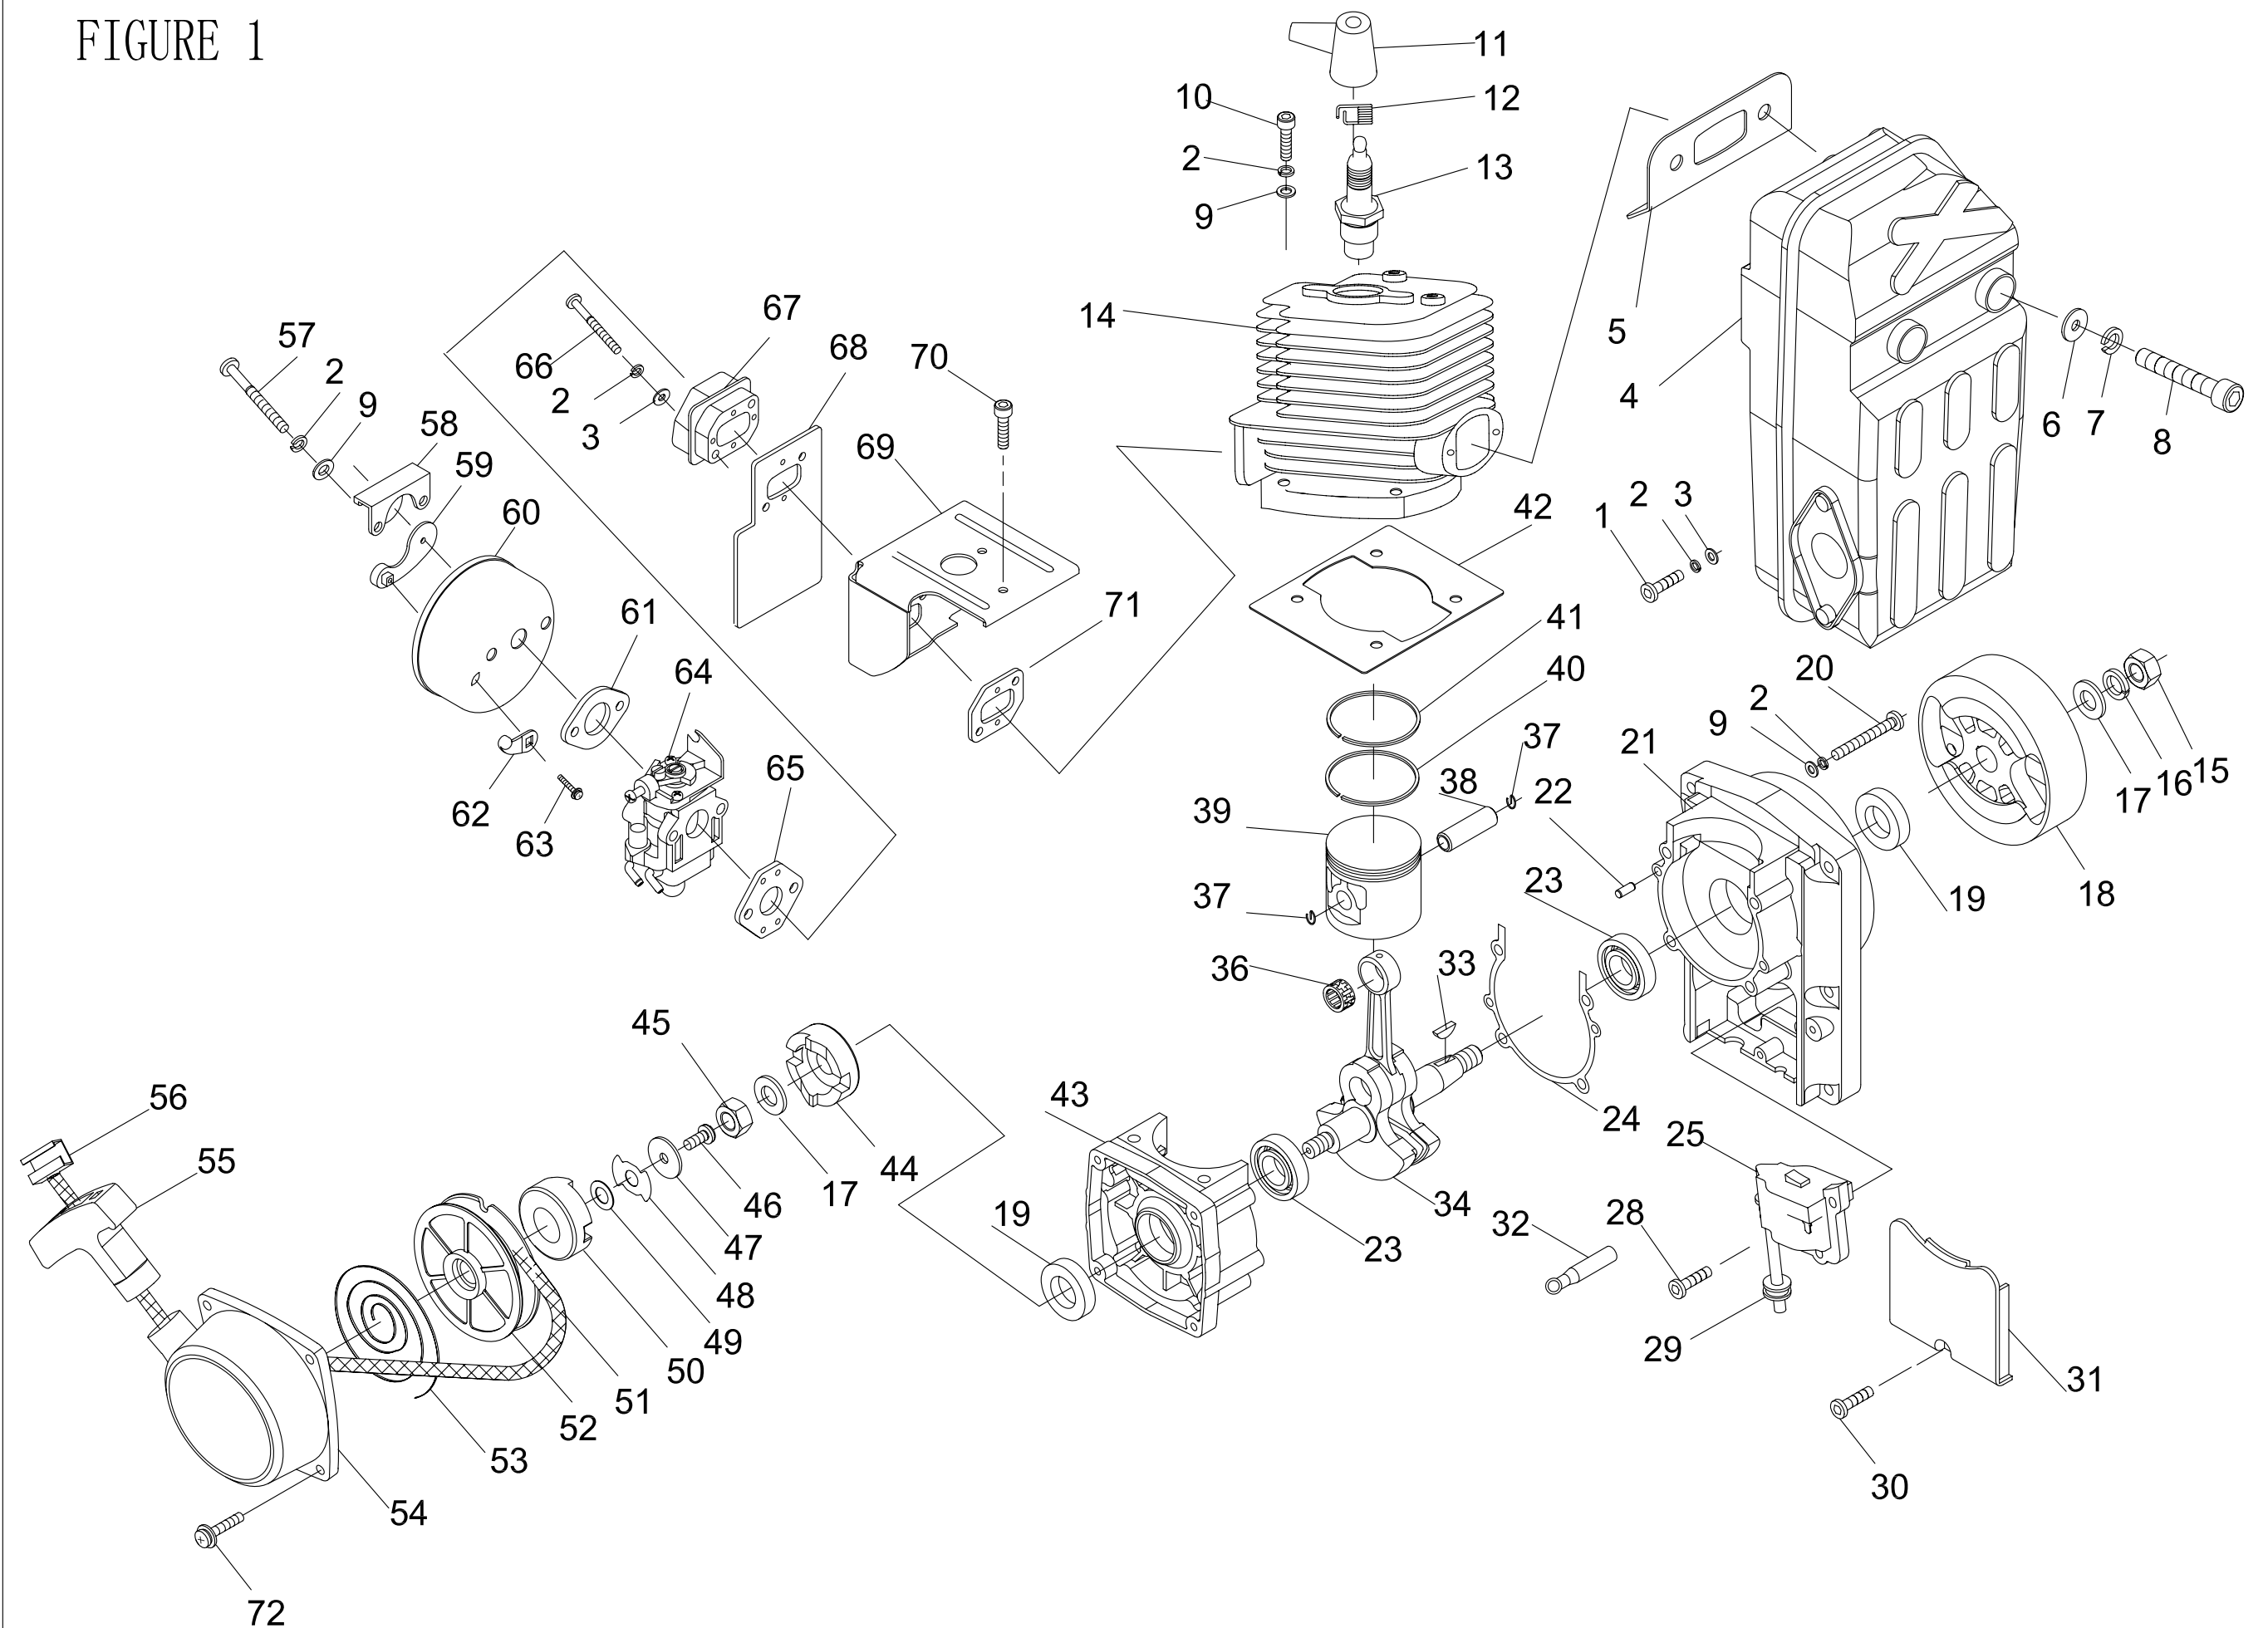

Appendix List of Attached Fig.1(1E48FP)

Ser.NO.	Part NO.	Part Name	Qty.	Ser.NO.	Part NO.	Part Name	Qty.	Ser.NO.	Part NO.	Part Name	Qty.
1-1	GB/T70.1 M5X16	BOLT	1	1-30	GB/T9074.4 M5X20	BOLT	1	1-59	1E48FP.3-2	CHOKER	1
1-2	GB93 5	WASHER	13	1-31	1E46FP-2	RETAINER	1	1-60	1E48FP.3-1	COVER	1
1-3	GB97.1 5	WASHER	3	1-32	1E48FP.4.1	STOP WIRE	1	1-61	1E48FP-7	SEALING GASKET	1
1-4	1E48FP.1	MUFFLER	1	1-33	GB1099 3X13	KEY	1	1-62	1E48FP.3-3	HANDLE	1
1-5	1E48FP-1	MUFFER GASKET	1	1-34	1E48FP-E.1.1	CRANKSHAFT	1	1-63	GB845 ST2.9X8.5	SCREW	1
1-6	GB97.1 6	WASHER	2					1-64	1E48FP.2	CARPURATOR	1
1-7	GB93 6	WASHER	2	1-36	1E44F-2A.2-3	BEARING	1	1-65	1E48FP-6	SEALING GASKET	1
1-8	GB/T70.1 M6X20-10.9	BOLT	2	1-37	1E40F-03.02.01	RING	2	1-66	GB/T70.1 M5X30	SCREW	2
1-9	GB848 5	WASHER	11	1-38	1E48FP.5-2	PISTON PIN	1	1-67	1E48FP-5	PIPE	1
1-10	GB/T70.1 M5X20	BOLT	4	1-39	1E48FP.5-5	PISTON	1	1-68	1E48FP-4	GASKET	1
1-11	1E46FP.1-1	CAP	1	1-40	1E48FP.5-4	PISTON RING	1	1-69	1E48FP-9	GUIDE AIR PLATE	1
1-12	1E40F-3A.8-2	SPRING	1	1-41	1E48FP.5-3	PISTON RING	1	1-70	GB/T9074.4 M5X10	SCREW	2
1-13	L8RTC	PLUG	1	1-42	1E48FP-10	GASKET	1	1-71	1E48FP-3	GASKET	1
1-14	1E48FP-2	CYLINDER	1	1-43	1E48FP.6-3	BACK CRANKCASE	1	1-72	GB/T9074.4 M5X20	SCREW	4
1-15	GB6171 M10X1.25	NUT	1	1-44	1E40FP-3Z-19	RATCHET	1				
1-16	GB93 10	WASHER	1	1-45	1E40FP-3Z-16	NUT	1				
1-17	GB97.1 10	WASHER	2	1-46	GB67 M5X12	SCREW	1				
1-18	1E46FP.1.1	ROTOR	1	1-47	1E40FP-3Z.4-4	WASHER	1				
1-19	1E40FP-3Z-11	SEAL	2	1-48	1E40FP-3Z.4-5	GUIDE SLICE	1				
1-20	GB/T70.1 M5X35	BOLT	4	1-49	GB860 8	WASHER	1				
1-21	1E48FP.6-1	FRONT CRANKCASE	1	1-50	1E40FP-3Z.4-8	START WHEEL	1				
1-22	GB119 B4X10	PIN	2	1-51	1E40FP-3Z.4-9	ROPE	1				
1-23	GB/T276 6302/P5	BEARING	2	1-52	1E40FP-3Z.4-6	PULLEY	1				
1-24	1E48FP.6-2	GASKET	1	1-53	1E40FP-3Z.4-7	SPRING	1				
1-25	1E46FP.1.1	stator	1	1-54	1E40FP-3Z.4-1	CASE	1				
1-26				1-55	1E40FP-3Z.4-2	HANDLE	1				
1-27				1-56	1E40FP-3Z.4-10	PACK	1				
1-28	GB/T9074.13 M4X20	BOLT	2	1-57	GB/T70.1 M5X50	SCREW	1				
1-29	1E46FP.1-3	GROMMET	1	1-58	1E48FP-8	BAFFLE	1				

FIGURE 2

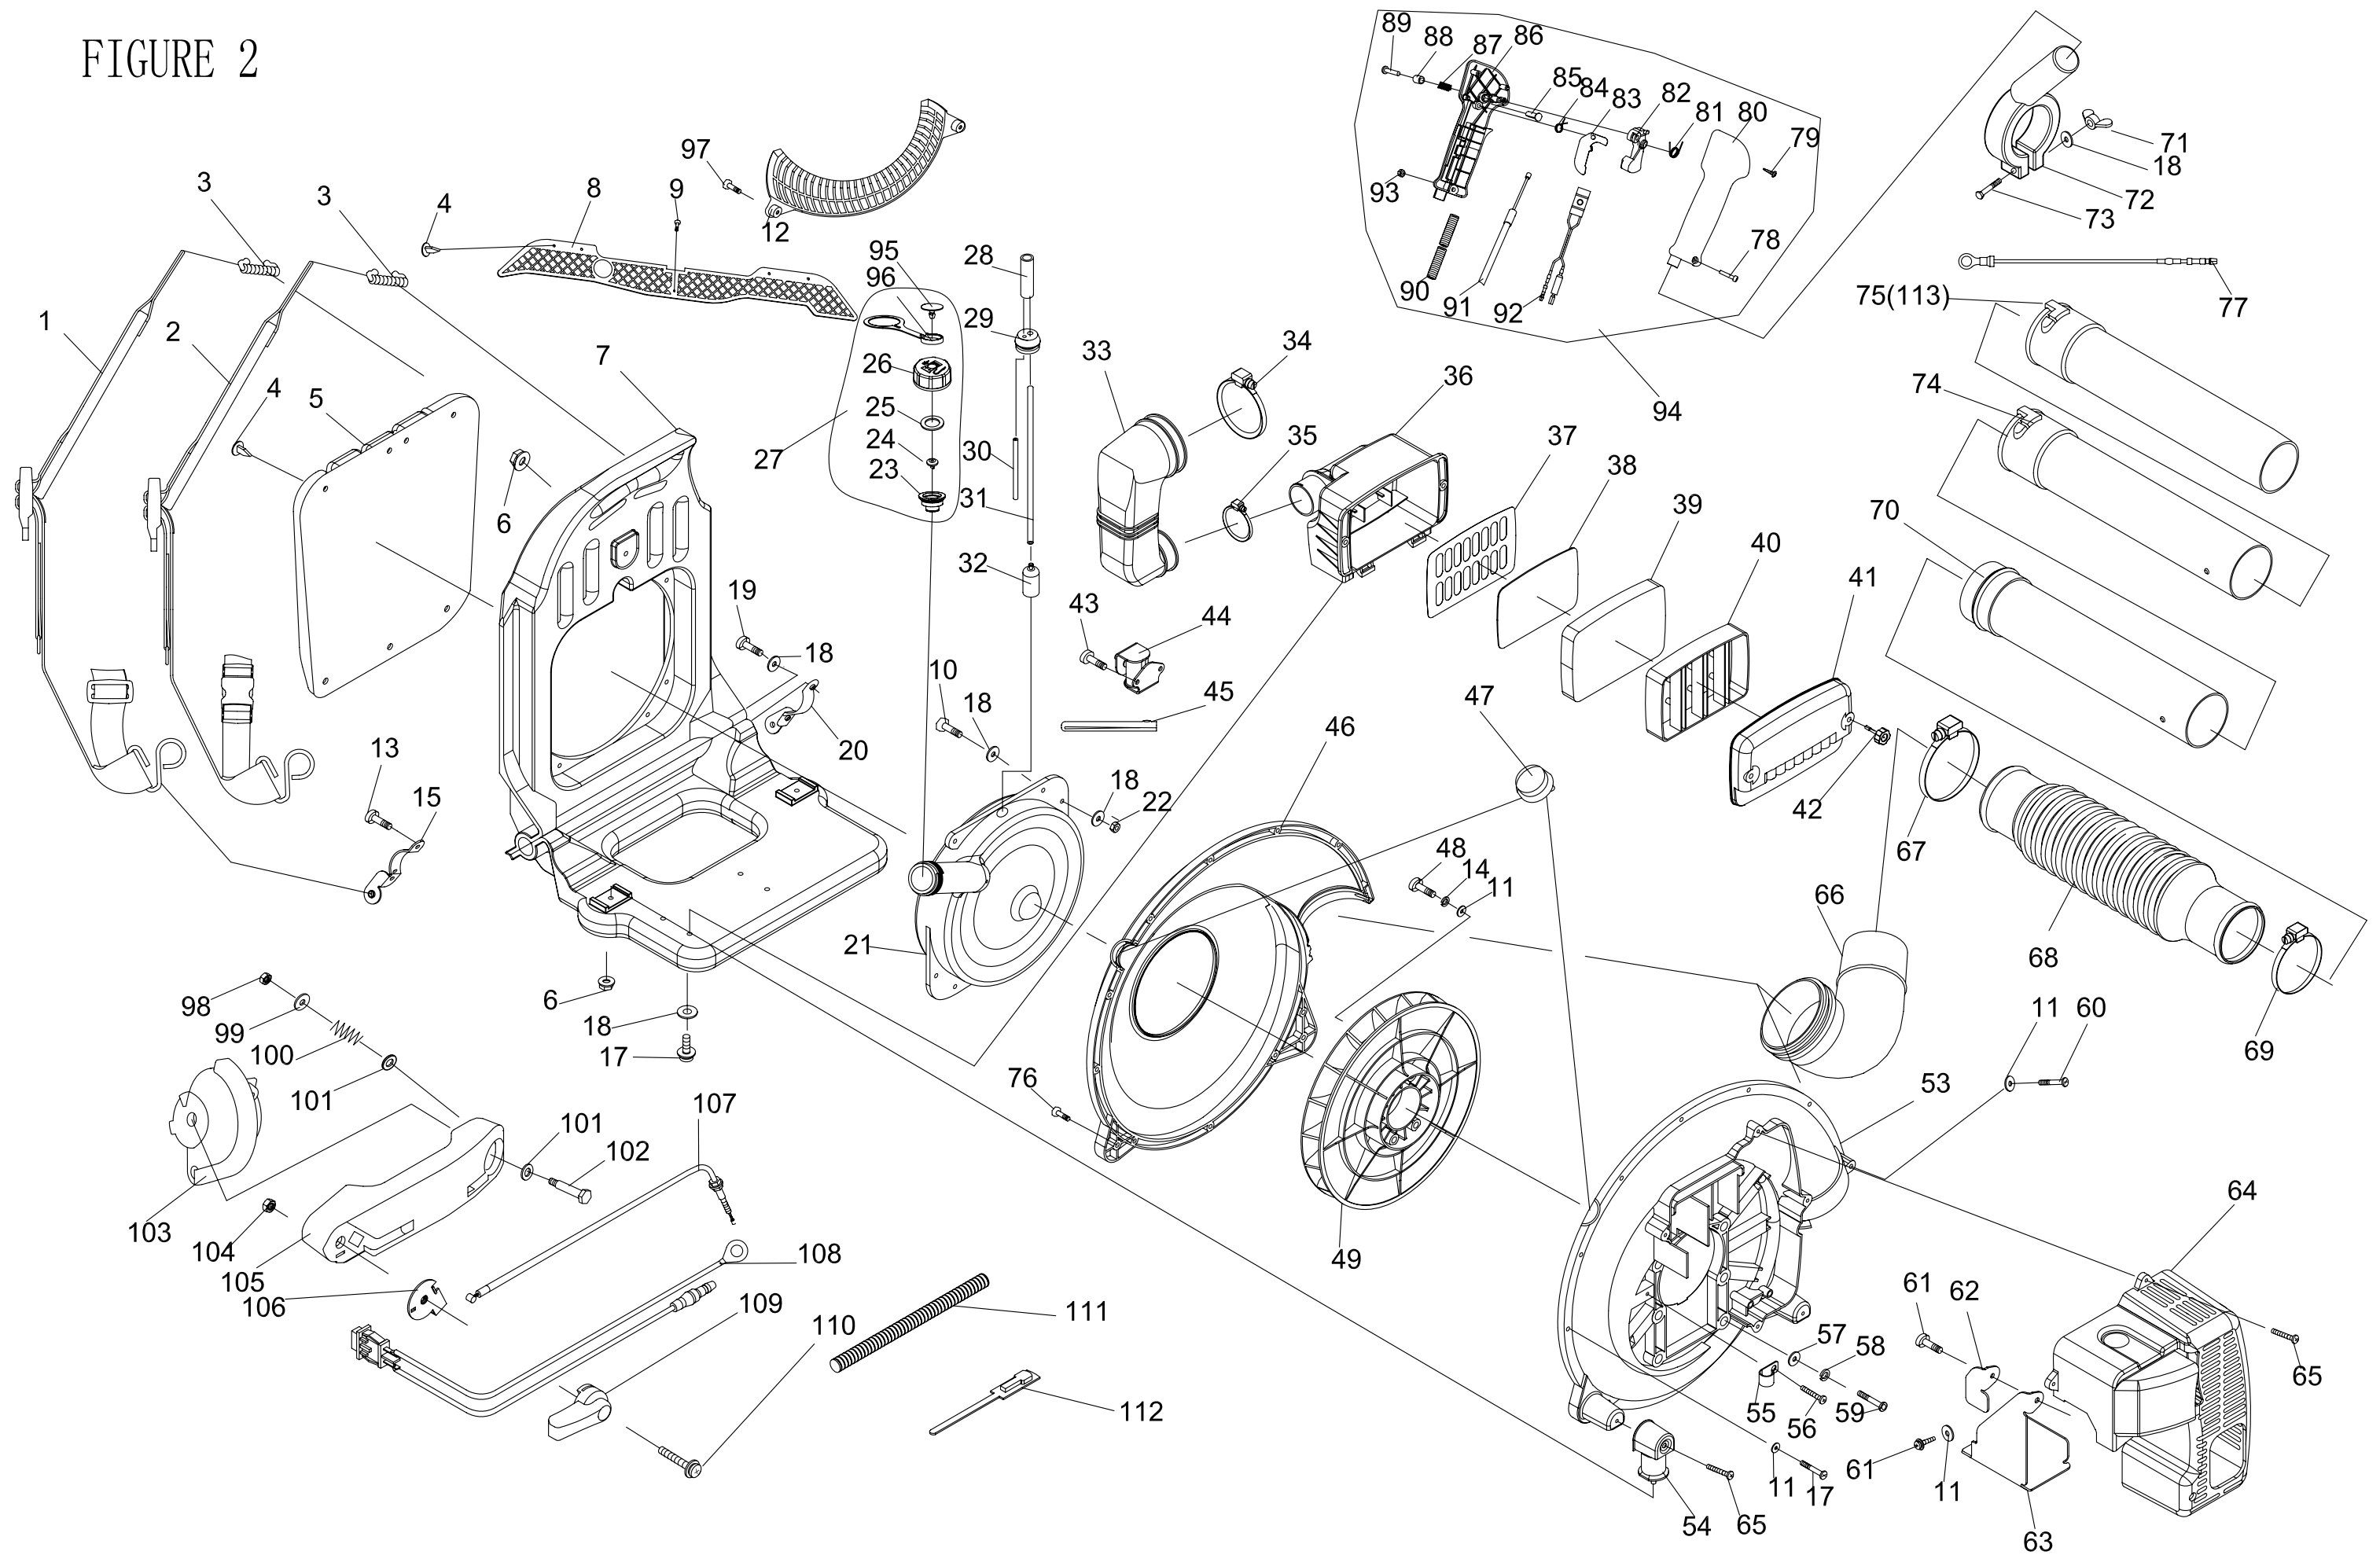

附图2 零部件清单(EB-650) Appendix List of Attached Fig.2(EB-650)

序号 Ser.NO.	代 号 Part NO.	名 称 Part Name	数量 Qty.	序号 Ser.NO.	代 号 Part NO.	名 称 Part Name	数量 Qty.	序号 Ser.NO.	代 号 Part NO.	名 称 Part Name	数量 Qty.	序号 Ser.NO.	代 号 Part NO.	名 称 Part Name	数量 Qty.
2-1	EB-650.10 (B)	左背带组合 LEFT BAND	1	2-30	GB/T13527.1 LS-3	回油管LS-3X1.5X660 TUBE LS-3X1.5X660	1	2-62	EB-650-8(A)-1	压板 PLATE	1	2-91	3WF-16.3.2.2	油门绳 FUEL THROTTLE	1
2-2	EB-650.10 (A)	右背带组合 RIGHT BAND	1	2-31	GB/T13527.1 LS-2	进油管LS-2X1.5X800 FUEL TUBE LS-2X1.5X800	1	2-63	EB-650-8(A)-2	隔热板 PLATE	1	2-92	3WF-16.3.2.1	停车开关组合 STOP SWITCH	1
2-3	EB-650-10	背带挂轴 SHAFT	2	2-32	P40.12.2-3A	过滤器 FILTER	1	2-64	EB-650-8	防护罩 PROTECTION	1	2-93	GB/T889.1 M5	螺母 NUT	1
2-4	3WF-2.6B-2	塑料卡子 BACK CLIP	11	2-33	EB-650-1	进气筒 PIPE	1	2-65	3WF-20.9-2	螺钉M5X16 SCREW	11	2-94	3WF-16.3.2	操纵盒组装 MANIPULATOR ASSEM	1
2-5	EB-650.11	背垫组合 BACK MAT	1	2-34	NO.($\varnothing 46\sim\varnothing 70$)	喉箍 CLIP	1	2-66	EB-650.7-1	风机接头 PAN JOINT	1	2-95	3WF-3C.1.2-3	塑料卡 PLASTIC CLIP	1
2-6	GB6177.1 M5	螺母 NUT	3	2-35	NO.($\varnothing 32\sim\varnothing 50$)	喉箍 CLIP	1	2-67	NO.($\varnothing 78\sim\varnothing 101$)	喉箍 CLIP	1	2-96	3WF-3C.1.2-2	防脱链 CHAIN	1
2-7	EB-650.1-2	机架 FRAME	1	2-36	EB-650.5.2	空滤器内罩组合 CLEANER INSIDE COVER	1	2-68	EB-650.7-2	软管 HOSE	1	2-97	GB/T 848 ST4.8X25	自攻螺钉 SCREW	2
2-8	EB-650-11	防护网 (一) PROTECT NET	1	2-37	EB-650.5.1	支撑板组合 PLATE	1	2-69	NO. ($\varnothing 59\sim\varnothing 82$)	喉箍 CLIP	1	2-98	GB6183 M6	螺母 NUT	2
2-9	GB845 ST4.2X14	自攻螺钉 SCREW	1	2-38	EB-650.5-4	滤芯乙 ELEMENT	1	2-70	EB-650.7.1	吹风管 (一) 组合 PIPE	1	2-99	GB96 6	垫圈 WASHER	14
2-10	GB818 M5X25	螺钉 BOLT	7	2-39	EB-650.5-3	滤芯甲 ELEMENT	1	2-71	GB62 M6	螺母 NUT	1	2-100	EB-415.22-4	压簧 SPING	1
2-11	GB97.1 5	垫圈 WASHER	12	2-40	EB-650.5-2	支架 FRAM	1	2-72	EB-650.7.2(A)-1	手把 HANDLE	1	2-101	GB97.1 8	垫圈 WASHER	2
2-12	EB-650-12	防护网 (二) PROTECT NET	1	2-41	EB-650.5-1	空滤器外罩 CLEANER OUTSIDE COVER	1	2-73	GB5783 M6X45	螺栓 SCREW BOLT	1	2-102	EB-415.22-3	阶梯螺栓 SCREW	1
2-13	GB/T9074.4 M5X30	螺钉 BOLT	2	2-42	EB-650.5.3	锁紧螺钉 SCREW	2	2-74	EB-650.7-3	吹风管 (二) PIPE	1	2-103	EB-650.1.1	控制总成座组合 CONTROL	1
2-14	GB859 5	垫圈 WASHER	4	2-43	GB9074.4 M5X14	螺钉组合件 SCREW	4	2-75	EB-650.7-4	吹风管 (三) PIPE	1	2-104	GB6183 M6	螺母 NUT	1
2-15	EB-650.1-1	左背带钩架 LEFT LOOP	1	2-44	EB-650.8	减振柱组合 RUBBER PILLAR	1	2-76	GB/T 848 ST4.8X25	自攻螺钉 SCREW	3	2-105	EB415.22-2	操纵手柄 CONTROLER	1
2-16			1	2-45	EB-650.9	保险带组合 SAFTY BELT	1	2-77	3WF-16.5	短接地线 EARTH LINE	1	2-106	EB415.22.1	支架焊合 FRAM ROD	1
2-17	GB818 M5X16	螺钉 BOLT	9	2-46	EB-650.2.3	后半蜗壳组合 VOLUTE CASE	1	2-78	GB/T70.1 M5X30	螺钉 SCREW	1	2-107	EB-650.4.1	油门绳组合 FUEL THROTTLE	1
2-18	GB96 5	垫圈 WASHER	20	2-47	EB-650.2-1	柱塞 PLUG	1	2-79	GB/T845 ST2.9X18	自攻螺钉 SCREW	3	2-108	EB-650.4.2	停车开关 STOP SWITCH	1
2-19	GB/T818 M5X20	螺钉 BOLT	2	2-48	GB/T70.1 M5X35	螺栓 BOLT	4	2-80	BL750.3-5	右操纵盒 RIGHT MANIPULATOR	1	2-109	EB-415.22-1	油门开关 SWITCH	1
2-20	EB-650.1-4	右背带钩架 RIGHT LOOP	1	2-49	EB-650.2.1	叶轮组合 IMPELLER	1	2-81	BL750.3-1	长扭簧 LONG SPRING	1	2-110	GB9074.4 M6X35	螺钉组合件 SCREW	1
2-21	EB-650.3-1	油箱 FUEL TANK	1	2-53	EB-650.2.2-3	前半蜗壳 VOLUTE CASE	1	2-82	BL750.3-4	操纵手柄 HANDLE	1	2-111	EB-650.4-1	护套管 TUBE	1
2-22	GB6177 M5	螺母 NUT	7	2-54	EB-650.6	支撑柱组合 SUPPORT	2	2-83	BL750.3-3	自锁手柄 HANDLE	1	2-112	BG415-1	线扎 WIRE CLAMP BAND	1
2-23	1E32FL.6.2-2	油箱内盖 LID	1	2-55	EB-650-2	高压线支架 BRACKET	1	2-84	BL750.3-2	自锁扭簧 SPRING	1	2-113	EB-650.7-4(A)	吹风管 (三) PIPE	1
2-24	EB-415.4.1.1-1	进气嘴 AIRVALVE	1	2-56	3WF-20.9-1 M5X10	螺钉M5X10 SCREW	1	2-85	BL750.3-8	锁紧销 PIN	1				
2-25	CG420.1.3.1	密封垫 SEALING WASHER	1	2-57	GB97.1 6	垫圈 WASHER	6	2-86	BL750.3-6	左操纵盒 LEFT MANIPULATOR	1				
2-26	EB-650-CE.1-1	油箱盖 FUEL TANK LID	1	2-58	GB859 6	垫圈 WASHER	6	2-87	BL750.3-7	锁紧弹簧 SPRING	1				
2-27	EB-650-CE.1	油箱盖组合 FUEL TANK LID	1	2-59	GB70.1 M6X35	螺栓 BOLT	6	2-88	BL750.3-9	按钮 PUSH BUTTON	1				
2-28	EB-650.3-2	油管套 VITTA CONVENTION	1	2-60	GB818 M5X55	螺钉 BOLT	2	2-89	GB/T846 ST2.9X13	自攻螺钉 SCREW	2				
2-29	EB-415.4.2-2	油管塞 VITTA PLUG	1	2-61	GB845 ST4.2X9.5	自攻螺钉 SCREW	2	2-90	3WF-16.3.2-1	护套管 TUBE	1				