

No.	Parts	Qty	No.	Parts	Qty
1	Fan cover	2	39	Spring washer	8
2	Screw(for fan)	4	40	Shock pad	4
3	Screw(for fan)	4	41	Screw (for shock pad)	4
4	Left fan	1	42	Air tank	1
5	Set screw(for crank)	2	43	Nut	2
6	Set screw(for crank)	2	44	Wheel	2
7	Crank	2	45	axle	2
8	Bearing	2	46	Drain valve	1
9	Connecting rod	2	47	Bolt	1
10	Screw (for connecting rod)	2	48	Cushion foot	1
11	Crank case (left)	1	49	Nut	2
12	Bearing	2	50	End cap	2
13	Rotor	1	51	Terminal block	1
14	Stator	1	52	Bottom cover for capacitor	1
15	Crank case (right)	1	53	Overload protection	1
16	Strain Relief Bushing	1	54	Capacitor	1
17	screw	1	55	Upper cover for capacitor	1
18	Spring washer	4	56	Nut for capacitor case	1
19	Screw(for motor)	4	57	Solenoid valve	1
20	Right fan	1	58	Check valve	1
21	Piston ring	2	59	O-ring for high pressure pipe	2
22	Pressure plate	2	60	High pressure pipe	2
23	Pressure plate screw	2	61	Power cord and plug	1
24	Cylinder	2	62	Safety valve	1
25	Screw(for air valve)	2	63	Connector	1
26	Metal strengthen sheet	2	64	Pressure gauge	1
27	Air valve	2	65	Connector	1
28	Cylinder obturating ring	2	66	Pressure switch	1
29	Valve plate	2	67	Ball valve	1
30	Air valve	2	68	Quick connector	1
31	Limited block	2	69	spring	2
32	Screw(for air valve)	2	70	Handle	1
33	Obturator ring (for cylinder cover)	2	71	Foam sleeve	1
34	Elbow	2	72	nut	1
35	Air filter	2	73	clip	1
36	Left cylinder cover	1	74	clip sleeve	1
37	Right cylinder cover	1	75	screw	1
38	Screw	8	76	AR-802B Air Regulator	1
			77	Pressure gauge	1

