



18. Pressure Washer Exploded View & Parts List (JN Series)

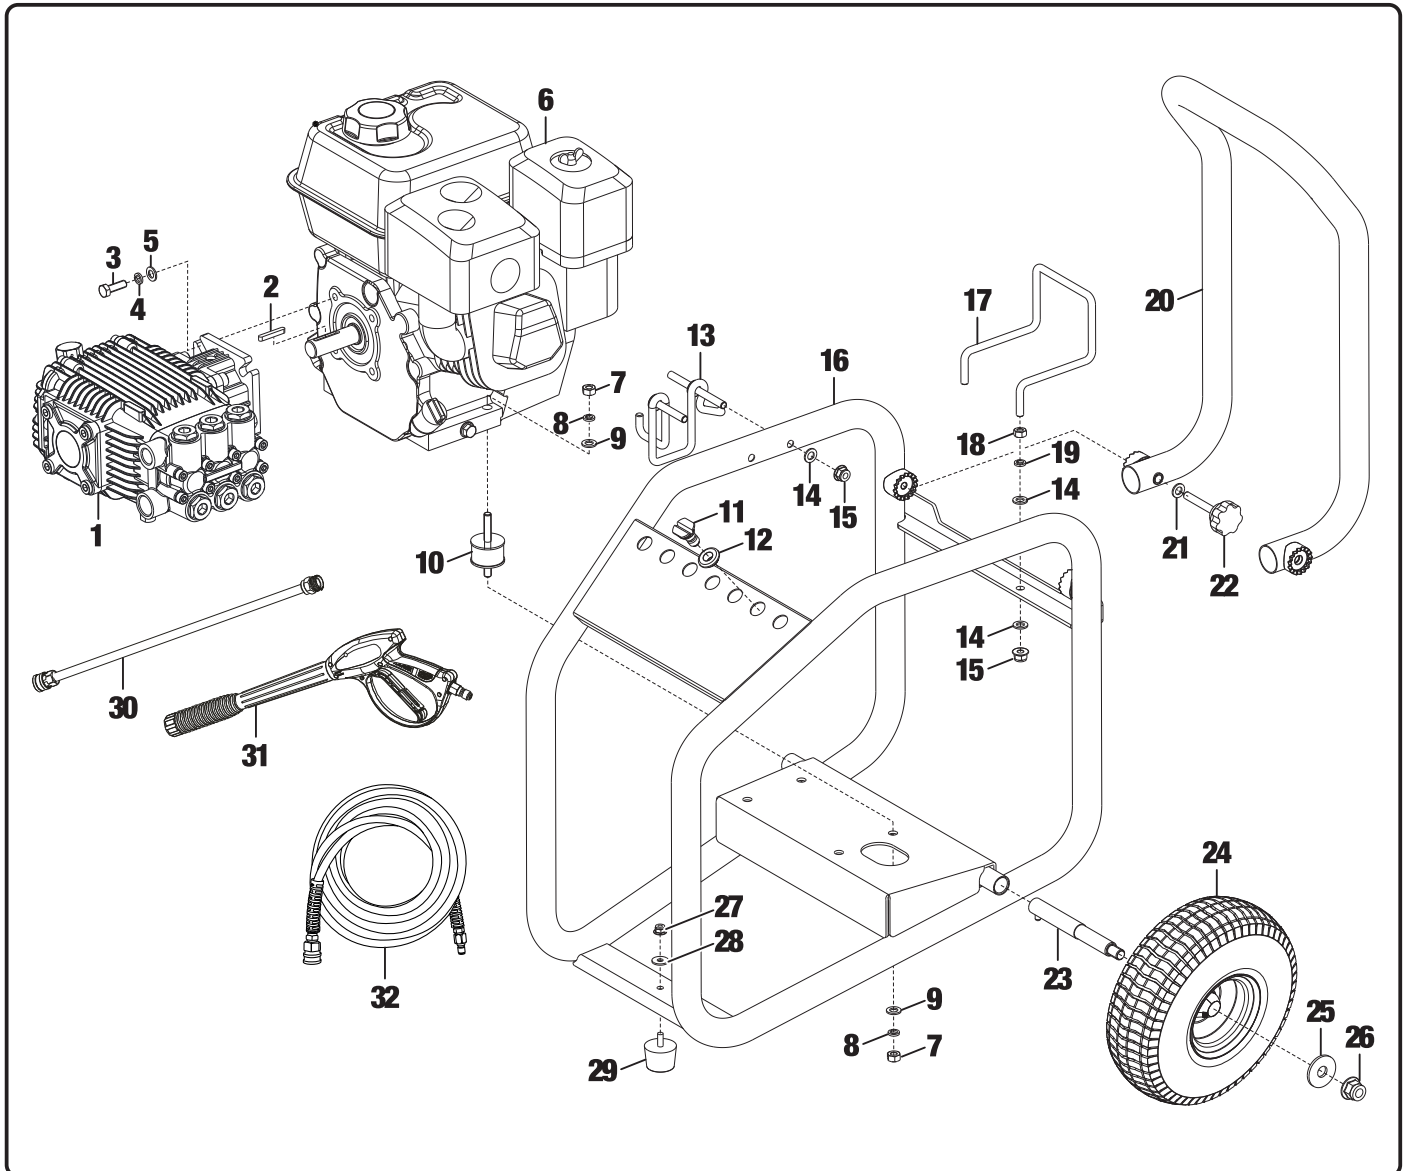

REF NO.	DESCRIPTION	QTY	REF NO.	DESCRIPTION	QTY	REF NO.	DESCRIPTION	QTY
1	Pump	1	12	Grommet	7	23	Axle	2
2	Key	1	13	Gun Hook	1	24	Wheel	2
3	Pump Fix Bolt	4	14	Plain Washer	6	25	Plain Washer	2
4	Spring Washer	4	15	Nut	4	26	Nut	2
5	Plain Washer	4	16	Frame	1	27	Nut	2
6	Engine	1	17	Hose Hook	1	28	Plain Washer	2
7	Nut	8	18	Nut	2	29	Rubber Foot	2
8	Spring Washer	8	19	Spring Washer	2	30	Wand	1
9	Plain Washer	8	20	Handle	1	31	Gun	1
10	Shock Pad	4	21	Locking Bolt	2	32	Steel Rubber Hose	1
11	Nozzle	5	22	Plain Washer	2			

19. Exploded View & Parts List (Triplex Pump)

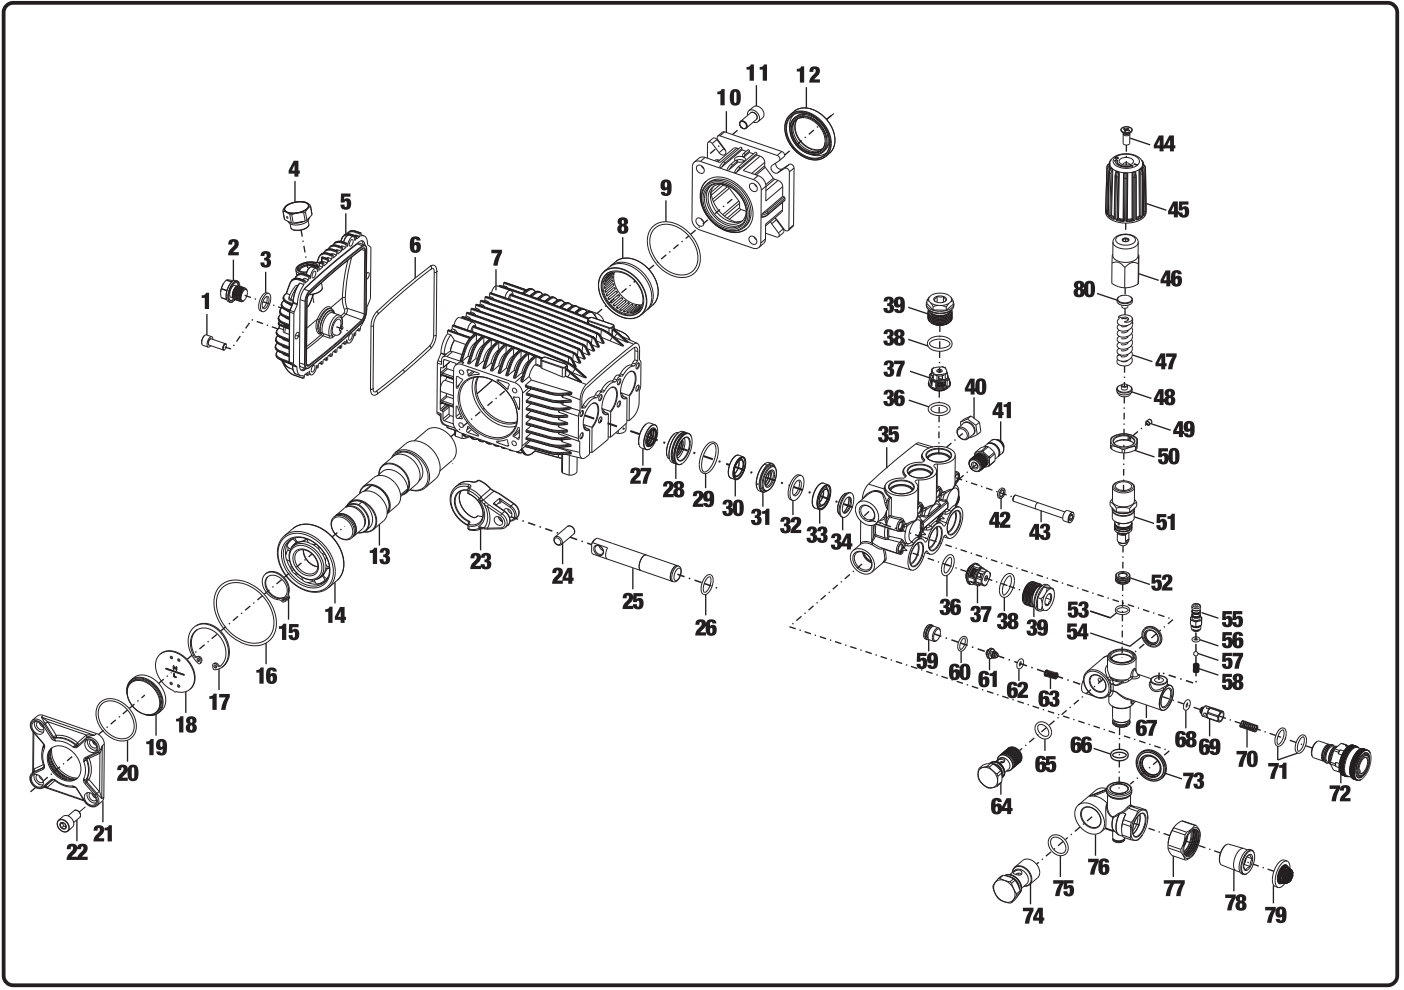


REF NO.	DESCRIPTION
1	Bolt, crankcase cover
2	Oil drain plug
3	O-ring, oil drain plug
4	Vented oil cap
5	Crankcase cover
6	Gasket, crankcase cover
7	Crankcase
8	Needle bearing
9	O-ring, flange
10	Flange
11	Bolt, flange
12	Oil seal, flange
13	Crankshaft
14	Ball bearing
15	Scrap ring
16	O-ring, crankshaft cover
17	Retain ring
18	Oil level plate
19	Oil sight glass
20	O-ring, oil sight glass
21	Crankshaft cover
22	Bolt, crankshaft cover
23	Connecting rod
24	Pin
25	Ceramic coating plunger

REF NO.	DESCRIPTION
26	O-ring
27	Oil seal, plunger
28	Locating ring
29	O-ring, locating ring
30	Low pressure water seal
31	Compression ring
32	Compression flake
33	High pressure water seal
34	Supporting ring
35	Manifold
36	O-ring, checking valve
37	Checking valve assy
38	O-ring, valve cap
39	Checking valve cap
40	Outlet plug, manifold
41	Inlet plug, manifold
42	Thermal Relief Valve
43	Washer, bolt, manifold
44	Bolt, manifold
45	Screw, knob cap
46	Plastic knob cap
47	Pressure adjusting knob
48	Pressure adjusting spring
49	Spring seat
50	Screw, jam nut

REF NO.	DESCRIPTION
51	Pressure jam nut
52	Unloader valve assy
53	Valve seat
54	O-ring, valve seat
55	Gasket, unloader valve housing
56	Detergent injector fitting
57	O-ring, injector fitting
58	Ball, injector fitting
59	Spring, injector fitting
60	Water outlet banjo bolt
61	O-ring, outlet banjo bolt
62	O-ring, unloader valve housing
63	Unloader valve housing
64	O-ring, outlet checking valve
65	Outlet checking valve
66	Spring, outlet checking valve
67	O-ring, outlet fitting
68	Quick disconnect outlet fitting
69	Gasket, bypass housing
70	Water Inlet banjo bolt
71	O-ring, inlet banjo bolt
72	Bypass housing
73	Swivel nut, inlet connector
74	Body, inlet connector
75	Filter washer, inlet connector

19. Exploded View & Parts List (Axial Pump)

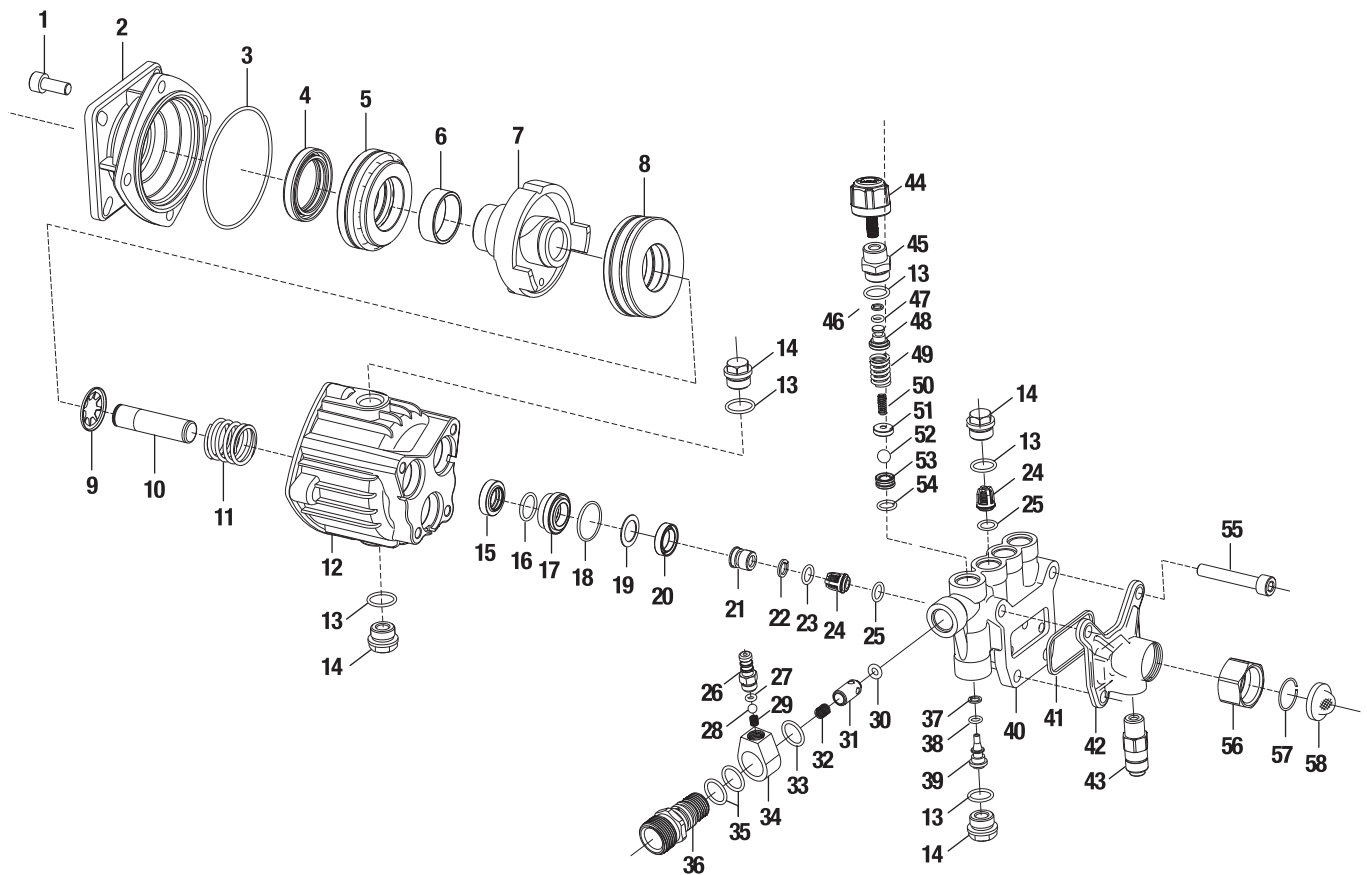

REF NO.

DESCRIPTION

1	Socket Head Screw M8X16
2	Pump Basal Flange
3	O-Ring(80X2.2)
4	Radial Shaft Seal
5	Rear Bearing
6	Wearable Sheath
7	Wobble Plate
8	Front Bearing
9	Spring Disk
10	15mm Plunger
11	Plunger Spring
12	Crankcase
13	O-Ring(14.2X1.9)
14	Plug
15	15mm Oil Seal
16	O-Ring(15X2.2)
17	Spacer
18	O-Ring(21.8X1.9)
19	Compaction flake
20	15mm Water Seal

REF NO.

DESCRIPTION

21	Inlet Valve Plug
22	Backup Ring
23	O-Ring(9.8X1.9)
24	Checking Valve
25	O-ring (9.8X1.9)
26	Chemical Hose Barb
27	O-Ring
28	Ball
29	Small Cone Spring
30	O-Ring(5.3X2.65)
31	Outlet Cone Valve
32	Cone Valve Spring
33	O-Ring(12.2X2.6)
34	Soap Siphon Body
35	O-ring
36	Outlet connector
37	Backup Ring
38	O-Ring (9.25X1.78)
39	Backwater Valve Core
40	Pump Manifold

REF NO.

DESCRIPTION

41	Seal Gasket
42	Water Inlet Body
43	Thermal Relief Valve
44	Adjusting Screw
45	Adjusting Screw Plug
46	Backup Ring
47	O-Ring
48	Spring Holder
49	Big Pressure Spring
50	Small Pressure Spring
51	Ball Holder
52	Steel Ball 8.7
53	Backwater Valve Port
54	O-Ring 9.25X1.78
55	Manifold Hold Bolt
56	Water Inlet Swivel Nut
57	Clip Ring 21.4
58	Water Inlet Filter