

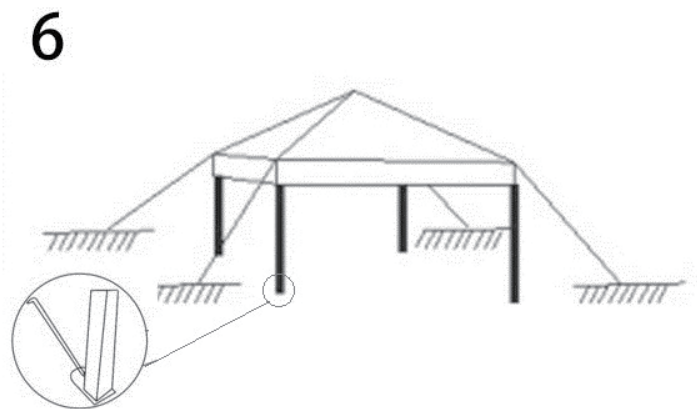
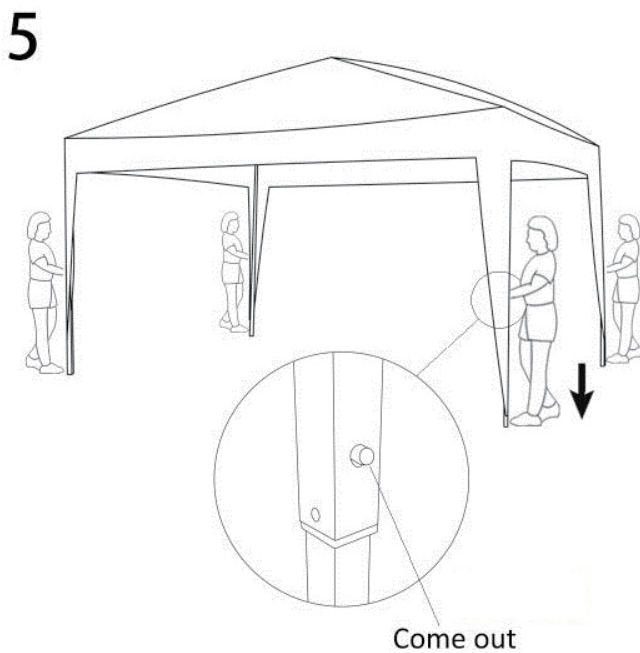
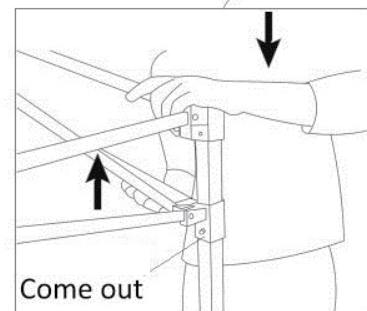
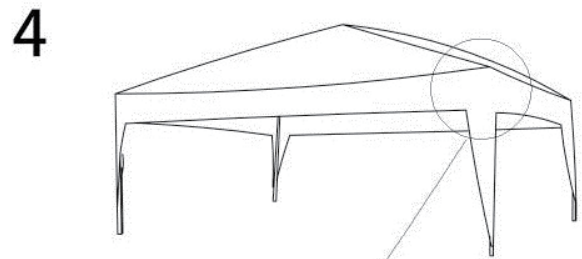
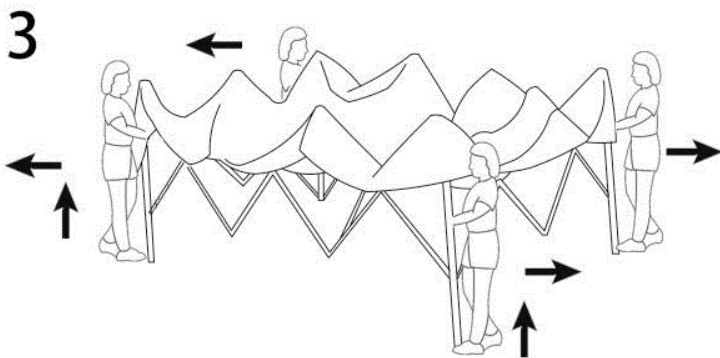


Open


2 persons are needed to hold 4 corners of the tent,
gently shake to slightly spread the cross pole of the tent frame.

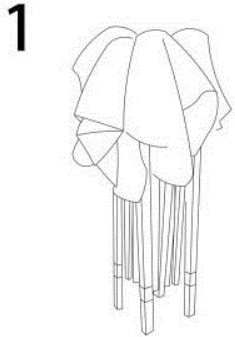

Close

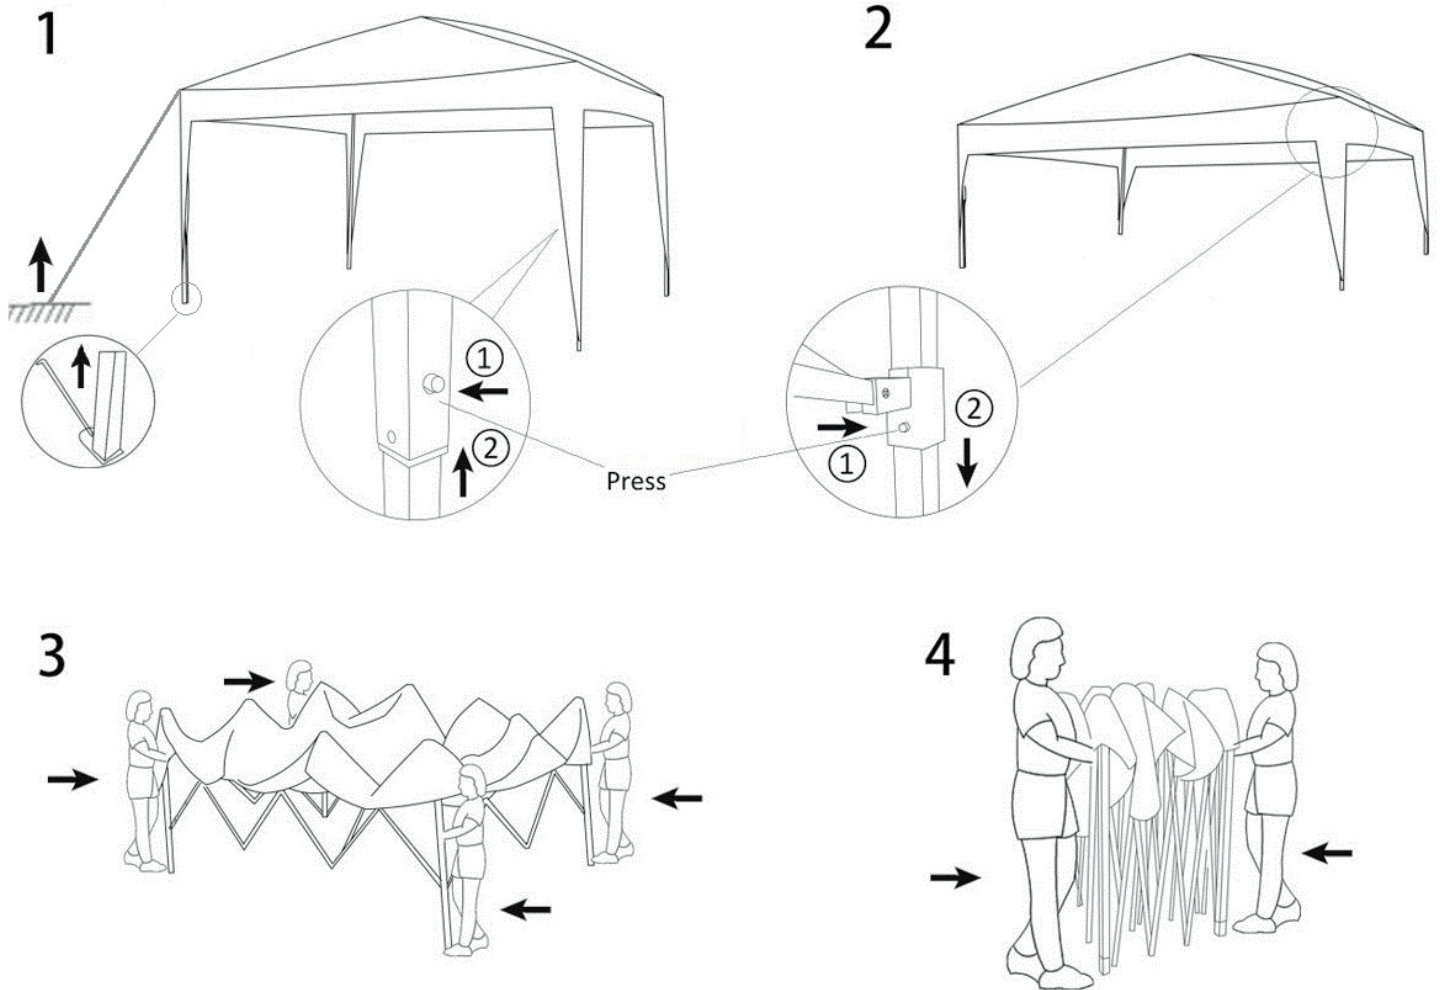

5

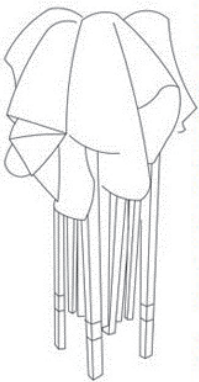

1- Take the canopy carefully out of the box and place it on DRY surface (grass, sand or hard surface)

2- Two (or four) persons should help with the assembly, in order to avoid damaging the poles. Do NOT attempt to assemble the product ALONE, as this could put unnecessary stress on the legs, which could get damage if they are not pulled apart in tandem.

3- Secure the tent in windy or adverse weather conditions by using the rope located on each side of the canopy and hammering the stakes into the ground at a 30 degrees angle to balance the sides of the tent. If the canopy is placed on a hard surface, secure the 4 sides with bricks or sand bags to weigh the canopy down.

4- Do NOT assemble or leave fully assembled canopy in adverse weather conditions (e.g. rain, wind, snow ...), as this will damage the canopy and may pose a hazard to others and property.

The owner/user is solely responsible for injuries and/or damages caused by the use of the canopy.

5- It is recommended to store the product in a clean, dry location, protected from humidity, direct sunlight, frost and dust, and keep it out of children's reach (e.g. high or in a locked-up place).