


שולחן בדורגל





SUO-3720SM

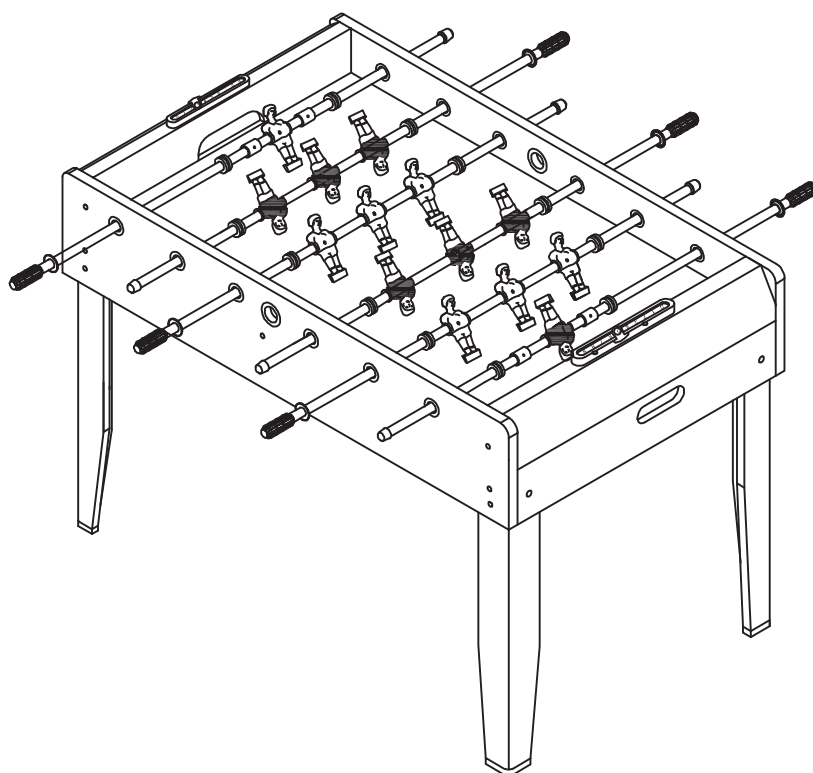

IMPORTANT!

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts List below and be sure that all parts have been included.

PARTS LIST

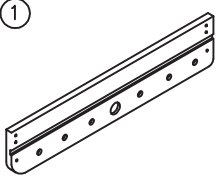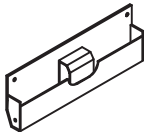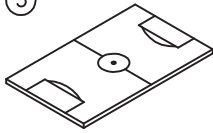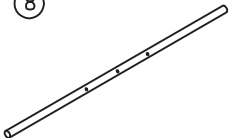 SIDE APRON 2EA	 END APRON 2EA	 SOCCER PLAYFIELD 1EA	 SUPPORT BRACE 1EA	 LEFT LEG 2EA
 RIGHT LEG 2EA	 SOCCER BALL 2EA	 PLAYER ROD 6EA	 PLAYER (Yellow) 7EA	 PLAYER (Red) 7EA
 ALLEN WRENCH 1EA	 6X30MM BOLT 16EA	 18X6.5MM WASHER 16EA	 3.5X35MM WASHER HEAD SCREW 2EA	 3.5X18MM ROUND HEAD SCREW 18EA
 SCORER 2EA	 HAND GRIP 6EA	 END CAP 6EA	 STOP RING 4EA	 RUBBER BUMPER 12EA

ASSEMBLY INSTRUCTIONS:
We recommend that two adults work together to assemble this game.

1) Open the carton of your new table game near where you will play. Select a clear level floor. This game requires at least two adults to assemble the table.

2) Remove all the contents from inside the carton and verify that you have all listed parts as shown on the Parts List.
 NOTE: The player rods are pre-assembled. We suggest that you use the bottom carton as a clean flat working area to protect the game. Carefully cut or tear the four carton corners so that the bottom is now your work area.

FIG.1.

3) Attach one End Apron (#2) between Side Aprons (#1). Secure with one of Leg Bolt (#12) and one of Washer (#13) per side apron, screw them through Side Aprons into End Apron. NOTE: Leave connections loose - Do not tighten screws securely at this time.

4) Locate Playfield (#3) and slide the Playfield with graphics facing down as shown in FIG.1. If the field does not slide smoothly, check to be sure you have not over tightened any screws or the playfield is not caught by the slot.

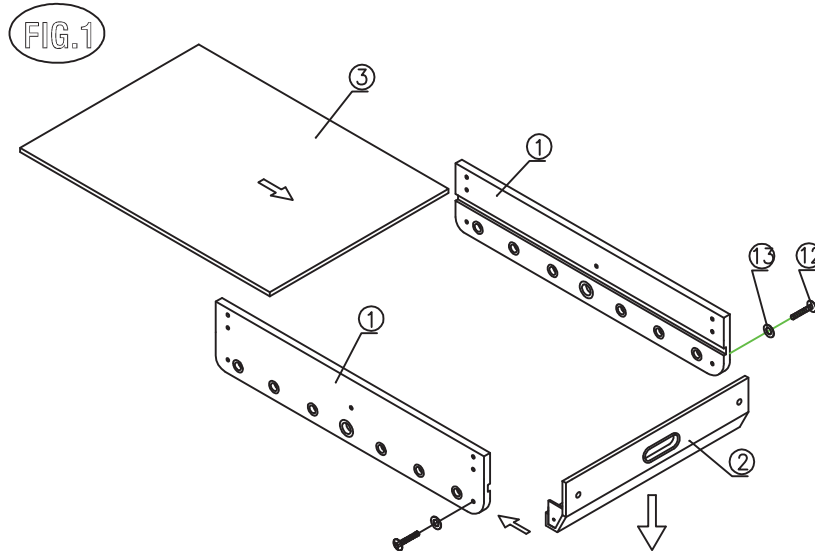


FIG.2.

5) Repeat the step to attach the other End Apron (#2) to the Side Aprons (#1). Center the playfield between the two end aprons, and make sure that the playfield is in the grooves of the side aprons and end aprons.

NOTE: Be sure that two side aprons and end aprons are square. Now go back and tighten all the connections.

6) Place the Support Brace (#4) on the Playfield (#3) as shown in FIG.2. Attach it using two of Washer Head Screws (#14


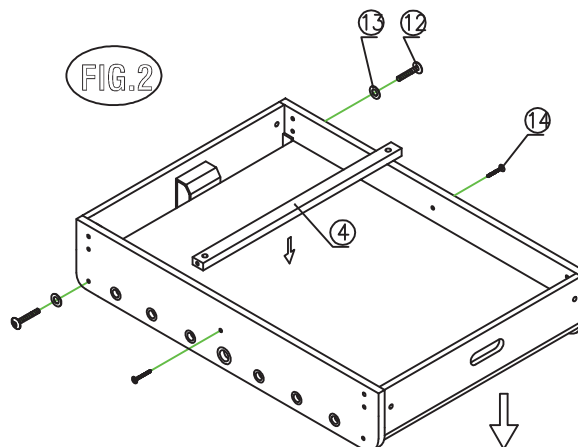


FIG.3.

7) Attach the Left (#5) and Right (#6) Legs to the cabinet using three of the Leg Bolts (#12) and three of Washers (#13) per leg. See FIG.3.

8) Lift the table assembly from the floor with two strong adults, turn it over, and set table on its legs in the location where you will play. Go back and make sure that all connections are tight.

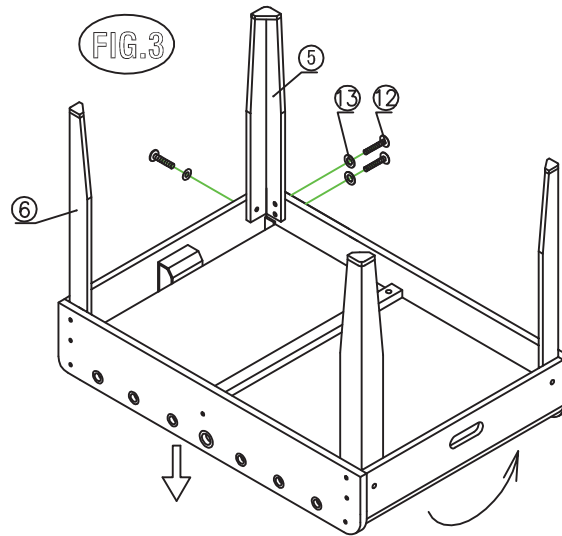

CAUTION: Two adults are recommended to flip the table as shown.

1. Grab the table on the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

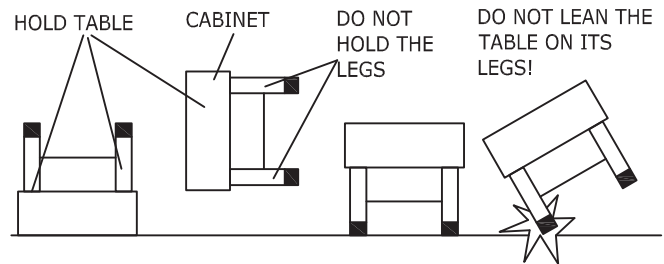


FIG.4.

9) Attach the player rods (#8) into the side aprons as shown in Fig.4-1. Attach rubber bumper (#20) to the player rod, followed by the players (#9 & #10) and another rubber bumper (#20). For the two goalie player rods an additional stop ring (#19) will be needed to be added between the goalie.

10) Attach Stop Rings (#19) and Players (#9 & #10) to the player rods using Round Head Screws (#15) as shown in Fig.4-2.




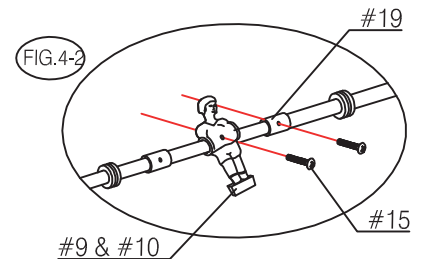


FIG.5.

- 11) Put the Hand Grips (#17) and End Caps (#18) on the player rods in order as shown in FIG.5. NOTE: To make the handles to attach easier to attach, spray a little window cleaser on the rod ends prior to installation and tap on gently with a hammer. See FIG.5.
- 12) Insert one Soccer Scorer (#16) on each end apron as shown in FIG.5. Pilot holes shown the proper placement.

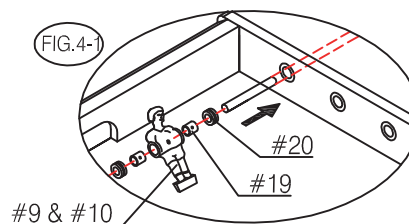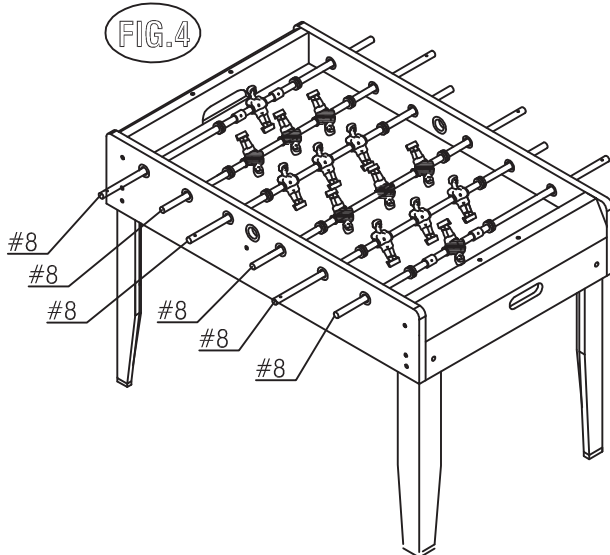

**THE GAME ASSEMBLY IS COMPLETE
YOU ARE NOW READY TO PLAY**

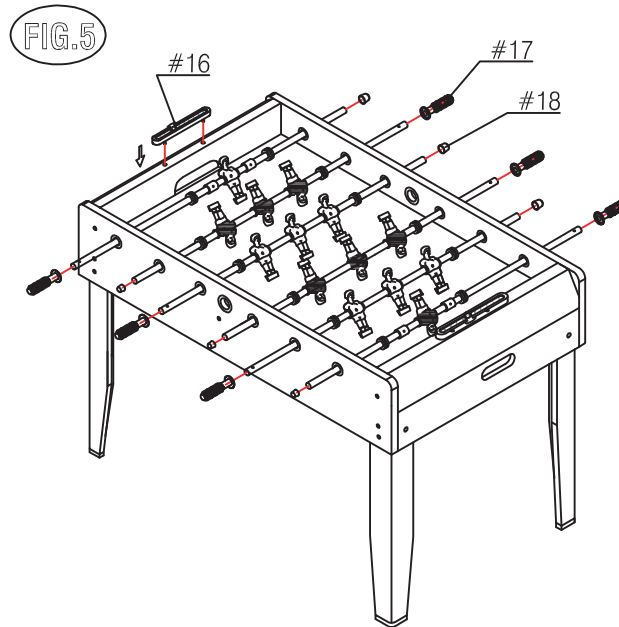