



CAUTION

 
1. All the safety and operating instructions should be read before the appliance is operated.
2. All operating and user instructions should be followed.
3. The appliance should not be used near water—for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc. It should not be exposed to dripping or splashing water, and no objects filled with liquid, such as a vase, should be placed on the appliance.
4. Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
5. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings. Or placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings.

PACKAGE CONTENTS

- Speaker unit tpc
- 3.5mm to 3.5 stereo cable tpc
- 3.5mm to RCA cable tpc
- USB Charging cable tpc
- Operation manual tpc




BUTTON CONTROLS



1. **Short press** to Bluetooth source, long press entering pairing mode, blue LED will flash fast.
2. **Short press** to switch Bluetooth, USB and AUX sources.
LED colors: blue for Bluetooth, green for USB, red color for AUX, the current pattern is Bluetooth and LED will be blue.
3. **Short press** to decrease volume and long press to select previous song, under Bluetooth and USB mode.
4. **Short press** to increase volume and long press to select next song, under Bluetooth and USB mode.
5. **Short press** to pause/play music.

 CONNECTION DIAGRAM



CHARGING

1. Connect mini USB port of speaker to USB port of Computer or charger through USB cable provided with the unit.
 2. Charging LED at back panel will be brightlight (colored) during charging period & will be dark after completion of charging.
 3. Recommend to charge the unit once every month and turn off the unit if not use.
- Notice:
USB mode, Support nondestructive music format: fa2/ ape/ wav/ mp3 and WMA upto 32GB USB driver.
For better result charge the unit in switch OFF condition only.

OPERATION MANUAL

Bluetooth mode

Press the Bluetooth key given at side panel. After power on, E200 PLUS will automatically search the Bluetooth device. If the device paired before, E200 PLUS will be connected automatically. If can not find the paired device, E200 PLUS will enter to be pairing mode automatically. During pairing mode Blue LED will flash quickly.

1. Active "Bluetooth" function on your device and search for "Fenda E200 PLUS". Enter "0000" if your device asks for the PIN code.
2. After pairing successfully, blue LED will be bright, and ready for playing music. Recommend to adjust suitable volume before playing music.

Specifications

Output power: 2.5Wx2(RMS)
Input: 5V at 1A
Speaker unit: 2" 40 full range driver
Frequency Response: 50Hz-20KHz
S/N Rate: 370dB
Separation: 150dB
Dimension: L410XW73XD58mm

F&D WARRANTY CARD

END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

F&D WARRANTY CARD

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of **F&D** product within the warranty period, from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our **F&D** Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our **F&D** Authorized Dealer. (Parts would be replaced when necessary)
 - A. Parts: 1 year
 - B. Technical service free: 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.
 - B. Full particulars not clearly shown or alterations made against the actual information.
 - C. For e.g.: Alteration of the date of purchase, serial number-altered or removed.
 - D. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - E. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of **F&D** product within the warranty period, from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our **F&D** Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our **F&D** Authorized Dealer. (Parts would be replaced when necessary)
 - A. Parts: 1 year
 - B. Technical service free: 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.
 - B. Full particulars not clearly shown or alterations made against the actual information.
 - C. For e.g.: Alteration of the date of purchase, serial number-altered or removed.
 - D. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - E. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.