
 
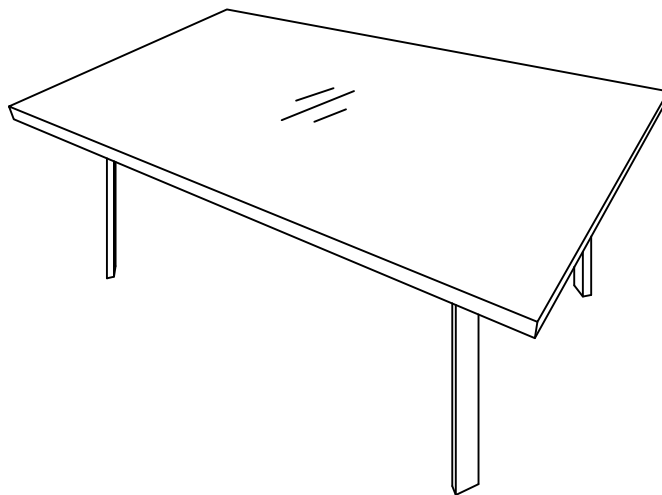



Assemble Instruction for YF-8574BT








		
A 1 PC	B 4 PCS	C 1 PC
	M6*18 	
D 1 PC	E 16 PCS	F 16 PCS

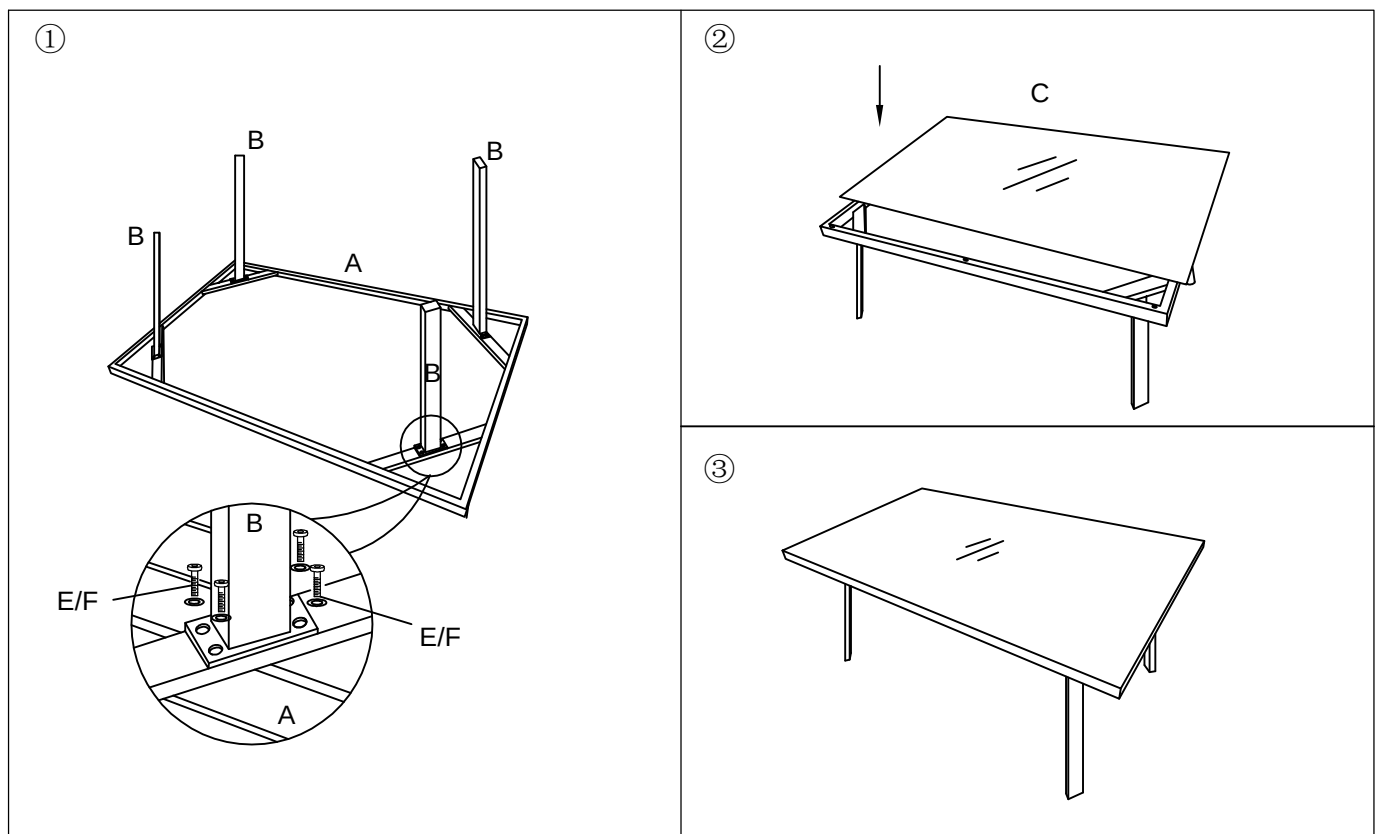

  
Assemble Instruction for YF-8574B-3

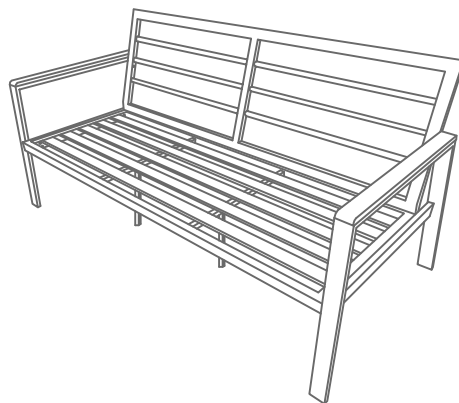

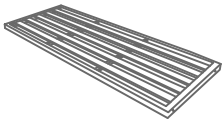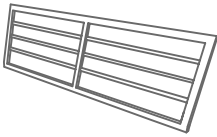				
A 1 PC	B 1 PC	C 1 PC	D 1 PC	K 1 PC
M6X18 	M6X35 		M6X55 	
E 4 PCS	F 6 PCS	G 15 PCS	J 5 PC	H 1 PC

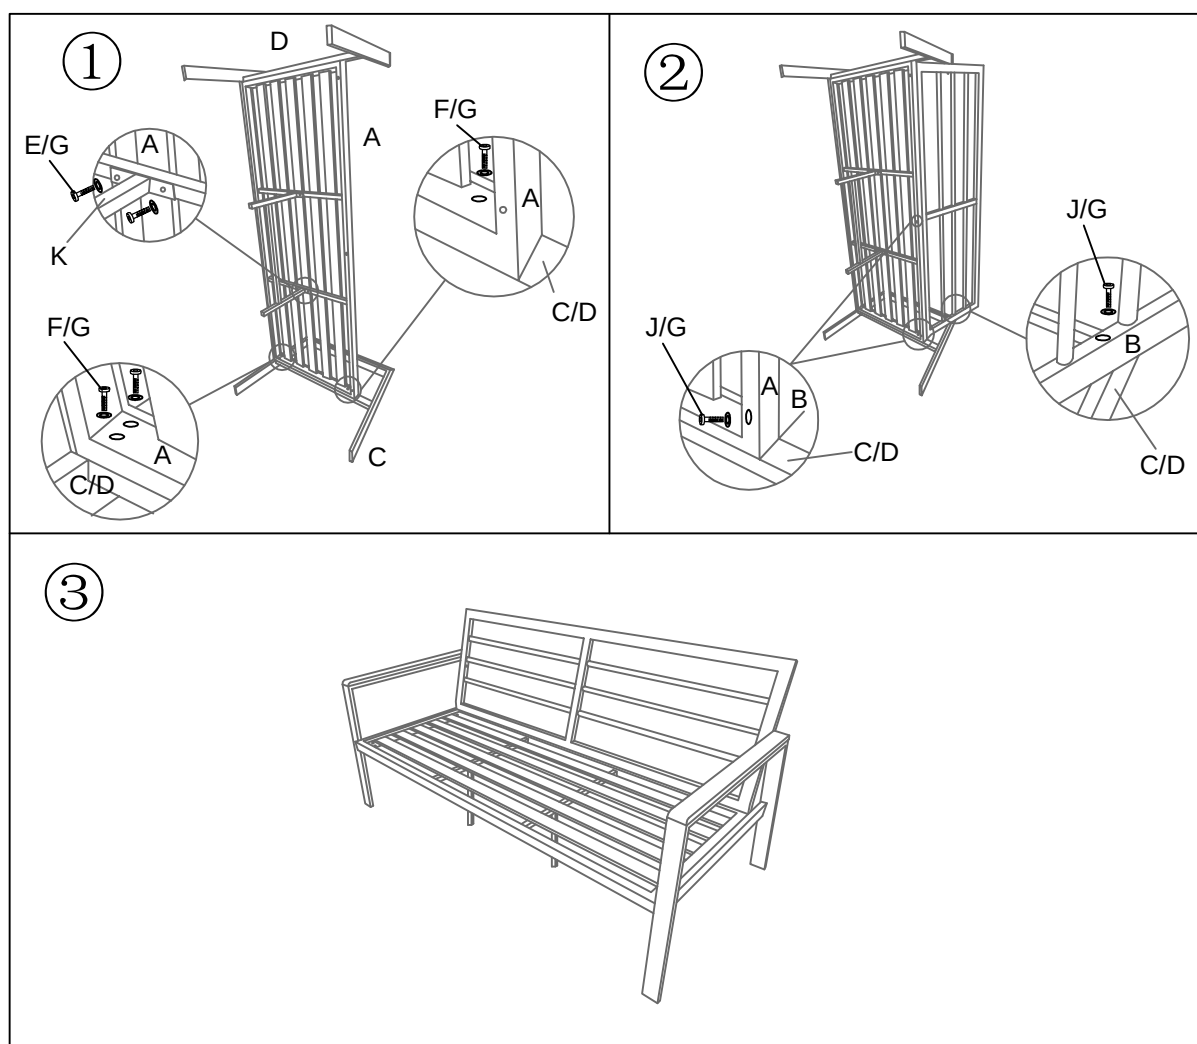

Assemble Instruction for YF-8574B-1

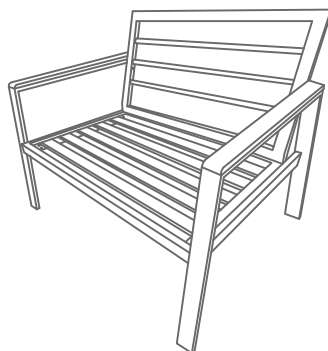

A 1 PC	B 1 PC	C 1 PC	D 1 PC
M6X35 	M6X55 		
F 6 PCS	J 4 PCS	G 10 PCS	H 1 PC

