 
 
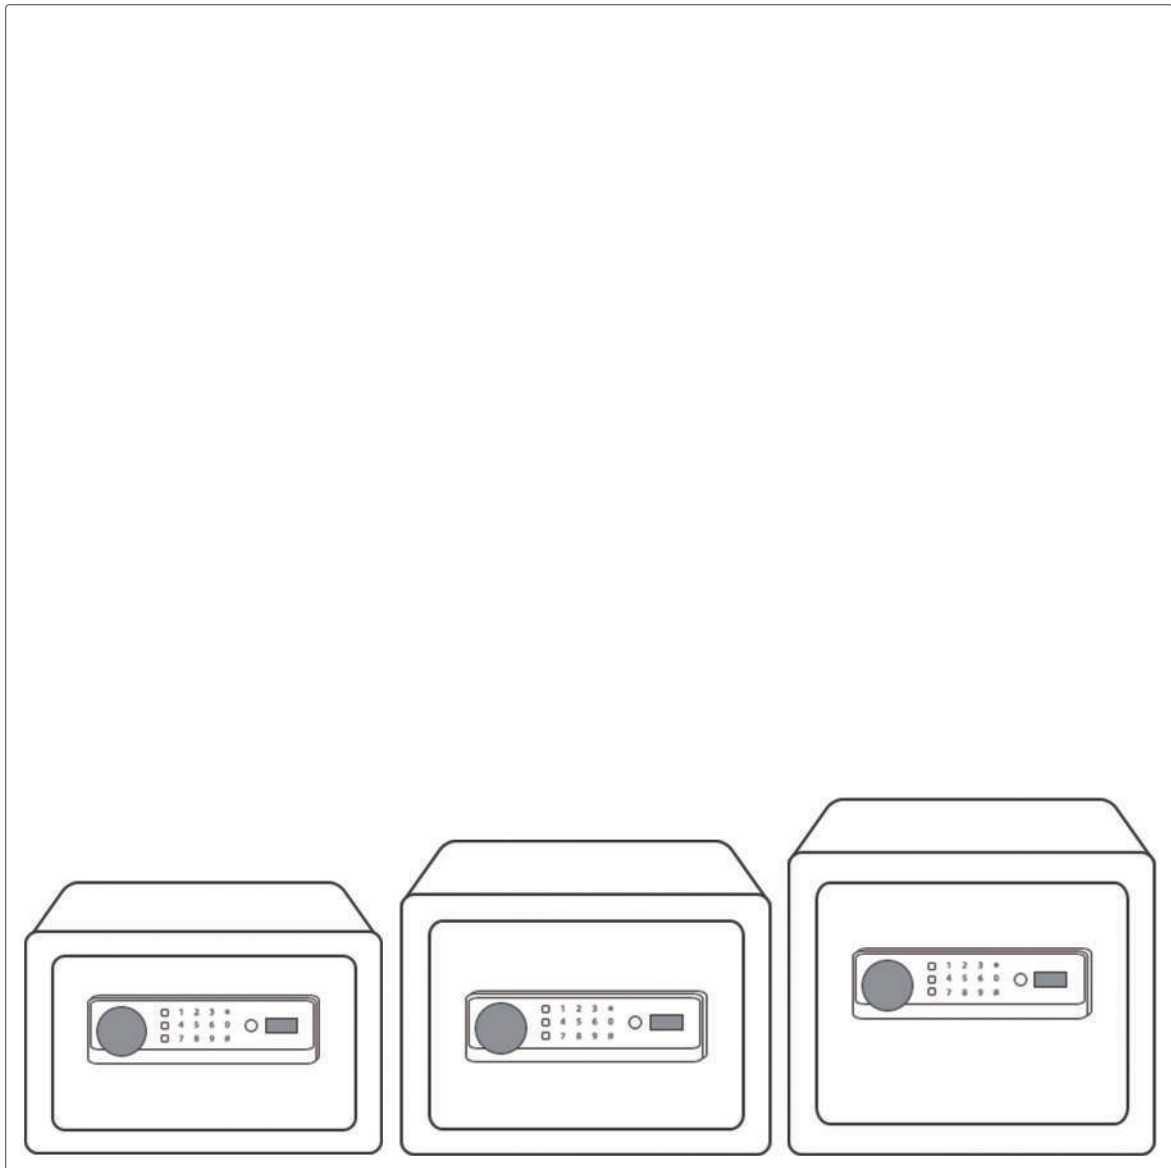 


Instruction manual

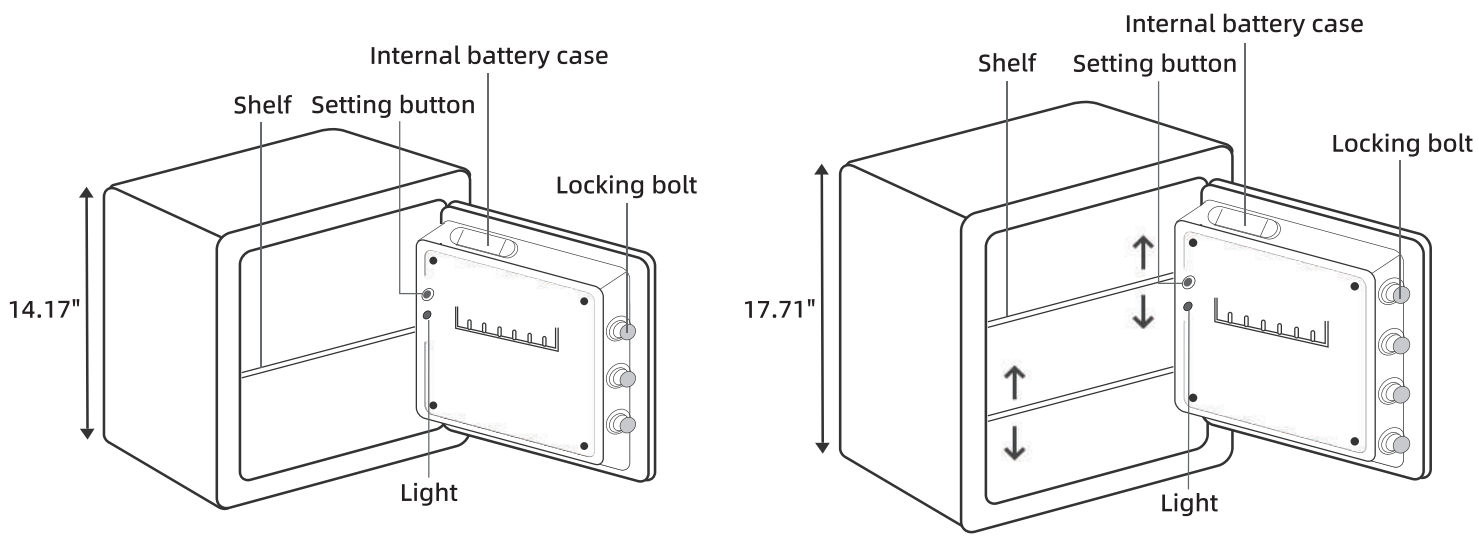


Thank you for choosing our products!
Please take time to read and familiarize yourself with the proper
operating procedures presented on the following pages.

XA6-25/35/45 SERIES SAFE DEPOSIT BOX INSTRUCTION GUIDE

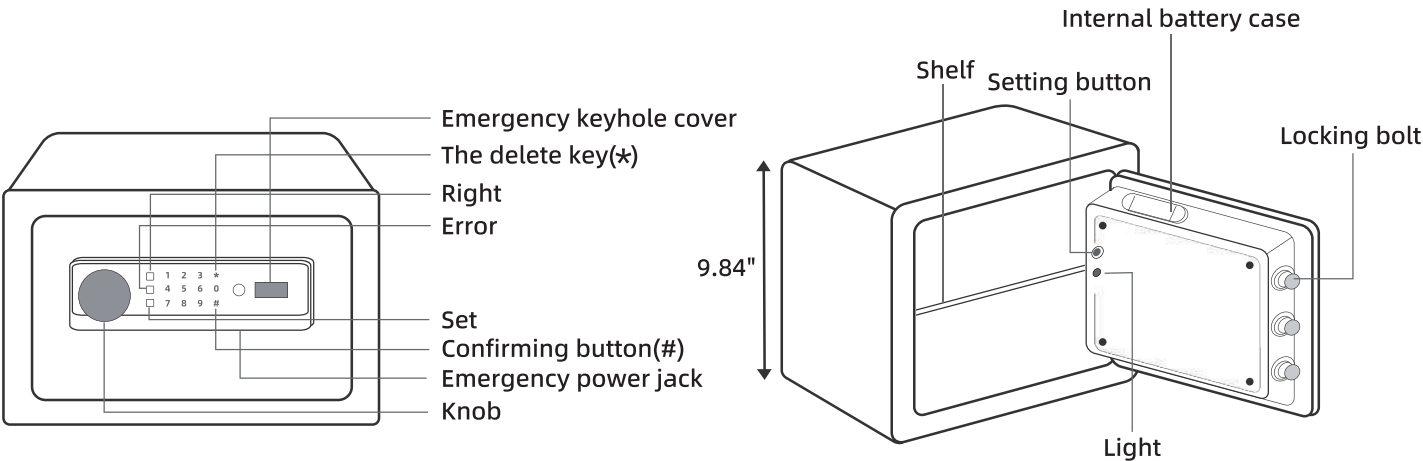

 Accessories

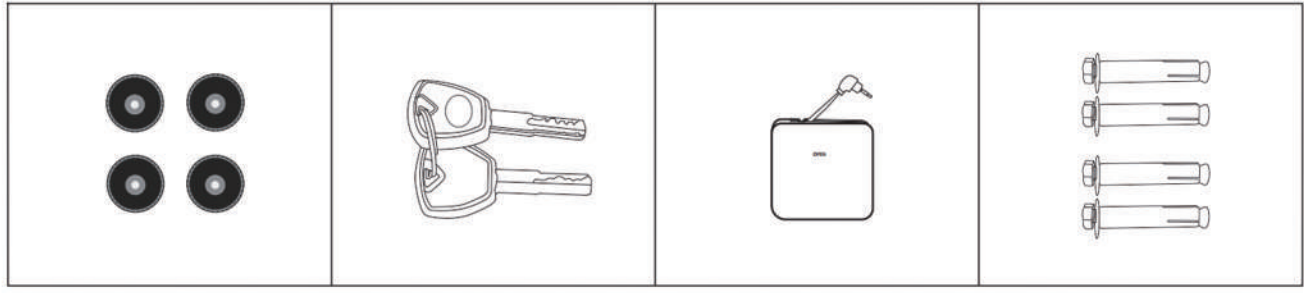

Foot mat*4 Emergency key*2 External battery box*1 Expansion bolt*4

Warnings

- ⚠ 1. Do not lock the emergency key or external battery box into the cabinet.
- ⚠ 2. If the safe box will not used for a long time, please remove its battery.
- ⚠ 3. Purchase 4 AA batteries in advance, this safe does not contain batteries.

How to Use Your Safe Box ?

Operating Instructions

 
1. The light flashes once every time an operation key is pressed.
2. The "#" key on the operation keypad is used to indicate start and confirmation.
3. After any key is pressed, if there is no subsequent key input for 7 seconds, the lock will enter the sleep state.
4. Once it enters the sleep state, all operations will stop. Wake up the screen with your palm to enter the function operation.
5. During input, you can press "*" key to delete all the input and re-enter.

Step1 Open the safe for the first time



Take the key out of the bag, and press the keyhole cover on the right, then insert the emergency key, turn the key anticlockwise. Then turn the knob clockwise, the door will be open.

Step2 Insert the battery



Remove the internal battery box cover and install the 4 AA 1.5 Volt alkaline batteries, the system will power on.
(rechargeable battery is not recommended as it may destroy the safe box's internal electronic components)

Step 3 Use the password to open the cabinet

Wake the touch area with the back or palm of the hand, enter the initial password "123456" and press "#" to confirm, "🔒" will light up, you can turn the knob clockwise, and the door will be open.
To ensure the safety, you had better change the initial password.

How to Set or Change the Password ?

Personal password setting and changing

1. When the door is open, press the green setting button inside the door, and it will beep twice and the touch area will light up, indicating that the personal password setting or changing has begun.
2. Enter any number between 1 to 8 digits and press "#" to confirm, then enter the new password again, press "#" key to confirm, it will beep twice, "🔒" will light up, indicating that the personal password has been set successfully.

Management password setting and changing

1. When the door is open, wake the touch area with the back or palm of the hand and press "00", then press the green setting button, it will beep twice, and the touch area will light up, indicating that the management password setting or changing has begun.
2. Enter any number between 1 to 8 digits and press "#" to confirm, then enter the new password again, press "#" key to confirm, it will beep twice, "🔒" will light up, indicating that the management password has been set successfully.

Opening and locking the door

1. After entering the correct personal password or management password, press "#" key to confirm, it will beep twice and "🔒" will light up, indicating that the password is correct. The electromagnet will be activated for 5 seconds, allowing the door to be opened or locked.
2. After about 5 seconds, "🔒" will turn off and the electromagnet will release, the door can't be open.
3. If the password is incorrectly, it will beep three times after pressing "#".
4. If the password is entered incorrectly six times consecutively, an automatic alarm will sound for one minute. Enter the correct password to relieve the alarm.

Vibration Alarm

- (1) To set the alarm, touch the key area with the back or palm of the hand, press "★", beep once and the computer board will automatically enter alarm mode. If the safe box is vibrated, the built-in alarm will sound immediately.
- (2) To relieve the alarm, touch the key area with the back or palm of the hand, enter the password, and then press "#" to open the door and relieve the alarm. When the alarm is relieved, you need set the alarm again to start it.

 
Undervoltage Indication

- (1) When the battery voltage is low, when the unlocking lightlights up, there will be four beep-beep-beep-beep-. The lock can still work for a period of time, but it is recommended to replace the battery as soon as possible.
- (2) This model contains a memory chip, so the password protection will not be lost after a power failure.

Technical Parameters


- (1) Working power supply: four 5th AA alkaline batteries
- (2) Working voltage range: 4.0V ~ 6.8V
- (3) Working undervoltage point: 4.60V±0.30V
- (4) Working current: ≤380mA
- (5) Static current: <30uA
- (6) Working temperature: -10°C~+70°C
- (7) Working humidity: 10%-90%RH

How to Use Emergency Battery Box ?

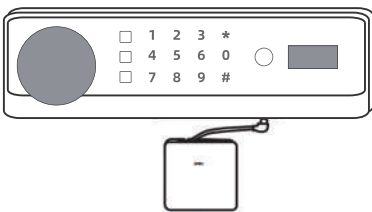


When the safe box's battery is too low to open the door, insert 4 AA 1.5 batteries in the emergency battery box, plug the emergency power cord into the emergency power jack on the bottom edge of the panel, then enter the correct password to open the door.

 How to Install Foot Mat ?

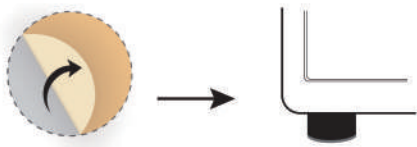

Remove the sticker of the foot mat and install it on the bottom.

 How to Mount the Safe ?

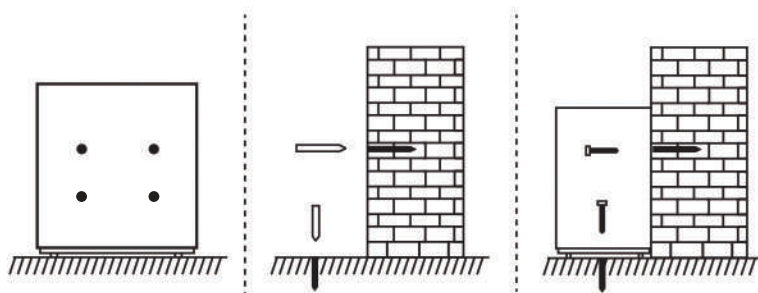

1. Place the safe on the installation location, find the installation holes from the inside of the safe, mark the drilling points from the inner installation holes, then remove the safe and drill two holes.
2. Take the expansion bolt out of the casing and put it into the drilled hole, then align the pre-drilled hole with the inner hole of the safe, and then insert the expansion bolt into the casing from the inside of the safe.

Safe box
