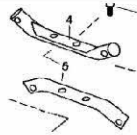 
 
 
 
 
 
 
 
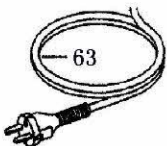 


MX1400 Spare Part list

NO	Description	Unit	Quantity	Unit price	Picture
1	Left Handle	set	1		
2	Right Handle	set	1		
3	Screw ST3.9X20	pc	1		
4	Tube	pc	1		
5	Tube	pc	1		
6	Clamp	pc	1		
7	Screw ST3.5X16	pc	1		
8	Capacitance	pc	1		
9	Circuitry board	pc	1		
10	Screw M8X12	pc	1		
11	Sleeve (Sman)	pc	1		
12	Cable	pc	1		
13	Switch	pc	1		
14	Screw M5X20	pc	1		
15	Spring washer $\phi 5$	pc	1		
16	Bearing cover	pc	1		
17	Spindle	pc	1		
18	Hemicycle key4X5X12	pc	1		
19	Safety ring $\phi 47$	pc	1		
20	Dust cover	pc	1		
21	Bearing 6204ZZ	pc	1		
22	Safety ring $\phi 20$	pc	1		

23	Spindle gear	pc	1		
24	Safety ring $\varnothing$ 15	pc	1		
25	Bearing 6000ZZ	pc	1		
26	Gear box	pc	1		
27	Sealring	pc	1		
28	Bearing 6000 2RS	pc	1		
29	Armature Ass'y	pc	1		
30	insulated washer	pc	1		
31	Bearing 608ZZ	pc	1		
32	Pin	pc	1		
33	Needle bearing HK0810	pc	1		
34	Countershaft	pc	1		
35	Hemicycle key2.5X3.7X10	pc	1		
36	Motor gear	pc	1		
37	Safety ring $\varnothing$ 10	pc	1		
38	Bearing 698ZZ	pc	1		
39	Pinion	pc	1		
40	Parallel key 4×4×45	pc	1		
41	Spindle double gear	pc	1		
42	Flat washer $\varnothing$ 8	pc	1		
43	Pivot	pc	1		
44	Coulisse	pc	1		
45	Pivot	pc	1		
46	Nut M8	pc	1		
47	Ball $\varnothing$ 4	pc	1		
48	Spring	pc	1		

49	Lever	pc	1		
50	Screw ST3X16	pc	1		
51	Screw ST4X70	pc	1		
52	Airguide shim	pc	1		
53	Stator	set	1		
54	GEAR HOUSE (M-1)	pc	1		
55	Brush holder	set	1		
56	Carbon brush	set	1		
57	Brush cap	set	1		
58	Screw M5X25	pc	1		
59	Controler	pc	1		
60	Protective guard	pc	1		
61	Rear cover	pc	1		
62	Clamp	pc	1		
63	Cord	pc	1		
64	Sleeve (Big)	pc	1		