 
 
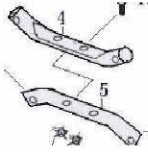 
 
 
 
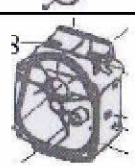 
 
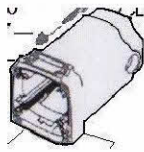 
 
 
 


MX1800 Spare Part list

NO	Description	Unit			Picture
1	Left Handle	set	1		
2	Right Handle	set	1		
3	Screw ST3.9X20	pc	1		
4	Tube	pc	1		
5	Tube	pc	1		
6	Clamp	pc	1		
7	Screw ST3.5X16	pc	1		
8	Capacitance	pc	1		
9	square Inductance	pc	1		
10	round Inductance	set	1		
11	Circuitry board	pc	1		
12	Screw M8X12	pc	1		
13	Sleeve (Sman)	pc	1		
14	Cable	pc	1		
15	Switch	pc	1		
16	Screw M5X20	pc	1		
17	Spring washer $\varnothing$ 5	pc	1		
18	Bearing cover	pc	1		

19	Spindle	pc	1	
20	Hemicycle key4X5X12	pc	1	
21	Safety ring ϕ 47	pc	1	
22	Dust cover	set	1	
23	Bearing 6204ZZ	pc	1	
24	Safety ring ϕ 20	pc	1	
25	Spindle gear	pc	1	
26	Safety ring ϕ 15	set	1	
27	Bearing 6000ZZ	pc	1	
28	Gear box	pc	1	
29	Sealring	set	1	
30	Bearing 6001 2RS	pc	1	
31	Armature Ass'y	pc	1	
32	insulated washer	pc	1	
33	Bearing 608ZZ	pc	1	
34	Pin	pc	1	
35	Needle bearing HK0810	pc	1	
36	Countershaft	pc	1	
37	Hemicycle key2.5X3.7X10	pc	1	

38	Motor gear	pc	1		
39	Safety ring $\varnothing 10$	pc	1		
40	Bearing 698ZZ	pc	1		
41	Pinion	pc	1		
42	Parallel key 4×4×45	pc	1		
43	Spindle double gear	pc	1		
44	Flat washer $\varnothing 8$	pc	1		
45	Pivot	pc	1		
46	Coulisse	pc	1		
47	Pivot	pc	1		
48	Nut M8	pc	1		
49	Ball $\varnothing 4$	pc	1		
50	Spring	pc	1		
51	Lever	pc	1		
52	Screw ST3X16	pc	1		
53	Screw ST5X65	pc	1		
54	Airguide shim	pc	1		
55	Stator	pc	1		

56	GEAR HOUSE	pc	1		
57	Brush holder	set	1		
58	Carbon brush	set	1		
59	Brush cap	pc	1		
60	Screw M5X25	pc	1		
61	Controler	pc	1		
62	Protective guard	pc	1		
63	Rear cover	pc	1		
64	Clamp	pc	1		
65	Cord	pc	1		
66	Sleeve (Big)	pc	1		