




מפרט חלקים

מרסס גב 16 ליטר דגם JS-16

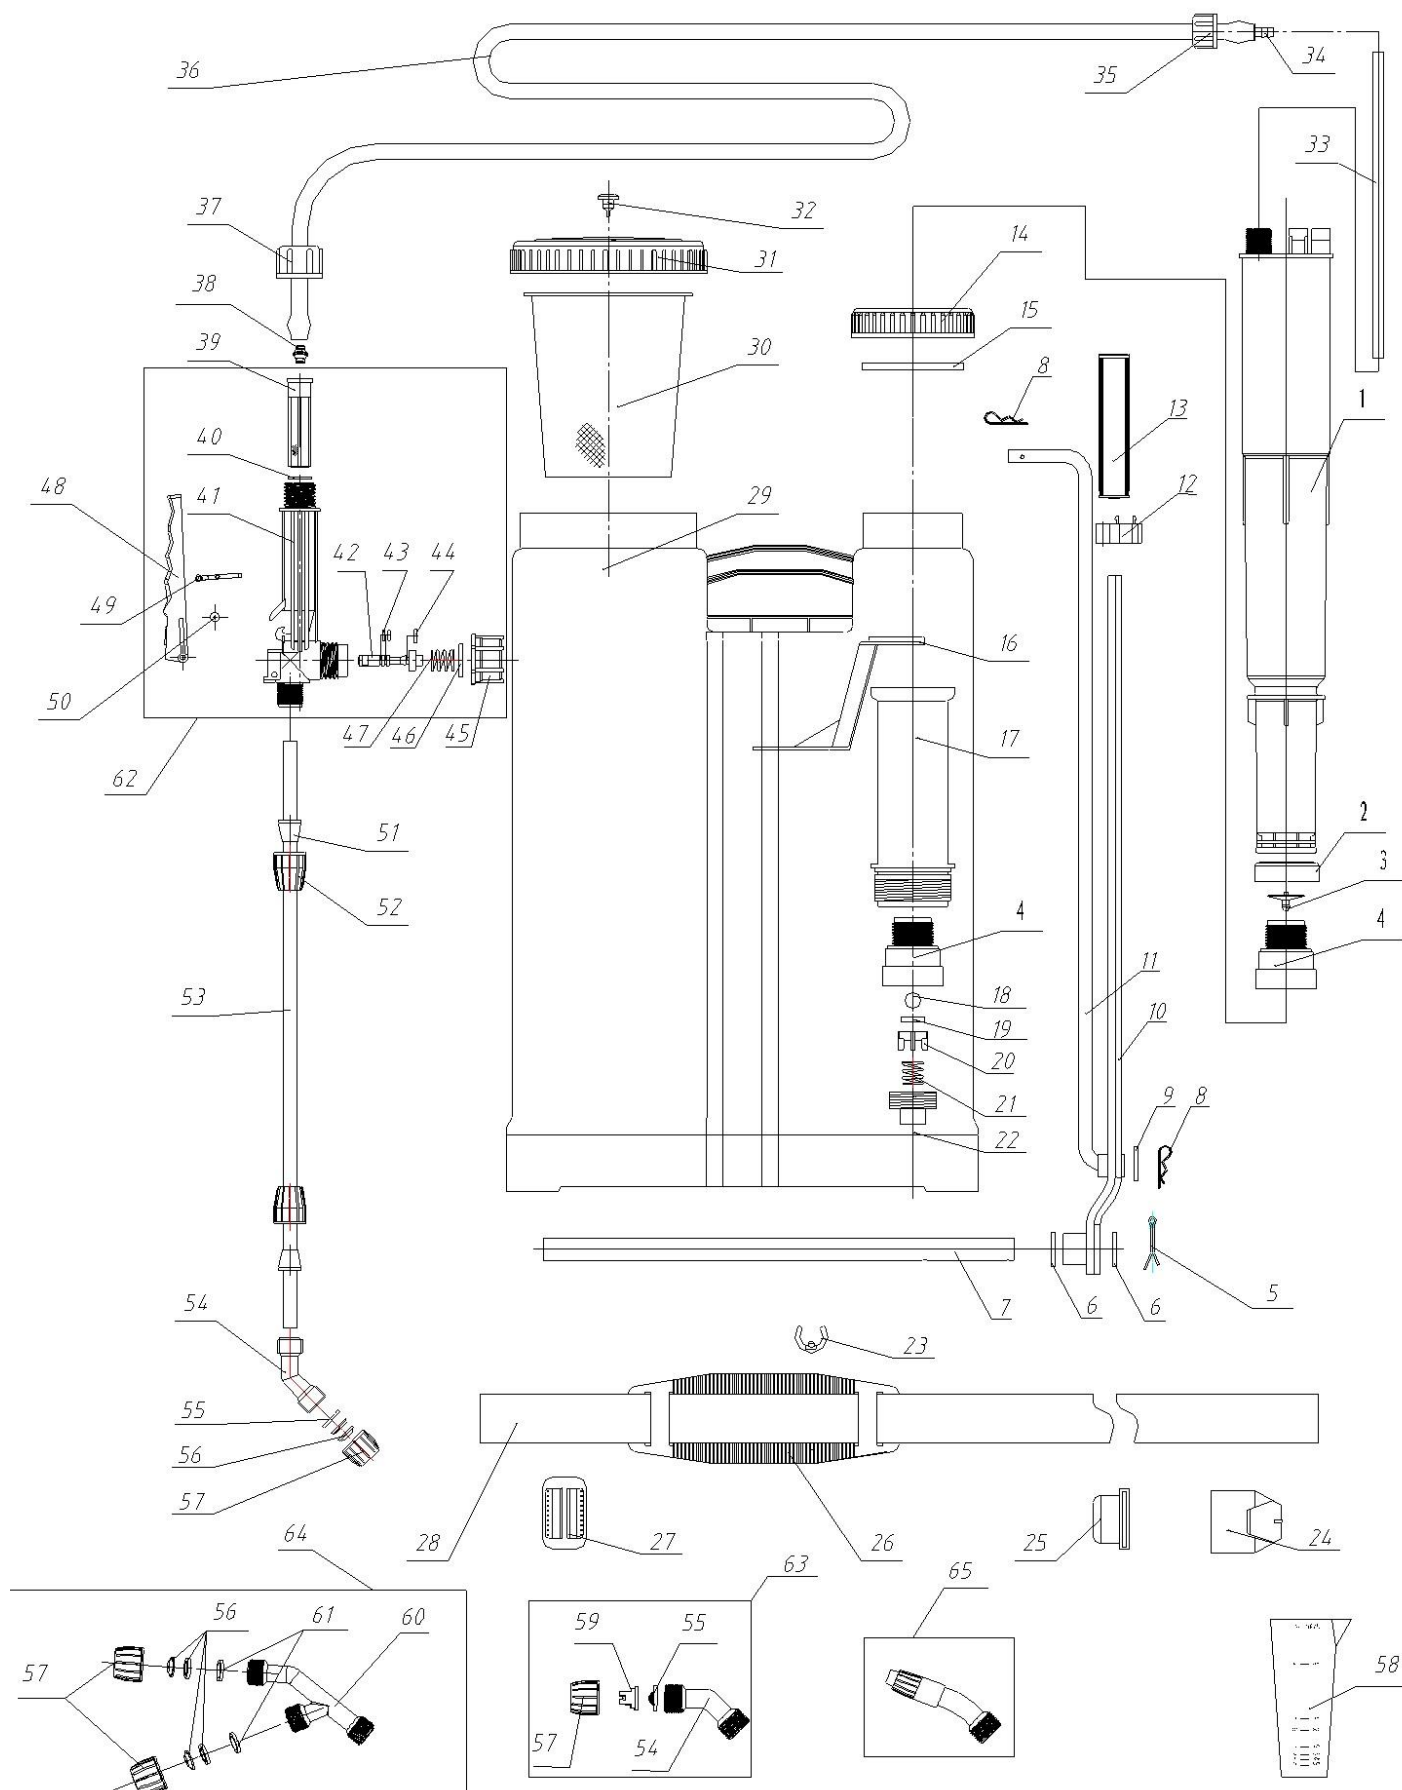

No	Part No	Name	Qty	No	Part No	Name	Qty
1	WS16PA.3.1	Air Chamber	1	36	WS16-13-08-03E	Hose	1
2	WS16PA.3-1	Rubber Bowl	1	37	WS16-13-08-01	Hose Nut M22	1
3	WS16PA.3-2	Diaphragm	1	38	WS16-13-08-02	Pin	1
4	WS16PA.4.1-1	Rubber Bowl fastener	2	39	WS16-13-07B	Switch Filter	1
5	GB/T91	Split Pin 3.2X30	1	40	WS16-13-09	O-Ring 14X1.5	1
6	WS15-4	Washer	2	41	WS16PA.6.1-1	Switch Body	1
7	WS16PA.5-1	Lever Shaft	1	42	WS16PA.6.1-5	Pressure shaft	1
8	WSS-76.5-2	Pin	2	43	WS16PA.6.1-10	O-Ring	2
9	GB/T97.1	Washer	1	44	WS16PA.6.1-2	Sealing Pad	1
10	WS16PA.5.1	Rocking Lever	1	45	WS16PA.6.1-3	Pressure Cover	1
11	WS16PA.5-3	Rod	1	46	WS16PA.6.1-4	Cover washer	1
12	WS16PA.5-4	Clamp	1	47	WS16PA.6.1-6	Spring	1
13	WS16PA.5-5	Lever Case	1	48	WS16PA.6.1-9	Press Plate	1
14	WS16PA-3	Air Chamber Cover	1	49	WS16PA.6.1-8	Pin	1
15	WS20-05	Felt Washer	1	50	WS16PA.6.1-7	Switch Pin	1
16	WS16PA-5	Puddler	1	51	WS16-13-05-02B	Split Sleeve	2
17	WS16PA.4-1	Chamber	1	52	WS16-13-05-01	Case nut	2
18	WS16PA.4.1-2	Sealing Ball	1	53	WS16-13-05-03B	Spray bar	1
19	WS16PA.4.1-3	Seal	1	54	WS16-13-01-04B	Nozzle body	2
20	WS16PA.4.1-4	Seal seat	1	55	WS16-13-01-05	Filter	2
21	WS16PA.4.1-5	Compression Spring	1	56	WS16P-13-01-01	Conical Spray Plate	3
22	WS16PA.4.1-6	Spring Seat	1	57	WS16-13-01-03	Spray Head Nut	4
23	WS16-09-02	Fixed Buckle	1	58	WS16-14-04	Measuring cup	1
24	WS20-12-03	Belt Hook	1	59	WS18D.11-2	Sealing washer	2
25	WS20-12-02	Belt Buckle	2	60	WS16-13-01-02	Fan Style Spray Head	1
26	WS20-12-04	Shoulder Cushion	2	61	WS-18D.11-1	F Spray head	1
27	WS20-12-05	Belt Clamp	2	62	WS16PA.6.1	Switch Assem	1
28	WS16-12-01	Belt	2	63	WS16-13-01B	Fan Spray Nozzle Assem	1
29	WS16PA.1	Container	1	64	WS-18D.11	F Spray Nozzle Assem	1
30	WS16PA-2	Felter	1	65	WS16-13-01C	Adjustable cone Nozzle	1
31	WS16PA.2-1	Container Cap	1				
32	WS16-02-02	Air Intake Plug	1				
33	WS16-13-10	Absorb Pipe	1				
34	WS16-13-08-02B	Seal embedded parts	1				
35	WS16-13-08-01B	Hose Nut M18	1				