




D. Display installation

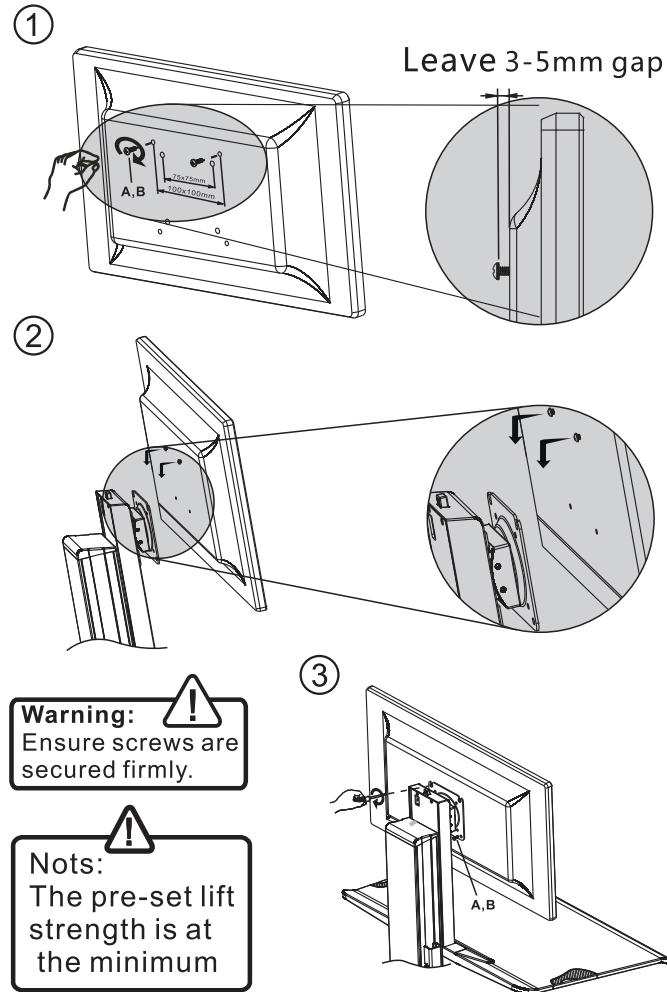


E. Display height adjustment

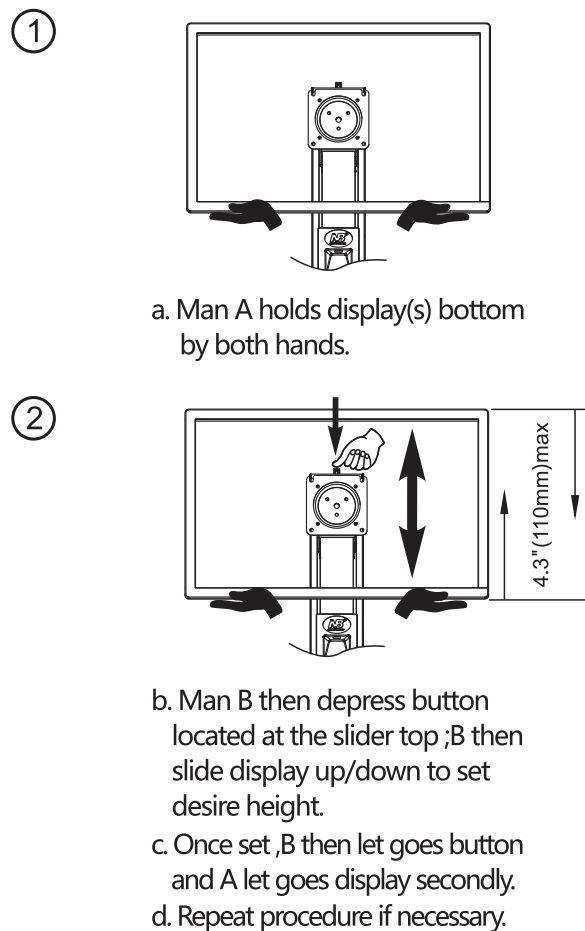


F. Lift strength adjustment Direction "+" increase. "-" decrease

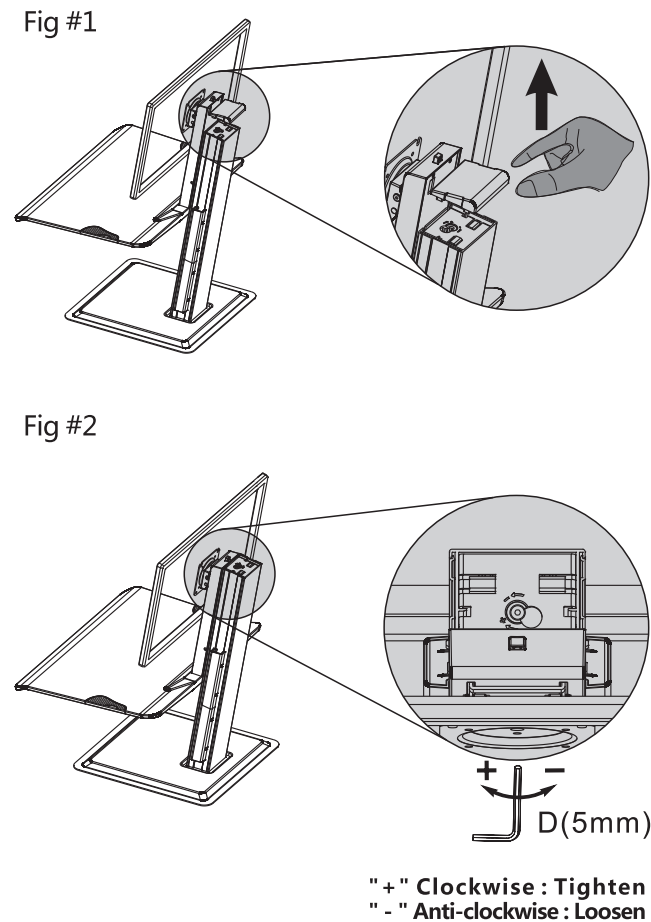

G. Tilt angles adjustment

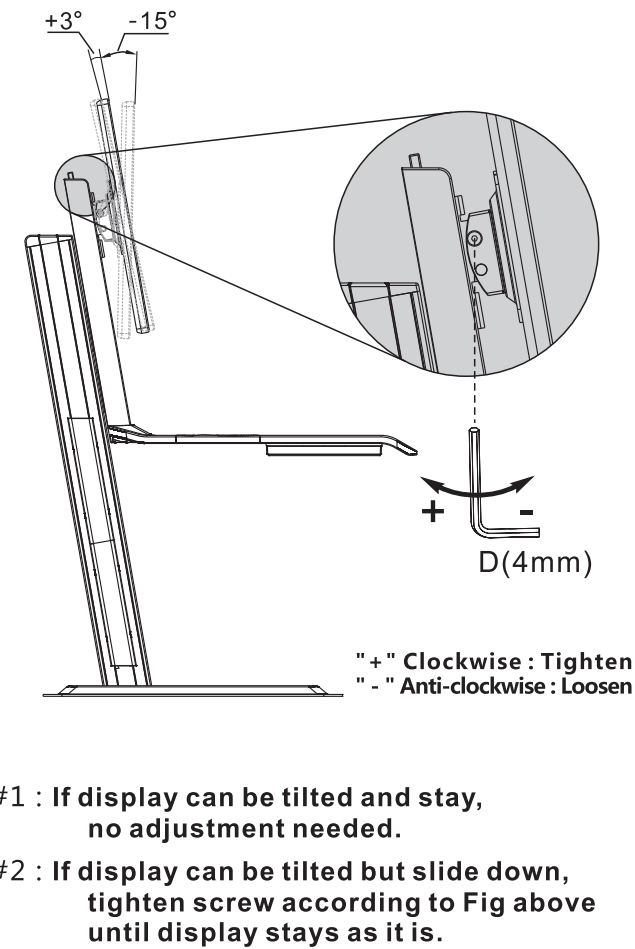

H. Display rotation

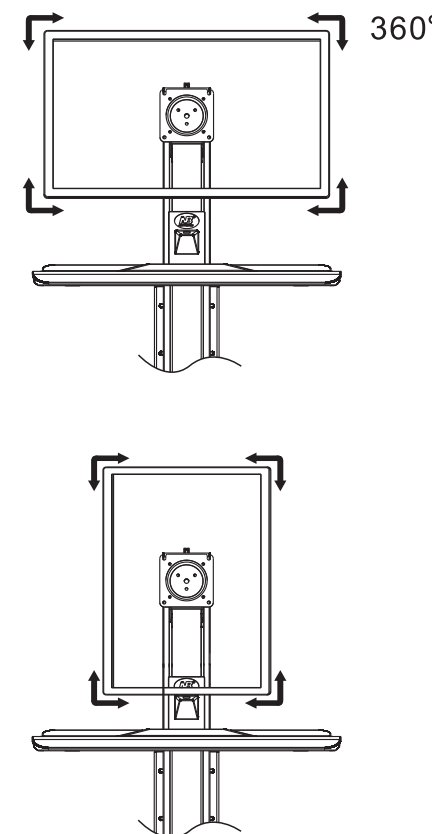

Lift strength adjustment after full installation




1. Ensure display has been installed.
2. Ensure load capacity within 2-11kg/4.4-24.2lbs.
3. Ensure all screws are secured firmly.



Increase strength direction

Decrease strength direction

Ergoconcepts

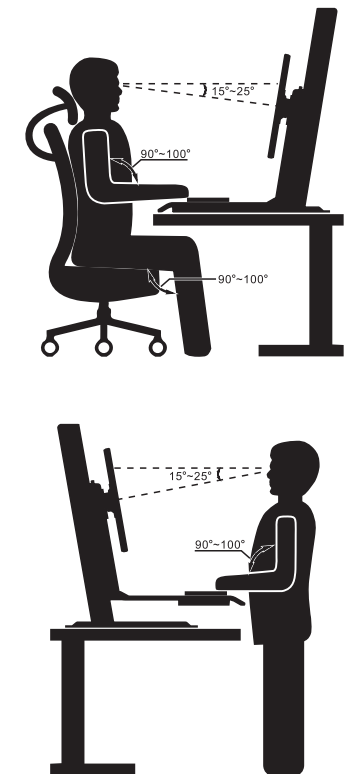

KunshanHongjie Electronics Co., Ltd.
1050, FuChunJiangRoad, Economic Development Zone.
Kunshan City, Jiangsu Province. China. 215333
Mail : info@nbavmount.com
Website : www.nbavmount.com