



EB-260 - ENGINE

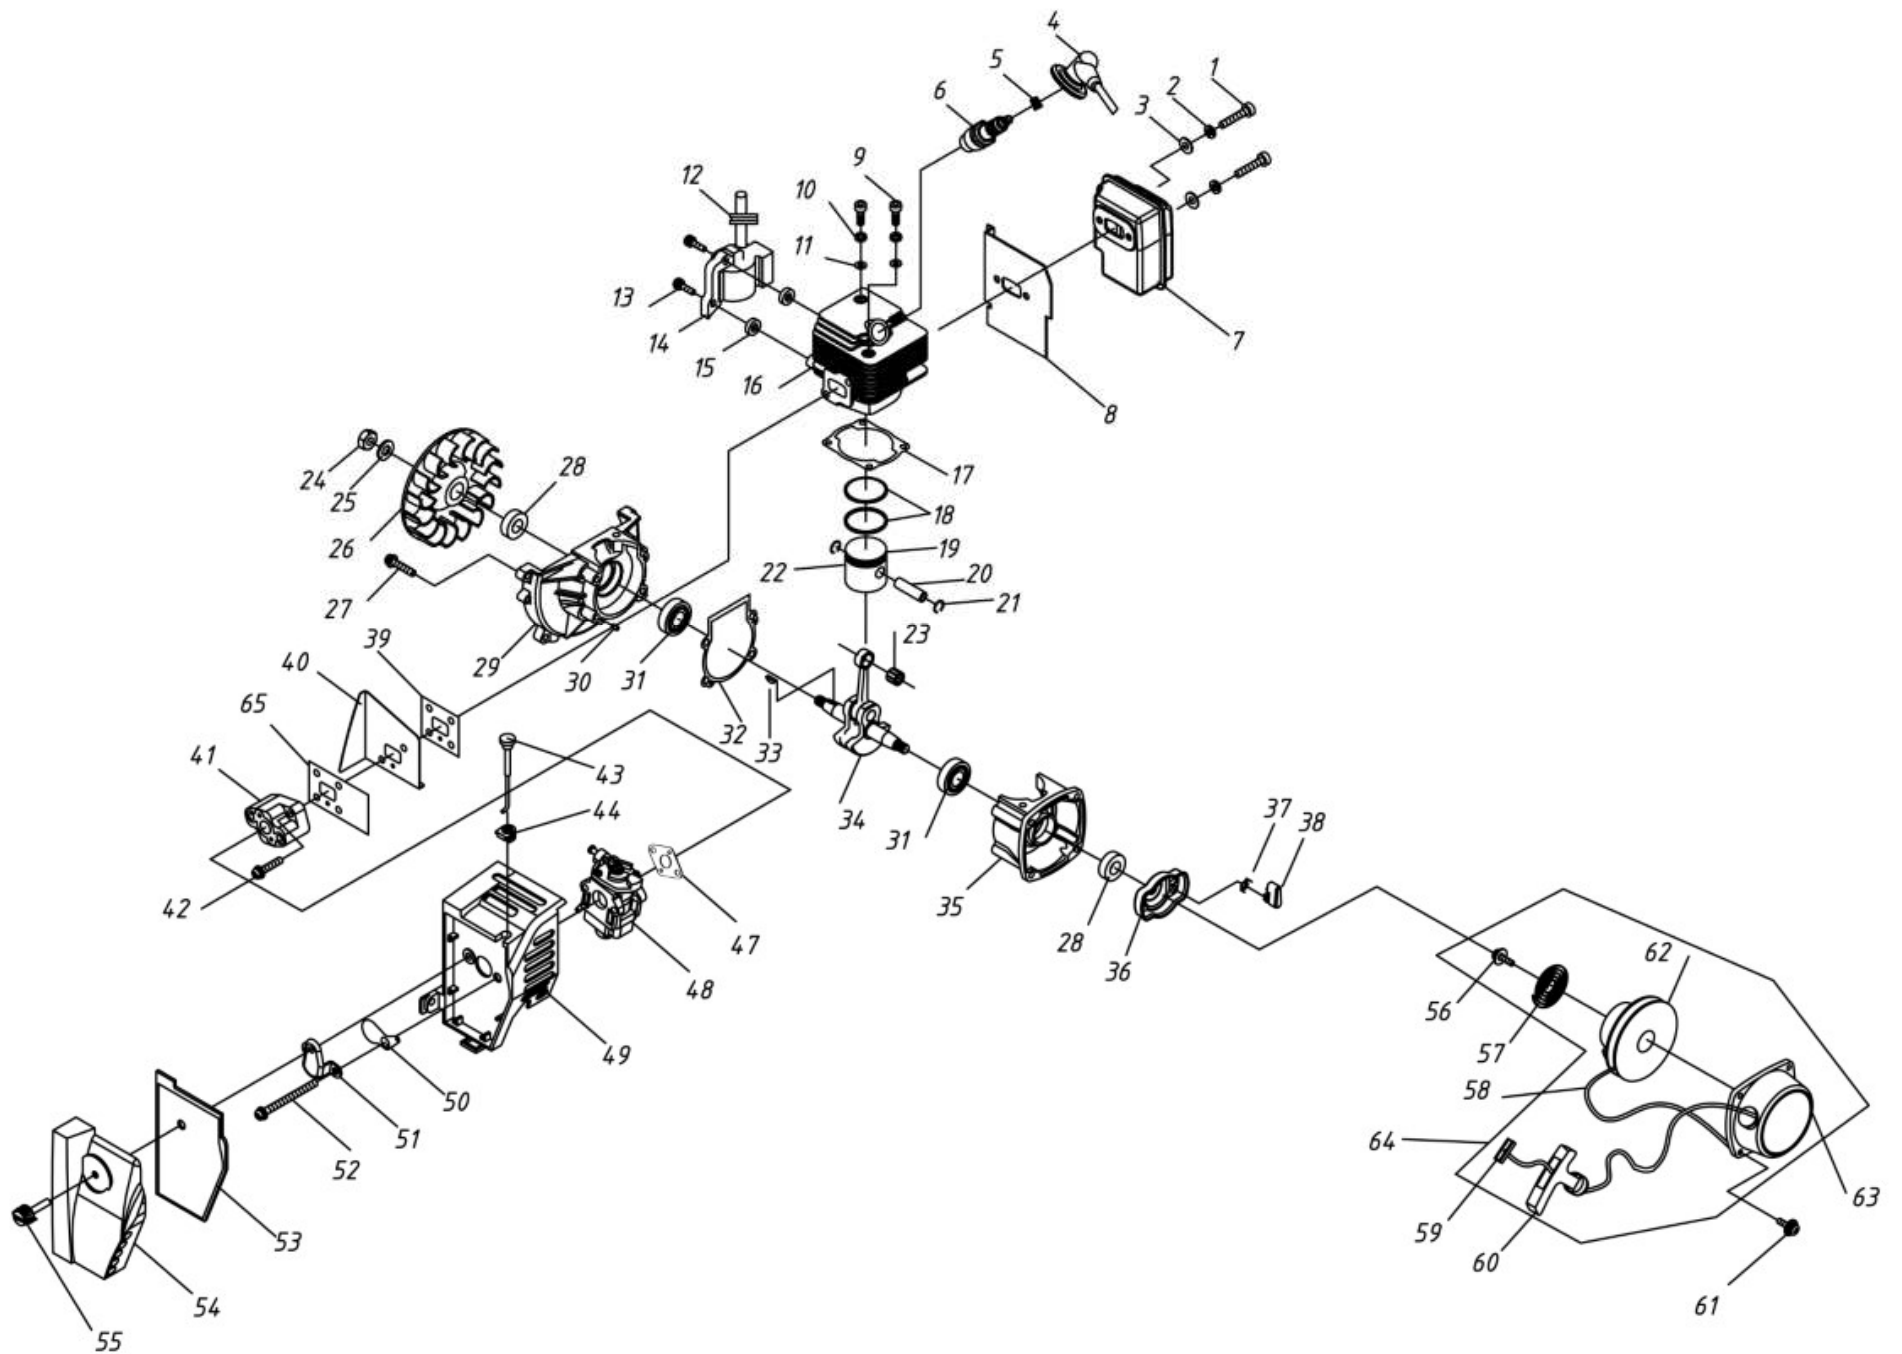

SER. NO	PART NO.	PART NAME	QTY.	SER. NO	PART NO.	PART NAME	QTY.	SER. NO	PART NO.	PART NAME	QTY.	SER. NO	PART NO.	PART NAME	QTY.
1	GB/T70.1 M5X55	SCREW	2	17	1E34F-9	CYLINDER WASHER	1	33	1E40F-3Z. 3-1	KEY	1	49	1E34FB. 6. 2	CLEANER INSIDE COVER	1
2	GB/T93 5	WASHER	2	18	1E34F. 6-5	PISTON RING	2	34	1E34F. 6A. 1	CRANK SHAFT COMP.	1	50	1E34FB-6	CHOKER	1
3	GB/T96 5	WASHER	2	19	1E34F. 6-6	PISTON	1	35	1E34FB. 3-1	REAR HALF CRANK CASE	1	51	1E34FB-7	BAFFLE	1
4	1E34F. 5-2	PLUG CAP	1	20	1E34F. 6-3	PISTON PIN	1	36	1E34F. 8. 1	STARTER PULLEY	1	52	GB/T9074. 4 M5X55	SCREW	2
5	1E40F-3A. 8-2	CLICK SPRING	1	21	1E34F. 6-2	PISTON PIN CIRCLET	2	37	1E34F. 8-2	STARTER PAWL SPRING	1	53	1E34FB. 6. 1	CLEANER ELEMENT	1
6	L9T	PLUG	1	22	1E34F. 6A-1	PISTON	2	38	1E34F. 8-1	STARTER PAWL	1	54	1E34FB. 6-1	CLEANER OUTSIDE COVER	1
7	1E34FB. 5	MUFFLER	1	23	1E31F. 4. 1	NEEDLE BEARING	1	39	1E34F-2	CYLINDER WASHER	1	55	CG420. 1. 6. 3	SCREW	1
8	1E34FB-4	SLAD	1	24	GB/T6171 M8X1	NUT	1	40	1E34FB-3	SLAD	1	56	GB/T9074. 6 M5X10	SCREW	1
9	GB/T70.1 M5X20	SCREW	2	25	GB/T97. 1 8	WASHER	1	41	1E34FB. 2A	INLET MANIFOLD	1	57	1E34F. 11-1	RECOIL SPRING	1
10	GB/T93 5	WASHER	2	26	1E34FB. 4. 1-1	MAGNETO ROTOR	1	42	GB/T9074. 4 M5X25	SCREW	2	58	1E34F. 11-3	ROPE	1
11	GB/T848 5	WASHER	2	27	GB/T9074. 4 M5X25	SCREW	4	43	1E34FB. 1	PULL ROD	1	59	1E36F. 1-5	GASKET	1
12	1E34F. 5-1	RUBBER PLUG	1	28	1E36F. 2	OIL SEAL	2	44	1E34FB-8	RUBBER PLUG	1	60	1E36F. 1-1	STARTER HANDLE	1
13	GB/T9074. 4 M4X20	SCREW	2	29	1E34FB. 3-2	FRONT HALF CRANK CASE	1	45				61	GB/T9074. 4 M4X16	SCREW	4
14	1E34FB. 4. 1-2	MAGNETO STATOR	1	30	GB/T 1194h8X10	ANNUL	2	46				62	1E34F. 11-2	STARTER ROPE REEL	1
15	1E32FL-6	HEAT INSULATION PAD	2	31	GB/T276 6001/P6	BALL BEARING	2	47	1E34FB-2B	CARBURETOR WASHER	1	63	1E34F. 11G. 1	RECOIL STARTER BODY	1
16	1E34FB-5	CYLINDER	1	32	1E34F. 7-2	CRANK CASE GASKET	1	48	1E34F. 7A	CARBURETOR	1	64	1E34F. 11G	STARTER	1
												65	1E34FB-9	CYLINDER WASHER	1

EB-260 - FIGURE 2

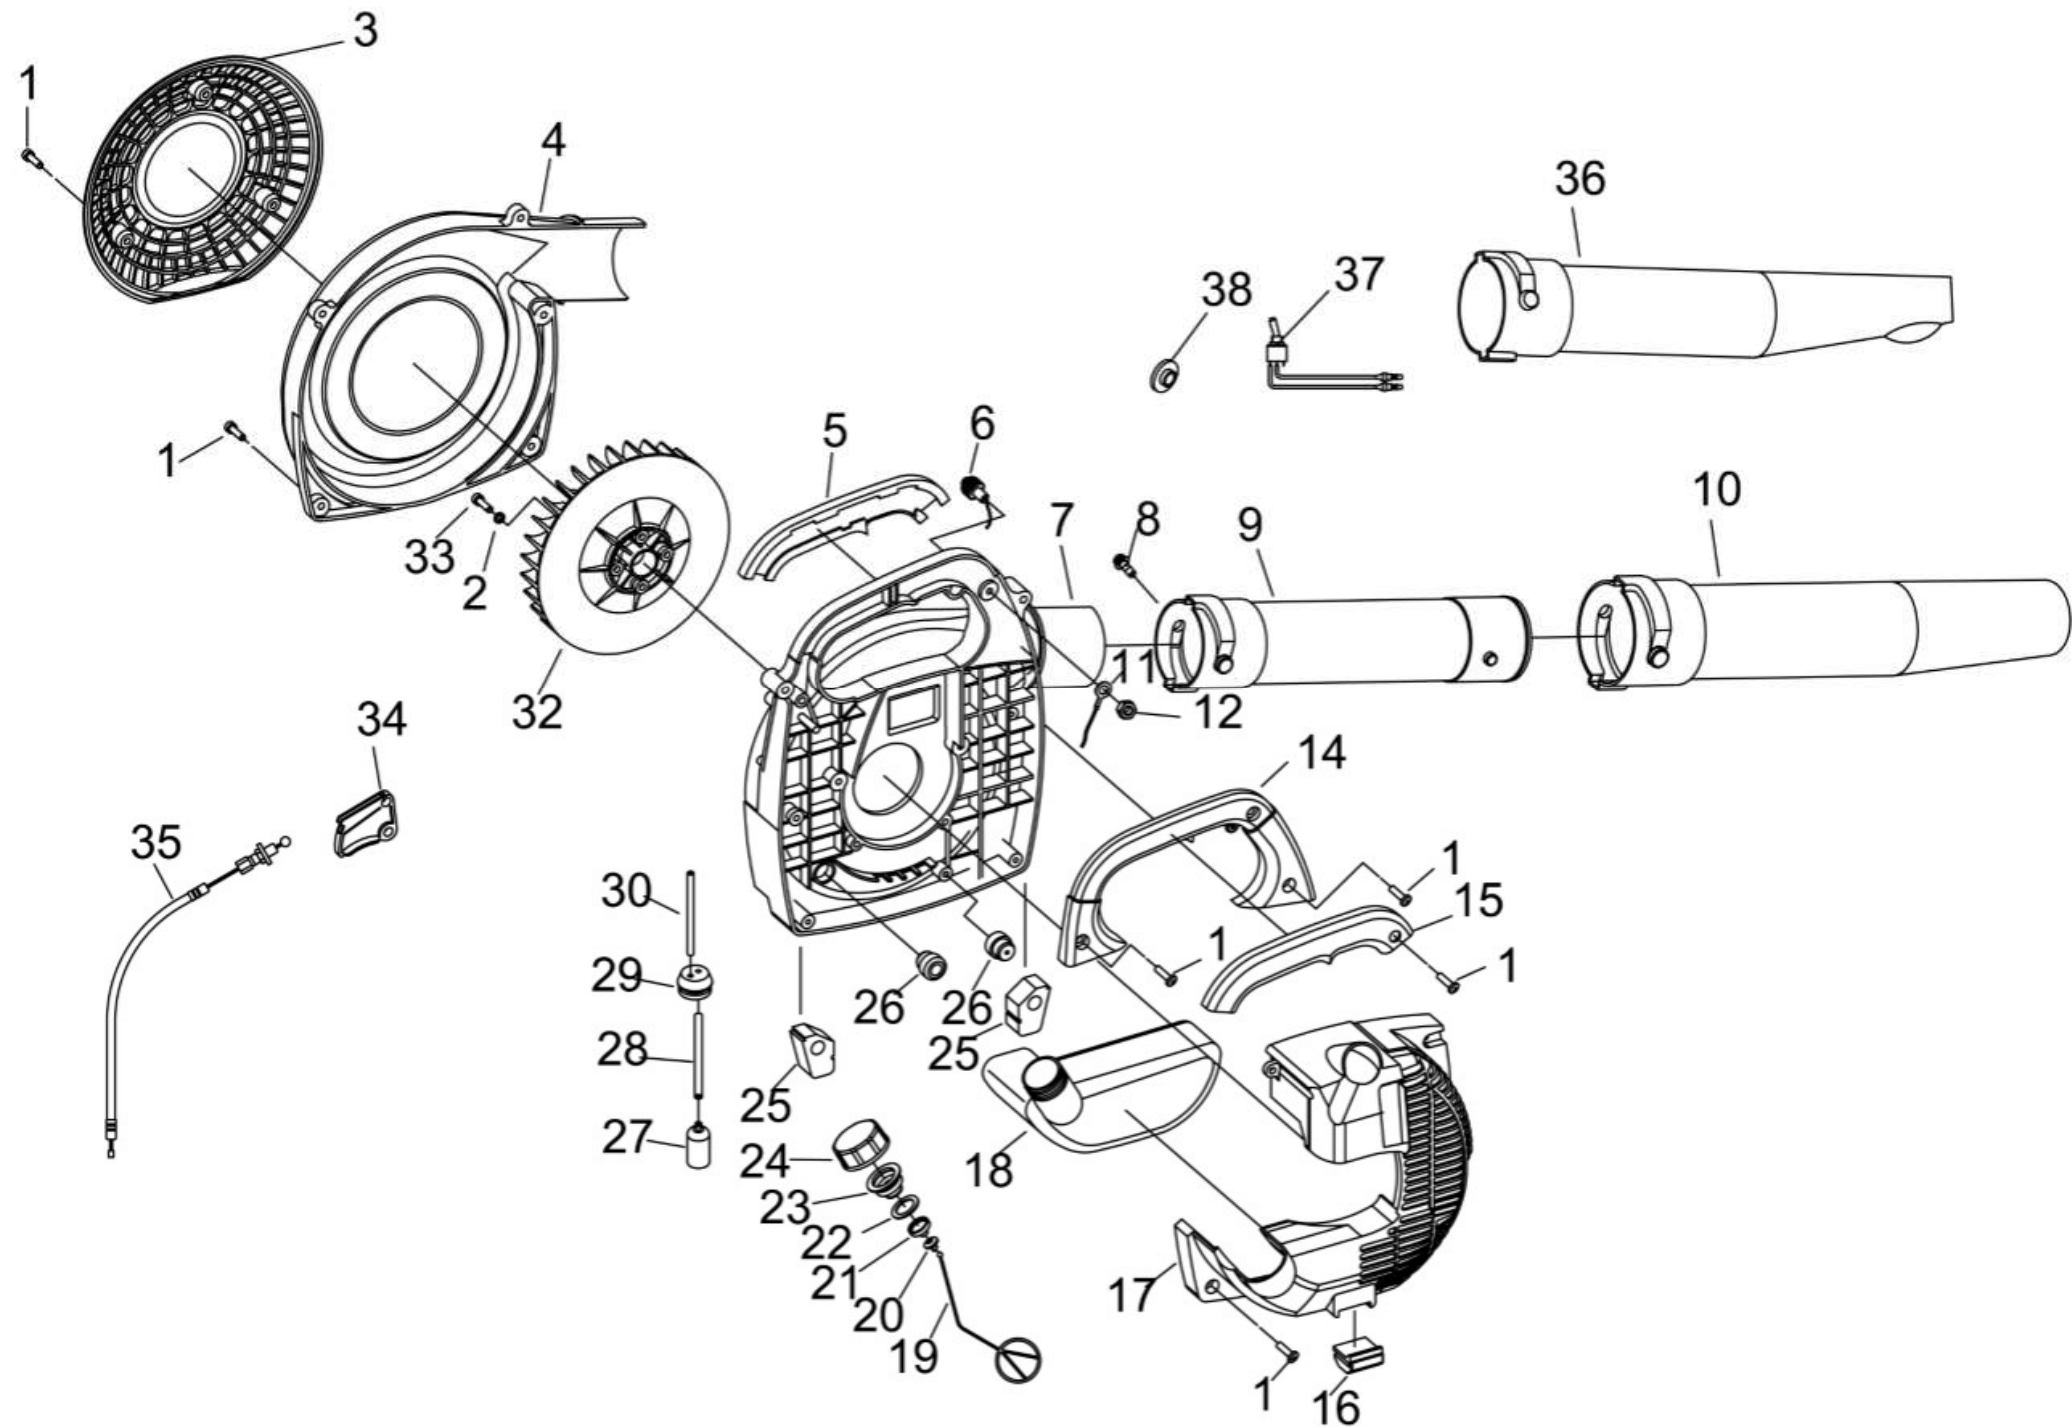

Ser.NO.	Part NO.	Part Name	Qty.	Ser.NO.	Part NO.	Part Name	Qty.	Ser.NO.	Part NO.	Part Name	Qty.
1	3WF-20.9-2	SCREW M5×16	16	14	EB-260-2	HANDLE	1	27	P40. 12. 2-3A	FILTER	1
2	GB/T848 5	WASHER	4	15	EB-260-4	HANDLE COVER	1	28	CG420. 1. 3. 2-2	FUEL TUBE	1
3	EB-260.1-2	NET COVER	1	16	EB-260-12	SUPPORT	1	29	EB-415. 4. 2-2	PLUG	1
4	EB-260.1.2	VOLUTE CASE	1	17	EB-260-1	PROTECTION	1	30	EB-415. 4. 2-4	TUBE	1
5	EB-260-3	HANDLE COVER	1	18	EB-260.5-1	FUEL TANK	1				
6	EB-260.3	STOP SWITCH	1	19	1E32FL.6.2-4	CHAIN	1	32	EB-260.7	IMPELLER	1
7	EB-260.1.1	VOLUTE CASE	1	20	EB-415.4.1.1-1	AIRVALVE	1	33	GB/T70.1 M5×20	SCREW	4
8	GB/T9074.4 M5×10	SCREW	1	21	1E32FL.6.2-3	END COVER	1	34	EB-260-9	SWITCH	1
9	EB-260-8	PIPE	1	22	CG420.1.3.1-2	SEALING WASHER	1	35	EB-260.4A	FUEL THROTTLE	1
10	EB-260-7	PIPE	1	23	1E32FL.6.2-2	LID	1	36	EB-260-7 (A)	PIPE	
11	EB-260.2	STOP LINE	1	24	1E32FL.6.2-1	FUEL TANK LID	1	37	EB-260.3A	STOP SWITCH	1
12	GB/T6170 M8	NUT	1	25	EB-260-10	SUPPORT	2	38	EB-260KG-1	SWITCH SEAT	1
				26	EB-260-15	SUPPORT	2				