

开架变频器零件图册

E-01 整机爆炸图.....2

Whole machine explosion diagram

E-02 燃油箱总成.....3

Fuel tank assembly

E-03 逆变器总成.....4

Inverter assembly

E-04 消声器总成.....5

Muffler assembly

E-05 电机/动力总成.....6-7

Motor/powerassembly

E-06 动力总成.....8-11

Powerassembly


E-07 机架组件.....12-13

Frame components


E-08 控制面板总成.....14

Control panel assembly

E-01 整机爆炸图 Whole machine explosion diagram

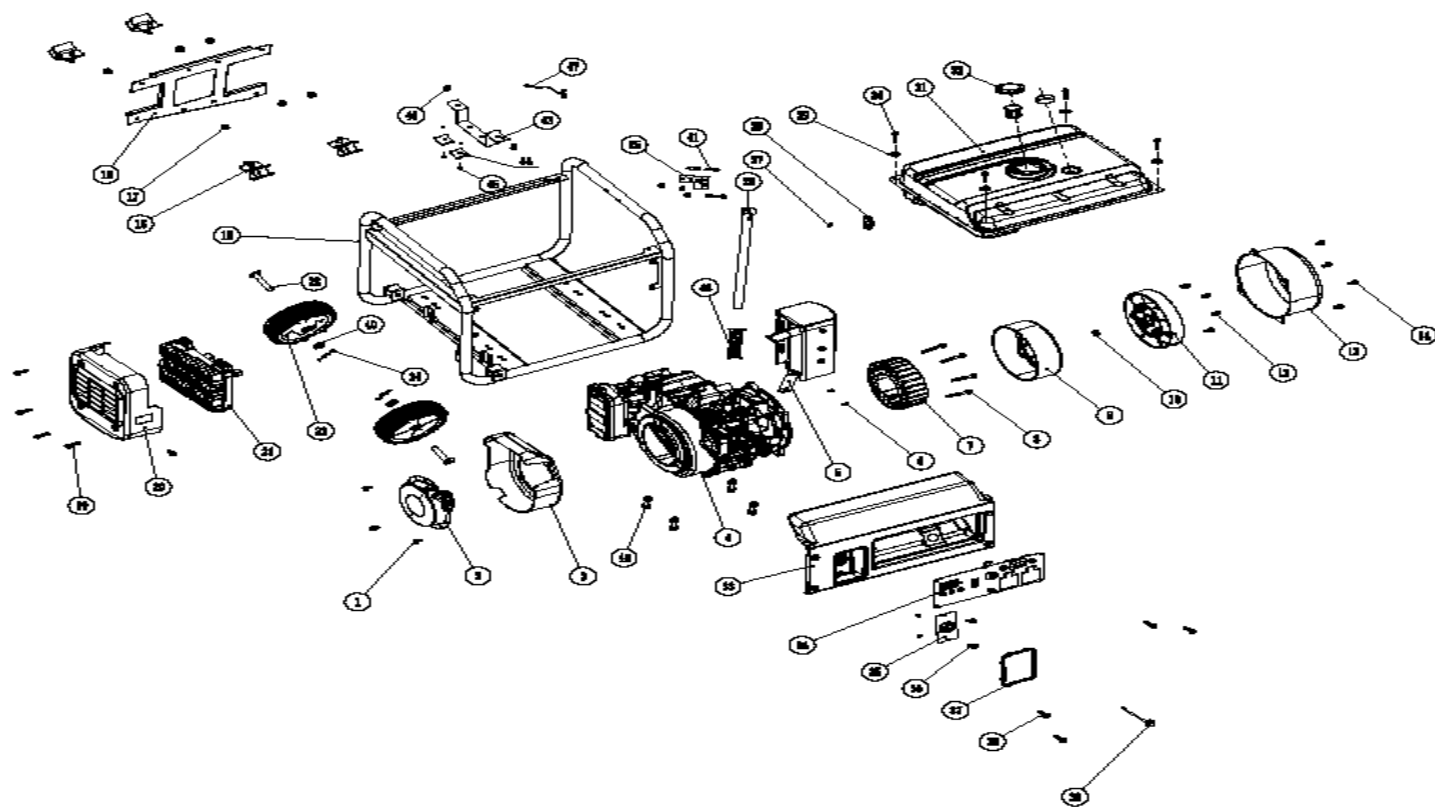


E-02 燃油箱总成 Fuel tank assembly

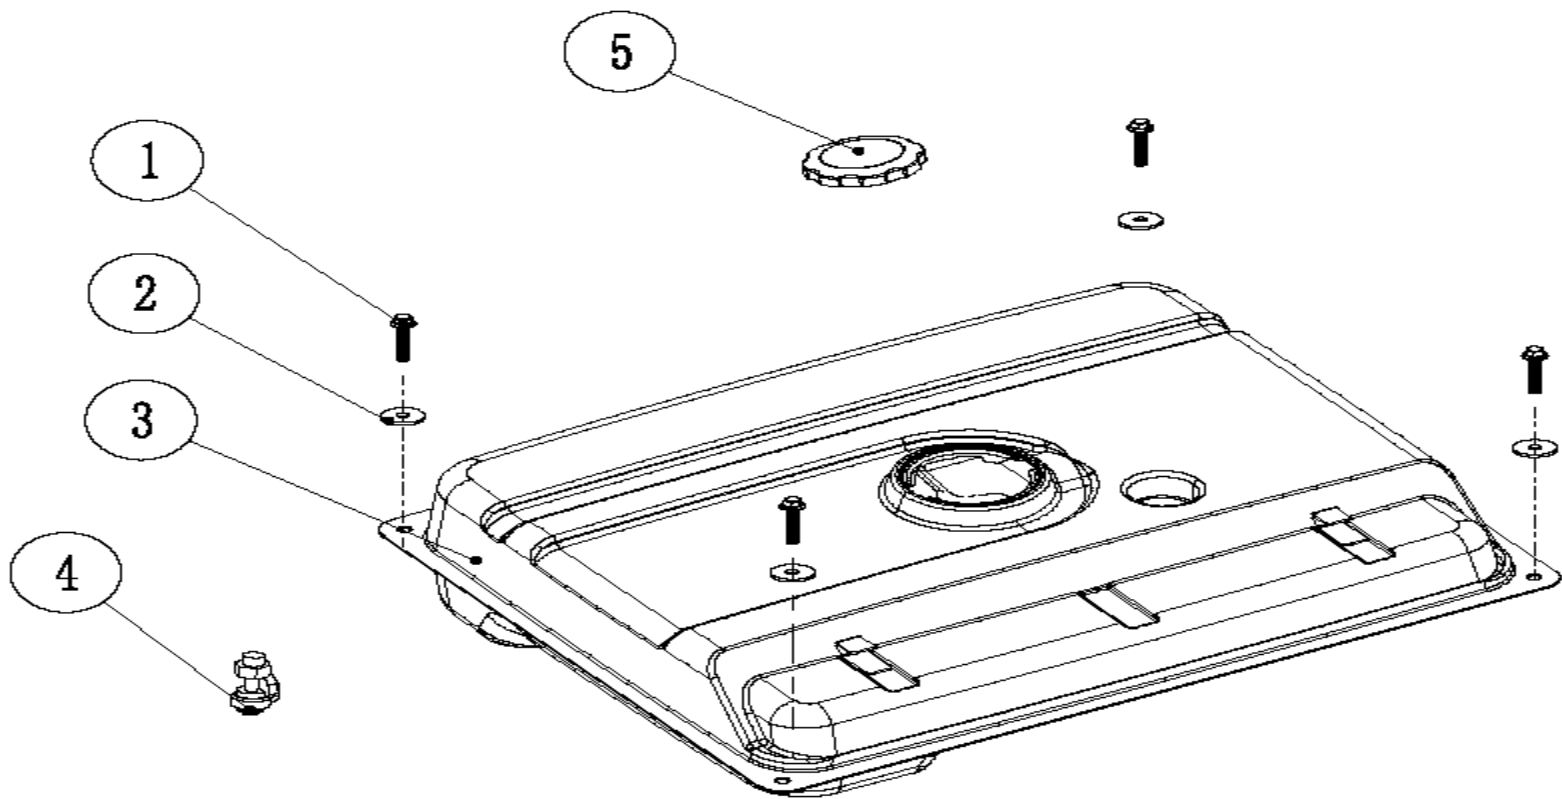


序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	30101-00407-00	六角法兰面螺栓	flange bolt		4		
2	30136-00132-00	油箱垫片	fuel tank gasket		4		
3	20130-00296-00	燃油箱	fuel tank		1		
4	20133-00002-00	油开关	fuel valve		1		
5	20131-00014-00	燃油箱盖			1		

E-03 逆变器总成 Inverter assembly

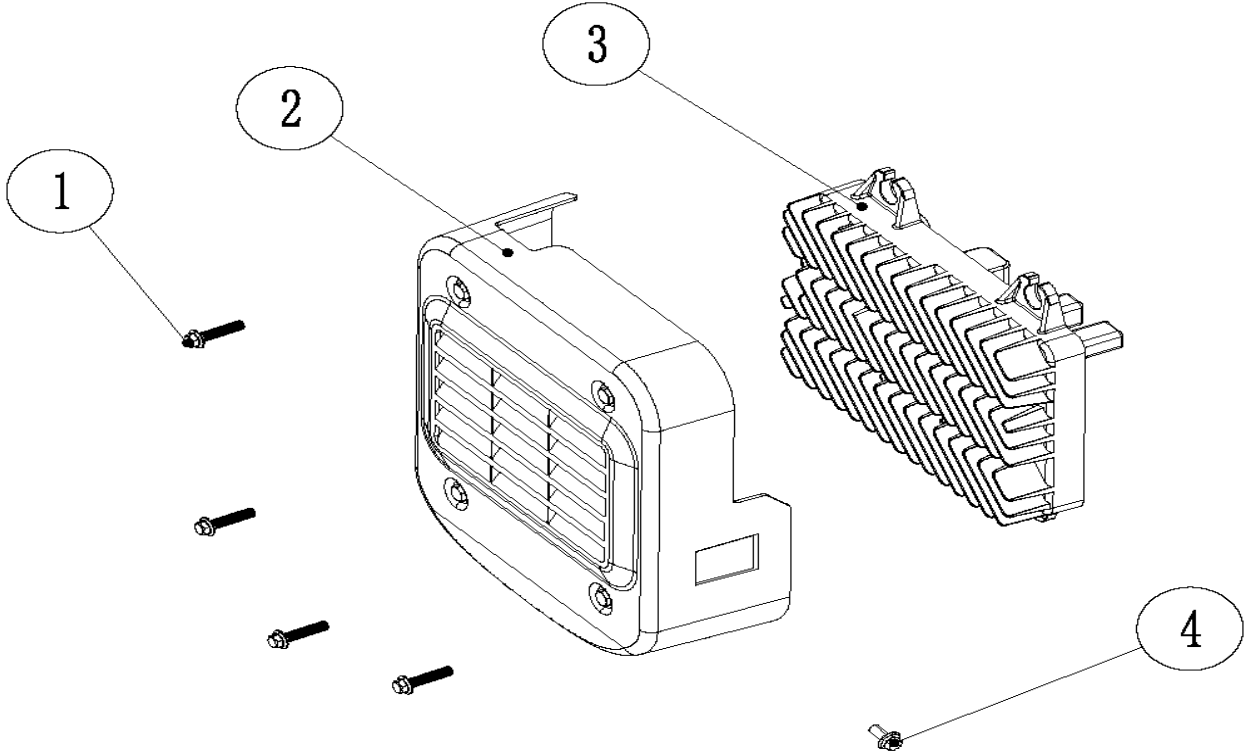


序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	30101-00407-00	六角法兰面螺栓	flange bolt		4		
2	33014-00216-00	逆变器外罩	inverter housing		1		
3	20136-00073-02	逆变器部件	Inverter		1		
4	30101-00339-00	六角法兰面螺栓	flange bolt		1		

E-04 消声器总成 Muffler assembly

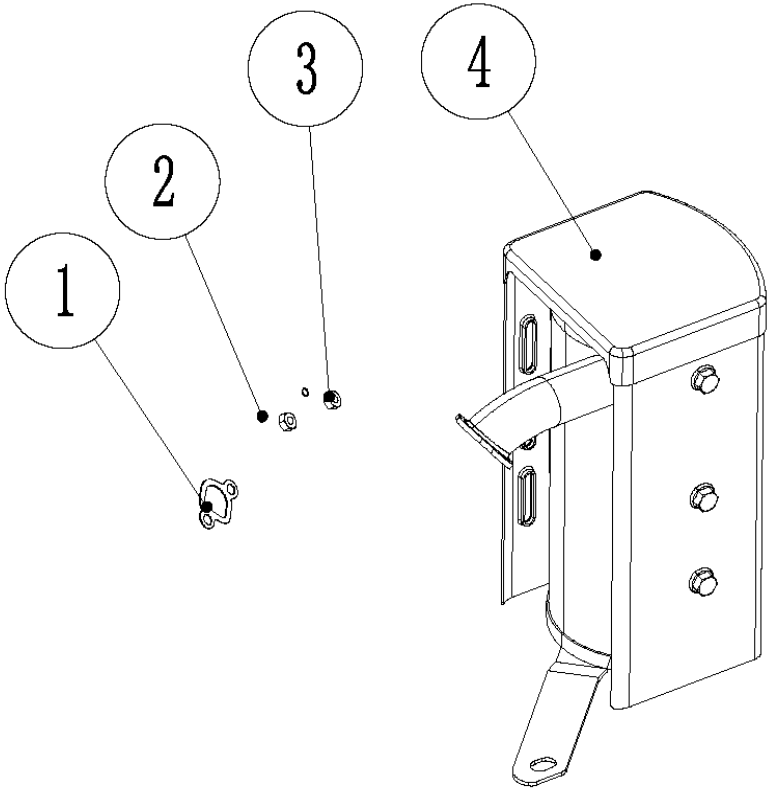


序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	33048-00210-00	消声器垫片	Muffler gasket		1		
2	30139-00036-00	弹簧垫圈	Spring washer		2		
3	30121-00007-00	六角螺母	Hexagonal nut		2		
4	20202-00406-00	消声器部件	Muffler		1		

E-05 电机/动力总成 01 Motor/powerassembly

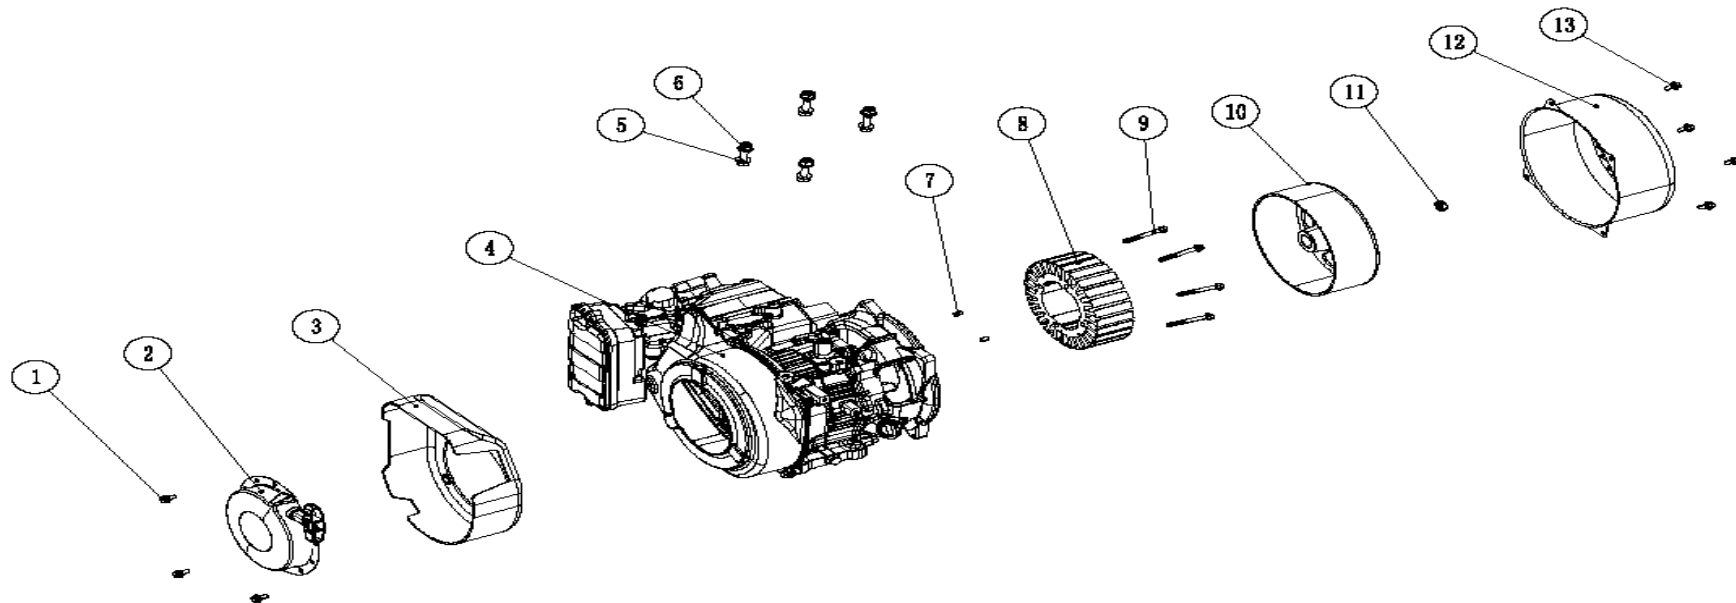


序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	30101-00042-00	六角法兰面螺栓	Flange bolt		3		
2	20034-00042-00	启动拉盘	Starter puller		1		
3	33014-00386-00	逆变器内罩	Inverter inner cover		1		
4	20260-02542-03	发动机	Engine		1		
5	30101-00367-00	六角法兰面螺栓	flange bolt		4		
6	30125-00023-00	六角法兰面螺母	flange nut		4		
7	34006-00001-00	定位销	positioning pin		2		

E-05 电机/动力总成 02 Motor/powerassembly

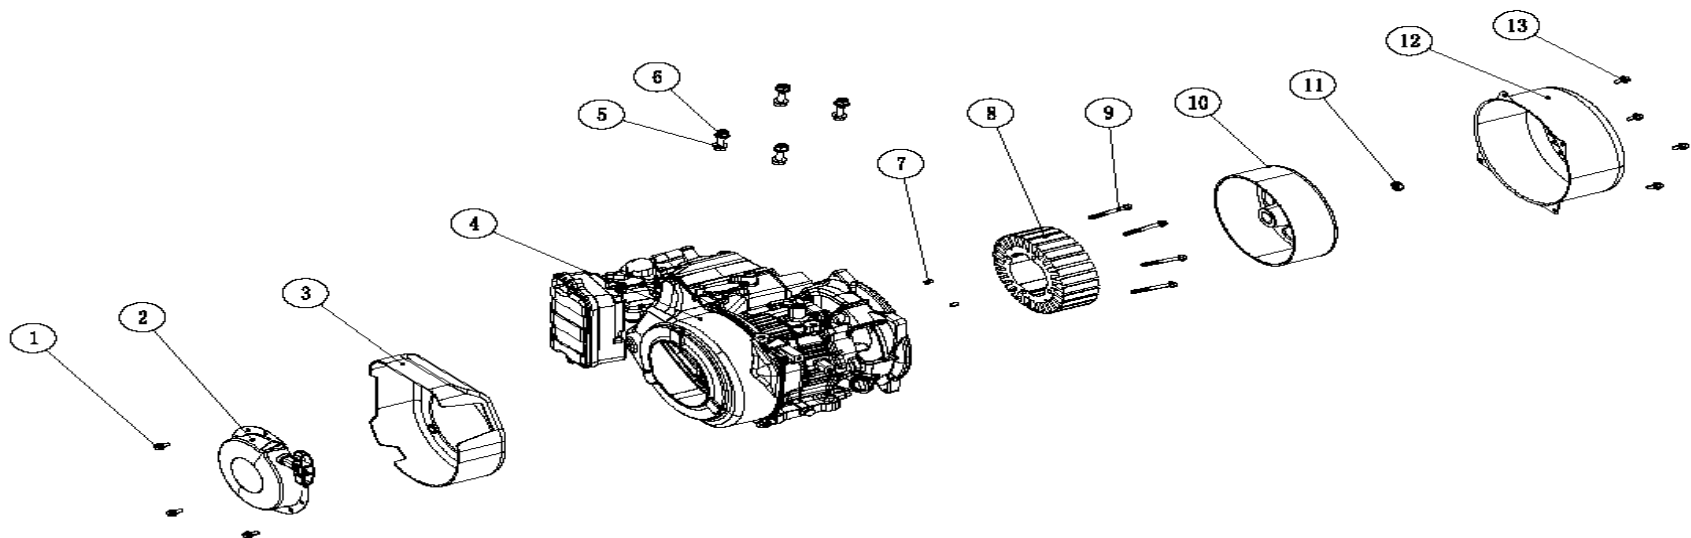

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W.(kg)/PC
8	20005-00026-01	电机定子	Stator		1		
9	30113-00105-00	六角法兰面螺栓	Flange bolt		4		
10	20006-00025-01	电机转子	Rotor		1		
11	30125-00011-00	六角法兰面螺母	Flange nut		1		
12	33082-00216-00	电机尾盖	Tail cover		1		
13	30101-00341-00	六角法兰面螺栓	Flange bolt		4		

E-06 动力总成 Powerassembly

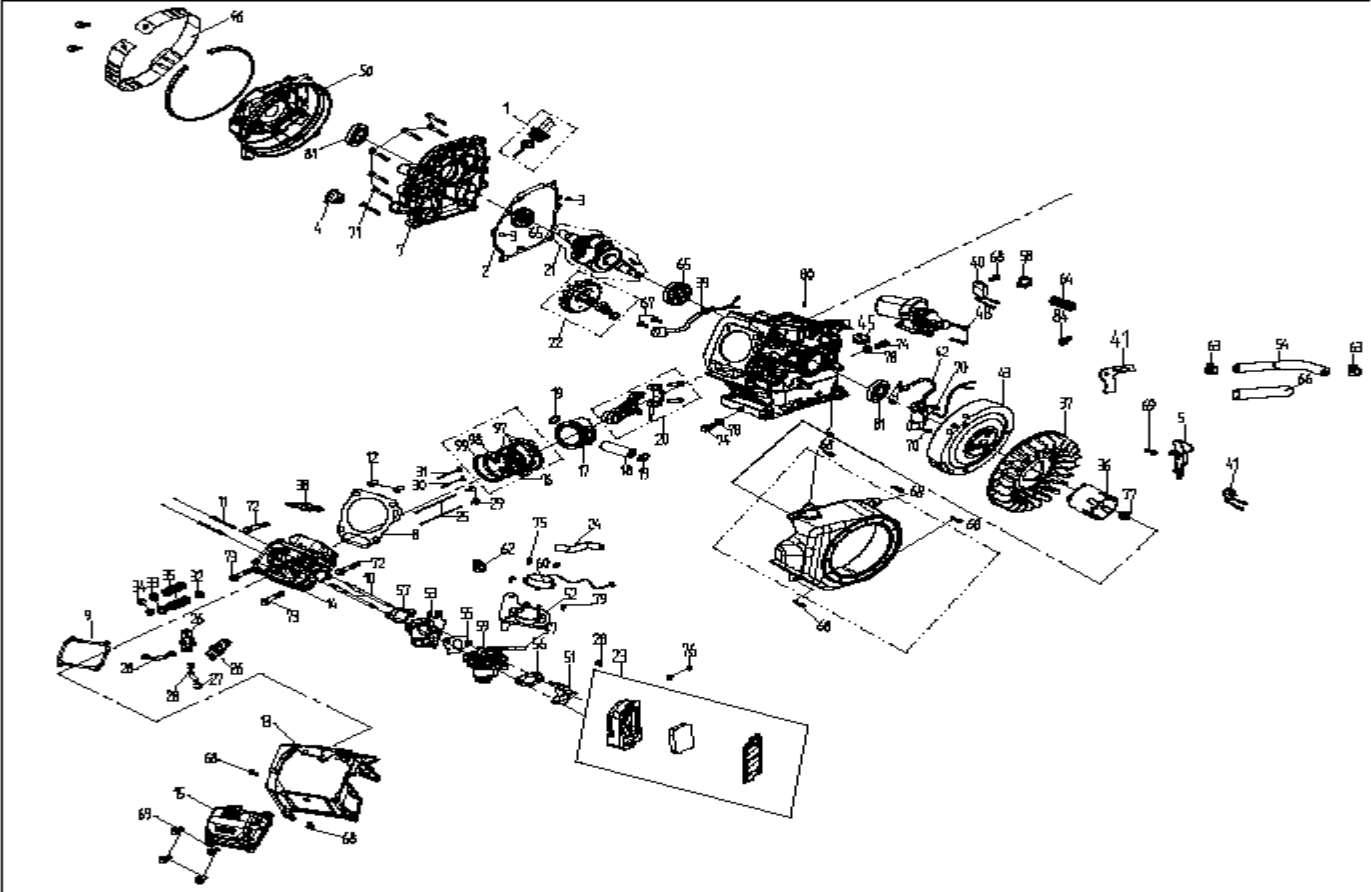


序号 NO.	零部件编码 Part NO.	零部件名称		Description		数量 QTY		
		中文	English		Price (USD)			N.W. (kg) /PC
1	20026-00001-00	机油尺组件	Oil gauge assembly			1		
2	33048-00184-00	曲轴箱盖密封垫	Crankcase cover gasket			1		
3	34006-00001-00	定位销	Positioning pin			2		
4	20026-00016-00	机油塞	Oil plug			1		
5	34021-00005-00	侧挡风板	Side wind deflector			1		
6	34011-00054-00	曲轴箱体	Crankcase			1		
7	33129-00013-00	曲轴箱盖	Crankcase cover			1		

8	33048-00032-00	汽缸头密封垫	Cylinder head gasket		1		
9	33048-00025-00	气缸盖密封垫	Cylinder head cover gasket		1		
10	30110-00013-00	进气双头螺栓	Inlet stud		2		
11	30110-00027-00	排气双头螺栓	Exhaust stud		2		
12	34006-00009-00	定位销	Positioning pin		2		
13	34021-00045-00	汽缸头导风罩	Cylinder head cowling		1		
14	20023-00025-00	汽缸头总成	Cylinder head assembly		1		
15	20021-00014-00	气缸盖组件	Cylinder head cover		1		
16	20084-00005-00	活塞环组件	Piston ring assembly		4		
17	34004-00011-00	活塞	Piston		1		
18	34006-00013-00	活塞销	Piston pin		1		
19	30150-00022-00	活塞销卡圈	Piston pin clip		2		
20	20008-00005-00	连杆总成	Connecting rod assembly		1		
21	20011-00030-00	曲轴总成	Crankshaft		1		
22	20012-00011-00	凸轮轴总成	Camshaft		1		
23	20025-00092-00	空滤器总成	Air cleaner		1		
24	34023-00110-00	废气管	Exhaust pipe		1		
25	34020-00007-00	气门推杆	Valve push rod		2		
26	34019-00008-00	气门摇臂	Valve rocker arm		2		
27	30150-00028-00	摇臂轴卡圈	Rocker arm shaft clip ring		4		
28	30134-00007-00	摇臂轴	Rocker arm shaft		2		
29	34008-00004-00	气门挺柱	The valve lifter		2		
30	34013-00035-00	进气门	Inlet valve		1		
31	34013-00037-00	排气门	Exhaust valve		1		
32	34018-00005-00	进气门挡油罩	Inlet valve oil shield		1		
33	34016-00010-00	气门弹簧座	Valve spring seat		4		
34	34016-00011-00	气门锁夹	Valve lock clamp		2		
35	34015-00003-00	气门弹簧	Valve springs		2		
36	34022-00007-00	启动杯	Starter cup		1		
37	33155-00053-00	冷却风扇	Cooling fan		1		
38	20027-00008-00	火花塞	Spark plug		1		
39	33247-00005-00	机油传感器	Oil sensor		1		
40	33246-00003-00	机油报警器	Oil alarm		1		

41	33593-00009-00	压线板	Line pressing board		1		
42	20028-00044-00	点火线圈总成	Ignition coil		1		
43	33099-00038-00	飞轮组件	Flywheel		1		
44	20010-00115-00	启动器大罩	Starter cover		1		
45	33036-00045-00	橡胶塞	Rubber plug		1		
46	33014-00360-00	电机护板			1		
47	20030-00009-00	阻风门总成	Choke		1		
48	20149-00003-00	启动电机	Starter motor		1		
49	34006-00016-00	定位销锁夹	Locating pin lock clip		1		
50	33191-00135-00	电机罩	Motor cover		1		
51	20024-00101-00	化油器拉索支架	Carburetor cable bracket		1		
52	20249-00109-00	步进电机座	Step motor base		1		
53	34012-00015-00	化油器连接块	Carburetor connector block		1		
54	34023-00004-00	燃油管	Fuel pipe		1		
55	33048-00076-00	化油器垫片	Carburetor gasket		1		
56	33048-00045-00	空滤器密封垫	Air cleaner gasket		1		
57	33048-00051-00	进气口密封垫	Inlet gasket		1		
58	34024-00013-00	单向阀线卡	One-wayvalve line clamp		1		
59	20024-00183-00	化油器总成	Carburetor		1		
60	20007-00014-00	步进电机	Stepper motor		1		
61	20202-00015-00	消声器总成	Muffler		1		
62	34024-00002-00	卡箍	Clamp		1		
63	34024-00003-00	卡箍	Clamp		2		
64	40052-00021-00	开口波纹管	Open corrugated pipe		1		
65	30141-00115-00	轴承	Bearing		2		
66	33015-00076-00	保护套			1		
67	30101-00342-00	带盘螺栓 M6X16	Flange bolt M6X16		2		
68	30101-00070-00	带盘螺栓 M6X12	Flange bolt M6X12		11		
69	30101-00042-00	带盘螺栓 M6X20	Flange bolt M6X20		5		
70	30101-00408-00	带盘螺栓 M6X25	Flange bolt M6X25		2		
71	30101-00461-00	带盘螺栓 M8X32	Flange bolt M8X32		7		
72	30101-00464-00	带盘螺栓 M8X50	Flange bolt M8X50		2		
73	30101-00469-00	带盘螺栓 M8X70	Flange bolt M8X70		2		


74	30101-00487-00	放油螺栓	Oil drain bolt		2		
75	30111-00004-00	十字槽盘头螺钉			2		
76	30125-00002-00	带盘螺母 M8	Flange nut M8		4		
77	30125-00011-00	带盘螺母 M14X1.5	Flange nutM14X1.5		1		
78	30136-00078-00	铝垫片	Aluminum spacer		2		
79	30111-00072-00	十字槽盘头螺钉			2		
80	33126-00004-00	堵头	Plug		1		
81	34007-00003-00	油封 25X41.25X5	Oil seal25X41.25X5		2		

E-07 机架总成 01 Frame assembly

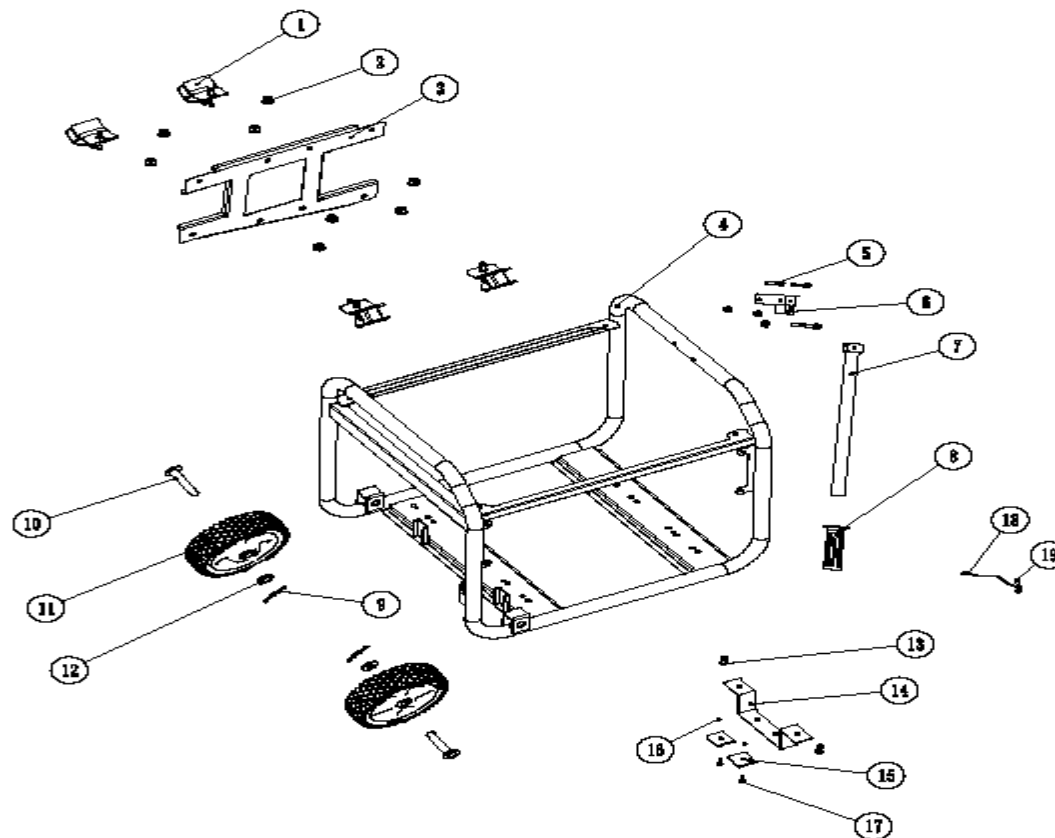

序号 NO.	零部件编码 Part NO.	零部件名称 Description		数量 QTY			
		中文	English	Price (USD)			N.W.(kg)/PC
1	34030-00101-00	减震座	Damping base		4		
2	30125-00023-00	六角法兰面螺母	Flange nut		10		
3	33089-00082-00	动力安装板	Power mounting plate		1		
4	20090-00868-00	机架	Frame		1		
5	20172-00012-00	手把安装座	Handle mount		1		
6	30101-00348-00	六角法兰面螺栓	Flange bolt		3		
7	20135-00107-00	手把管	Hand pipe		1		


E-07 机架总成 02Frame assembly

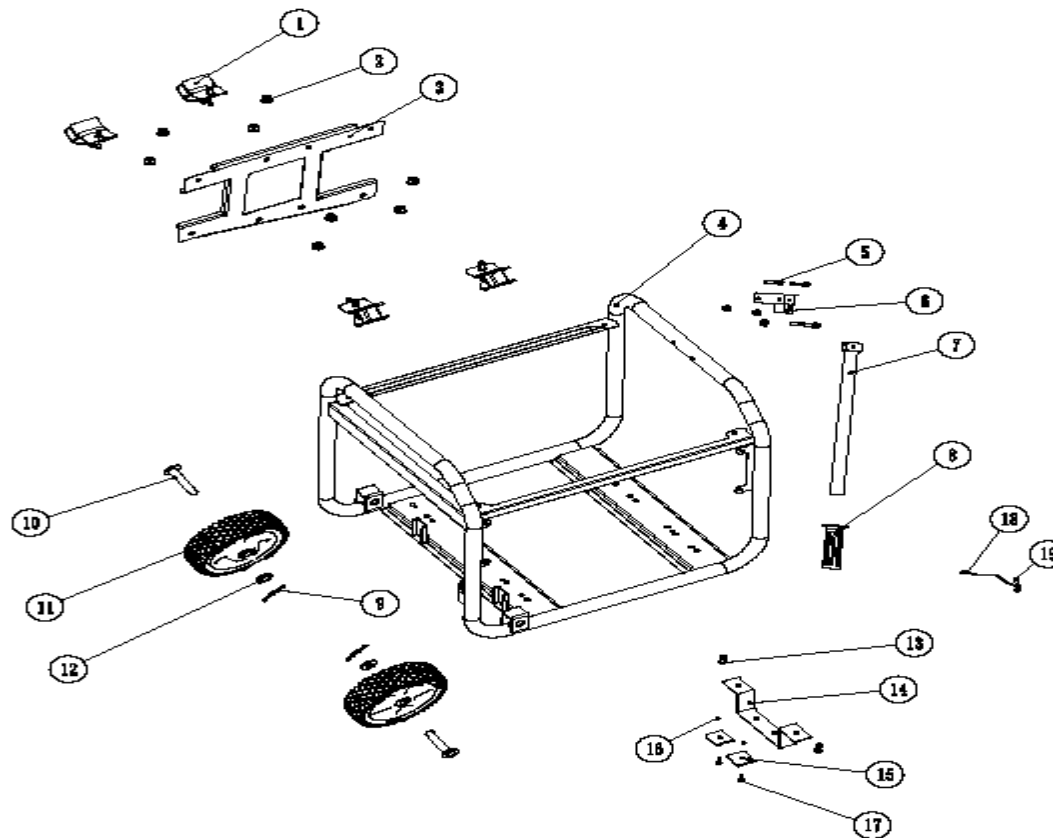

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
8	33015-00010-00	手把胶套	Handle rubber sleeve		1		
9	34006-00020-00	定位销锁夹	Locating pin		2		
10	34031-00008-00	轮轴	Wheel axle		2		
11	20134-00046-00	轮子	Wheel		2		
12	30136-00017-00	轮轴垫片			2		
13	30101-00355-00	六角法兰面螺栓			2		
14	20014-00139-00	支架组件			1		

15	34030-00079-00	机架减震垫			2		
16	30125-00019-00	六角法兰面螺母			2		
17	30101-00405-00	六角法兰面螺栓			2		
18	20196-00123-00	接地线			1		
19	30101-00405-00	六角法兰面螺栓			1		

E-08 面板总成 Panel assembly

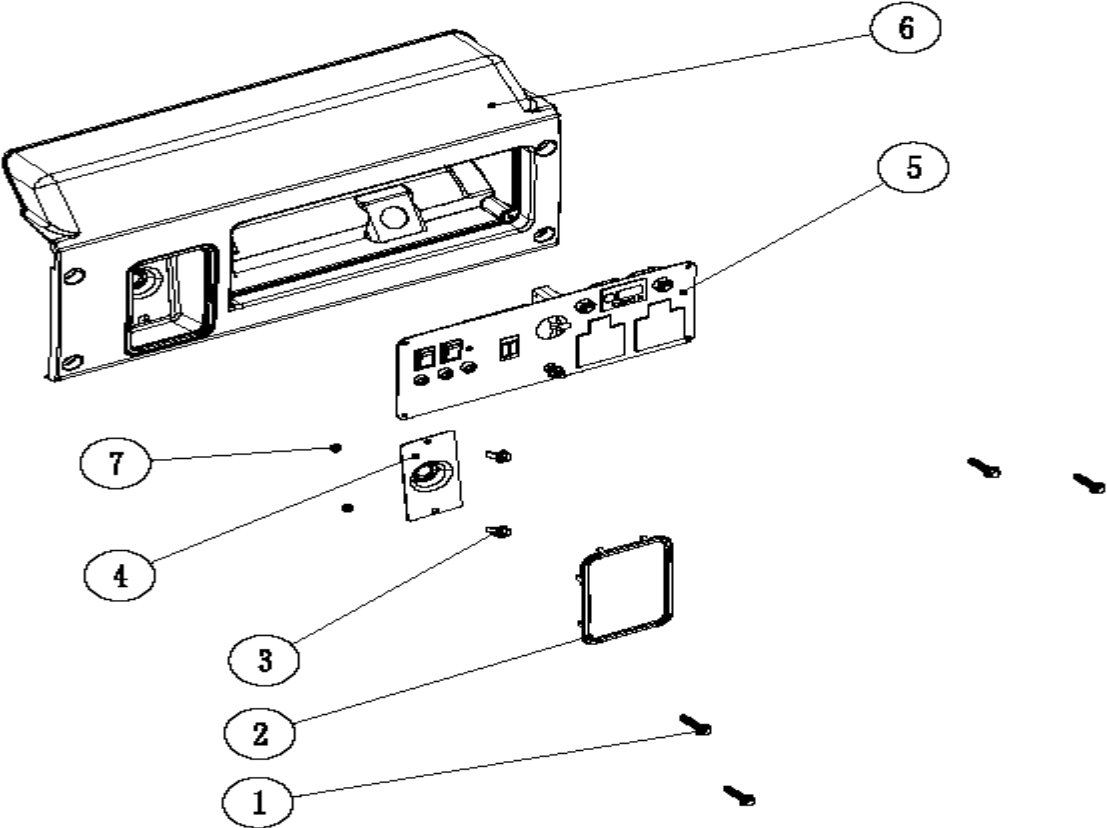

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	30101-00341-00	六角法兰面螺栓	Flange bolt		4		
2	33014-00082-00	启动保护圈	Starting ring		1		
3	30111-00088-00	十字槽盘头螺栓	Pan bolts		2		
4	33014-00263-00	拉手护板	Hand protection board		1		
5	20114-02667-00	面板	Panel		1		
6	33369-00091-00	面板后罩	Panel cover		1		
7	30125-00008-00	六角法兰面螺栓			2		

汽油机组零件图册

10003-00388-00 □ □ □

编制:

校对:

会签:

审核:

批准: