

# SPARE PARTS



| N°   | KIT DESCRIPTION       | OREGON |
|------|-----------------------|--------|
| 1    | Oil Box Cap Assembly  | 573657 |
| 1-1  | Oil Box Cap           | 573657 |
| 1-2  | Seal Ring             | 573657 |
| 1-3  | Hanger                | 573657 |
| 5    | Power Cord Leoni      | 571066 |
| 18   | Power Switch          | 572391 |
| 30   | Brush x2              | 581885 |
| 31   | Brush Holder Clamp x2 | 581885 |
| 32   | Self Tapping Screw x4 | 581885 |
| 37   | Oil Pump Assembly     | 574975 |
| 37-1 | Worm Gear Tooth       | 574975 |
| 37-2 | Worm Gear             | 574975 |
| 37-3 | Plunger Support       | 574975 |

| N°    | KIT DESCRIPTION        | OREGON |
|-------|------------------------|--------|
| 37-4  | Piston Bush            | 574975 |
| 37-5  | Main Part Of Oil Pump  | 574975 |
| 45    | Brake Switch           | 572392 |
| 60    | Countersunk Head Screw | 570965 |
| 61    | Brake Bar Dead Plate   | 570965 |
| 66-13 | Oil-out Seal Ring      | 600252 |
| 70    | Clamp                  | 570964 |
| 71    | Self Tapping Screw     | 570964 |
| 72    | Tensioning Spring      | 570964 |
| 73    | Sprocket               | 570964 |
| 74    | Split Washer           | 570964 |
| 79    | Side Cover Assembly    | 570968 |
| 79-1  | Side Cover             | 570968 |

| N°   | KIT DESCRIPTION         | OREGON |
|------|-------------------------|--------|
| 79-2 | Axis With The Spring    | 570968 |
| 79-3 | Adjusting Knob          | 570968 |
| 79-4 | Spring Compression Knob | 570968 |
| 79-5 | Compression Knob        | 570968 |
| 82   | Tensioner Kit Assembly  | 570963 |
| 82-1 | Shoulder Washer         | 570963 |
| 82-2 | Tensioner Plate         | 570963 |
| 82-3 | Tensioner Disc          | 570963 |
| 82-4 | Inner Locking Ring      | 570963 |
| 82-5 | Outer Locking Ring      | 570963 |