

BarSum

- USB Wired 1D Plug &Play Barcode Scanner
- CCD Image Scanner
- Supports Windows XP, Win7/8/10, MAC, etc.

Packing list:

- Quick Setup Guide x1 pc
- Barcode scanner x 1 pc
- USB Cable x 1pc

CO6.1.7.2

Default Configuration

If you want to cancel all the configuration that you have done to the scanner, Scan below barcodes to the restore factory.



00080
Factory Restore



000602
USB Keyboard

Common Symbolologies

EAN /UPC Add-On 2 or 5

To enable or disable EAN/UPC add on 2 or 5 digits scan the appropriate barcode below.



00551
Enable add-on 2 digits



00552
Enable add-on 5 digits

Get Started:

- 1) Plug the USB cable into your device.
- 2) Scan command barcode of keyboard language from this manual. For example: If you use Italy keyboard, just scan "Italy keyboard". US keyboard is set by default.
- 3) Locate cursor on the place where you want scanner to output characters then you can start to scan.

Barcode Programming

barsum barcode scanners are factory programmed for the most common terminal and communications settings. If you need to change these settings, programming is accomplished by scanning the bar codes in this guide. An asterisk (*) next to an option indicates the default setting.

Keyboard Language

For example: If you use French Keyboard, scan command barcode of "French keyboard". If you use a US keyboard you can ignore this step.



0005000
*American keyboard



0005014
Portugal Keyboard



0005009
French Keyboard



0005010
Germany Keyboard



0005008
Italy Keyboard



0005022
Hungary Keyboard



0005003
Spanish Keyboard



0005018
Turkey Q Keyboard



0005015
Czech Republic Keyboard

Scanning Mode

• Trigger Mode

Press the button to trigger the reading, release the button to end the reading. Reading success or reading time over a single reading time will end the reading.



013300
Manual Trigger *

• Continuous Mode

 
Under continuous mode scanner performs continuous work. Reading success or reading time over a single reading time will end the reading. More than the specified time will automatically trigger the next reading.



015004
Continuous Scanning

• Auto Sense Mode

Scanning this bar code will enable the scanner to enter auto sense



02311
Auto Sense On



02310
Auto Sense Off

Terminator configuration

The scanner provides a shortcut for setting the terminating character suffix to CR or CRLF and enabling it by scanning the appropriate barcode below.



TAB



CR*



LF*



NONE

Reader Beep Tone



014201
Beep Tone ON



014200
Beep Tone OFF

Default Configuration

If you want to cancel all the configuration that you have done to the scanner, Scan below barcodes to the restore factory.



00080
Factory Restore



000602
USB Keyboard

Common Symbolologies

EAN /UPC Add-On 2 or 5

To enable or disable EAN/UPC add on 2 or 5 digits scan the appropriate barcode below.



00551
Enable add-on 2 digits



00552
Enable add-on 5 digits

Plessey

Enable /Disable Plessey

To enable or disable Plessey, scan the appropriate bar code below.



01161
Enable Plessey



01160
Disable Plessey

Code 32

Enable Code32



01951
Enable Code32



01950
Disable Code32

GS1 DataBar Limited (RSS Limited)



01771
Enable RSS Limited



01770
Disable RSS Limited*

GS1 DataBar Omnidirectional (RSS Omnidirectional)

Scanning Mode

• Trigger Mode

Press the button to trigger the reading, release the button to end the reading. Reading success or reading time over a single reading time will end the reading.



013300
Manual Trigger *

• Continuous Mode

 
Under continuous mode scanner performs continuous work. Reading success or reading time over a single reading time will end the reading. More than the specified time will automatically trigger the next reading.



015004
Continuous Scanning

• Auto Sense Mode

Scanning this bar code will enable the scanner to enter auto sense



02311
Auto Sense On



02310
Auto Sense Off

Terminator configuration

The scanner provides a shortcut for setting the terminating character suffix to CR or CRLF and enabling it by scanning the appropriate barcode below.



TAB



CR*



LF*



NONE

Reader Beep Tone



014201
Beep Tone ON



014200
Beep Tone OFF

Plessey

Enable /Disable Plessey

To enable or disable Plessey, scan the appropriate bar code below.



01161
Enable Plessey



01160
Disable Plessey

Code 32

Enable Code32



01951
Enable Code32



01950
Disable Code32

GS1 DataBar Limited (RSS Limited)



01771
Enable RSS Limited



01770
Disable RSS Limited*

GS1 DataBar Omnidirectional (RSS Omnidirectional)



01670
Disable RSS Omnidirectional*

Read 1D Normal Barcode / Reversal Barcode



00161
Read 1D Normal Barcode



00160
Read 1D Reversal Barcode

FAQ

Problem: Some barcodes cannot be read.

Solution:

- a. Dirty or unclear barcodes might not be read.
- b. The possible reason is that setting for some barcode types are not commonly used is off by default. You need to activate a specific barcode type to get it to work. Please contact the supplier that you've purchased it from or you may go to our official website " www.triple-s.co.jp " to download the complete manual and refer to the part of " Symbolologies".
- c. Clean scanner window.

Problem: Carriage Return/Line Feed Settings.

Solution: Please refer to the part of "Terminator Configurations".

Question: Is there any barcodes for apply or remove suffix ?

Yes, you may go to our official website " www.triple-s.co.jp " to download the complete manual and refer to the part of " prefix and suffix", or turn to customer service for help.

Question: How to solve the messy code problem encountered while using other foreign languages ?

The default language is English. Please refer to "USB Country Keyboard Types" to change the language according to your own needs.

4

3

2

1

9

8

7

6

5