




# **WORX**

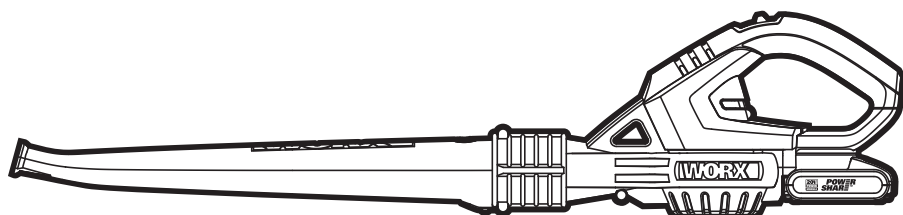


**Cordless Li-ion Blower/Sweeper**  
**מפוח/מטאטא אוויר ליתיום-יון 20 וולט**

**WG549E WG549E.1 WG549E.2 WG549E.4**  
**WG549E.5 WG549E.9**

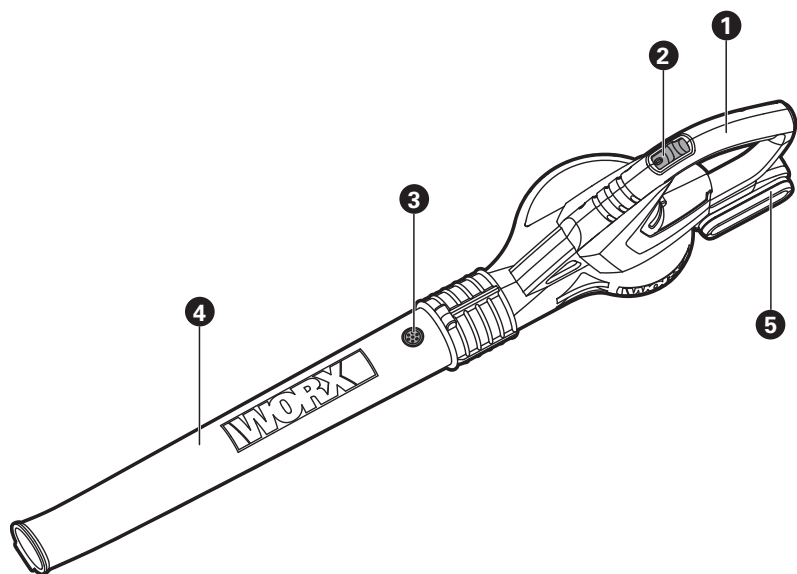


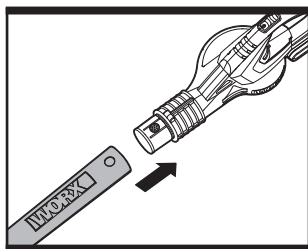


**A**

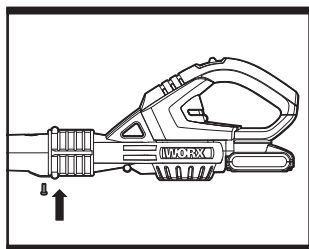


**B**

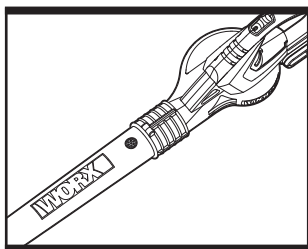


**C**

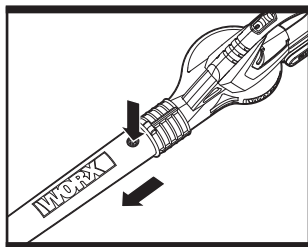


**D**

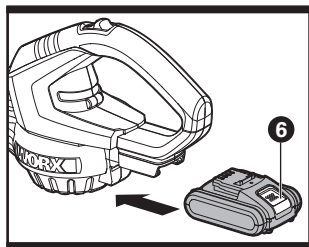

**E**

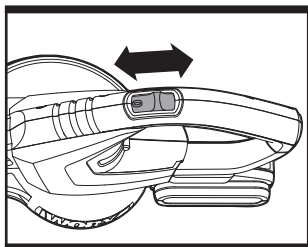

**F**

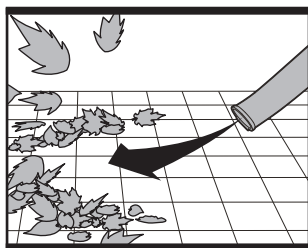

**G**

## GENERAL SAFETY WARNINGS



**WARNING: Read all safety warnings and all instructions.** Failure to follow

the warnings and instructions may result in electric shock, fire and/or serious injury.

**Carefully read the instructions for the safe operation of the machine.**

**Save all warnings and instructions for future reference.**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.

### 1) TRAINING

- a) Read the instructions carefully. Be familiar with the controls and the proper use of the appliance;
- b) Never allow children to use the appliance.
- c) Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator;
- d) Never operate the appliance while people, especially children, or pets are nearby;
- e) The operator or user is responsible for accidents or hazards occurring to other people or their property.

### 2) PREPARATION

- a) While operating the appliance, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- b) Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets.
- c) Wear protective goggles while operating
- d) To prevent dust irritation the wearing of a face mask is recommended
- e) Never operate the appliance with defective guards or shields, or without safety devices, for example debris collector in place

### 3) OPERATION

- a) Take off the battery from the appliance,
  - Whenever you leave the machine;
  - Before clearing a blockage;
  - Before checking, cleaning or working on the appliance;
  - If the appliance starts to vibrate abnormally.
- b) Operate the appliance only in daylight or in good artificial light.
- c) Do not overreach and keep your balance at all times.
- d) Always be sure of your footing on slopes.
- e) walk, never run;
- f) Keep all cooling air inlets clear of debris.
- g) Never blow debris in the direction of bystanders.

### 4) MAINTENANCE AND STORAGE

- a) Keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition;
- b) Replace worn or damaged parts.
- c) Use only genuine replacement parts and accessories.
- d) Store the appliance only in a dry place.

## SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.**

When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has**

been made, wash the affected area with copious amounts of water and seek medical advice.

- f) **Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) **Keep battery pack clean and dry.**
- h) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- j) **Do not maintain battery pack on charge when not in use.**
- k) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- l) **Battery pack gives its best performance when it is operated at normal room temperature (20°C ± 5°C).**
- m) **When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.**
- n) **Recharge only with the charger specified by Worx. Do not use any charger other than that specifically provided for use with the equipment.**  
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- o) **Do not use any battery pack which is not designed for use with the equipment.**
- p) **Keep battery pack out of the reach of children.**
- q) **Retain the original product literature for future reference.**
- r) **Remove the battery from the equipment when not in use.**
- s) **Dispose of properly.**
- t) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- u) **Do not remove battery pack from its original packaging until required for use.**
- v) **Observe the plus (+) and minus (-) marks on the battery and ensure**

**correct use.**

## SYMBOLS



Warning!



Read operator's manual



Wear eye protection



Do not use in the rain or leave outdoors while it is raining.



Keep bystanders away



Warning of hazard



Li-Ion



Li-Ion

Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Do not burn



Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.

# COMPONENT LIST

|    |                                         |
|----|-----------------------------------------|
| 1. | HANDLE                                  |
| 2. | ON/OFF SWITCH                           |
| 3. | TUBE RELEASE BUTTON                     |
| 4. | BLOWER TUBE                             |
| 5. | BATTERY PACK                            |
| 6. | BATTERY PACK RELEASE BUTTON (See Fig.C) |

Not all the accessories illustrated or described are included in standard delivery.

# TECHNICAL DATA

|                  | WG549E                                                                                             | WG549E.1    | WG549E.2<br>WG549E.4 | WG549E.5    | WG549E.9 |
|------------------|----------------------------------------------------------------------------------------------------|-------------|----------------------|-------------|----------|
| Voltage          | 20V  Max* Lithium |             |                      |             |          |
| No load speed    | 12500/min                                                                                          |             |                      |             |          |
| Blow speed       | 200km/h                                                                                            |             |                      |             |          |
| Battery capacity | 2.0Ah                                                                                              |             |                      |             | /        |
| Charging time    | 5hr approx.                                                                                        | 1hr approx. | 5hr approx.          | 1hr approx. | /        |
| Machine weight   | 1.6kg                                                                                              | 1.6 kg      | 1.6 kg               | 1.6 kg      | 1.2kg    |

\* Voltage measured without workload. Initial battery voltage reaches Maximum of 20volts.  
Nominal voltage is 18volts.

# ACCESSORIES

|                       | WG549E      | WG549E.1    | WG549E.2    | WG549E.4    | WG549E.5    | WG549E.9 |
|-----------------------|-------------|-------------|-------------|-------------|-------------|----------|
| Battery pack          | 1(WA3551.1) | 1(WA3551.1) | 1(WA3551.1) | 2(WA3551.1) | 1(WA3551.1) | /        |
| Charger               | 1(WA3760)   | 1(WA3860)   | 1(WA3760)   | 1(WA3760)   | 1(WA3860)   | /        |
| Wide nozzle           | /           | 1           | 1           | /           | /           | /        |
| Dust brush            | /           | 1           | 1           | /           | /           | /        |
| Inflator nozzle       | /           | 1           | 1           | /           | /           | /        |
| Dust tube             | /           | 1           | 1           | /           | /           | /        |
| Accessory clip holder | /           | 1           | 1           | /           | /           | /        |
| Extension hose        | /           | 1           | 1           | /           | /           | /        |
| Short tube            | /           | 1           | 1           | /           | /           | /        |
| Detail brush          | /           | 1           | 1           | /           | /           | /        |

|                 |   |   |   |   |   |   |
|-----------------|---|---|---|---|---|---|
| Deflation cover | / | 1 | 1 | / | / | / |
| Accessory bag   | / | 1 | 1 | / | / | / |

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

## ASSEMBLY

### ASSEMBLING THE BLOWER TUBE (See Fig. A & B)

Before assembling the BlowerTube (4), be sure the on/off switch (2) is in "O" Off position. Fit the BlowerTube to the motor housing as shown in Fig. A. Check the BlowerTube is firmly secured.

 **WARNING! Do not attempt to operate or disable the On/Off Switch by any means other than the normal assembly or removal of the tube.**

**NOTE:** Before disassembling the Blower Tube, be sure the on/off switch (2) is in "O" Off position. Press the Release Button (3), so that you can separate the tube (See Fig. B). Do not try to separate the tubes by force or by using tools.

## OPERATION

### INTENDED USE:

The blower is intended for blow debris. It's not intended for use indoors and animal grooming.

 **WARNING! The charger and battery pack are specially designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.**

### 1. BEFORE USING YOUR CORDLESS BLOWER

Your battery pack is UNCHARGED and you must charge once before use. The battery charger supplied is matched to the Li-Ion battery installed in the machine. Do not use another battery charger.

### 2. CHARGING YOUR BATTERY PACK

The Li-Ion battery is protected against deep discharging. When the battery is empty,

the machine is switched off by means of a protective circuit:

In a warm environment or after heavy use, the battery pack may become too hot to permit charging. Allow time for the battery to cool down before recharging.

### 3. TO REMOVE OR INSTALL BATTERY PACK (See Fig. C)

Depress the battery release button (6) to release battery pack from your tool. After recharging, insert the battery pack into tool's battery port. A simple push and slight pressure will be sufficient.

### 4. STARTING/STOPPING (See Fig. D)

**Starting**  
Move the On/Off switch (2) to the "I" On position.

**Stopping**  
Move the On/Off switch (2) to the "O" Off position.

 **WARNING!** The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.

### 5. USING THE BLOWER (See Fig. E)

The blower is intended for residential use only. Use the blower outdoors to move debris from hard surfaces. This blower is not designed to clear leaves from large grassy areas, or move wet, heavy debris.

#### USER TIPS

- Hold the blow tube approx 180mm above the ground when operating the tool. Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.
- After blowing the debris/leaves into a pile, it is easy to dispose of the pile.

 **CAUTION!**

- **Do not blow hard objects such as**

**nails, bolts, or rocks.**

- **Do not operate the blower near bystanders or pets.**
- **Use extra care when cleaning debris from stairs or other tight areas.**
- **Wear safety goggles or other suitable eye protection, long pants, and shoes.**

## CLEANING THE TOOL

**Clean the tool regularly.**



**WARNING:** Keep your product dry. Under no circumstances spray with water.

- To clean the tool, use only mild soap and a damp cloth.
- Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic.
- Self lubricating bearings are used in your product, therefore lubrication is not required.

## ENVIRONMENTAL PROTECTION

### Disposal



The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling.

The plastic components are labeled for categorized recycling.

- מחמד.
- נקטו משנה זהירות בעת פינוי לכלוך ממדרגות או ממקומות צרים אחרים.
- לבשו משקפי מגן או ציוד מגן אחר לעיניים, מכנסיים ארוכים ונעלי עבודה.

## ניקוי המכשיר

נקו את המפוח בקביעות.

**אזהרה! שמרו על המפוח יבש. לעולם אל תתיזו עליו מים.** 

- השתמשו במטלית רכה טבולה במעט תמיסת מים ונוזל לניקוי כלים, לניקוי המפוח.
- לעולם אל תשתמשו בדטרגנטים, בתכשירי ניקוי או בממסים העלולים להכיל כימיקלים הפוגעים בחלקי הפלסטיק.
- המסבים במפוח הם בעלי יכולת שימון עצמי, לכן המפוח אינו מצריך שימון.

## הגנה סביבתית

### סילוק

יש למיין את המכשיר הזה, את אביזריו ואת חומרי האריזה לצורך מחזור ידידותי לסביבה. רכיבי הפלסטיק מתוגים צורך מחזור ממזין.



שם החברה: סמיקום לקסיס בע"מ  
כתובת: א"ת מערבי קדימה ת.ד. 9090 אבן יהודה  
טלפון: 09-7611222  
[www.semicom.co.il](http://www.semicom.co.il)

|                     |   |   |   |   |   |
|---------------------|---|---|---|---|---|
| צינור גמיש<br>מאריך | / | 1 | 1 | / | / |
| צינור קצר           | / | 1 | 1 | / | / |
| מברשת<br>עדינה      | / | 1 | 1 | / | / |
| כיסוי מפוח          | / | 1 | 1 | / | / |
| תיק אביזרים         | / | 1 | 1 | / | / |

אנו ממליצים לרכוש את האביזרים באותה חנות שבה רכשת את הכלי. השתמש באביזרים מאיכות גבוהה, המסומנים במותג ידוע. בחר את הסוג בהתאם לעבודה שברצונך לבצע. למידע נוסף, עיין בארזית האביזר. אנשי המקצוע בחנות יכולים לסייע ולספק לך מידע נוסף.

## הרכבה

### הרכבת פיית הנשיפה (ראו איורים A ו-B)

לפי הרכבת פיית הנשיפה (4), ודאו שמתג ההפעלה/כיבוי (2) נמצא במצב O (כבוי).  
הרכיבו את פיית הנשיפה על-גבי יחידת המנוע, כמתואר באיור A. אבטחו את הפייה לפתח באמצעות הבורג המסופק. ודאו שהפייה מהודקת היטב.

### ⚠ אזהרה! אל תנסו להפעיל את המכשיר במהלך הרכבת/פירוק אביזרים.

**הערה:** לפני הרכבת פיית הנשיפה (4), ודאו שמתג ההפעלה/כיבוי (2) נמצא במצב O (כבוי). שחררו את הבורג. לחצו על לחצן השחרור (3). כך שתוכלו להפריד את הפייה (ראו איור B). אל תנסו להפריד את הפייה בכוח או באמצעות שימוש בכלים.

## הוראות הפעלה

### ייעוד הכלי

המפוח מיועד לגשיפת עלים ולכלוך. ⚠ הוא אינו מיועד לשימוש בתוך הבית ולטיפול חיות מחמד.

⚠ **אזהרה! המטען והסוללה מתוכננים במיוחד לפעול יחד. אל תנסו להשתמש במטען/סוללה אחרים. לעולם אל תחדירו חפצי מתכת למטען או להדקי הסוללה, למניעת סכנת התחשמלות או וואו נזק.**

### 1. לפני השימוש במכשיר

הסוללה מסופקת כשהיא פרוקה ולכן חובה לטעון אותה לפני השימוש. המטען המסופק מתאים לטעינת סוללת הליתיום-יון של כלי העבודה החשמלי. אל תשתמשו במטען סוללות אחר.

### 2. טעינת הסוללה

סוללת הליתיום-יון מוגנת כנגד פריקה עמוקה. כלי העבודה

החשמלי כובה אוטומטית באמצעות מעגל הגנה כשהסוללה מתרוקנת: הפוטר מפסיק להסתובב.

הסוללה עשויה להיות לוחטת מדי לטעינה בטמפרטורת סביבה גבוהה או לאחר שימוש ממושך. הניחו לה להתקרר לפני טעינתה מחדש.

### 3. הסרת/התקנת הסוללה (ראו איור C)

חצו על לחצן שחרור הסוללה (6) לשחרור הסוללה ולשליפתה בהחלקה מהכלי. החליקו את הסוללה בחזרה לכלי בסיום הטעינה תוך דחיפתה ולחיצתה בעדינות.

### 4. הפעלה/כיבוי (ראה איור D)

הסיתו את מתג ההפעלה/כיבוי (2) למצב I, להפעלה. הסיתו את מתג ההפעלה/כיבוי (2) למצב O, לכיבוי.

⚠ **אזהרה! הכלי ממשיך לפעול למשך מספר שניות לאחר כיבוי. הניחו למנוע להגיע לעצירה מלאה לפני שתניחו את הכלי.**

### 5. שימוש במפוח (ראו איור E)

המפוח מיועד לשימוש ביתי בלבד. השתמשו בו מחוץ לבית לסילוק עלים ולכלוך ממשטחים קשיחים. מפוח זה אינו מיועד לסילוק עלים ממדשאות גדולות, או לפנות שאריות לכלוך רטובות וכבדות.

### עצות לשימוש

- שמרו על מרווח של כ-180 מ"מ בין קצה הפייה והקרקע בעת השימוש במפוח.
- הניעו את המפוח מצד לצד. התקדמו באיטיות תוך שמירה על ערימת העלים/הלכלוך לפניכם. כך יהיה לכם קל יותר להשליך אותה לאשפה בגמר העבודה.

### ⚠ זהירות!

- אל תנשפו חפצים קשים כגון מסמרים, ברגים או אבנים.
- אל תפעילו את המפוח בקרבת עוברי אורח או חיות

חלקי המכשיר

|    |                            |
|----|----------------------------|
| 1. | ידית                       |
| 2. | מתג הפעלה/כיבוי            |
| 3. | לחצן שחרור הפייה           |
| 4. | פיית נשיפה                 |
| 5. | סוללה                      |
| 6. | לחצן שחרור הסוללה (אזור C) |

חלק מהאביזרים המוצגים בחוברת זו או המתוארים בה הם אופציונליים וניתנים לרכישה בנפרד.

מפרט טכני

| WG549E.9        | WG549E.5 | WG549E.2<br>WG549E.4 | WG549E.1 | WG549E   |                    |
|-----------------|----------|----------------------|----------|----------|--------------------|
| ליתיום V עד 20* |          |                      |          |          | מתח                |
| 12500 סל"ד      |          |                      |          |          | מהירות ללא עומס    |
| קמ"ש 200        |          |                      |          |          | מהירות נשיפה       |
| /               | 2.0Ah    |                      |          |          | קיבולת סוללה מרבית |
| /               | כ-1 שעות | כ-5 שעות             | כ-1 שעות | כ-5 שעות | זמן טעינה          |
| 1.2 ק"ג         | 1.6 ק"ג  | 1.6 ק"ג              | 1.6 ק"ג  | 1.6 ק"ג  | משקל               |

3

\*המתח נמדד ללא עומס עבודה. המתח ההתחלתי של הסוללה מגיע ל-20V אולם המתח הנומינלי הוא 18V.

אביזרים

| WG549E.9 | WG549E.5     | WG549E.4     | WG549E.2     | WG549E.1     | WG549E       |              |
|----------|--------------|--------------|--------------|--------------|--------------|--------------|
| /        | (WA3551.1) 1 | (WA3551.1) 2 | (WA3551.1) 1 | (WA3551.1) 1 | (WA3551.1) 1 | סולל         |
| /        | (WA3860) 1   | (WA3760) 1   | (WA3760) 1   | (WA3860) 1   | (WA3760) 1   | מטען         |
| /        | /            | /            | 1            | 1            | /            | פייה רחבה    |
| /        | /            | /            | 1            | 1            | /            | מברשת איבוק  |
| /        | /            | /            | 1            | 1            | /            | פיית ניפוח   |
| /        | /            | /            | 1            | 1            | /            | צינור איבוק  |
| /        | /            | /            | 1            | 1            | /            | תפס לאביזרים |

- יד. אל תשתמשו בסוללות אחרות שאינן מיועדות לשימוש עם המכשיר.
- טו. הרחיקו את הסוללה מהישג ידם של ילדים.
- טז. הרחיקו את הסוללה מהישג ידם של ילדים.
- יז. שמרו את החוברת במקום בטוח לצורך עיון עתידי.
- יח. הסירו את הסוללה מהמכשיר כשאינו בשימוש.
- יט. השליכו סוללות משומשות בהתאם לתקנות המשרד להגנת הסביבה.
- כ. אין לערבב סוללות של ייצור, קיבולת, גודל או סוג שונים בהתקן.
- כא. אל תסיר את מארז הסוללות מהאריזתו המקורית עד שיידרש.
- כב. שים לב לסימני הפלוס (+) והמינוס (-) שעל הסוללה כדי לאשר שימוש נכון.

אל תשרפו



סוללות עלולות לחדור למאגר מי תהום כשלא משליכים אותן באופן ידידותי לסביבה. דבר העלול להיות מסוכן למערכת האקולוגית. אל תשליכו סוללות משומשות ביחד עם האשפה הביתית הרגילה.

## ממלים

אזהרה



קראו את חוברת הוראות הבטיחות וההפעלה (חוברת זו)



לבשו מגני עיניים



אל תשתמשו בגשם ואל תשאירו מחוץ לבית כשגשום



אזהרה או סכנה



הרחיקו עוברי אורח



סוללת ליתיום-יון. הסימול (מימין) על גבי המכשיר פירושו שאין להשליך את הסוללות ביחד עם האשפה הביתית. במקום זאת, יש להביאן לנקודת איסוף לצורך מחזור או פירוק באופן ידידותי לסביבה. סוללות עלולות להיות מסוכנות לסביבה ולבריאות בני האדם היות והן מכילות חומרים מסוכנים.



Li-Ion



Li-Ion

# הוראות בטיחות כלליות עבור כלי עבודה חשמליים



אזהרה! קראו את כל ההוראות הבטיחות והאזהרות, למניעת התחשמלות, דליקה ו/או פציעה. שמרו את החוברת במקום בטוח לצורך עיון עתידי.

המונח "כלי עבודה חשמלי" באזהרות מתייחס לכלי עבודה מופעל חשמל (חוטני) או כלי עבודה מופעל סוללה (אלחוטני).

- מכשיר זה אינו מיועד לשימוש ע"י אנשים (כולל ילדים) עם מוגבלויות פיזיות, חושיות או שכליות, או חסרי ניסיון וידע, אלא אם ניתנת להם השגחה או הדרכה על אודות השימוש במכשיר מהאדם האחראי על ביטחונם.
- יש להשגיח על ילדים לבל ישחקו עם המכשיר.
- יש להשתמש במקור החשמל שסופק עם הכלי.

## 1. הדרכה

- קראו בעיון רב את ההוראות. התוודעו לכפתורי הבקרה ולאופן השימוש במכשיר.
- לעולם אל תאפשרו לילדים לשחק עם המכשיר.
- לעולם אל תאפשרו לאנשים שאינם מכירים הוראות אלה להשתמש במכשיר. התקנות המקומיות עשויות להגביל את הגיל המינימלי לשימוש במכשיר.
- לעולם אל תפעילו את המכשיר בסביבת אנשים, ובמיוחד ילדים, או חיות מחמד.
- המפעיל או המשתמש אחראים לתאונות או לנזקים הנגרמים לאנשים אחרים או לרכוש.

## 2. הכנה

- לבשו תמיד נעלי עבודה ומכנסיים ארוכים בעת הפעלת המכשיר. אל תפעילו את המכשיר כשאתם יחפים או נועלים סנדלים.
- אל תלבשו בגדים רפויים או תכשיטים, העלולים להישאב לתוך הפייה. הרחיקו את השיער, הבגדים והכפפות מהפייה.
- לבשו משקפי מגן בעת השימוש במכשיר.
- מומלץ להשתמש במסכת אבק בעת השימוש במכשיר, למניעת חדירת אבק למערכת הנשימה.
- לעולם אל תפעילו את המכשיר ללא מגנים, כיסויים או התקני ביטחון, כגון שק איסוף.

## 3. הפעלה

- הסירו את הסוללה מהמכשיר:
  - כשהוא מושאר ללא השגחה,
  - לפני הסרת חסימות,
  - לפני ביצוע פעולות בדיקה, ניקוי או תחזוקה,
  - כשהמכשיר מתחיל לרטוט באופן חריג.
- הפעילו את המכשיר באור יום בלבד או תחת תאורה מלאכותית טובה.

- אל תתמחו על מנת להגיע למקומות מרוחקים. שמרו תמיד על עמידה יציבה.
- שמרו תמיד על עמידה יציבה בעת עבודה במדרון.
- לכו, אל תרצו.
- שמרו על פתחי האוויר נקיים מלכלוך ואבק.
- לעולם אל תנשפו אבק ולכלוך בכיוון עוברי אורח.

## 4. ניקוי ותחזוקה

- שמרו על אומים וברגים הדוקים כדי להבטיח שהמכשיר בטוח לשימוש.
- החליפו חלקים בלויים או פגומים.
- השתמשו בחלפים ובאביזרים מקוריים בלבד.
- אחסנו את המכשיר במקום יבש.

## הוראות בטיחות עבור סוללות

- אל תפרקו, אל תפתחו ואל תגרסו את התאים או הסוללה.
- אל תקצרו את הסוללה. בהם הן עלולות לקצר אחת את האחרת או להיות מקוצרות על-ידי חפצים מוליכים אחרים. כשהסוללה אינן בשימוש, הרחיקו אותה מחפצי מתכת כגון אטבי נייר, מטבעות, מפתחות, מסמרים או חפצי מתכת קטנים אחרים, העלולים ליצור חיבור בין ההדקים. קיצור הדקי הסוללה במקביל עלול לגרום סכנת כוויה או דליקה.
- אל תחשפו את הסוללה לחום או לאש. הימנעו מאחסנתה באור שמש ישיר.
- אל תחשפו את הסוללה לחבטות ולזעזועים.
- במקרה של דליפת נוזל סוללה, אל תאפשרו מגע עם העור או העיניים. שטפו את האזור הנגוע בהרבה מים ופנו לקבלת טיפול רפואי.
- פנו מיד לקבלת טיפול רפואי במקרה של בליעת תא סוללה או סוללה.
- שמרו על הסוללה נקיה ויבשה.
- נגבו בעת הצורך את הדקי הסוללה במטלית נקיה ויבשה.
- יש לטעון את הסוללה לפני השימוש. עיינו תמיד בחוברת זו לשימוש בתהליך הטעינה המתאים.
- הסירו את הסוללה מהמטען בסיום הטעינה.
- ייתכן ויהיה צורך לטעון ולפרוק את הסוללה מספר פעמים לאחר תקופה ארוכה של אי-שימוש, לשמירה על ביצועיה המקסימליים.
- י. ביצועי הסוללה מקסימליים בעת שימוש בטמפרטורת חדר רגילה (15-25°C).
- יב. בעת השלכת סוללות משומשות, הפרידו אותן בהתאם לסוגן.
- יג. טענו את הסוללה באמצעות המטען המסופק על-ידי Woxa בלבד. אל תשתמשו במטענים אחרים, למניעת סכנת דליקה.







**[www.worx.com](http://www.worx.com)**

Copyright © 2020, Positec. All Rights Reserved.  
AR01004702