





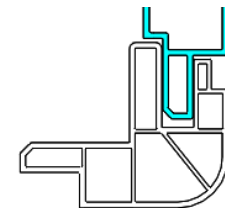



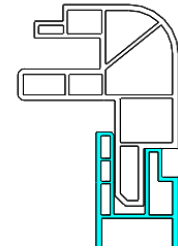



FLOOR

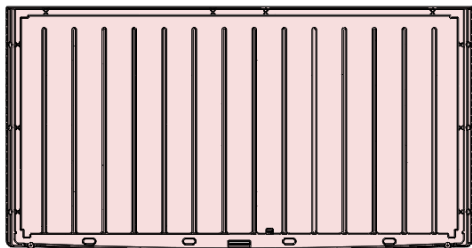

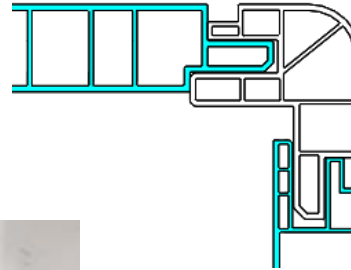

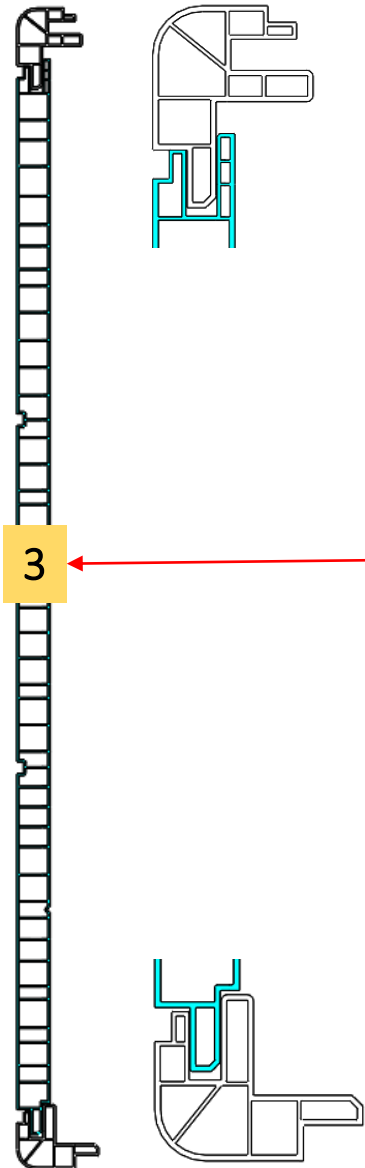

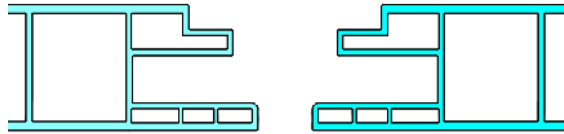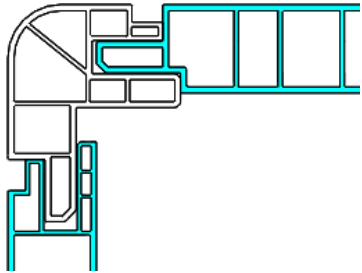


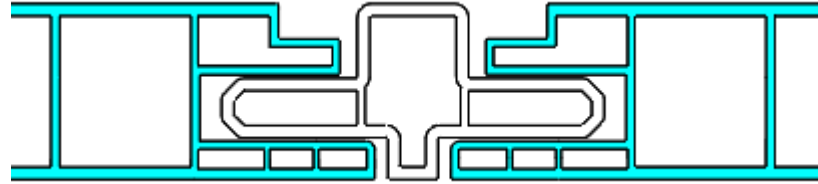



SLPB (x1)




IMPORTANT, connect wall to floor with SC12 bolt

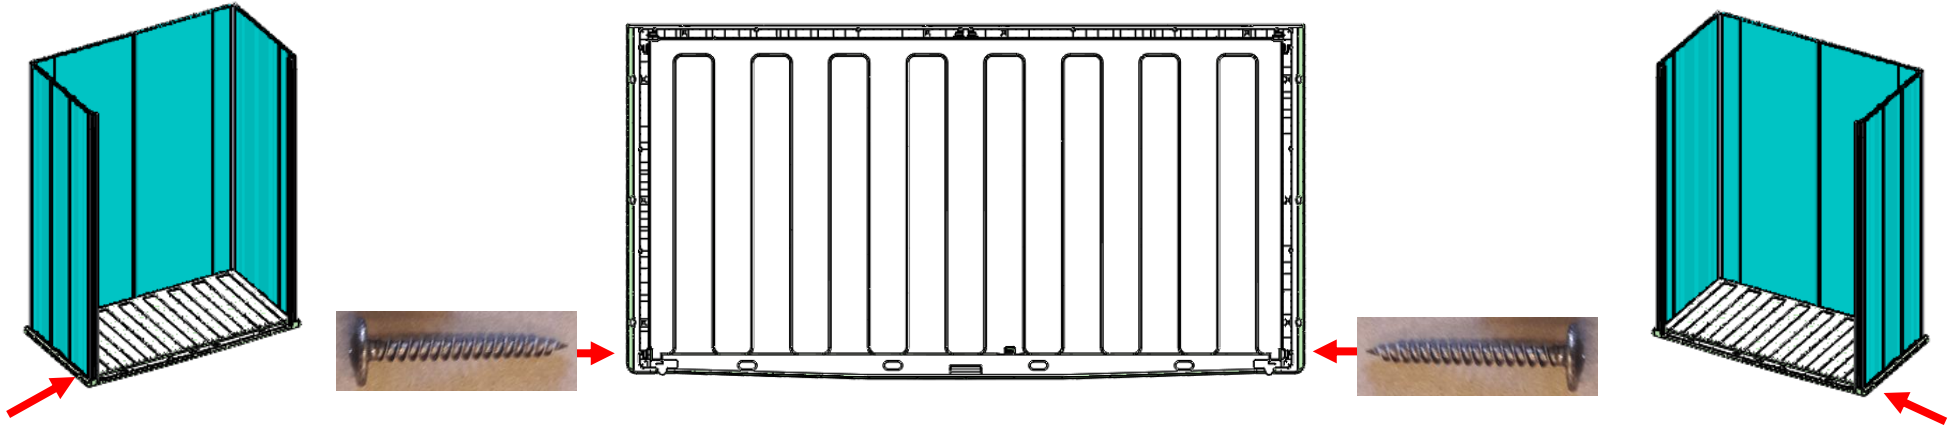

ROOF

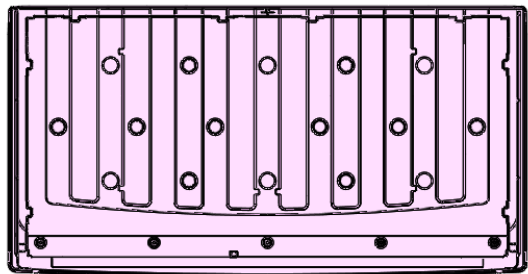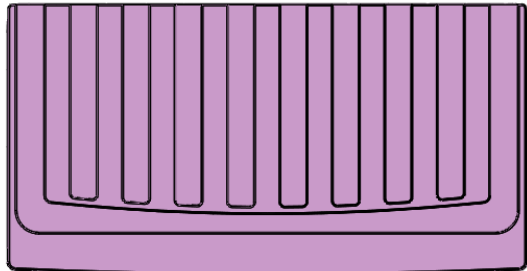


IMPORTANT, connect back wall to roof with SCW1 bolt

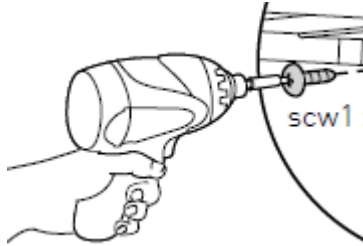




13 mm



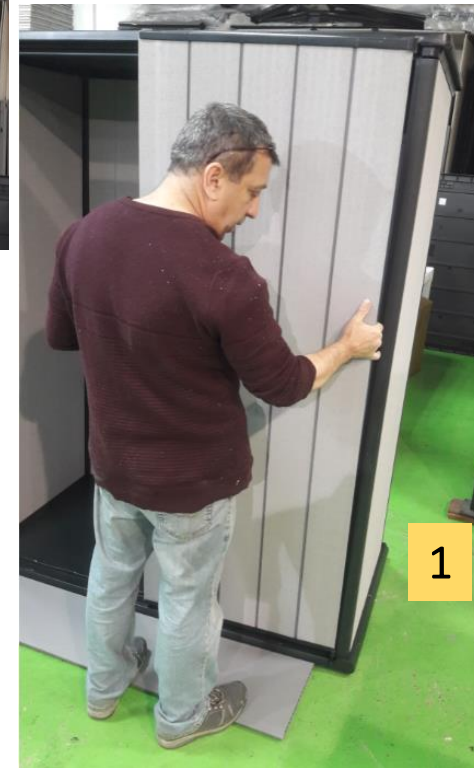

1. Put the right door on the doorstep (lean on)
2. Put the female-hinge (cap) on metal male-hinge
3. Lift the roof corner 25=30 mm
4. Put the female-hinge (cap) on metal male-hinge
5. "close" the roof corner on corner
6. Open the door and.....
7. IMPORTANT, Secure the corner with SC15 bolt

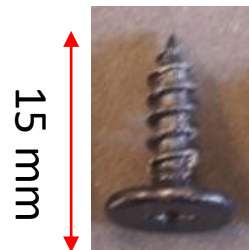

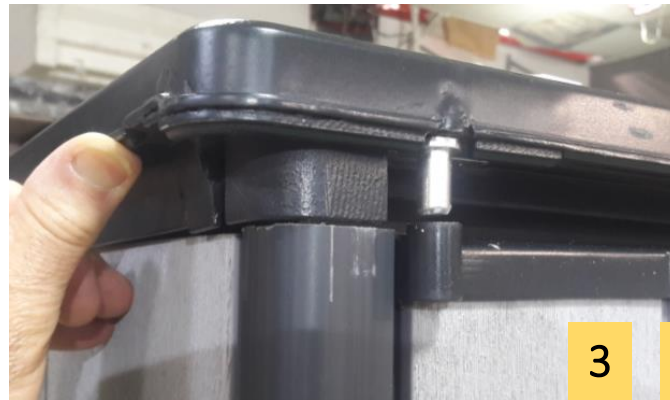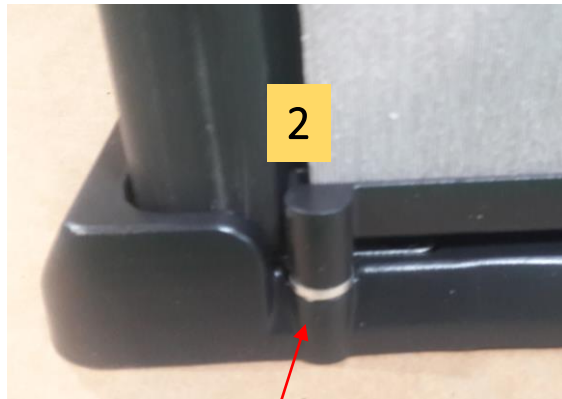

5

1. Put the left door on the doorstep (lean on)
2. Put the female-hinge (cap) on metal male-hinge
3. Lift the roof corner 25=30 mm
4. Put the female-hinge (cap) on metal male-hinge
5. "close" the roof corner on corner
6. Open the door and.....
7. IMPORTANT, Secure the corner with SC15 bolt




6




1






15 mm

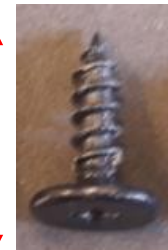

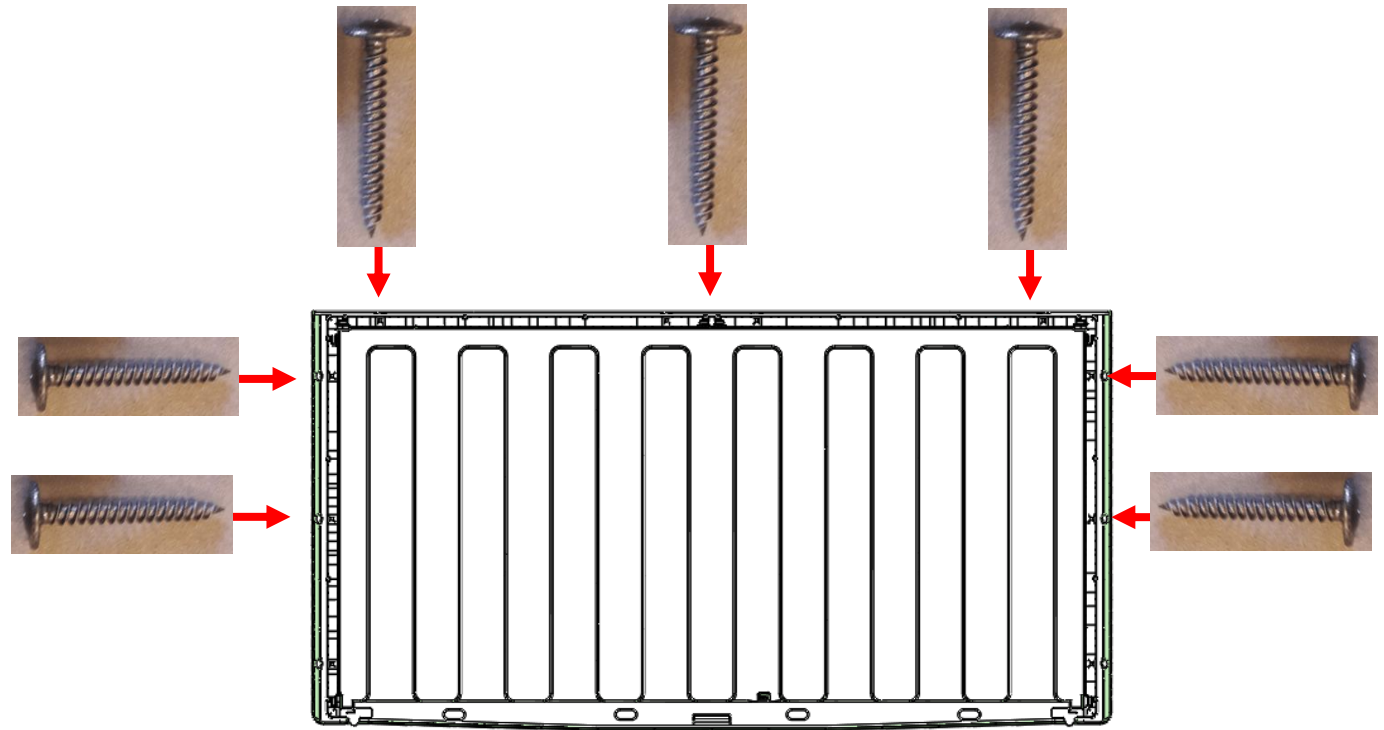

IMPORTANT, fill up all the bolts according original ins.

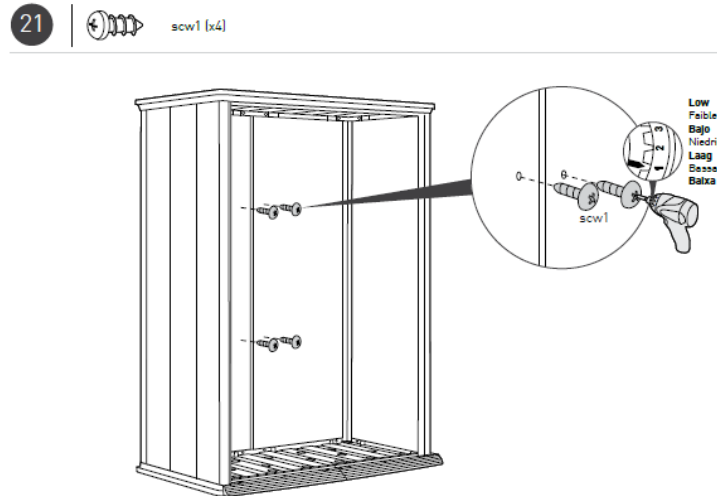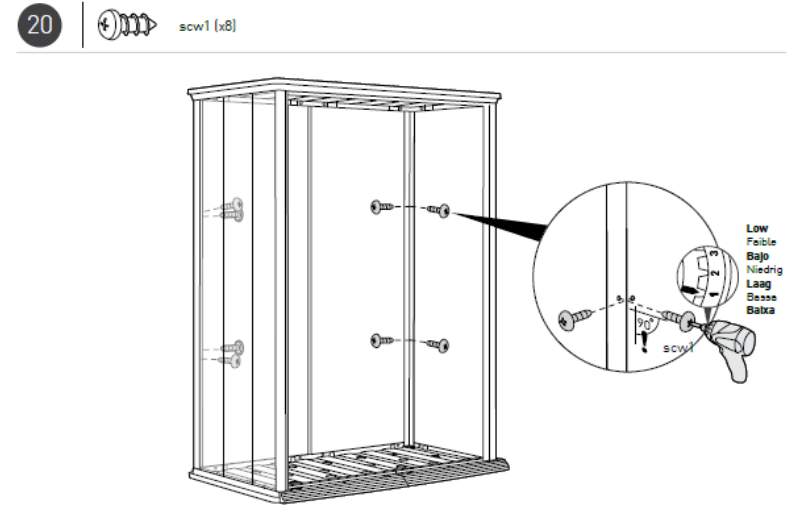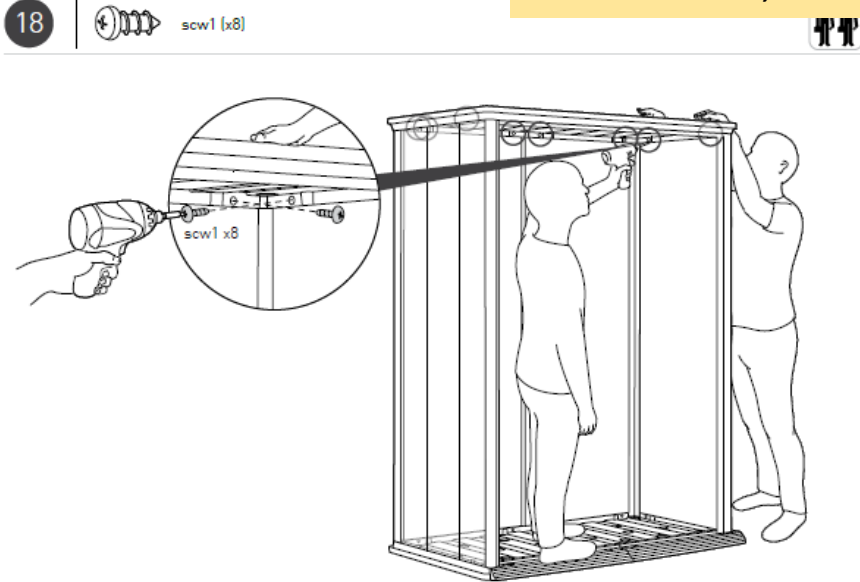

SHELVES, connect with 7 bolts.

