


# 5 x3 ft Storage Shed Installation CRT53

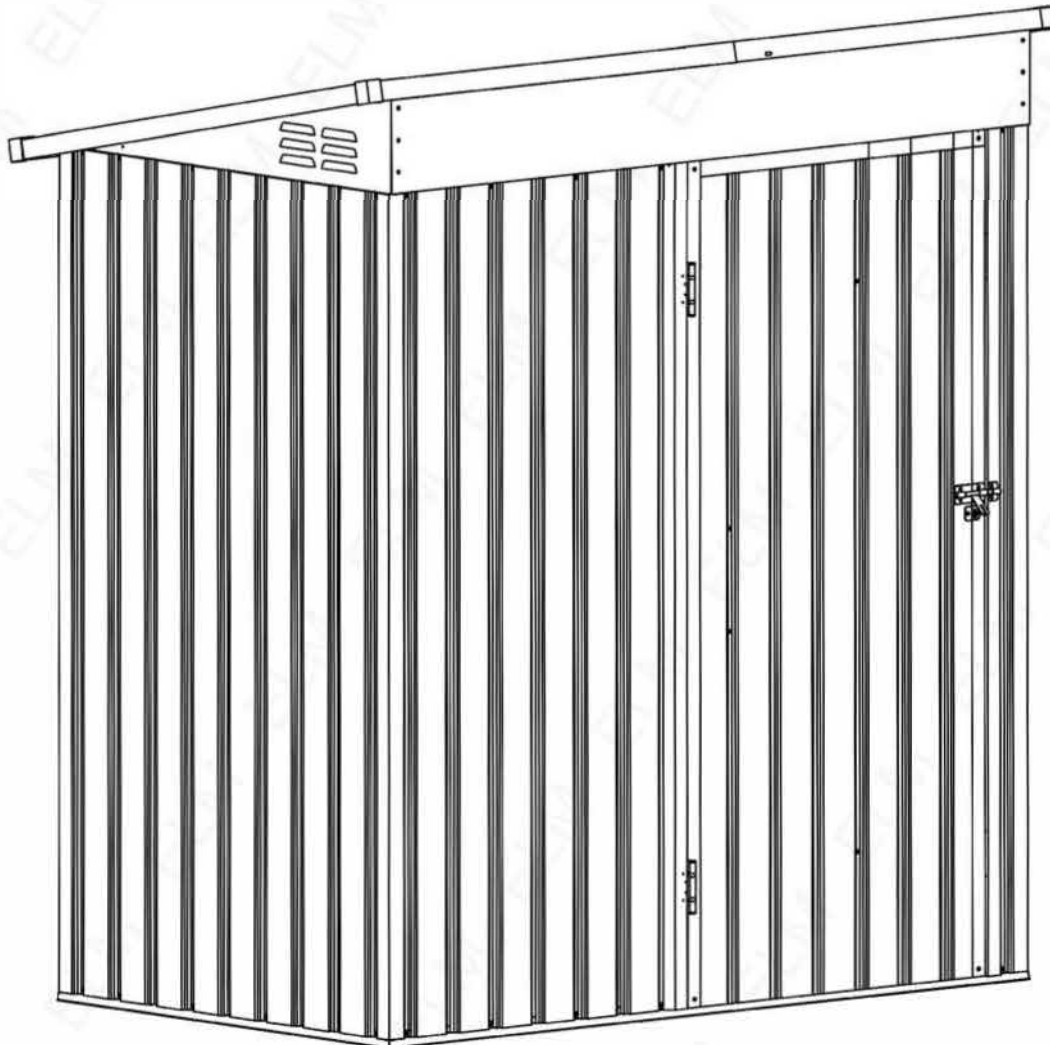

[coverit@shelterlogic.com](mailto:coverit@shelterlogic.com)

Attention



## **Thank you for your purchase our product.**

1. If there is any damage, please send clear photos about damaged part to us as attachment, we will check and offer you best solution soon.
2. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.
3. It is recommended to assemble more than two people, so that you will be very relaxed.

If you find that a part is missing, include the model number  
of your building and contact: 800-252-5805

**Please prepare below tools before installation. (Not Included)**



Electric Screwdriver



+ Manual Screwdriver




Ladder

**Package included Tools**



Gloves x 1Pair



Spanner x 1

**ATTENTION:**

Please read this instruction carefully before installation and follow it strictly during installation. Ensure that there are no problems later due to installation errors.

## Installation Notes

Please check the quantity of all parts before installation (Please refer to the Parts Lists) and the appearance of the products. Please make sure the product is correct before installation. If there is any problem, please contact us directly.

Make sure the colored panels are facing outwards and all the holes match. The panels are textured, please install the panels in the order specified in the instructions. All lines and holes must be accurately matched to make the storage shed more stable. Please ensure that all screws are tightened to prevent the product from falling apart.

There is a protective film on the surface to protect the product, please tear it off after installation to get the final presentation. If you do not damage the film during installation, it can also remain on the product to protect the product.

Please place the product on a flat ground to prevent leaning and collapse. If the ground is uneven, the door may can't be closed.

## Safety Precautions

We recommend two adults to complete the installation. Two adults installed together will make the installation process easier and safer.










































The gloves must be carried to prevent hand cuts during installation.

Take care when using power tools near water the use of a residual current device (RCD) is advised.

Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand. (We recommend that beginners use a manual screwdriver for installation.)

Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.


**PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.**

Part List						
PART	NO.	QTY.		PART	NO.	QTY.
	S2	1			WD5A-X	1
	S3	1			WD3A-X	1
	B1	2			W7A-X	3
	B2	2			W5A-X	4
	UP1	1			W3A-X	1
	L1	1			WP7A-R-X	1
	L2	2			WP7A-L-X	1
	S1	1			WP5A-X	1
	DX1	2			GC	4
	ULA	1			T-F	4
	URA	1			F1	152
	DLA1	1			V2	143
	DRA1	1			F2	35
	DD	1			F3	16
	DU	1			DCS	1
	M3L-S	1			C2	4
	M3R-S	1			DH	2
	M3L	1			SL	25
	M3R	1			BS	1
	M4	2			ST	1
	CP	4				

## Part List


### Shed top panels

NO.	QTY.
WP7A-L-X	1
WP7A-R-X	1
WP5A-X	1
M3R	1
M3L	1
M3L-S	1
M3R-S	1

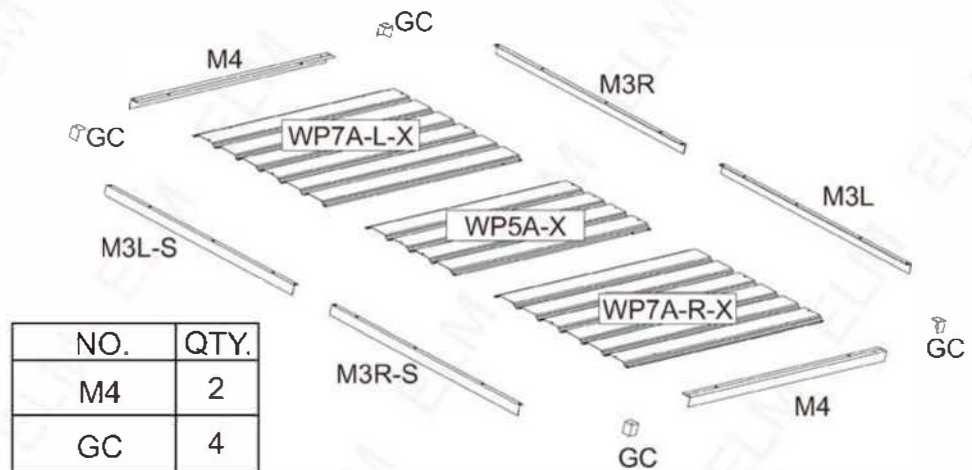

### Shed top frame

NO.	QTY.
S1	1
S2	1
S3	1
C2	4
L2	2
UP1	1
L1	1

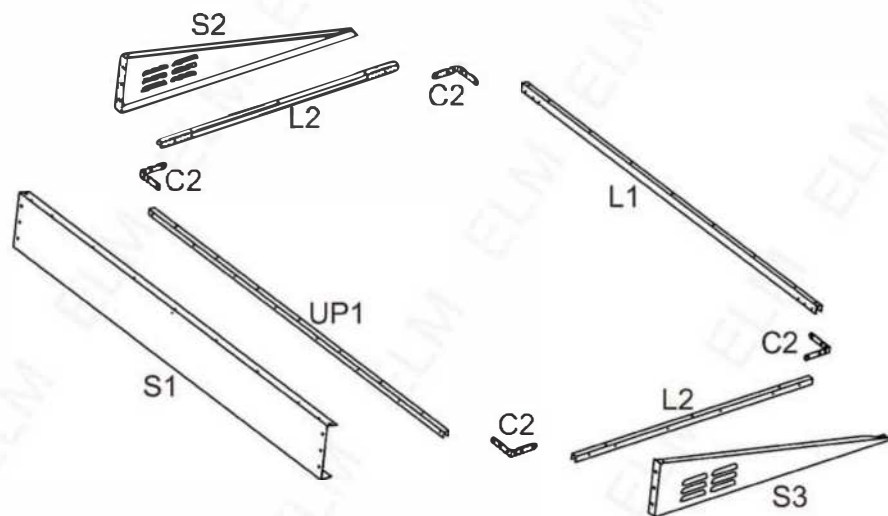

### Door


NO.	QTY.
ULA	1
URA	1
DLA1	1
DRA1	1
DD	1
DU	1
DX1	2
DCS	1
WD5A-X	1
WD3A-X	1

### Shed base

NO.	QTY.
B2	2
B1	2
T-F	4

### Shed side

NO.	QTY.
W5A-X	4
CP	4
W7A-X	3
W3A-X	1

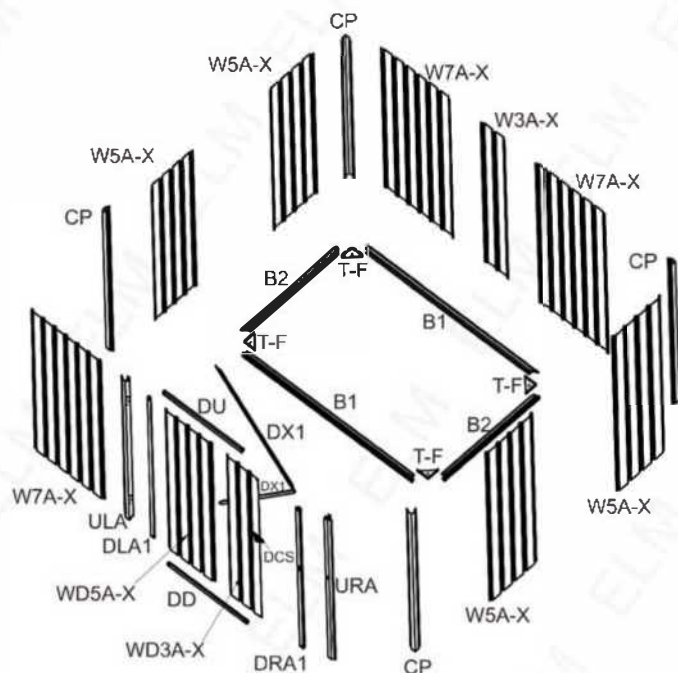

**Top Plate**

WP7A-L-X

WP5A-X

WP7A-R-X

CP

CP

W7A-X

W3A-X

W7A-X

**Back Side**

W5A-X

W5A-X

**Left Side**

**Grain Mosaic of color coating plate**

**Right Side**

W5A-X

W5A-X

**Front Side**

**Door**

CP

CP






W7A-X

WD5A-X

WD3A-X




## Shed Base Frame Assemble






PART	NO.	QTY.		PART	NO.	QTY.
	B1	2			T-F	4
	B2	2			V2	24
					F1	24

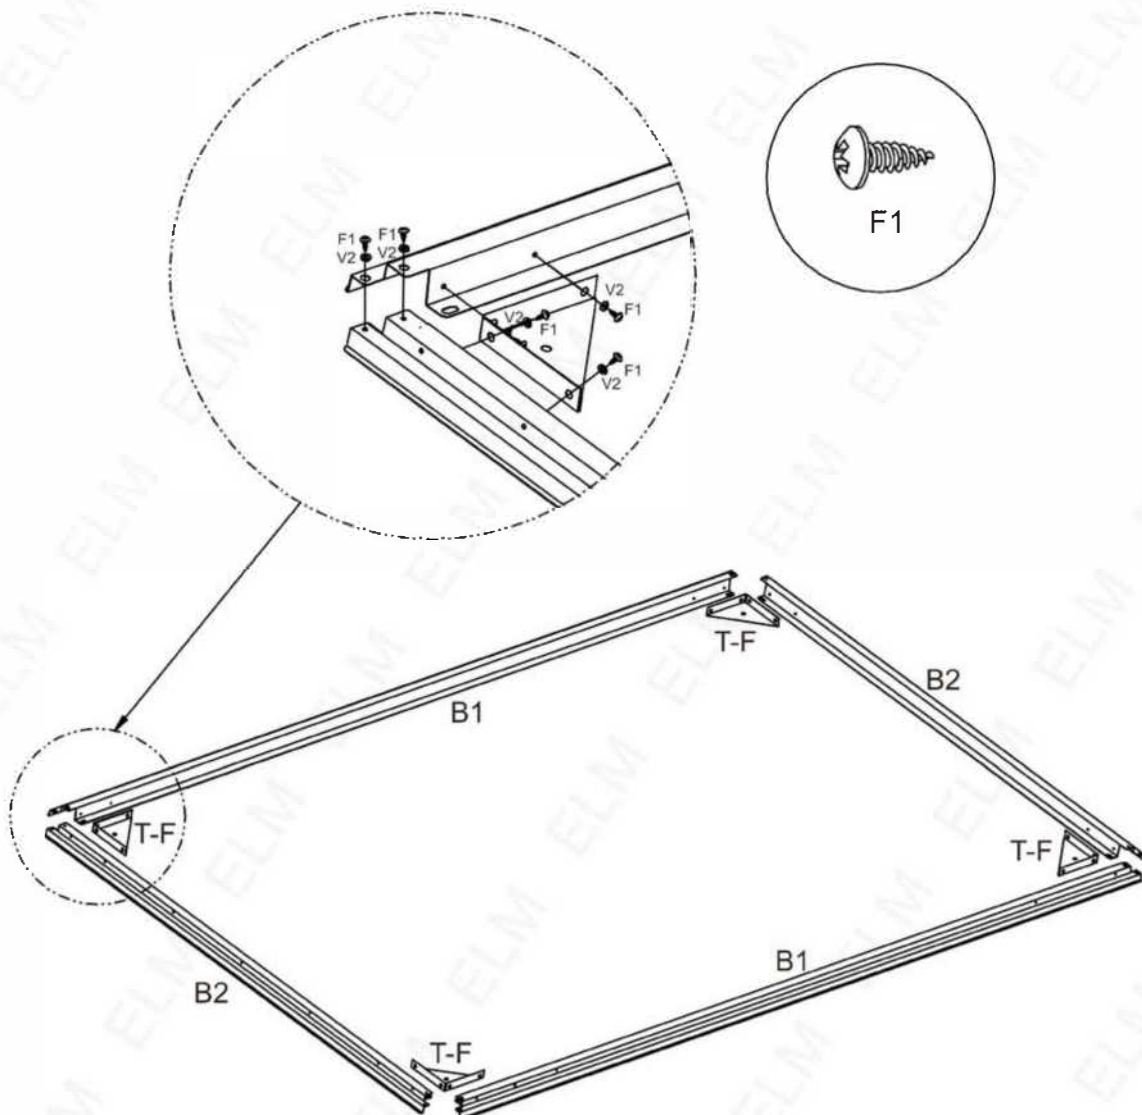








**Note:** The larger hole is always covered over the small hole.

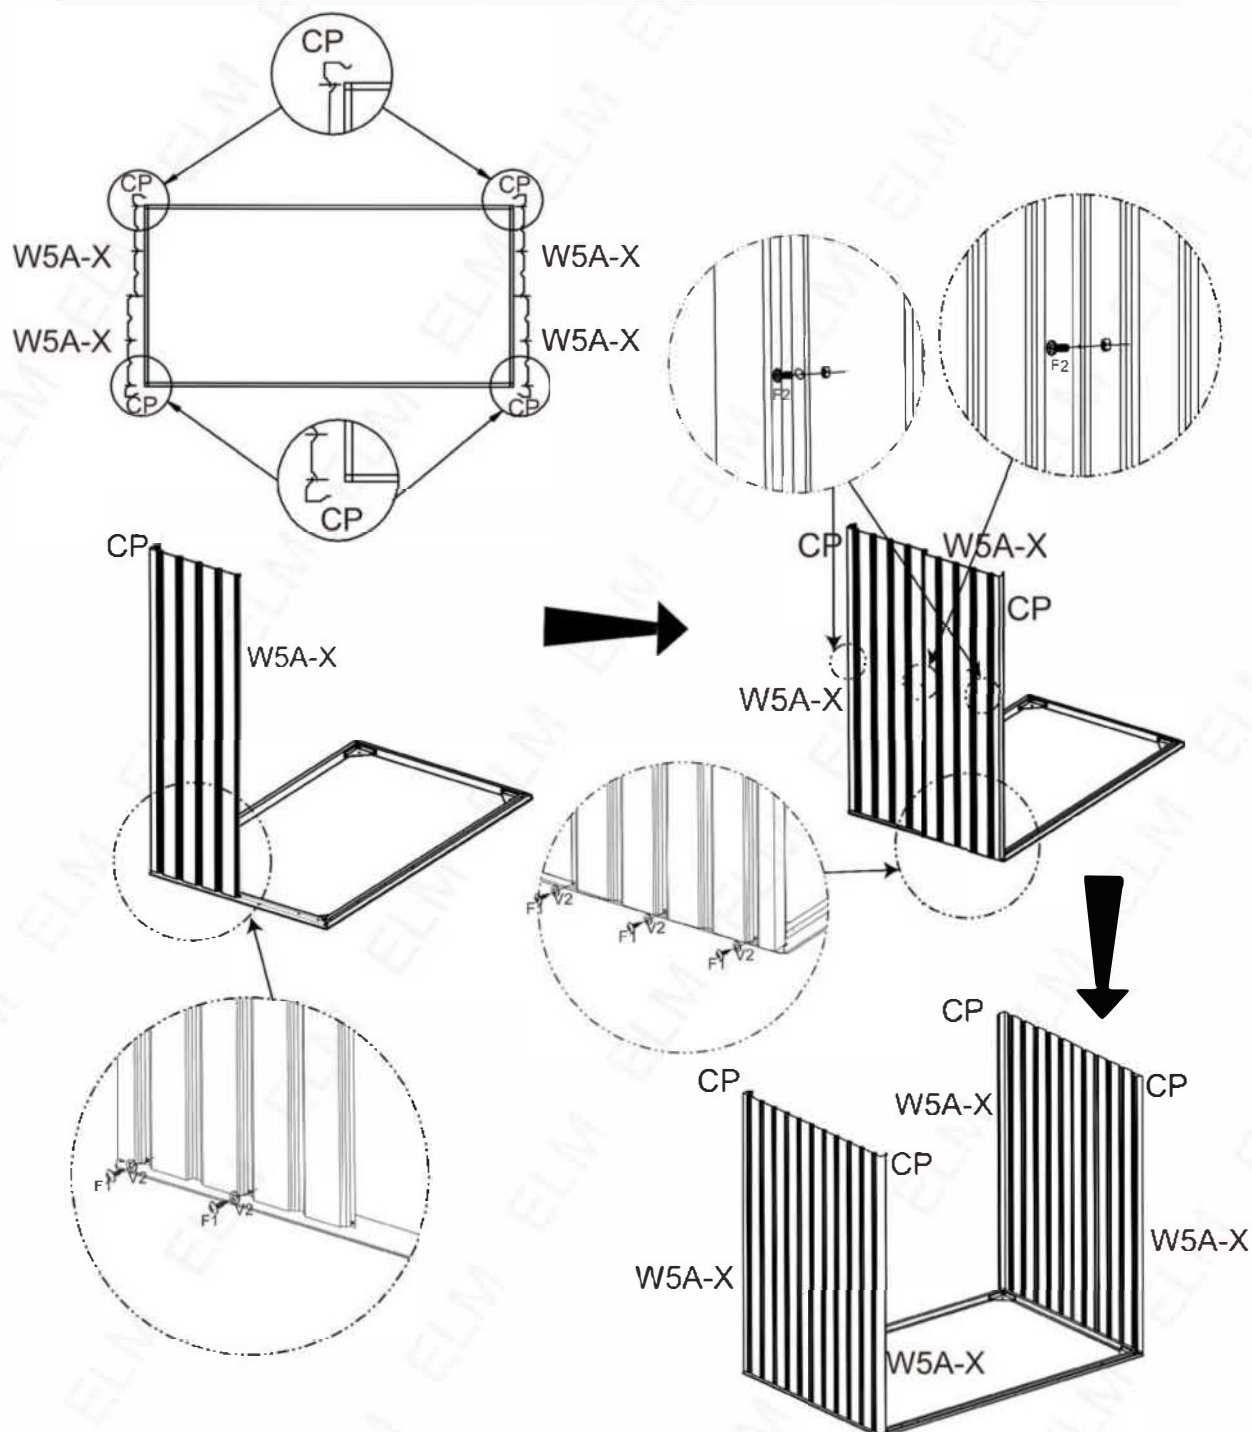

## Shed Side Panels Assemble


PART	NO.	QTY.	PART	NO.	QTY.
	W5A-X	4		V2	10
	CP	4		F1	10
				F2	6







PART	NO.	QTY.		PART	NO.	QTY.
	UP1	1			F1	26
	L1	1			V2	26
	L2	2			C2	4




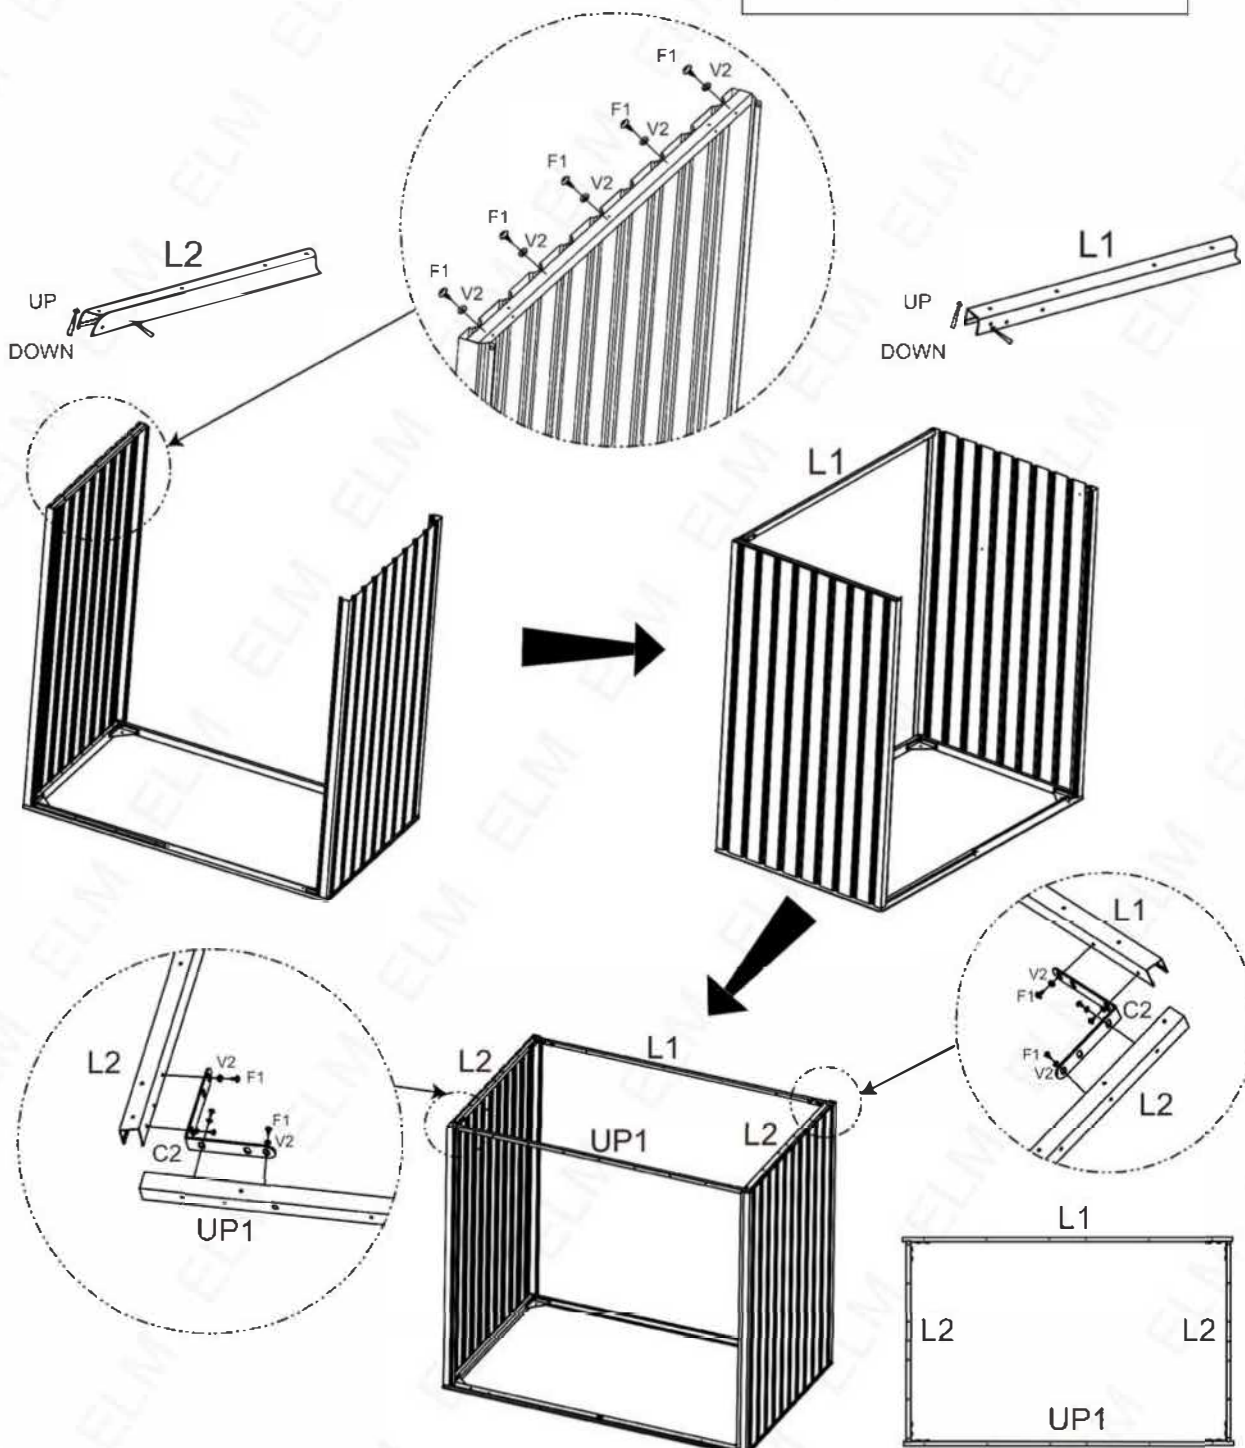






Two Adults Are Required







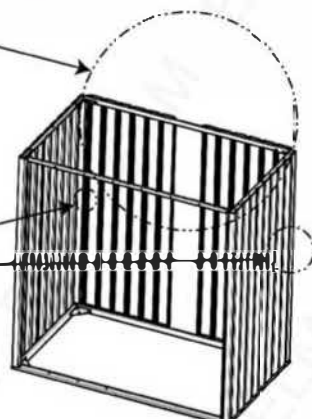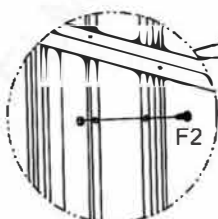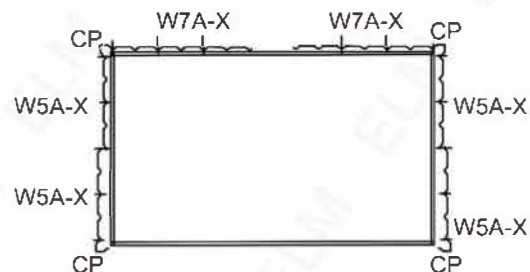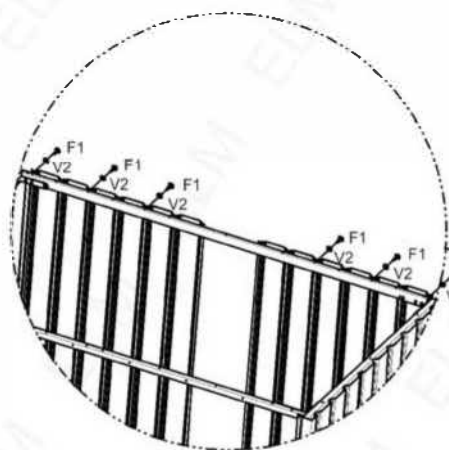





PART	NO.	QTY.	PART	NO.	QTY.
	W7A-X	2		F1	12
	V2	12		F2	2

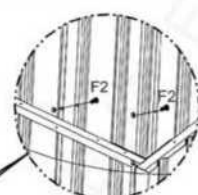
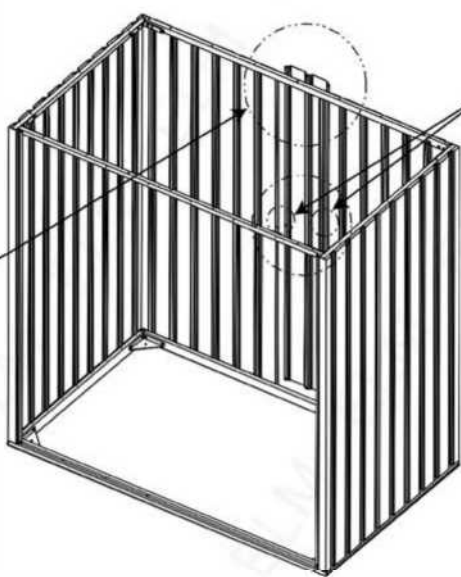
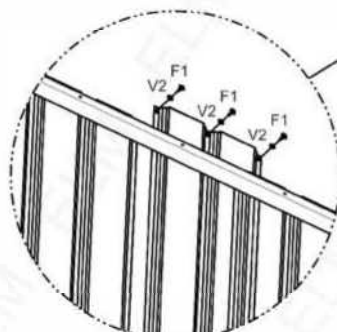
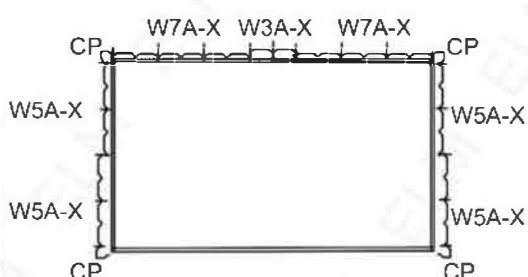







PART	NO.	QTY.	PART	NO.	QTY.
	W3A-X	1		F1	6
	V2	6		F2	2


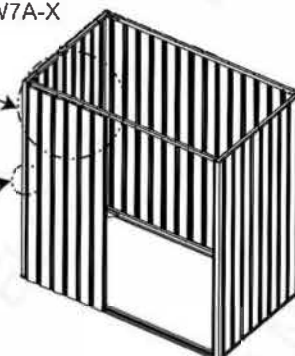
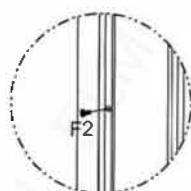
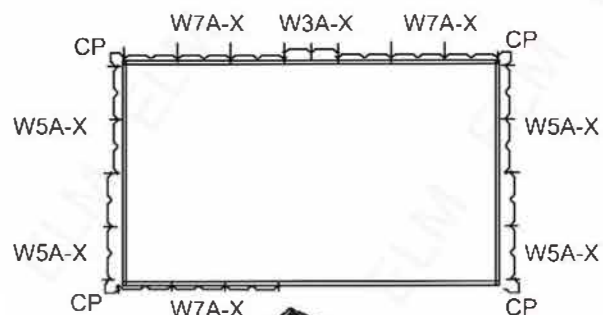
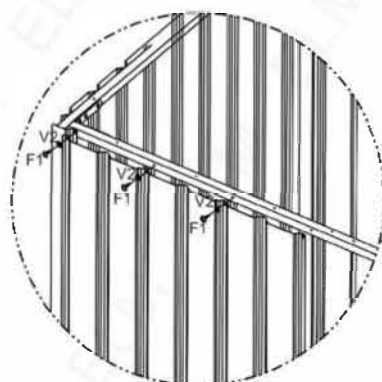


Directly covering the excess parts of the left and right panels.

PART	NO.	QTY.	PART	NO.	QTY.
	W7A-X	1		F1	6
	V2	6		F2	1






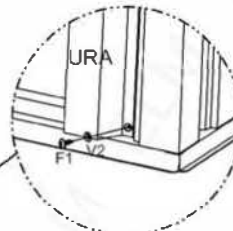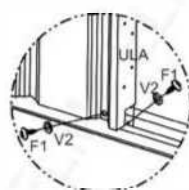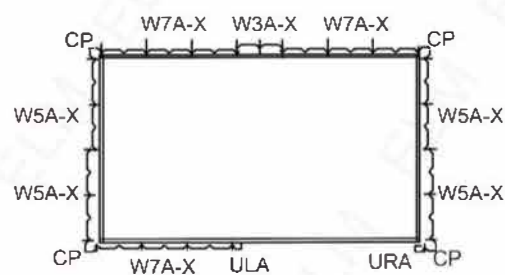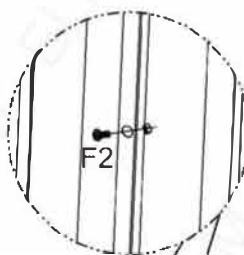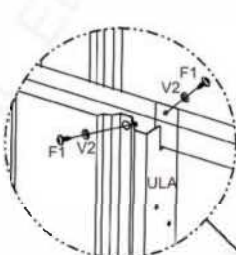


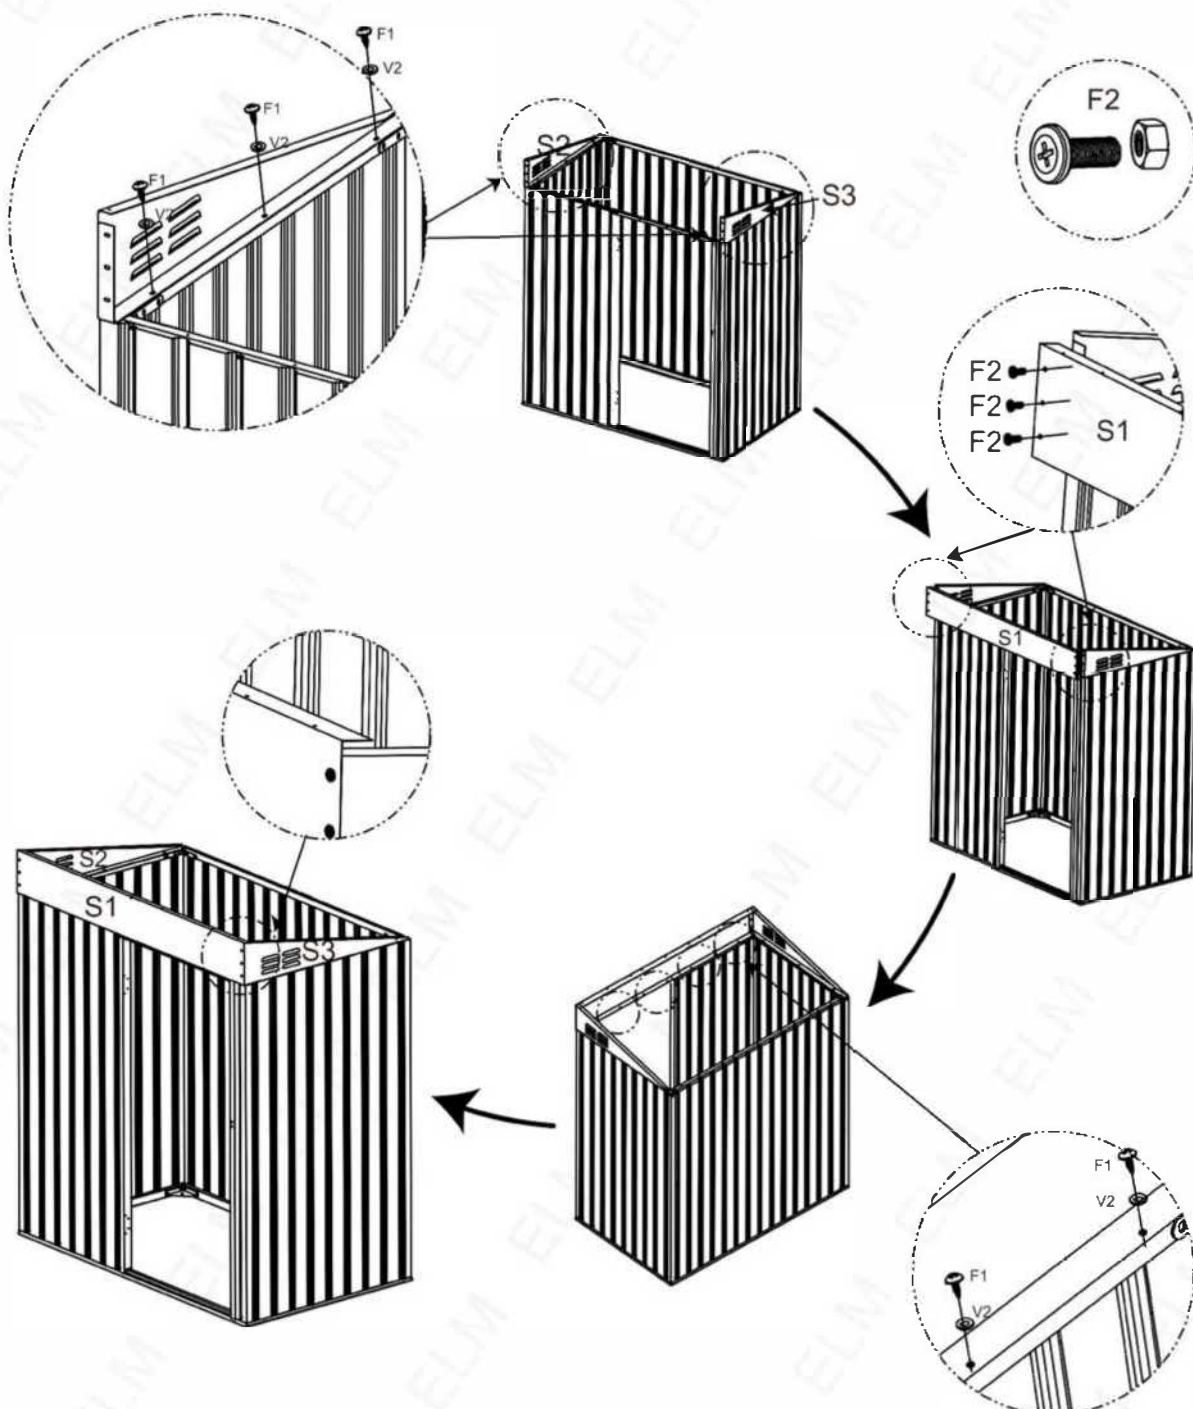
PART	NO.	QTY.	PART	NO.	QTY.
	ULA	1		F1	8
	URA	1		F2	2
	V2	8			








Directly covering the excess parts of the left and right panels.


## Shed Top Frame Assemble

PART	NO.	QTY.	PART	NO.	QTY.
	S2	1		F2	6
	S3	1		V2	13
	S1	1		F1	13





## Shed Top Panels Assemble





PART	NO.	QTY.	PART	NO.	QTY.
	WP7A-R-X	1		V2	18
	WP7A-L-X	1		F1	18
	WP5A-X	1			

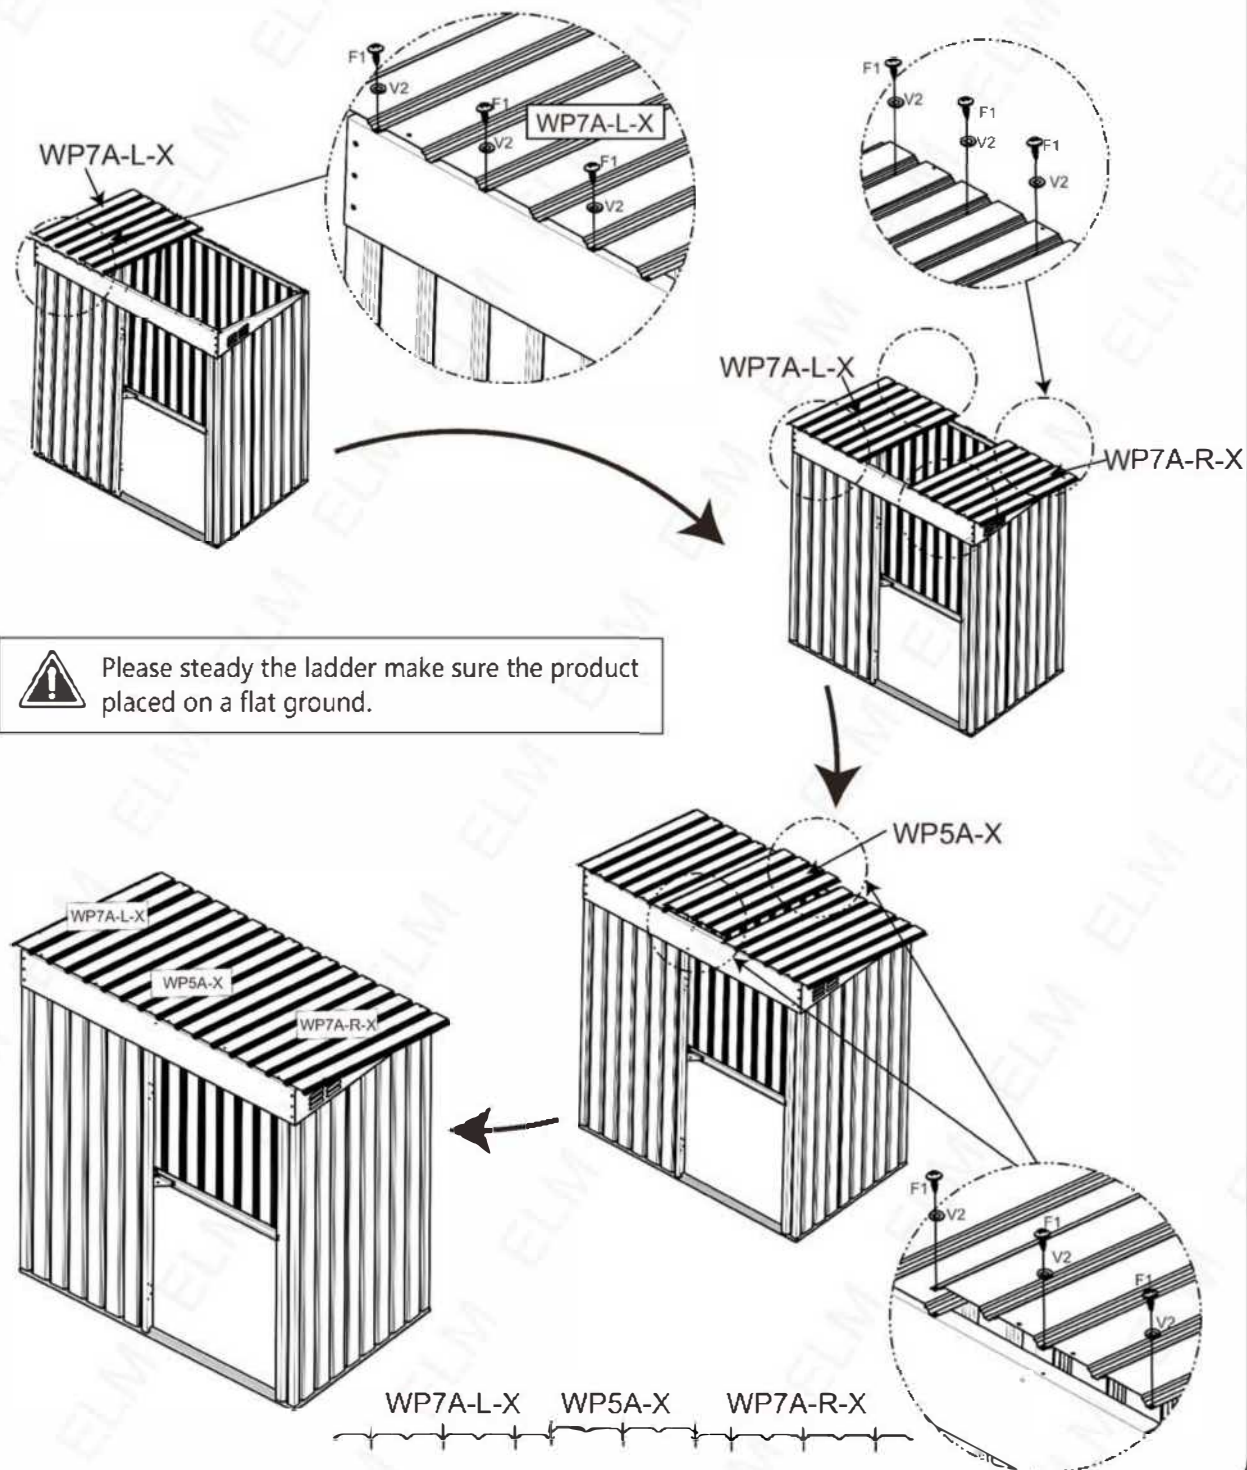



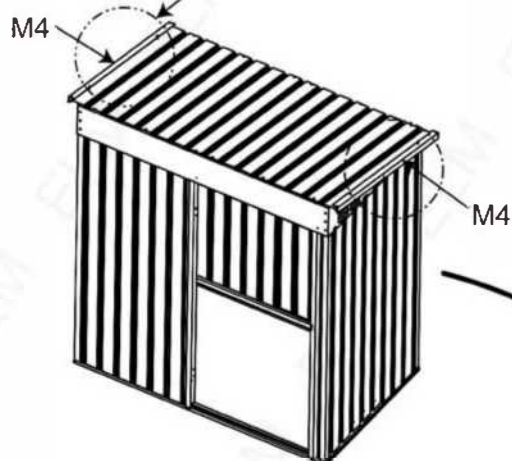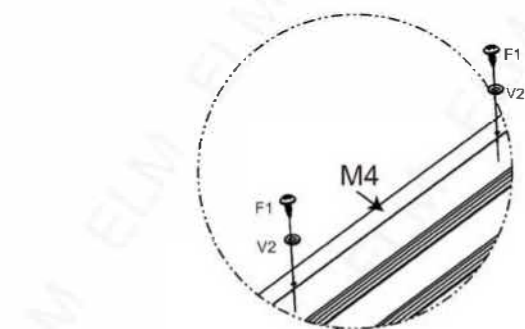



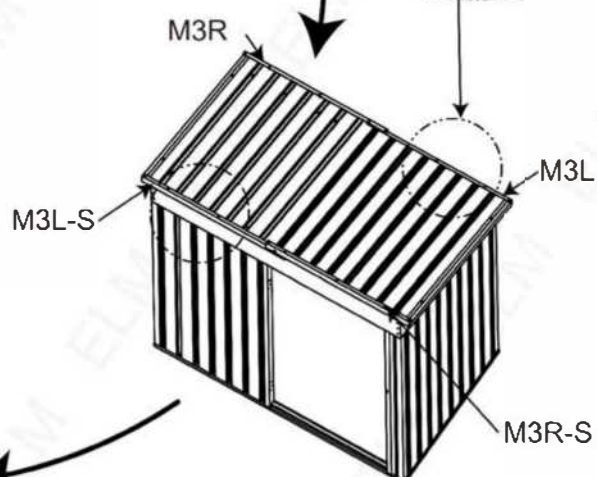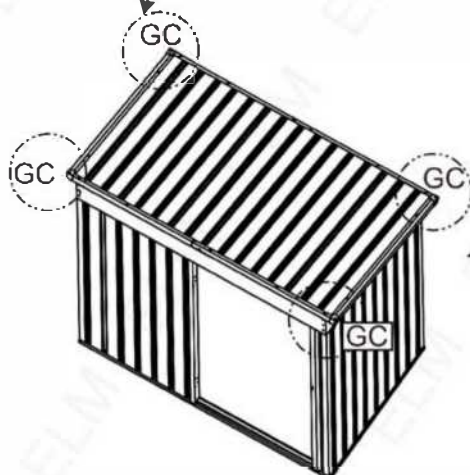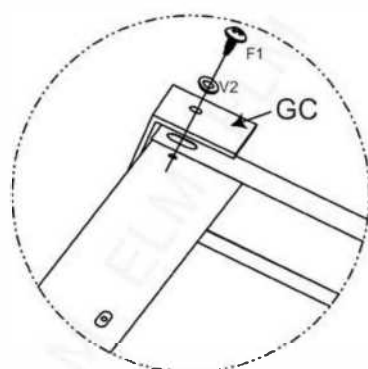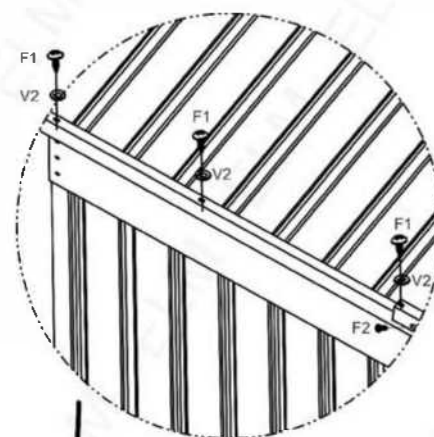






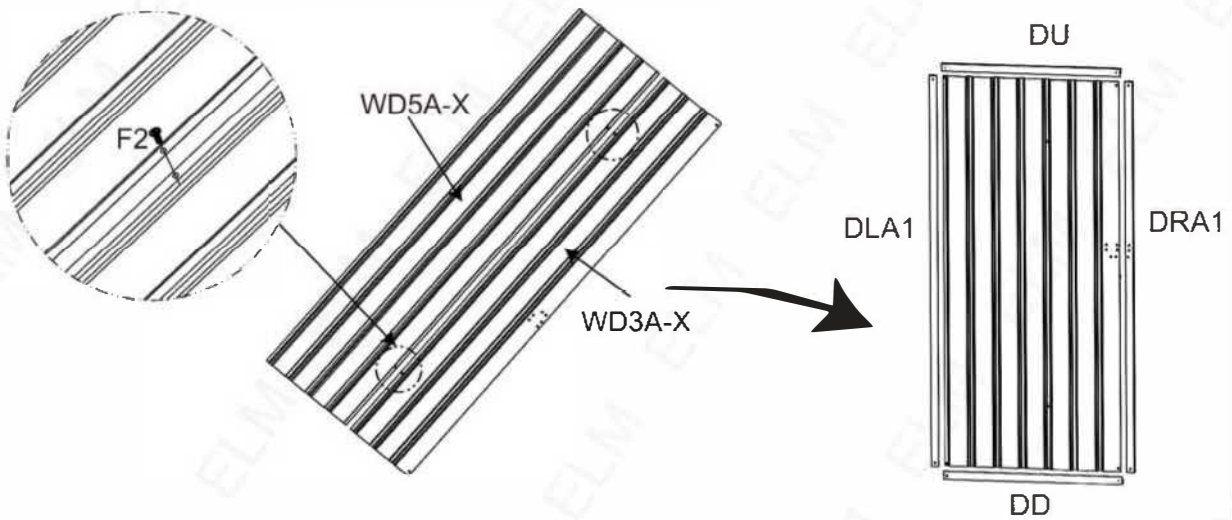
PART	NO.	QTY.
	M4	2
	M3L-S	1
	M3R-S	1
	M3L	1
	M3R	1
	V2	20
	F1	20
	GC	4
	F2	2






# Door Assemble


PART	NO.	QTY.	PART	NO.	QTY.
	WD5A-X	1		DU	1
	WD3A-X	1		DX1	2
	DLA1	1		F1	9
	DRA1	1		F2	6
	DD	1			





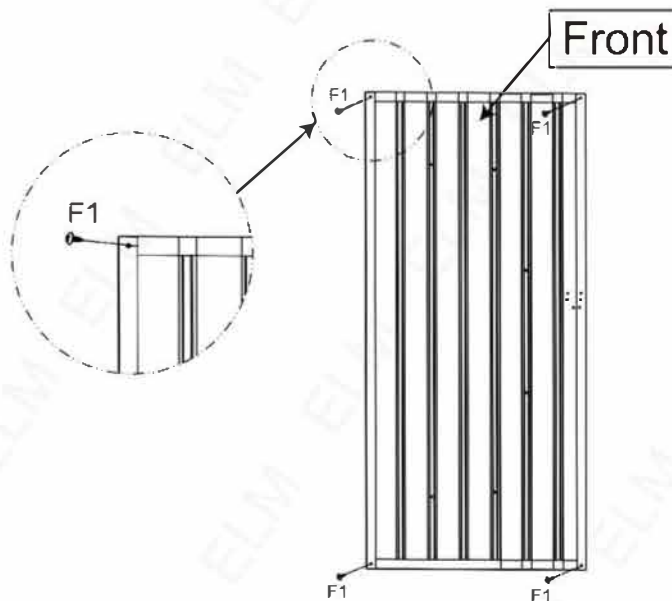



View from the front, the vertical rod covers the horizontal rod.  
The larger hole is always covered over the small hole.

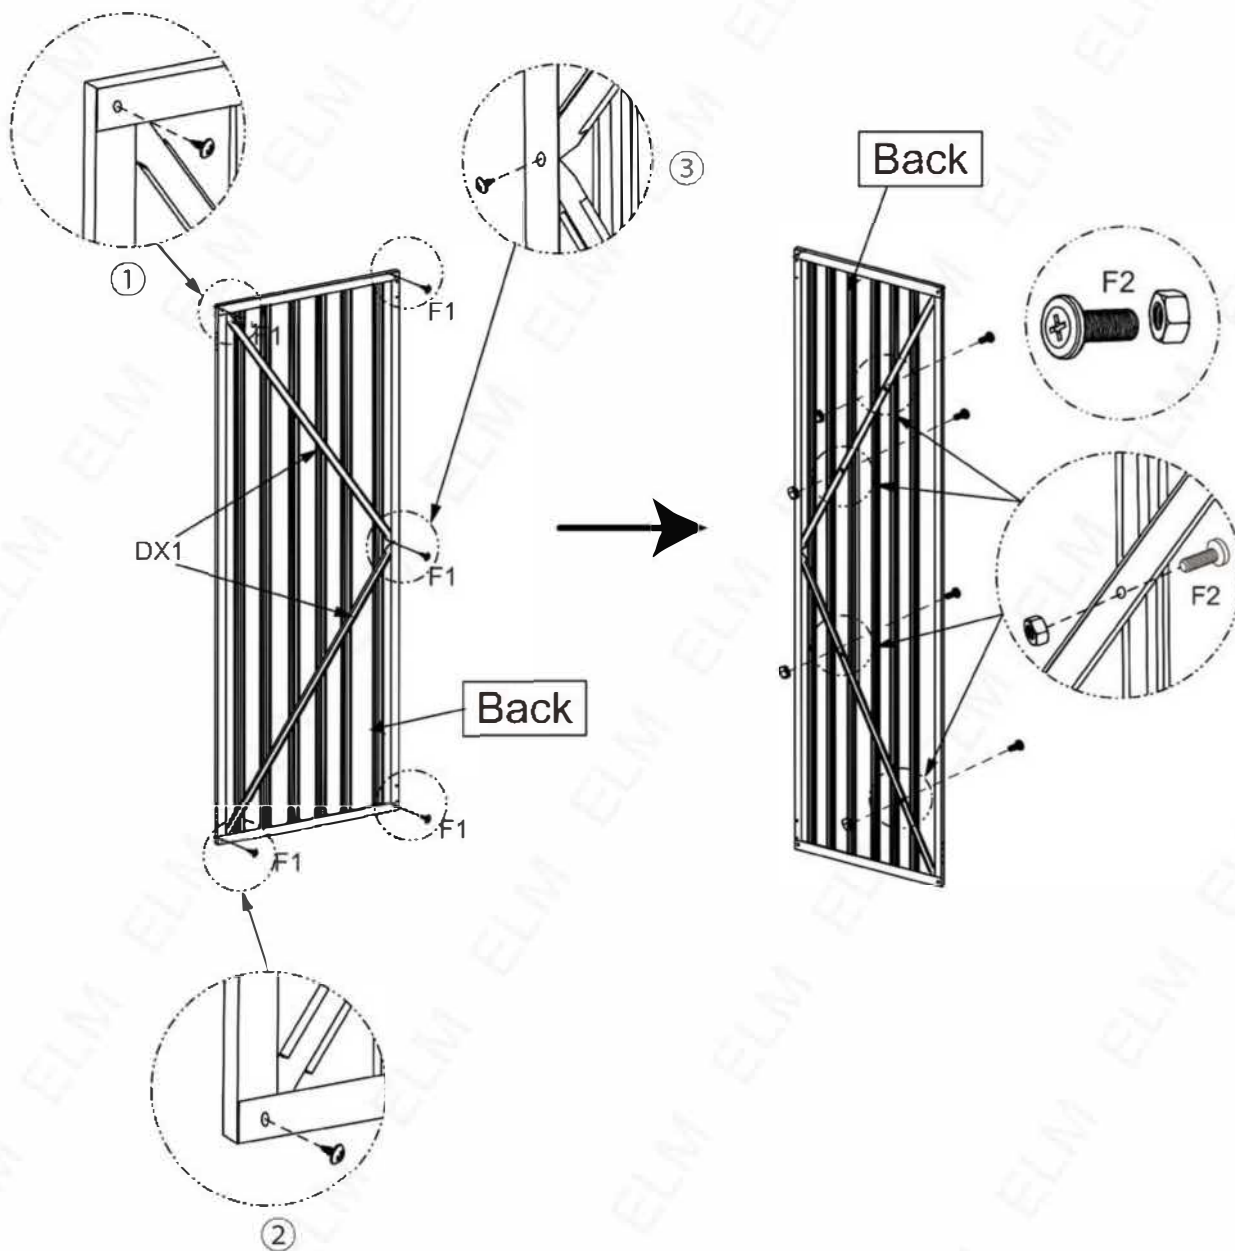








Please follow the steps ①-②-③ to install.  
The final fixation should be done after all parts are aligned.

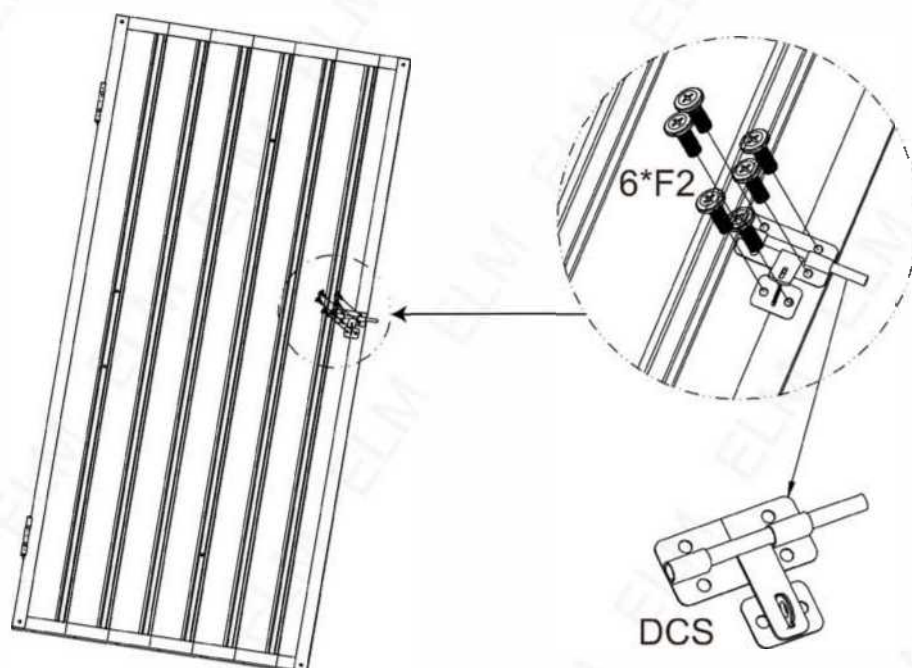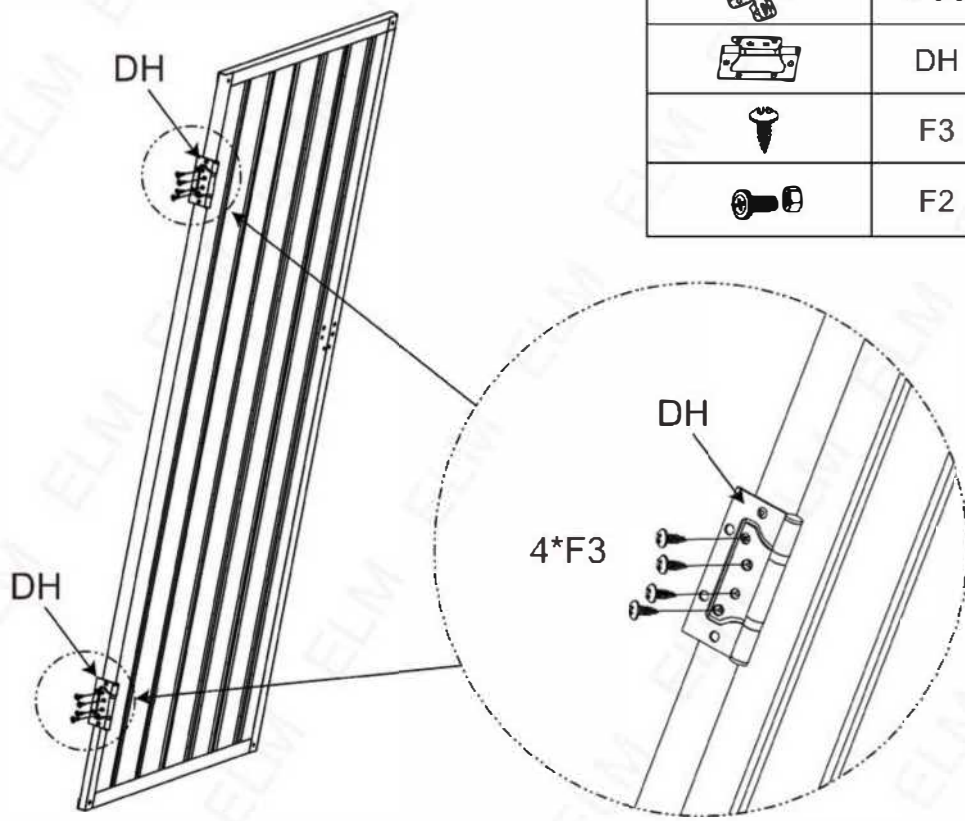


PART	NO.	QTY.
	DCS	1
	DH	2
	F3	8
	F2	6



PART	NO.	QTY.
	F2	2
	F3	8

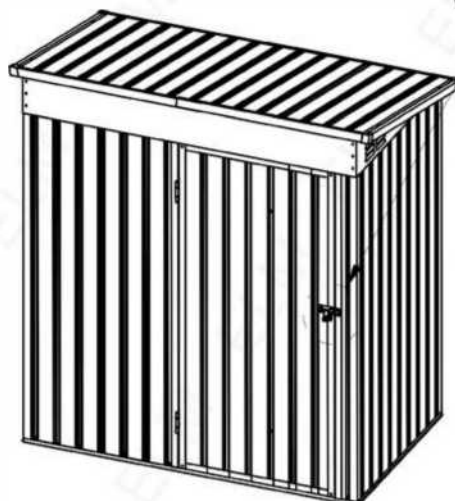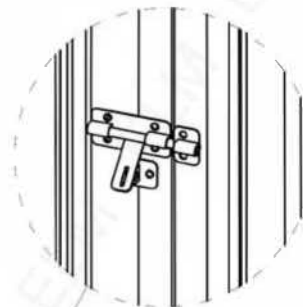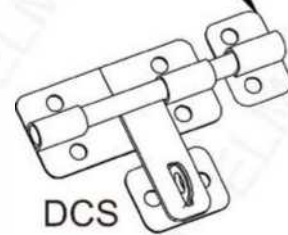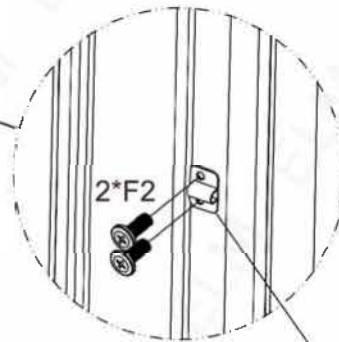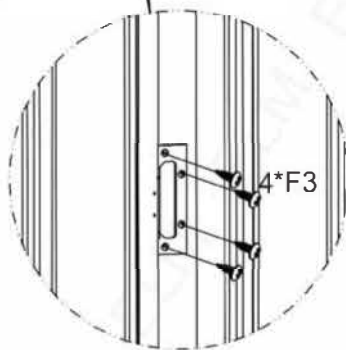

PART	NO.	QTY.
	SL	25

The exposed parts of the screw need to be covered with a plastic protective cap.

Crew position: Upper beam support rod M3L-S, M3RS, M4, M3R, M3L.

Front panel S1.

