


8*6ft Garden Metal Storage Shed Installation Instructions

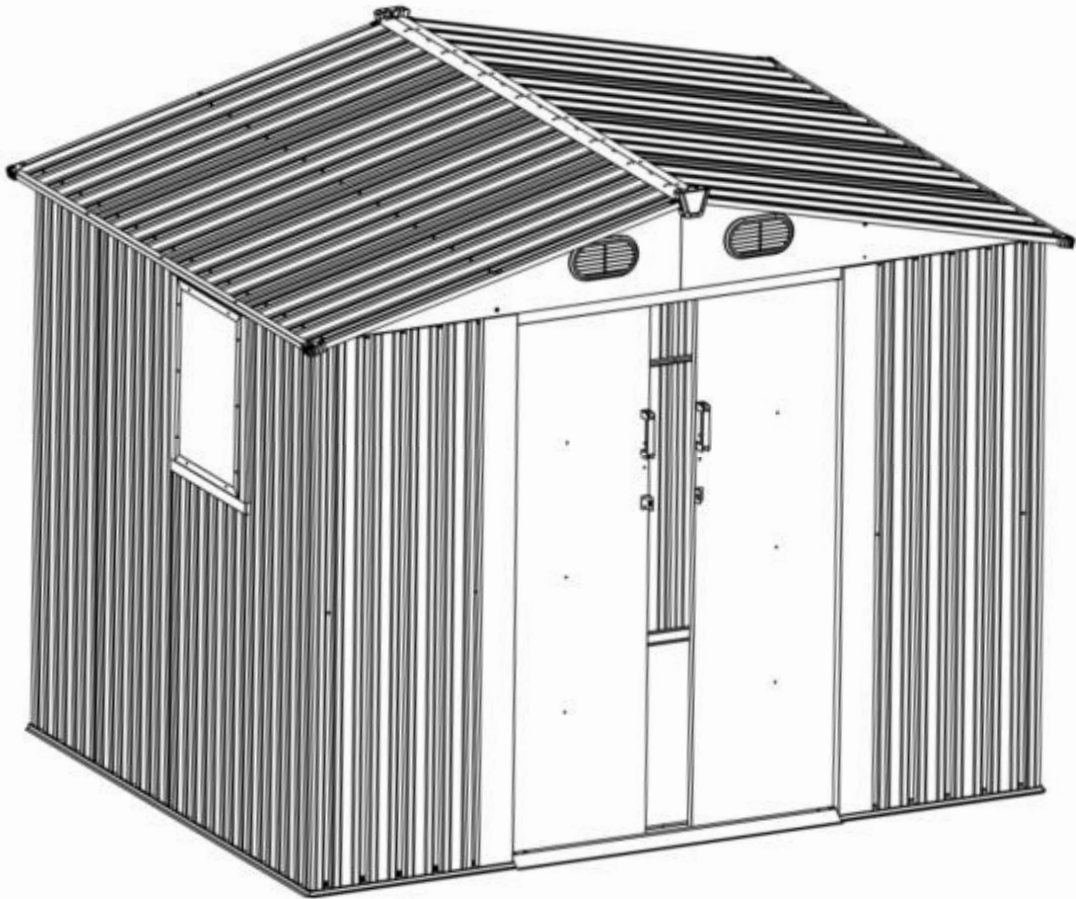

Thank you for choosing us!

Our goal is to provide high quality outdoor furniture with outstanding customer service all at an affordable price.

Please let us know if you have any concerns.


Please wear gloves to avoid injury!

The product comes in two cartons. Please install after receiving all cartons.

Please prepare below tools before installation. (Not Included)



Electric Screwdriver

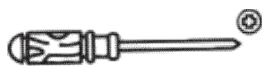

+ Manual Screwdriver



Ladder



Spanner

Package included Tools



Gloves X 1 Pair

ATTENTION:

1. Please read this instruction carefully before installation and follow it strictly during installation.
2. Ensure that there are no problems later due to installation errors.
3. We have prepared extra screws for you to use in case of loss or damage.

Installation Notes

Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.

Make sure the colored panels are facing outwards and all the holes match. The panels are textured, please install the panels in the order specified in the instructions. All lines and holes should be matched to make the storage shed more stable. Please ensure that all screws are tightened to prevent the product from falling apart.

There is a protective film on the surface to protect the product, you can tear it off after installation. If you do not damage the film during installation, it can also remain on the product to protect.

Please place the product on a flat ground to prevent leaning and collapse. If the ground is uneven, the door may can't be closed.










Safety Precautions









We recommend **two adults** to complete the installation. Two adults installed together will make the installation process easier and safer.




The gloves must be carried to prevent hand cuts during installation.


Take care when using power tools near water the use of a residual current device (RCD) is advised. Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand. (We recommend that beginners use a manual screwdriver for installation.) Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.


PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENC

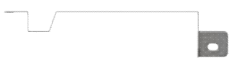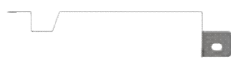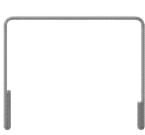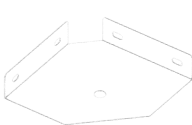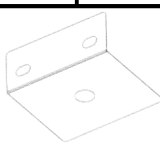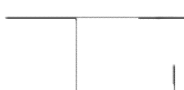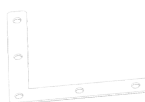
									
4L	1	4R	1	1	2	2	1	3	1
									
5	1	P1	4	P2	7	P3	2	P4	1
									
P6	1	13R	1	13L	1	A2	1	8	1
									
7	1	A1	1	10	2	12	1	6	2
									
9L	1	9R	1	11	2	14	2	24	2
									
C1	1	C2	1	C3	2	C4	8	C5	1
									
C6	2	C7	1	C8	1	AP1	2	APL	2
									
APR	2	PL	4	AP2	8	AP5	1	AP6	4

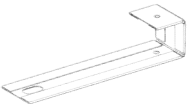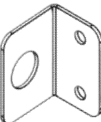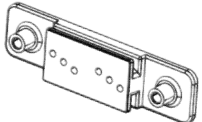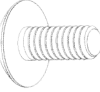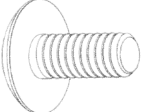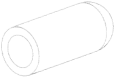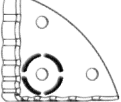
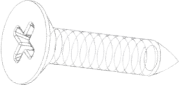
									
AP7	2	B1	2	B2	2	B3	2	B4	4
									
D1	1	D2	1	D3	4	D4	2	D5	4
									
D6	4	D7	2	D8	4	C9	1	C10	2
									
S1	4	S2	8	F4	20	F1	415	F6	55
									
F2	55	F12	4	F17	4	F8	138	F7	282
									
RC2	4	GF	4	RT3	2	F9	8	F10	8
									
F5	8	D9	2						

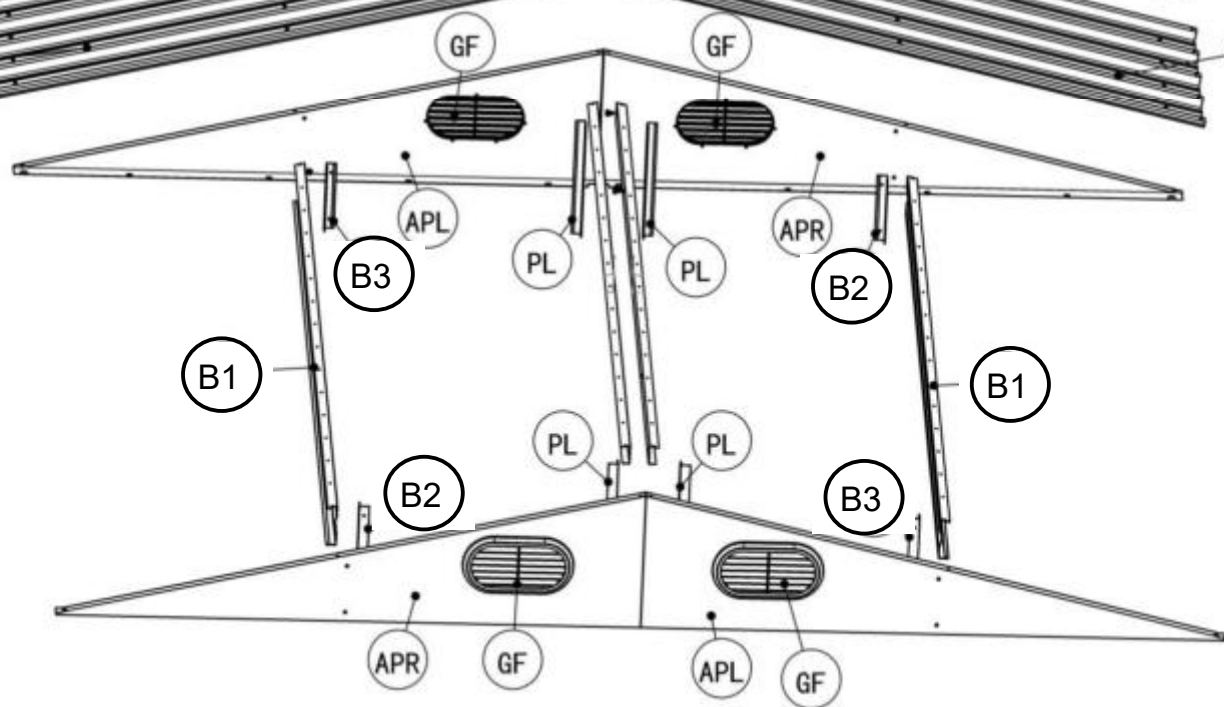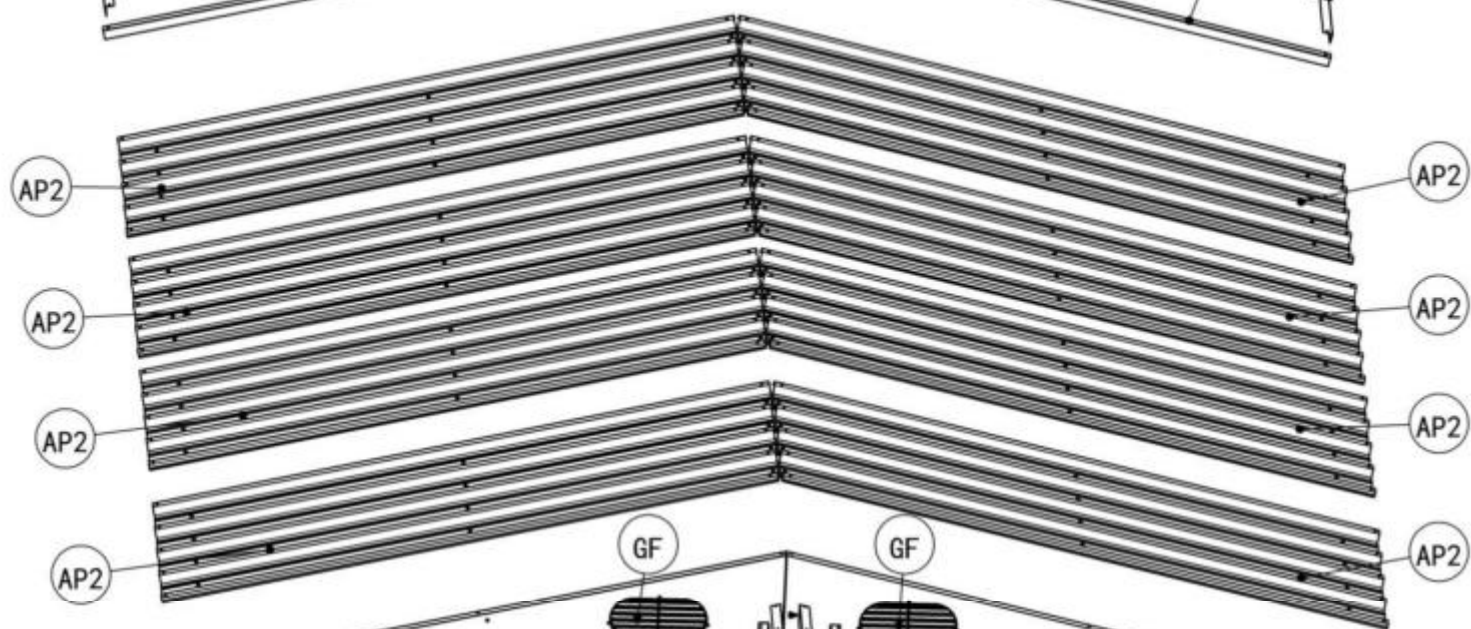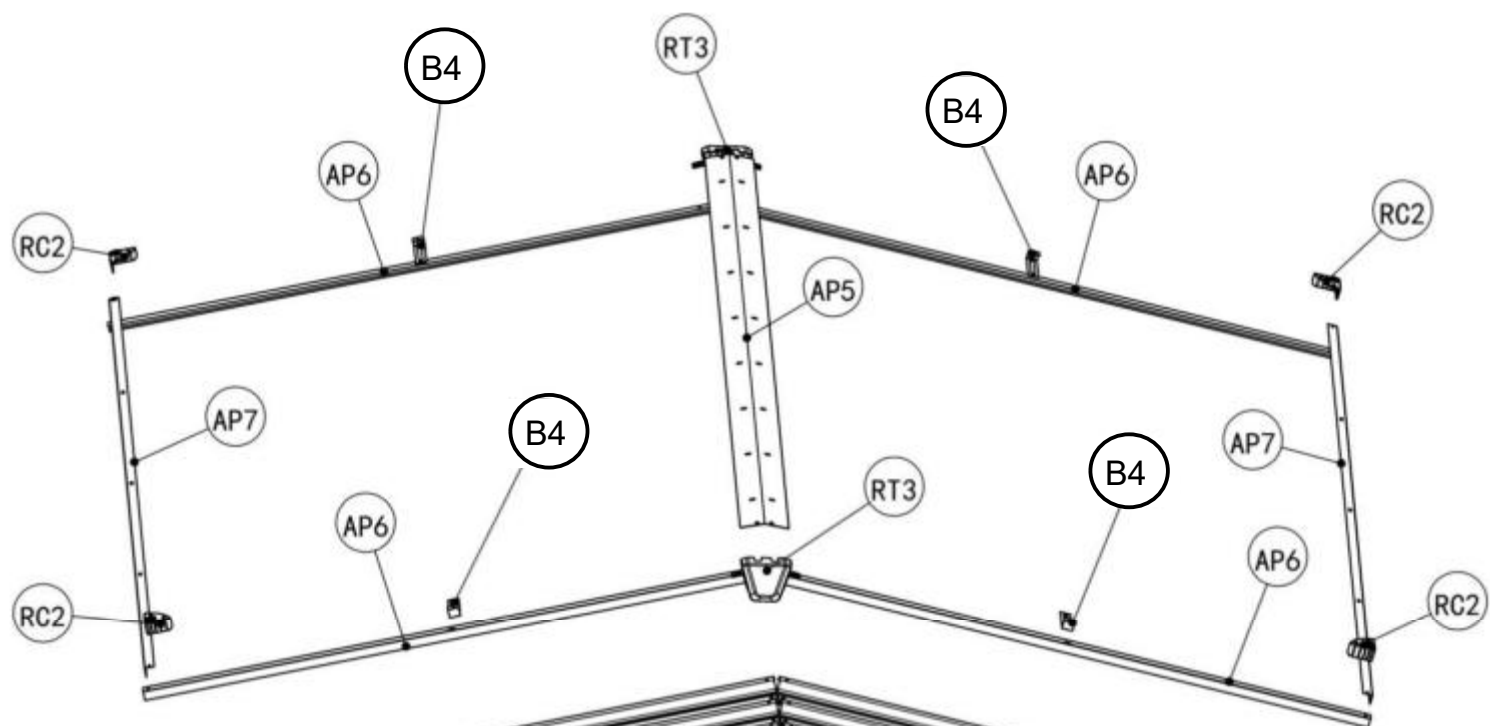

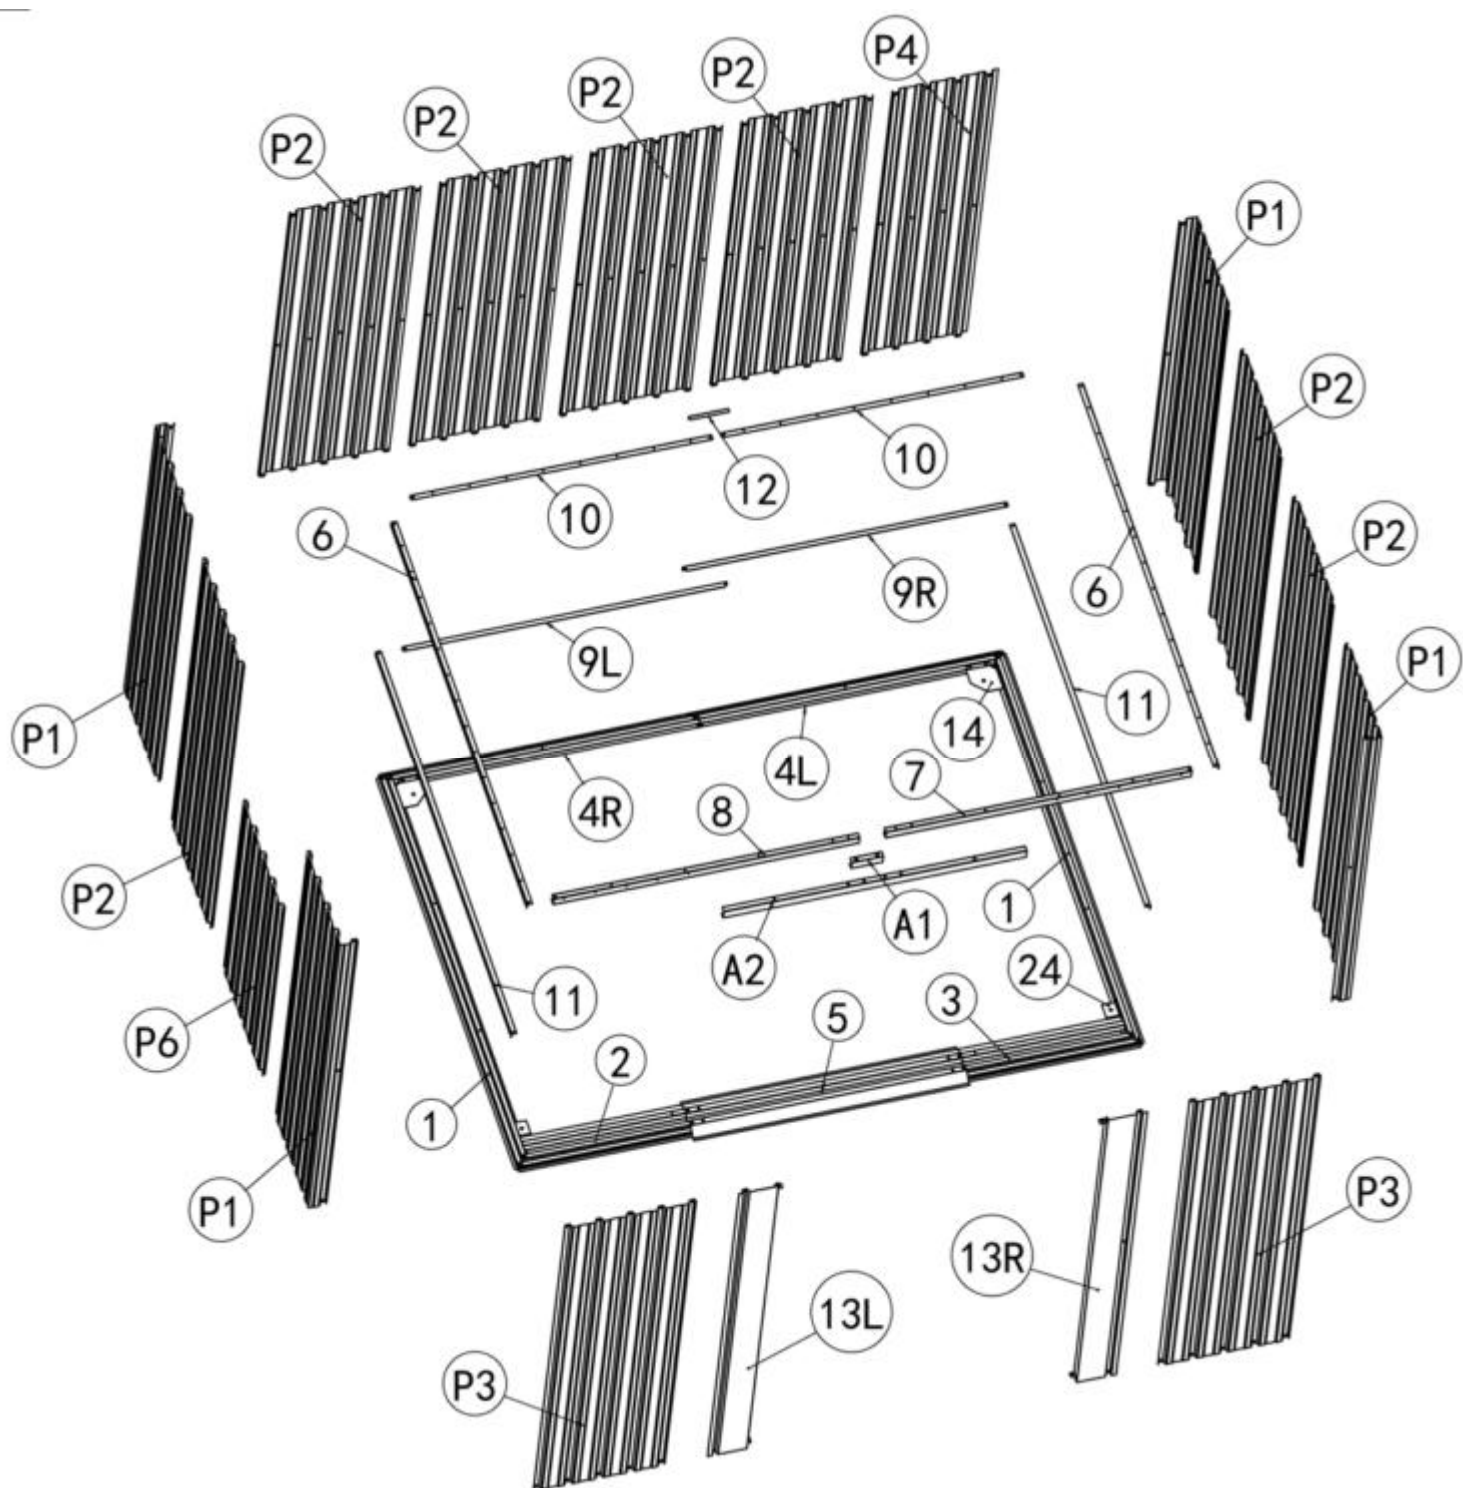


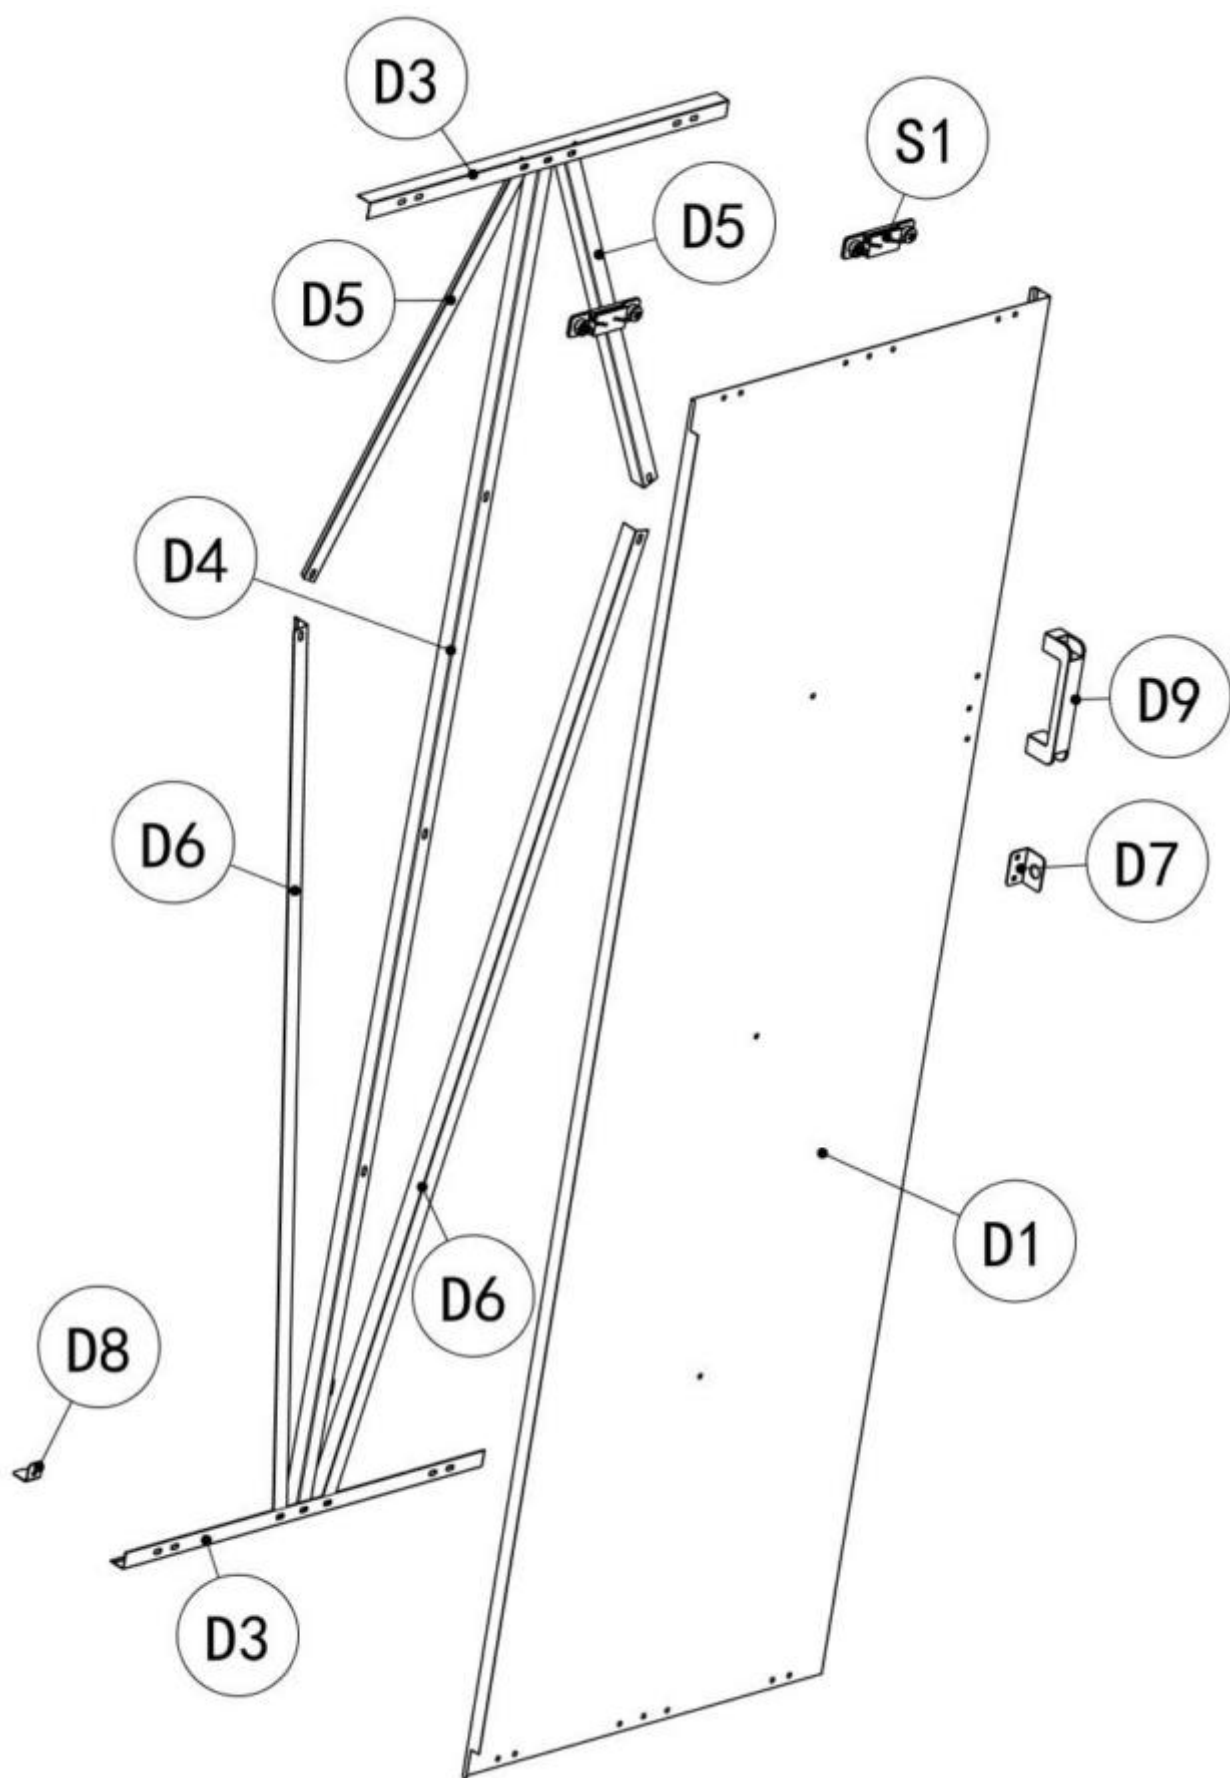

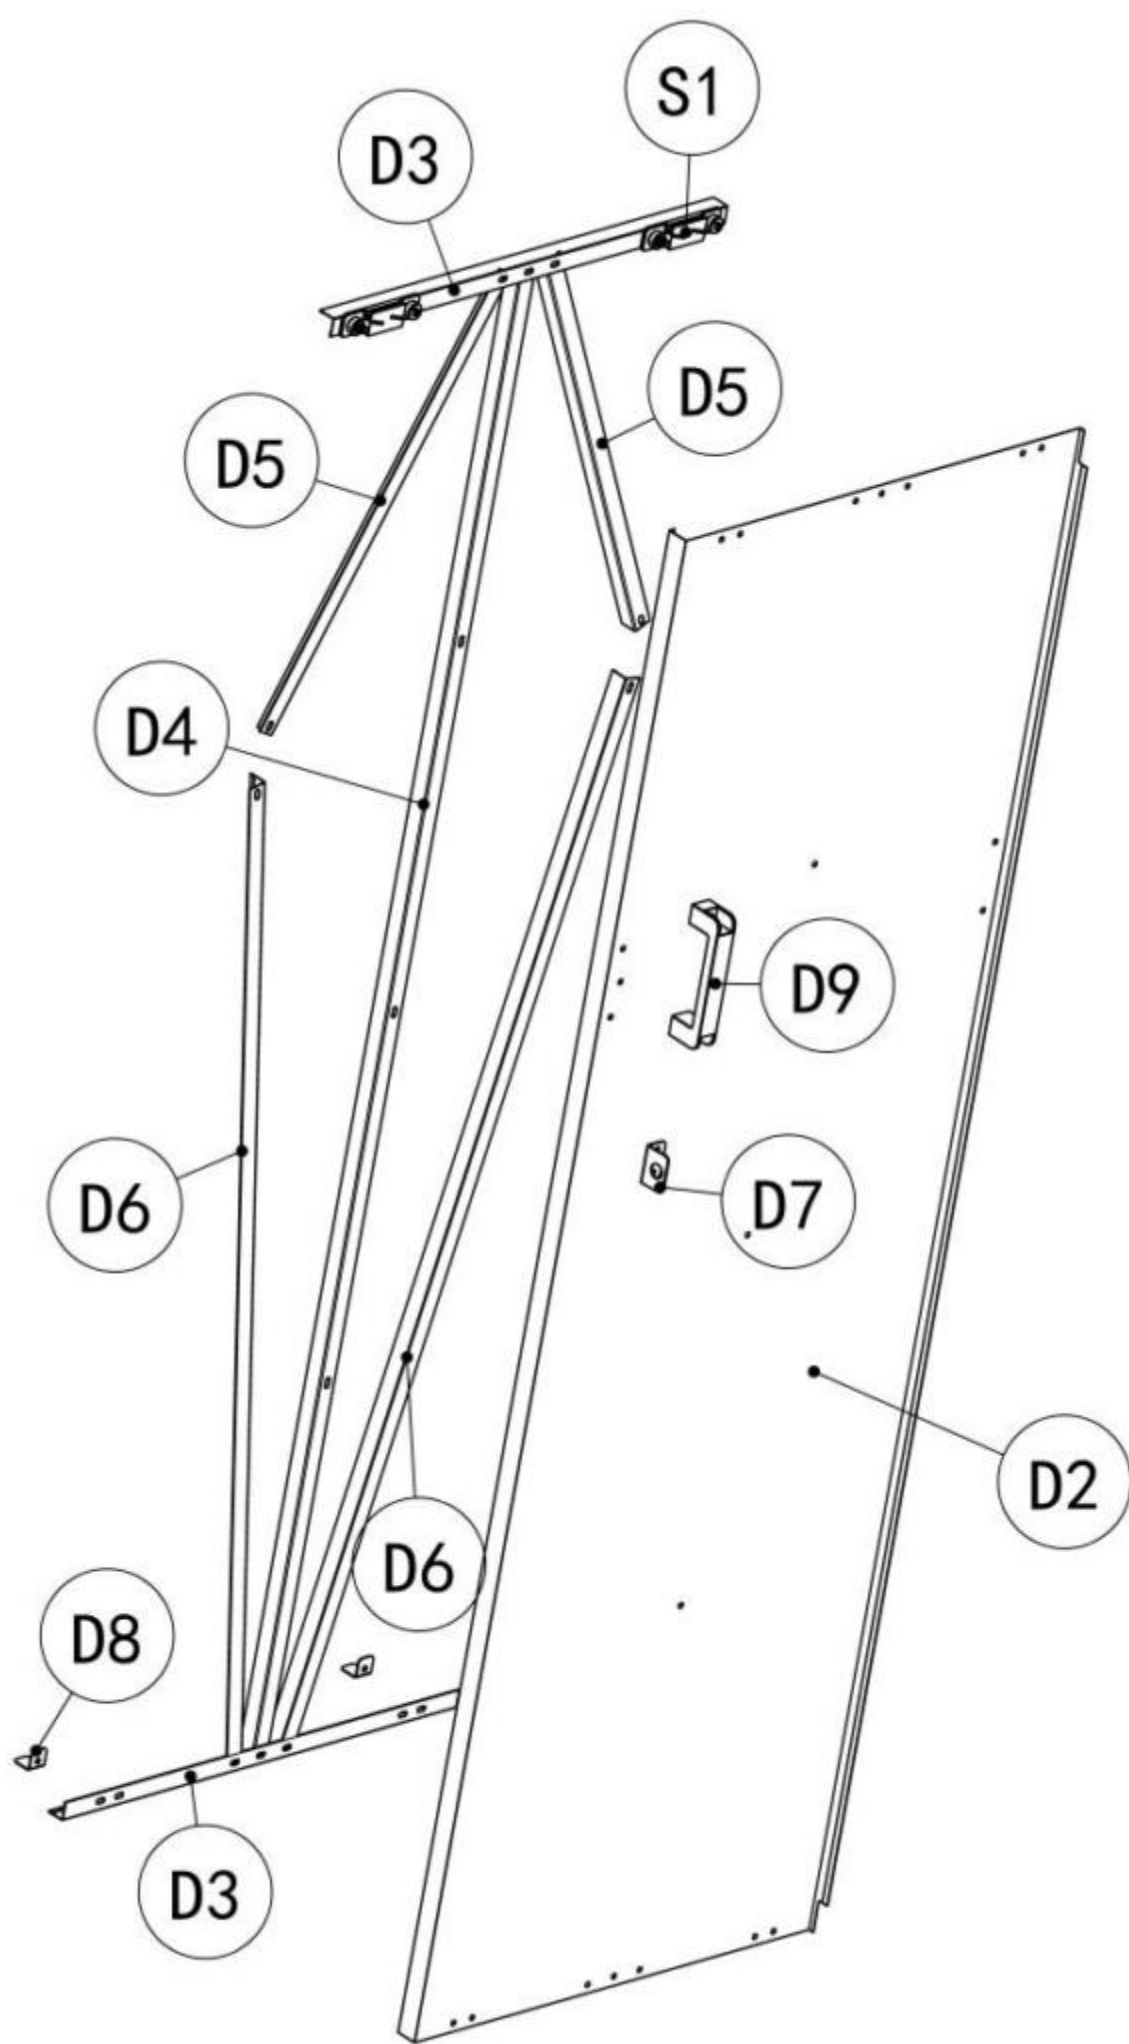

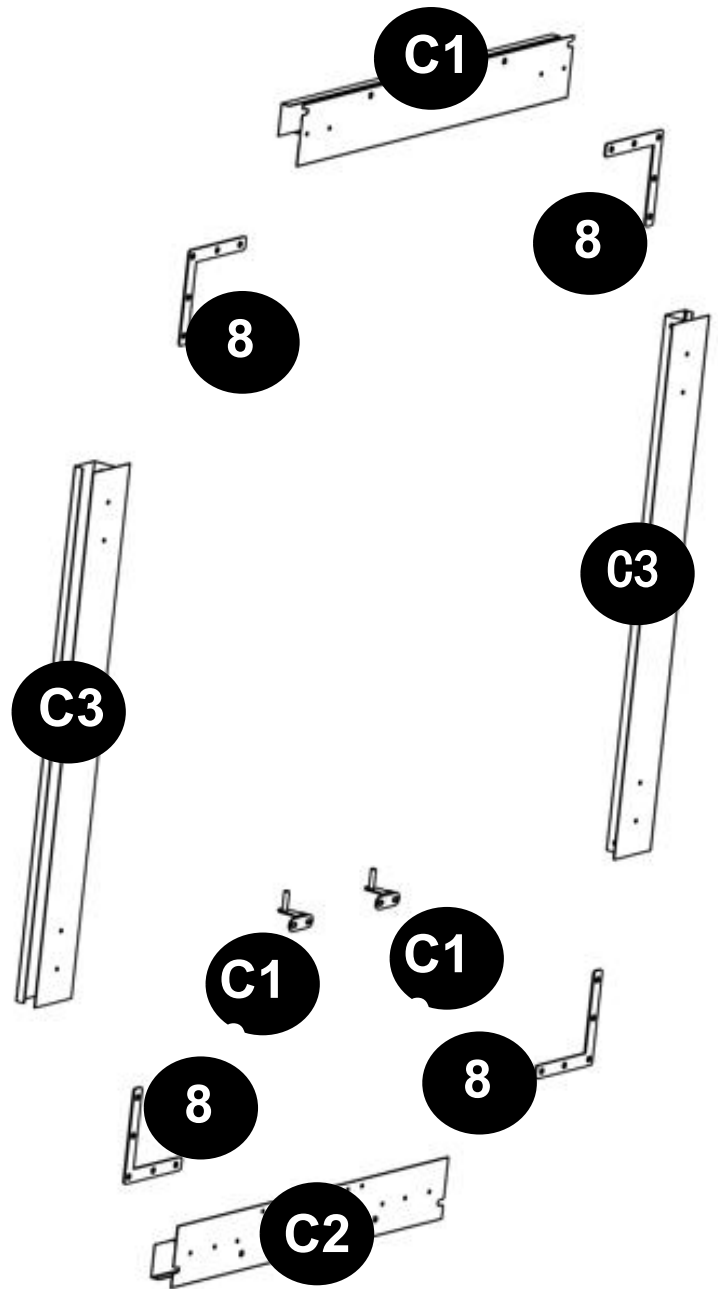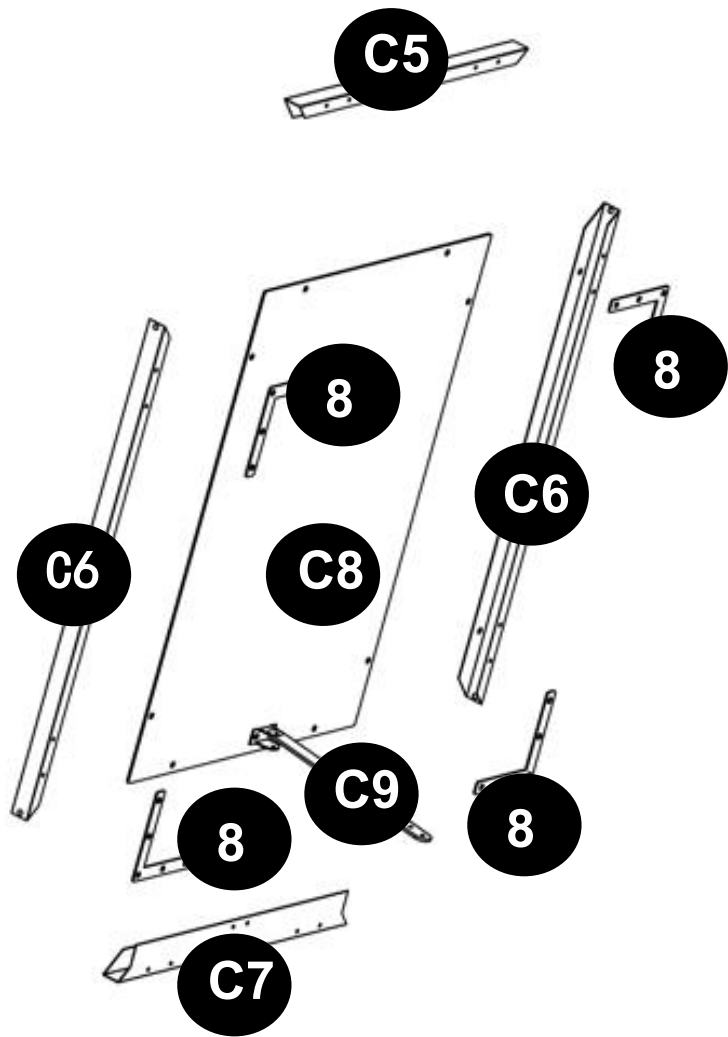


1.Base installation


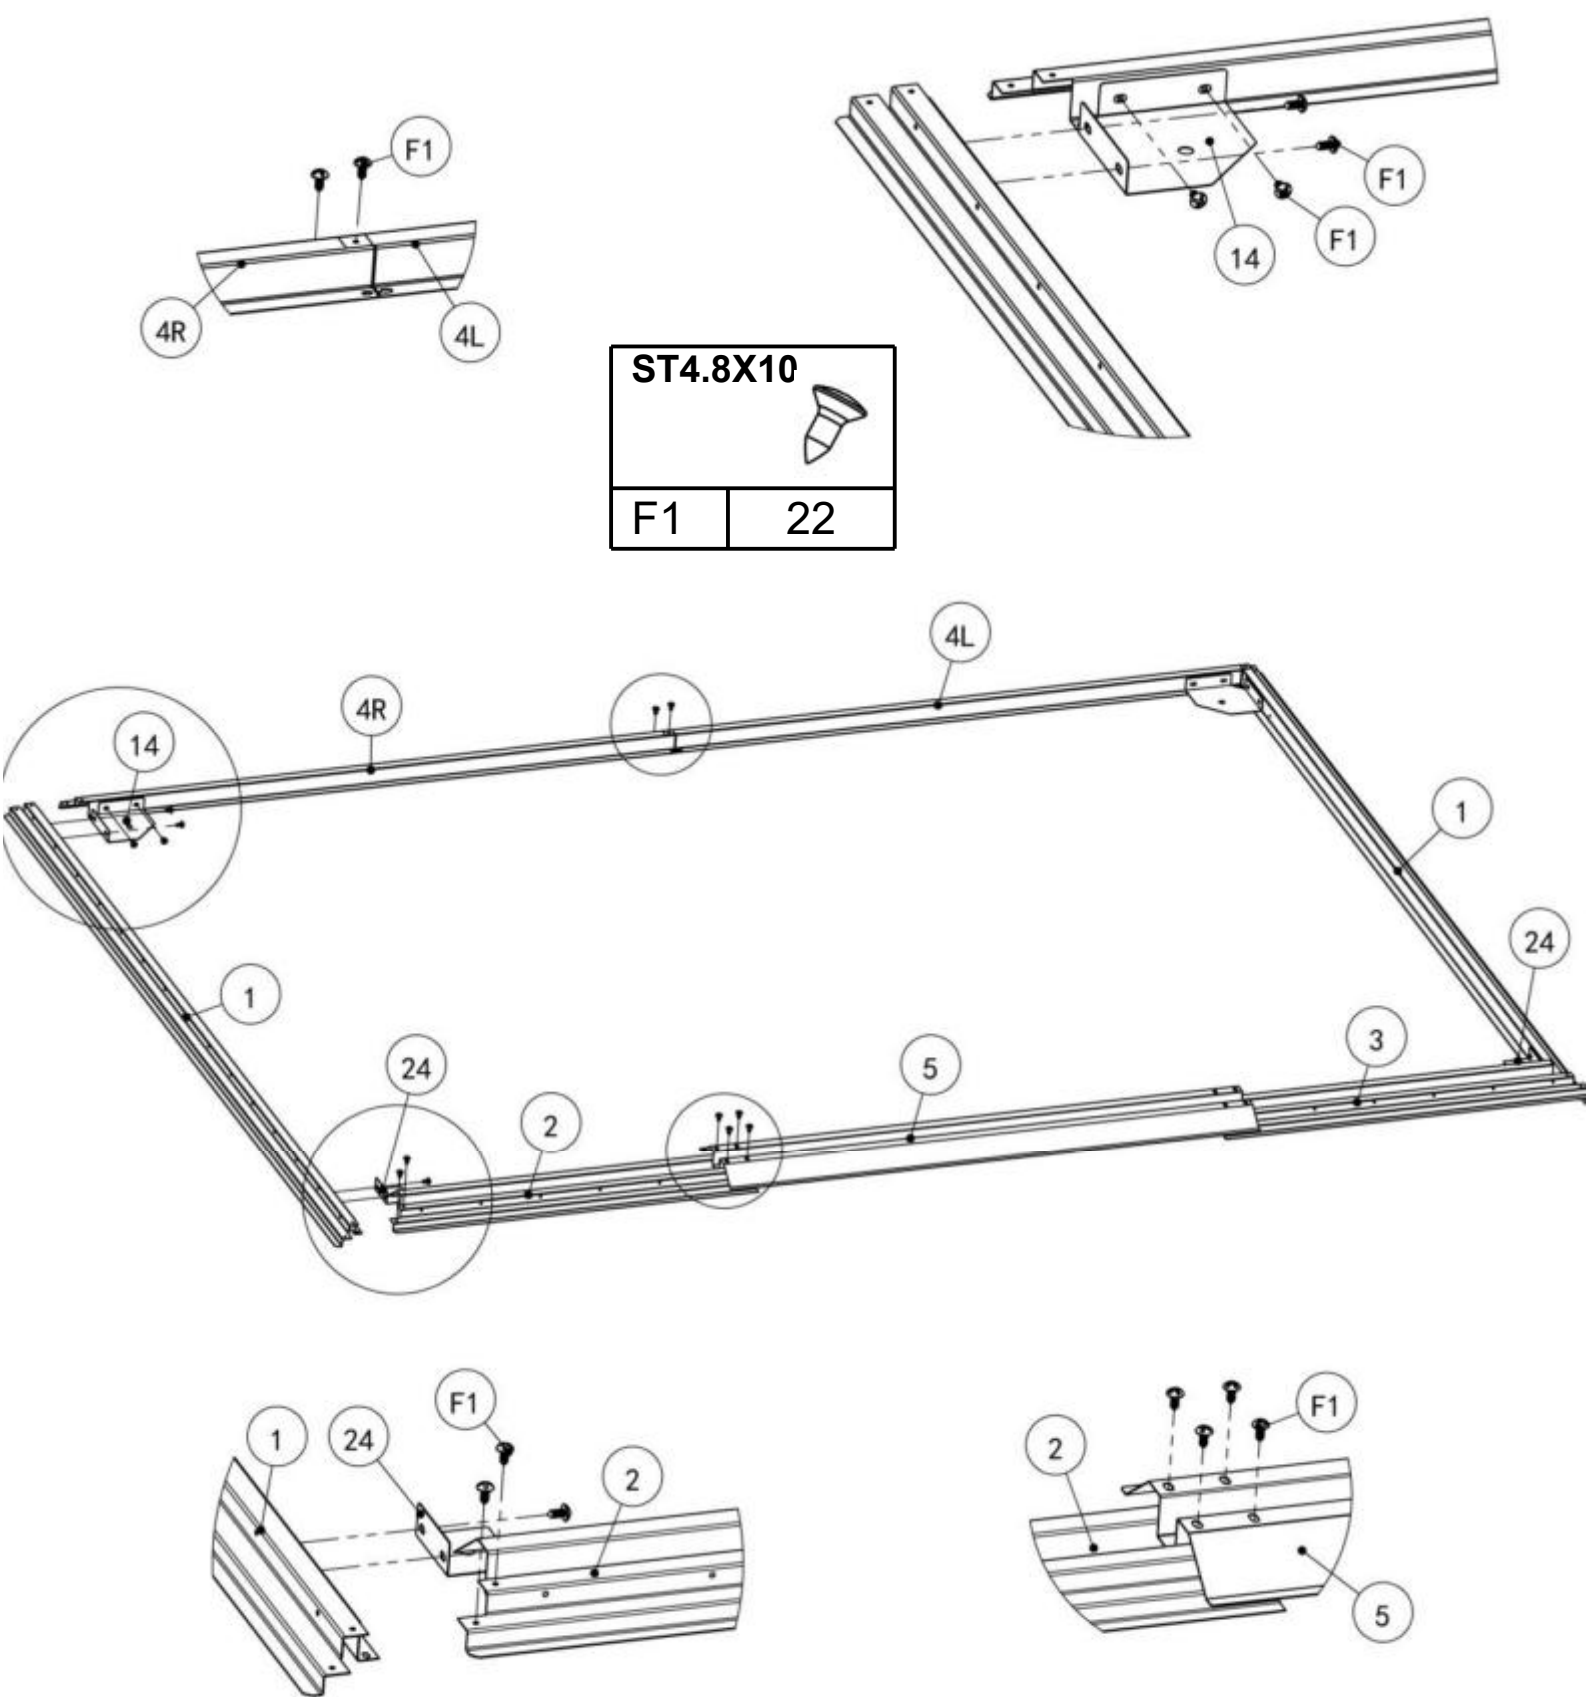


2.Wall installation


ST4.8X10 			
F1	12	F7	12

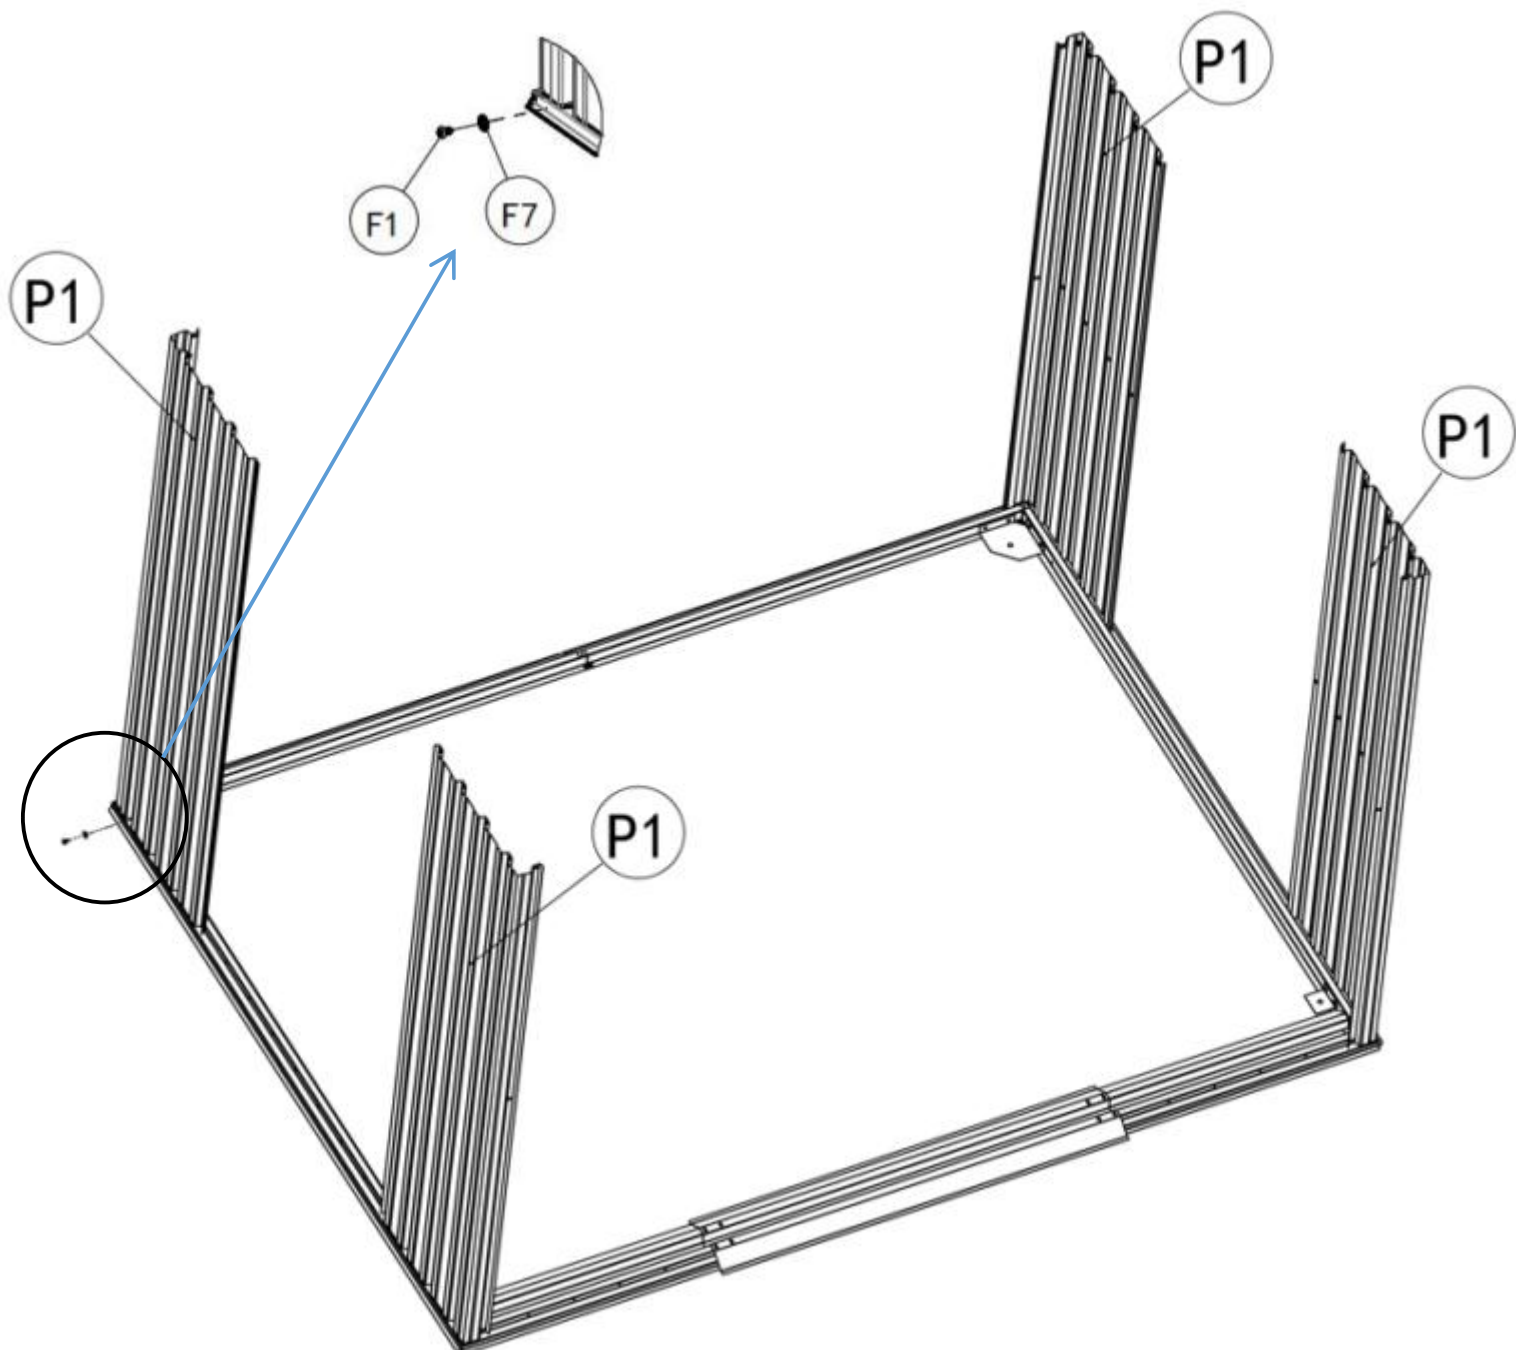

Note: Do not lock F1 and F7 at the overlapping area of the tiles.

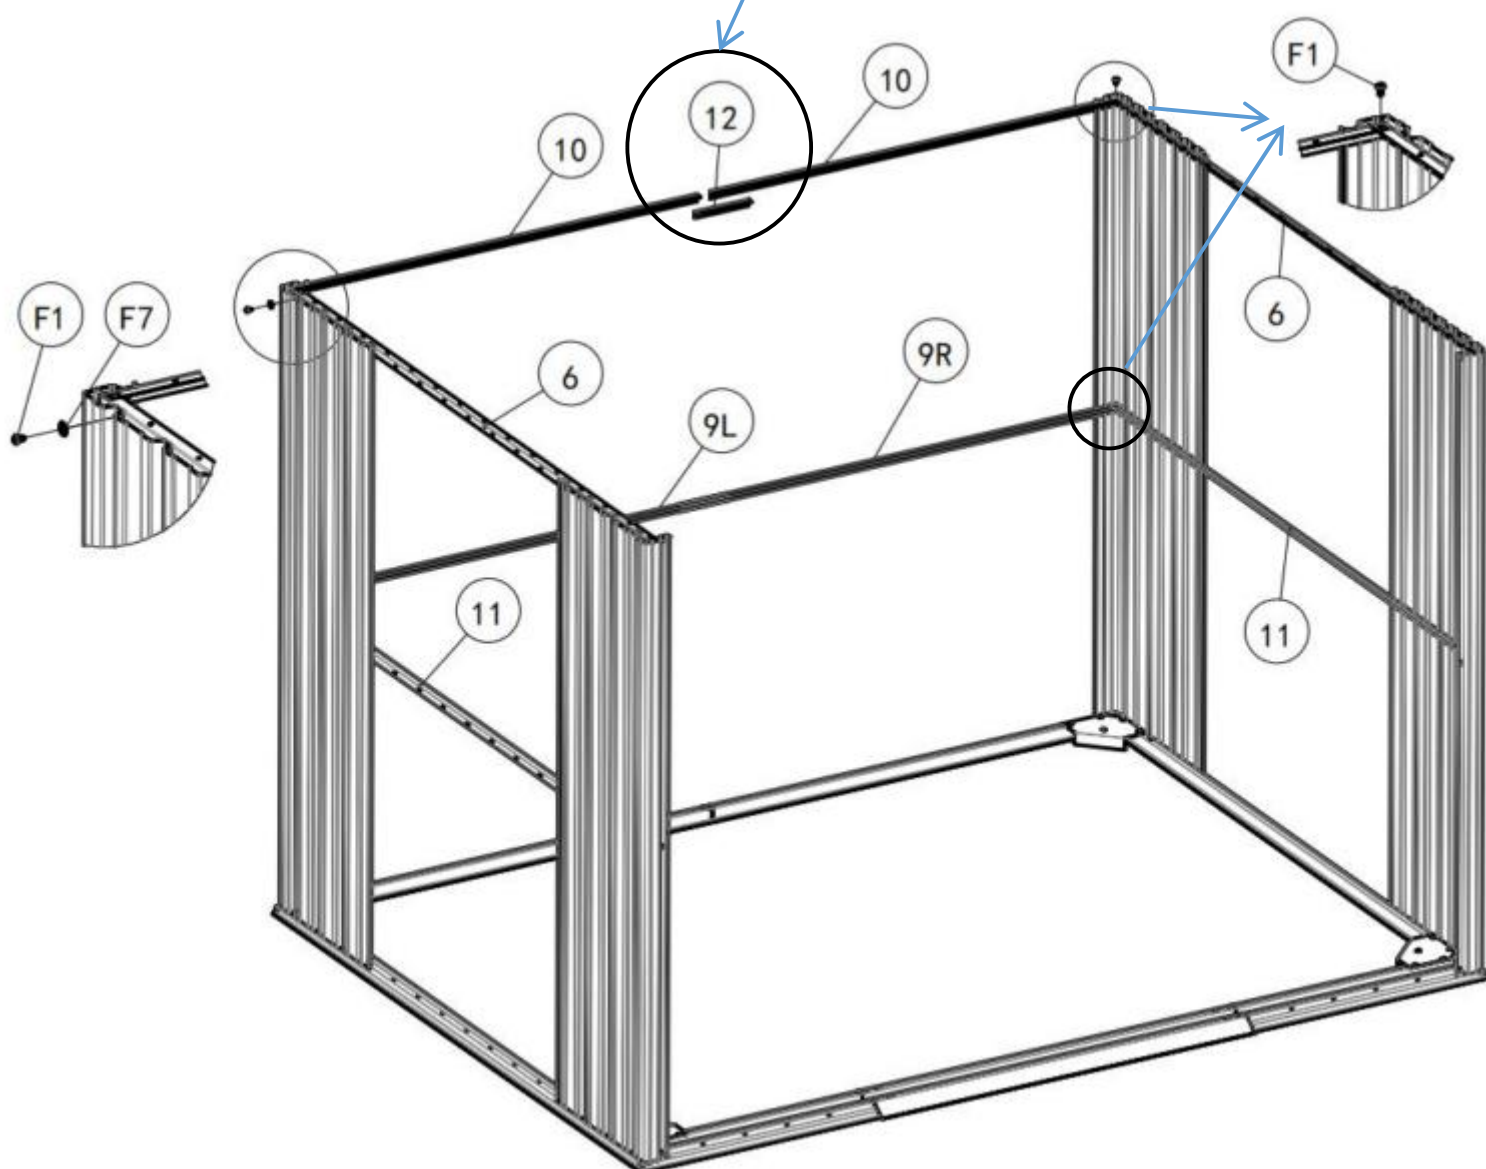
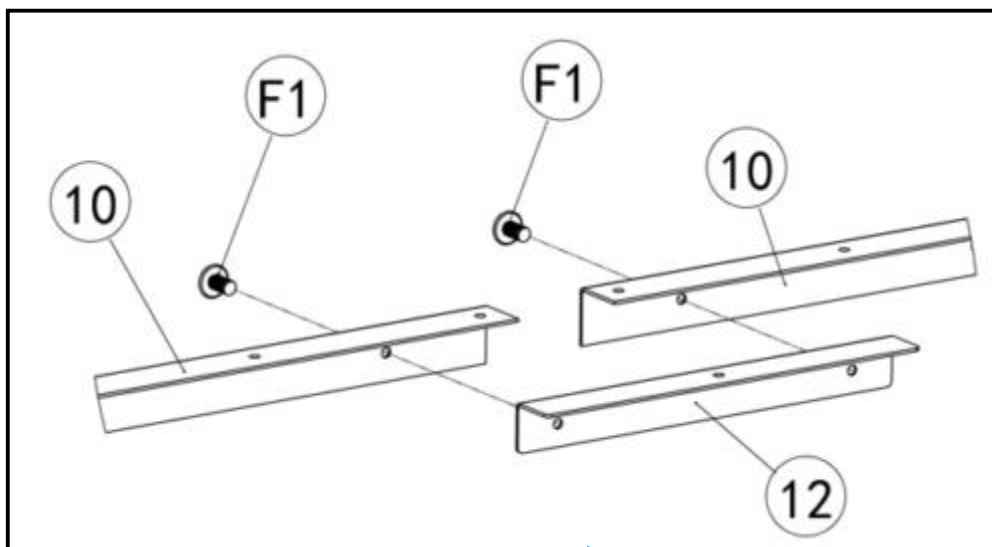


ST4.8X10			
F1	32	F7	24

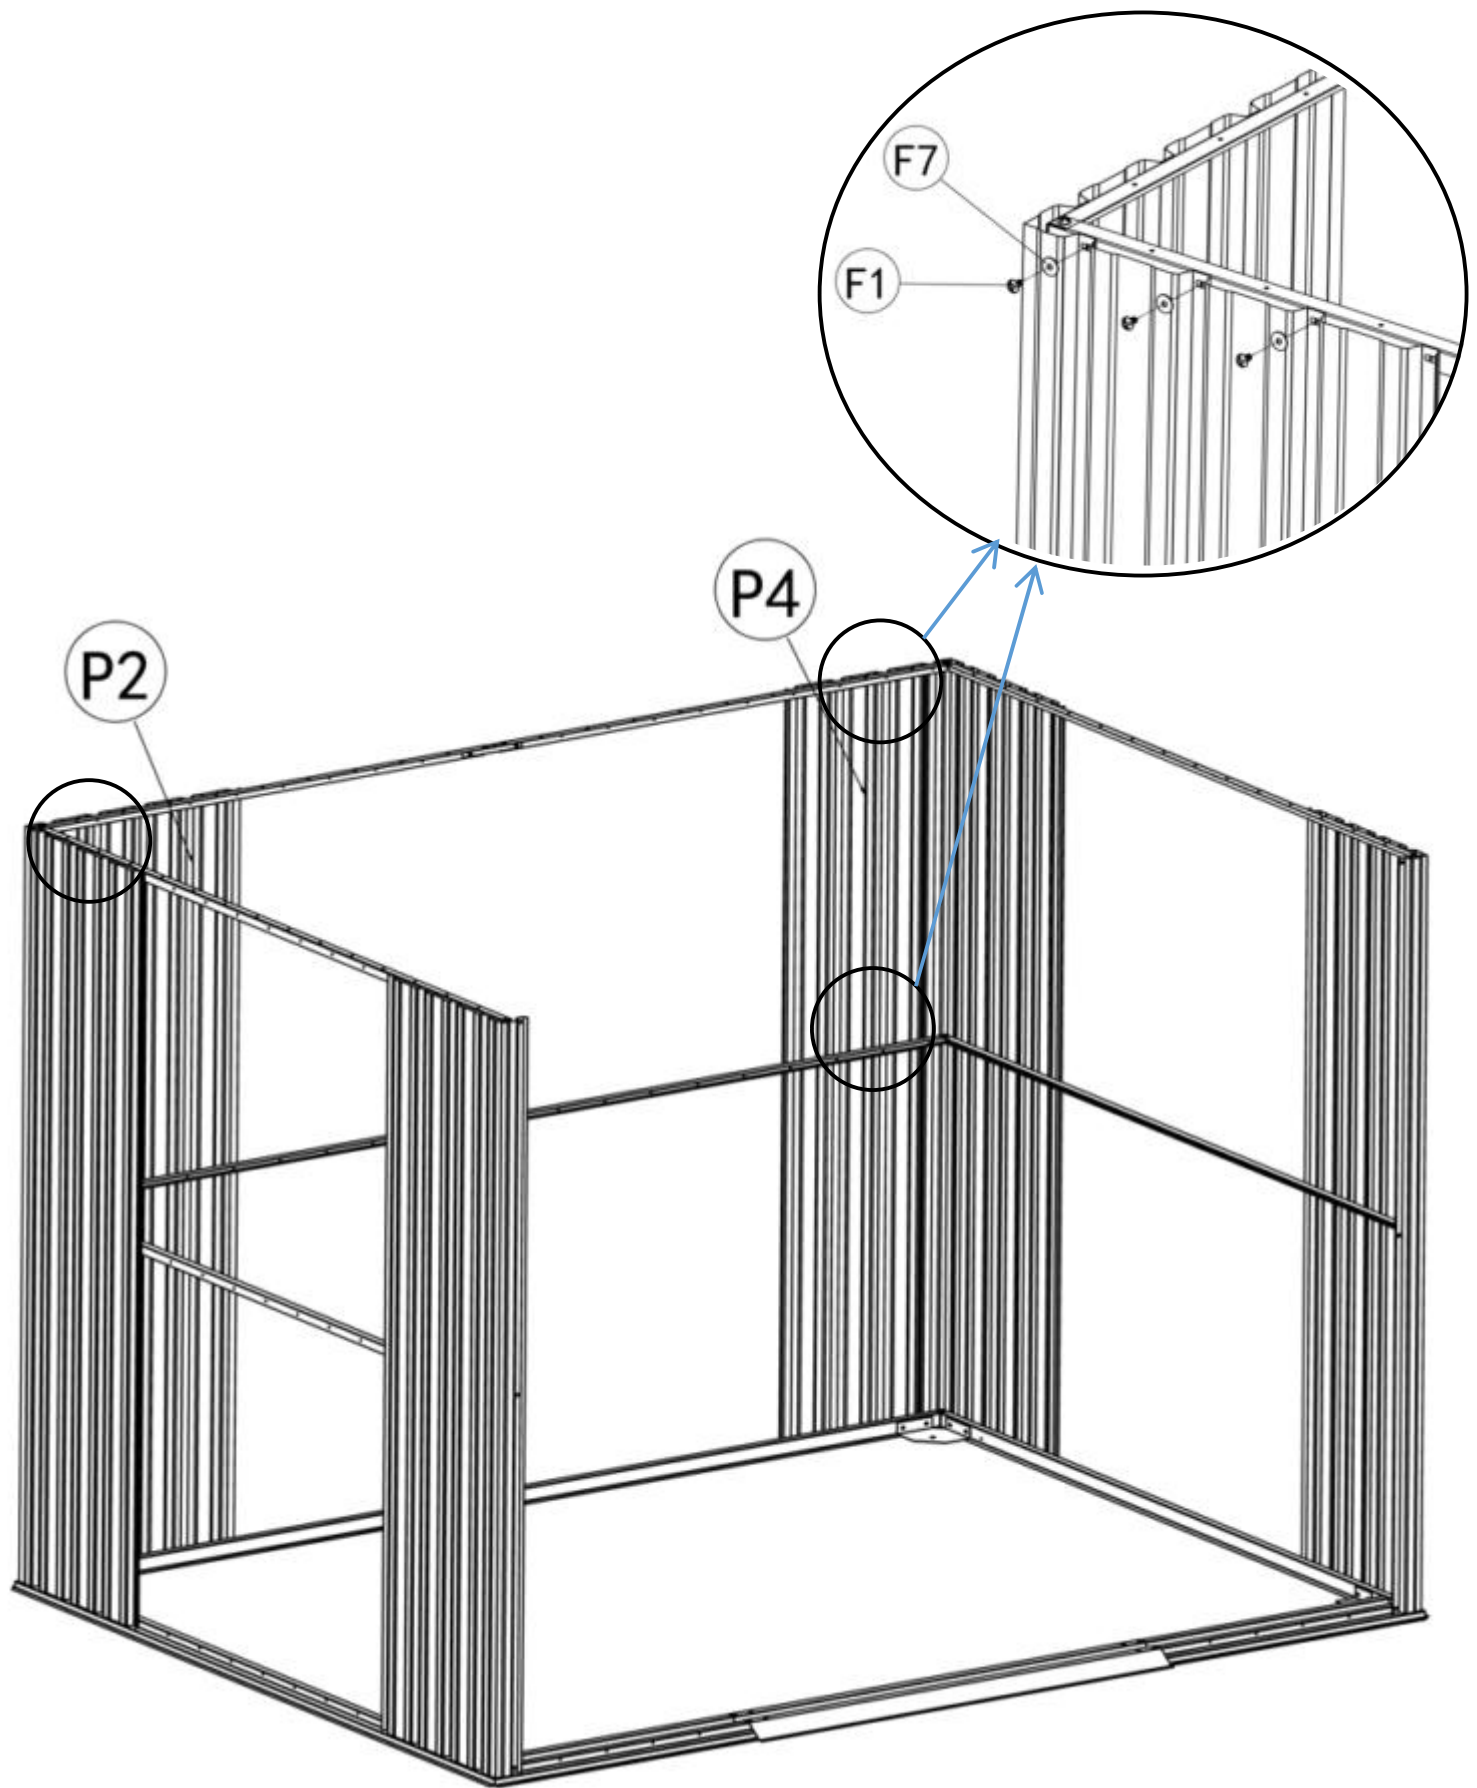


ST4.8X10			
			
F1	12	F7	12


ST4.8X10	
	
F1	2

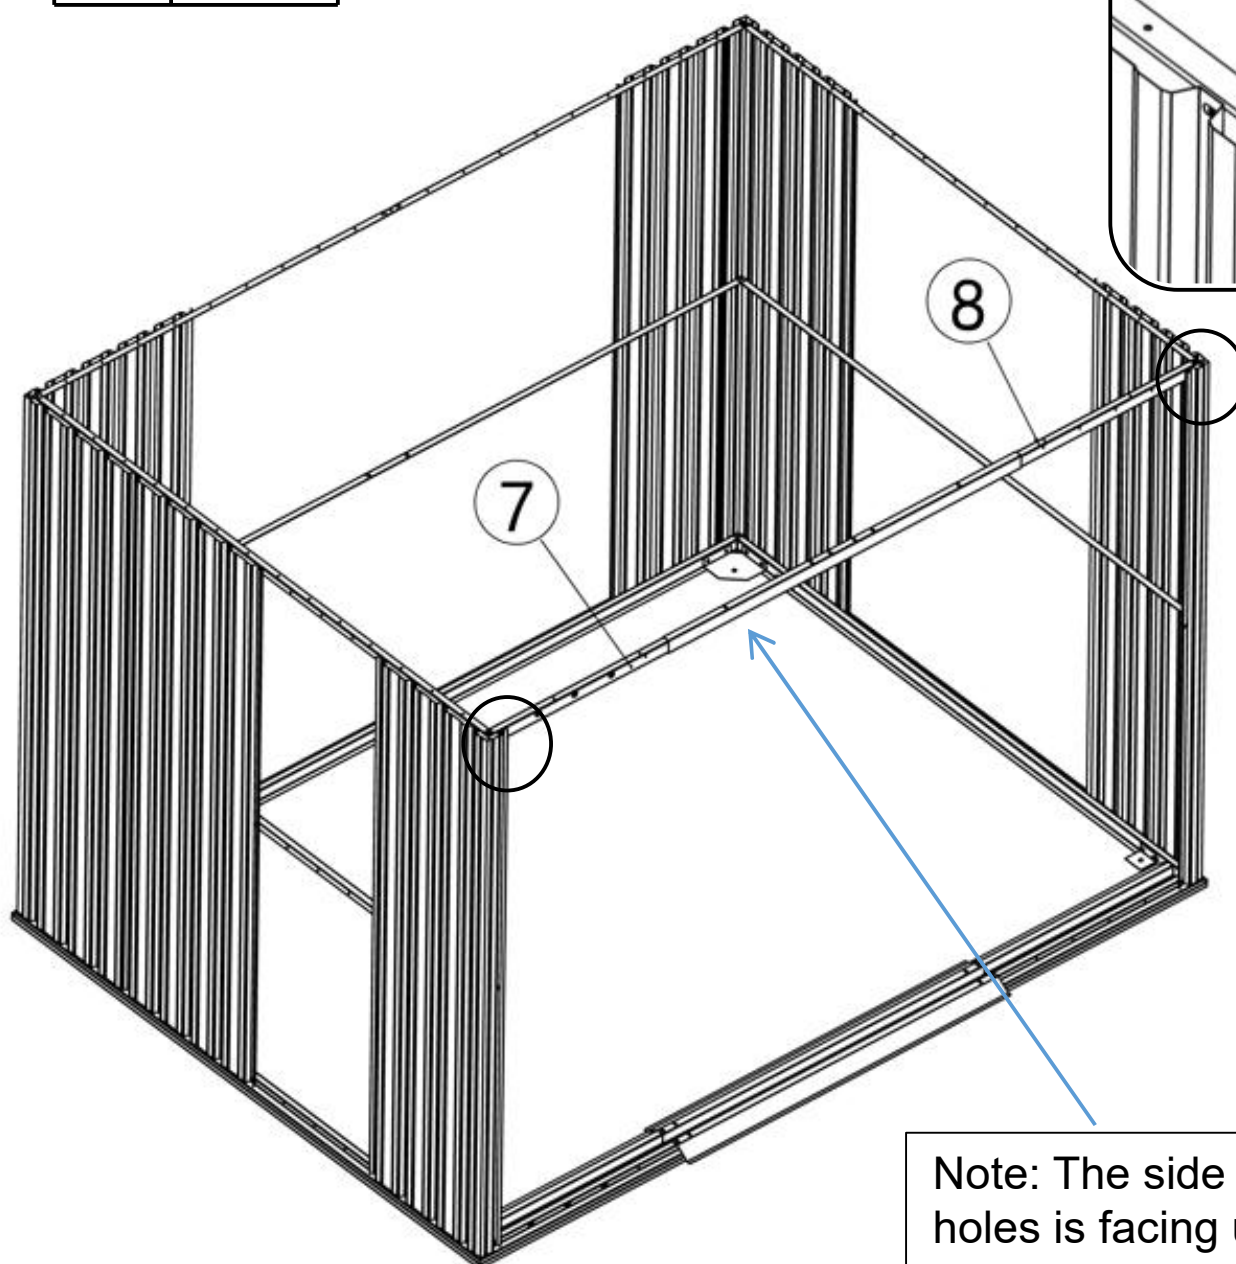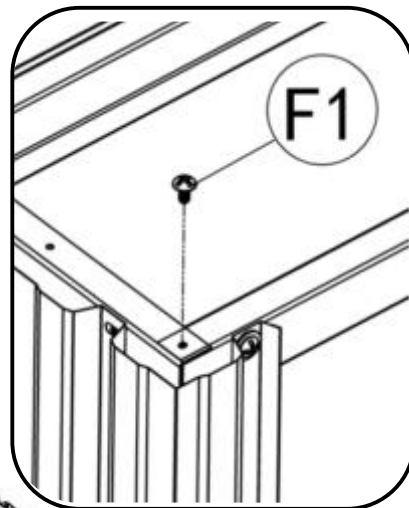


Note: The side with more holes is facing up.



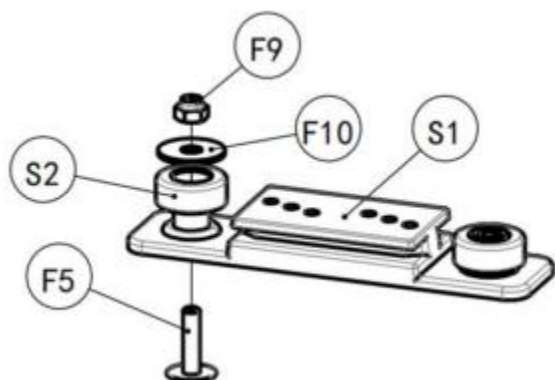


Note: Put the installed S1 and S2 into slots 7 and 8 in advance.

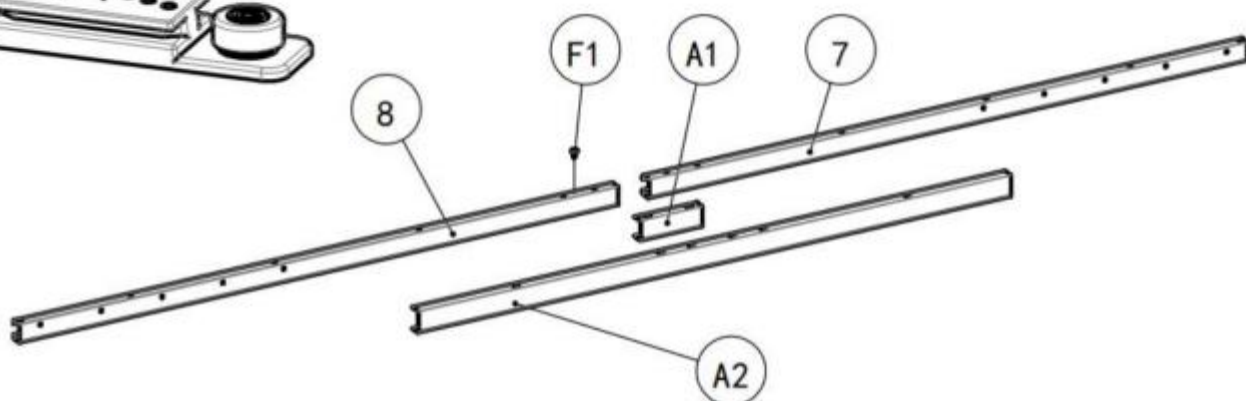



ST4.8X10					
F1	16	F7	16		

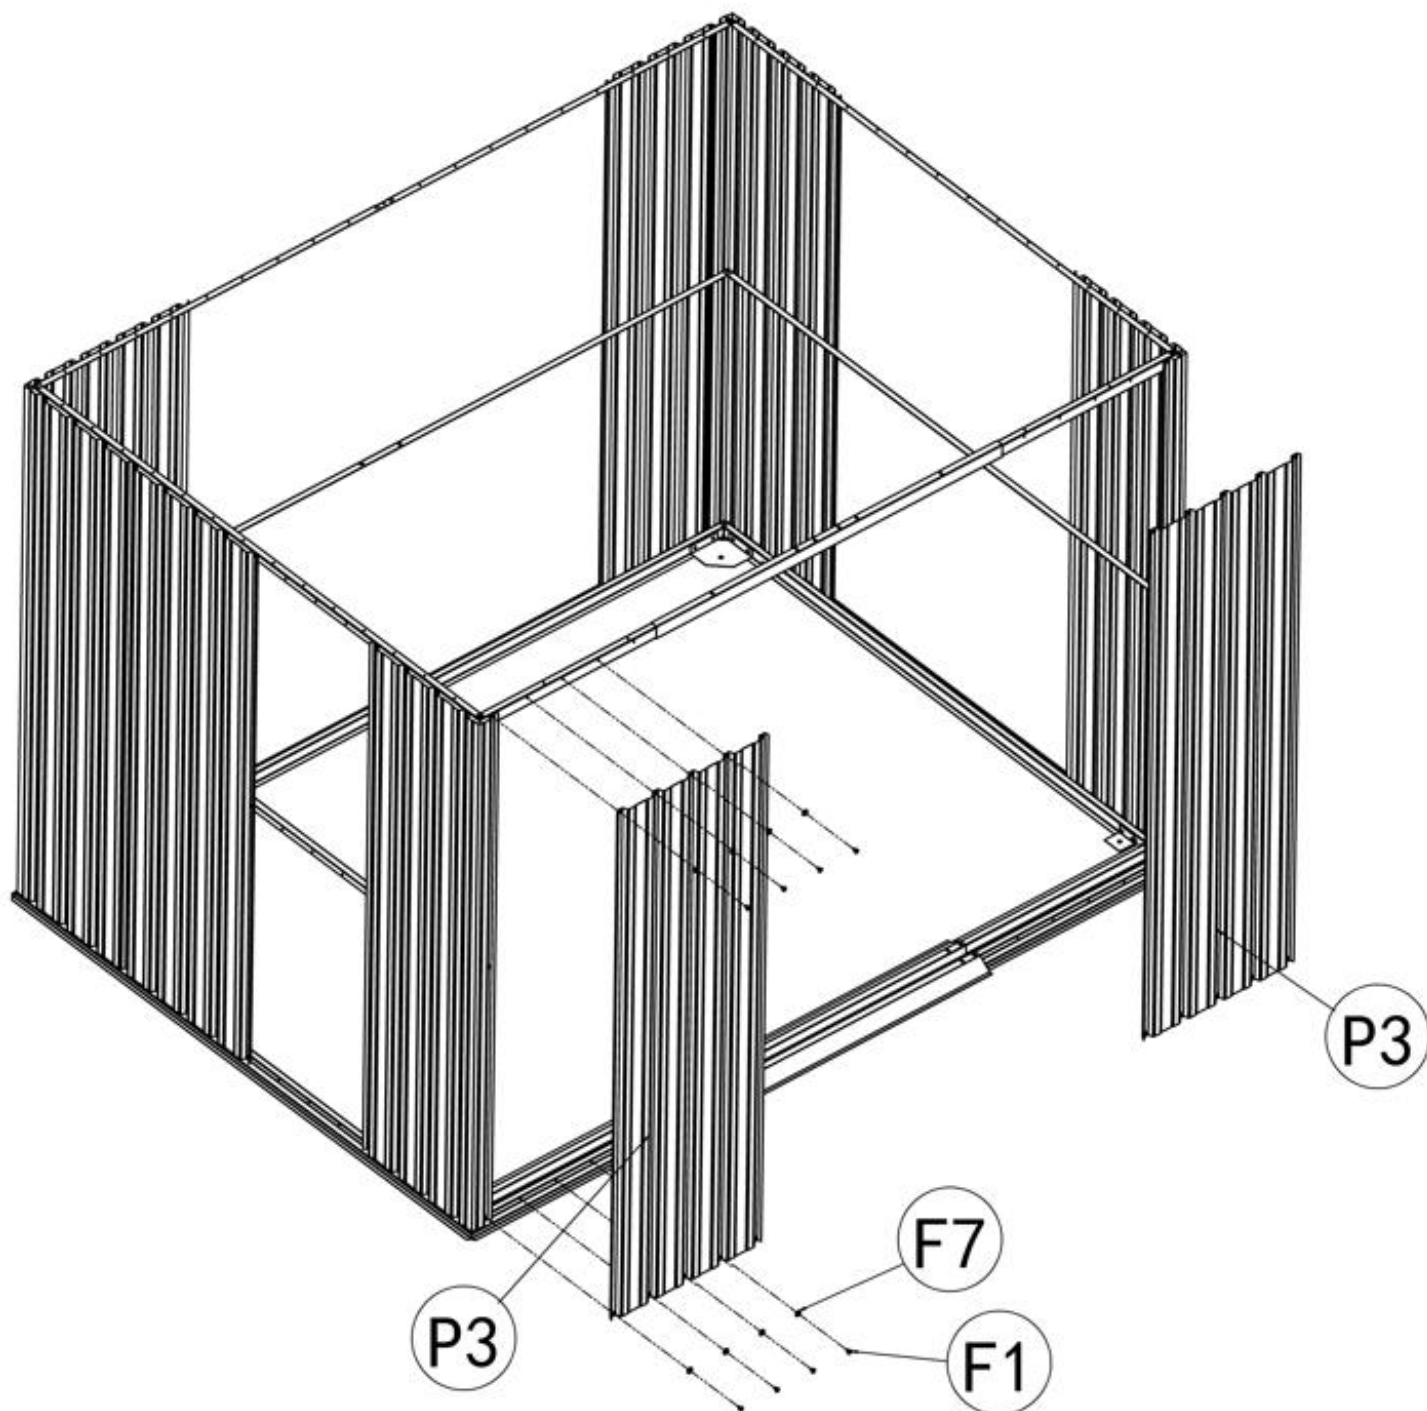

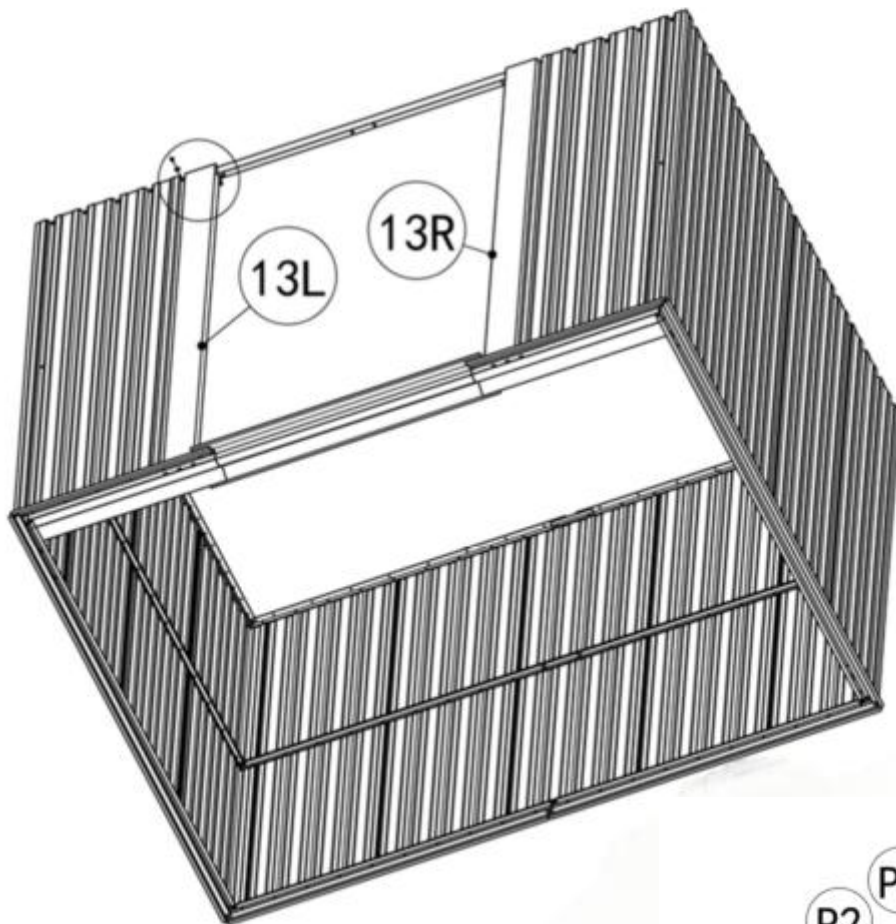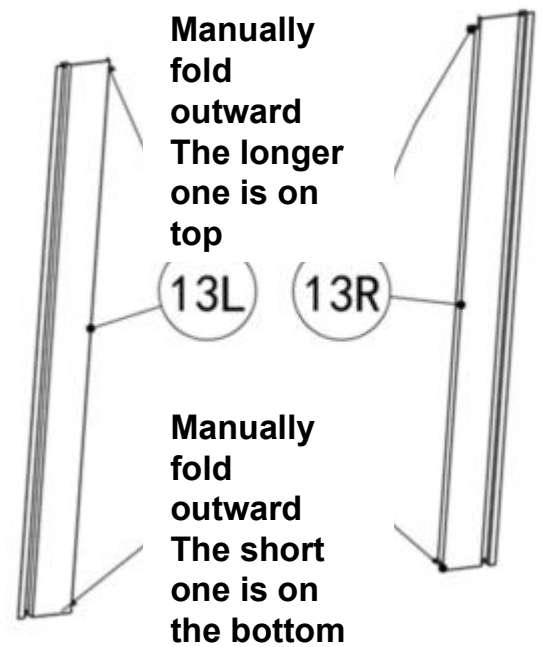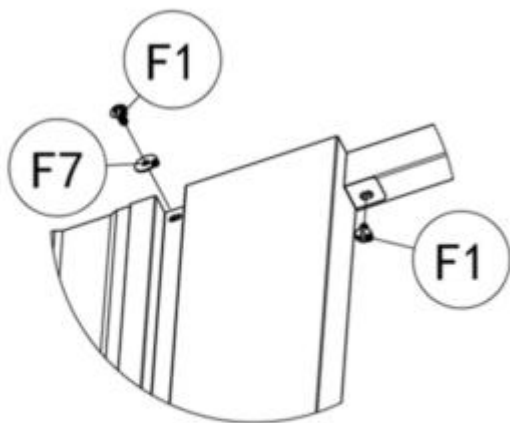




ST4.8X10			
			
F1	90	F7	84





Note: P4 has no holes. The overlapping tiles can be drilled according to your needs. Use F1 to lock P4 and place it under P2.

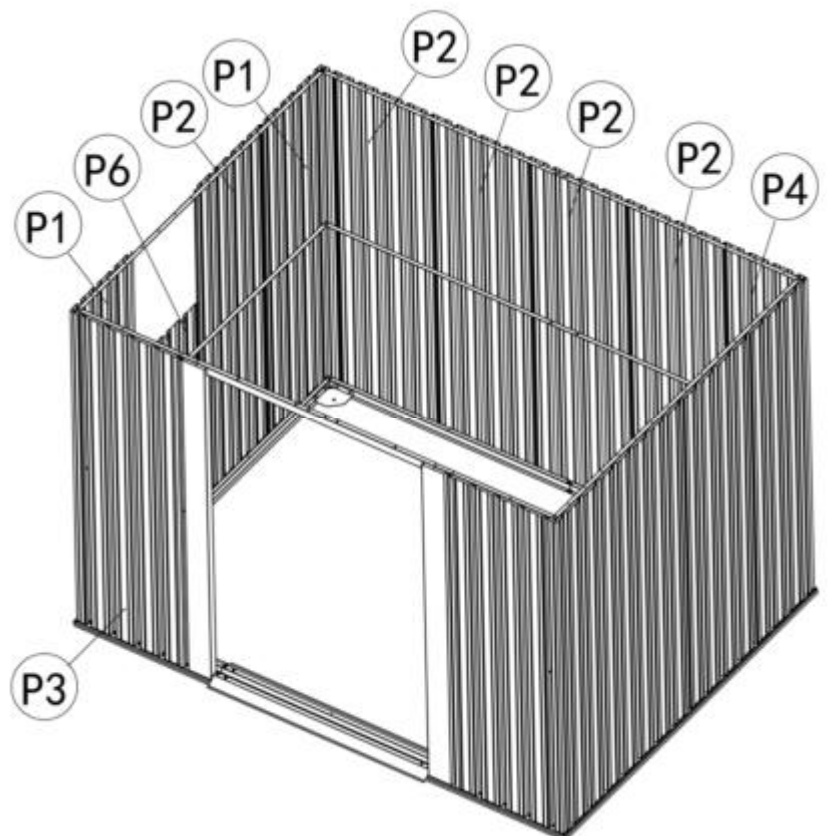
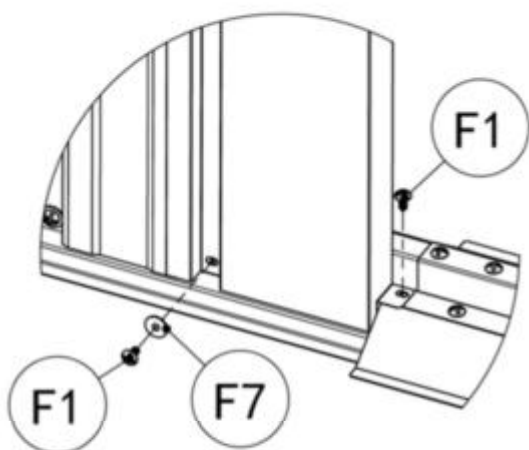


4. Window assemble

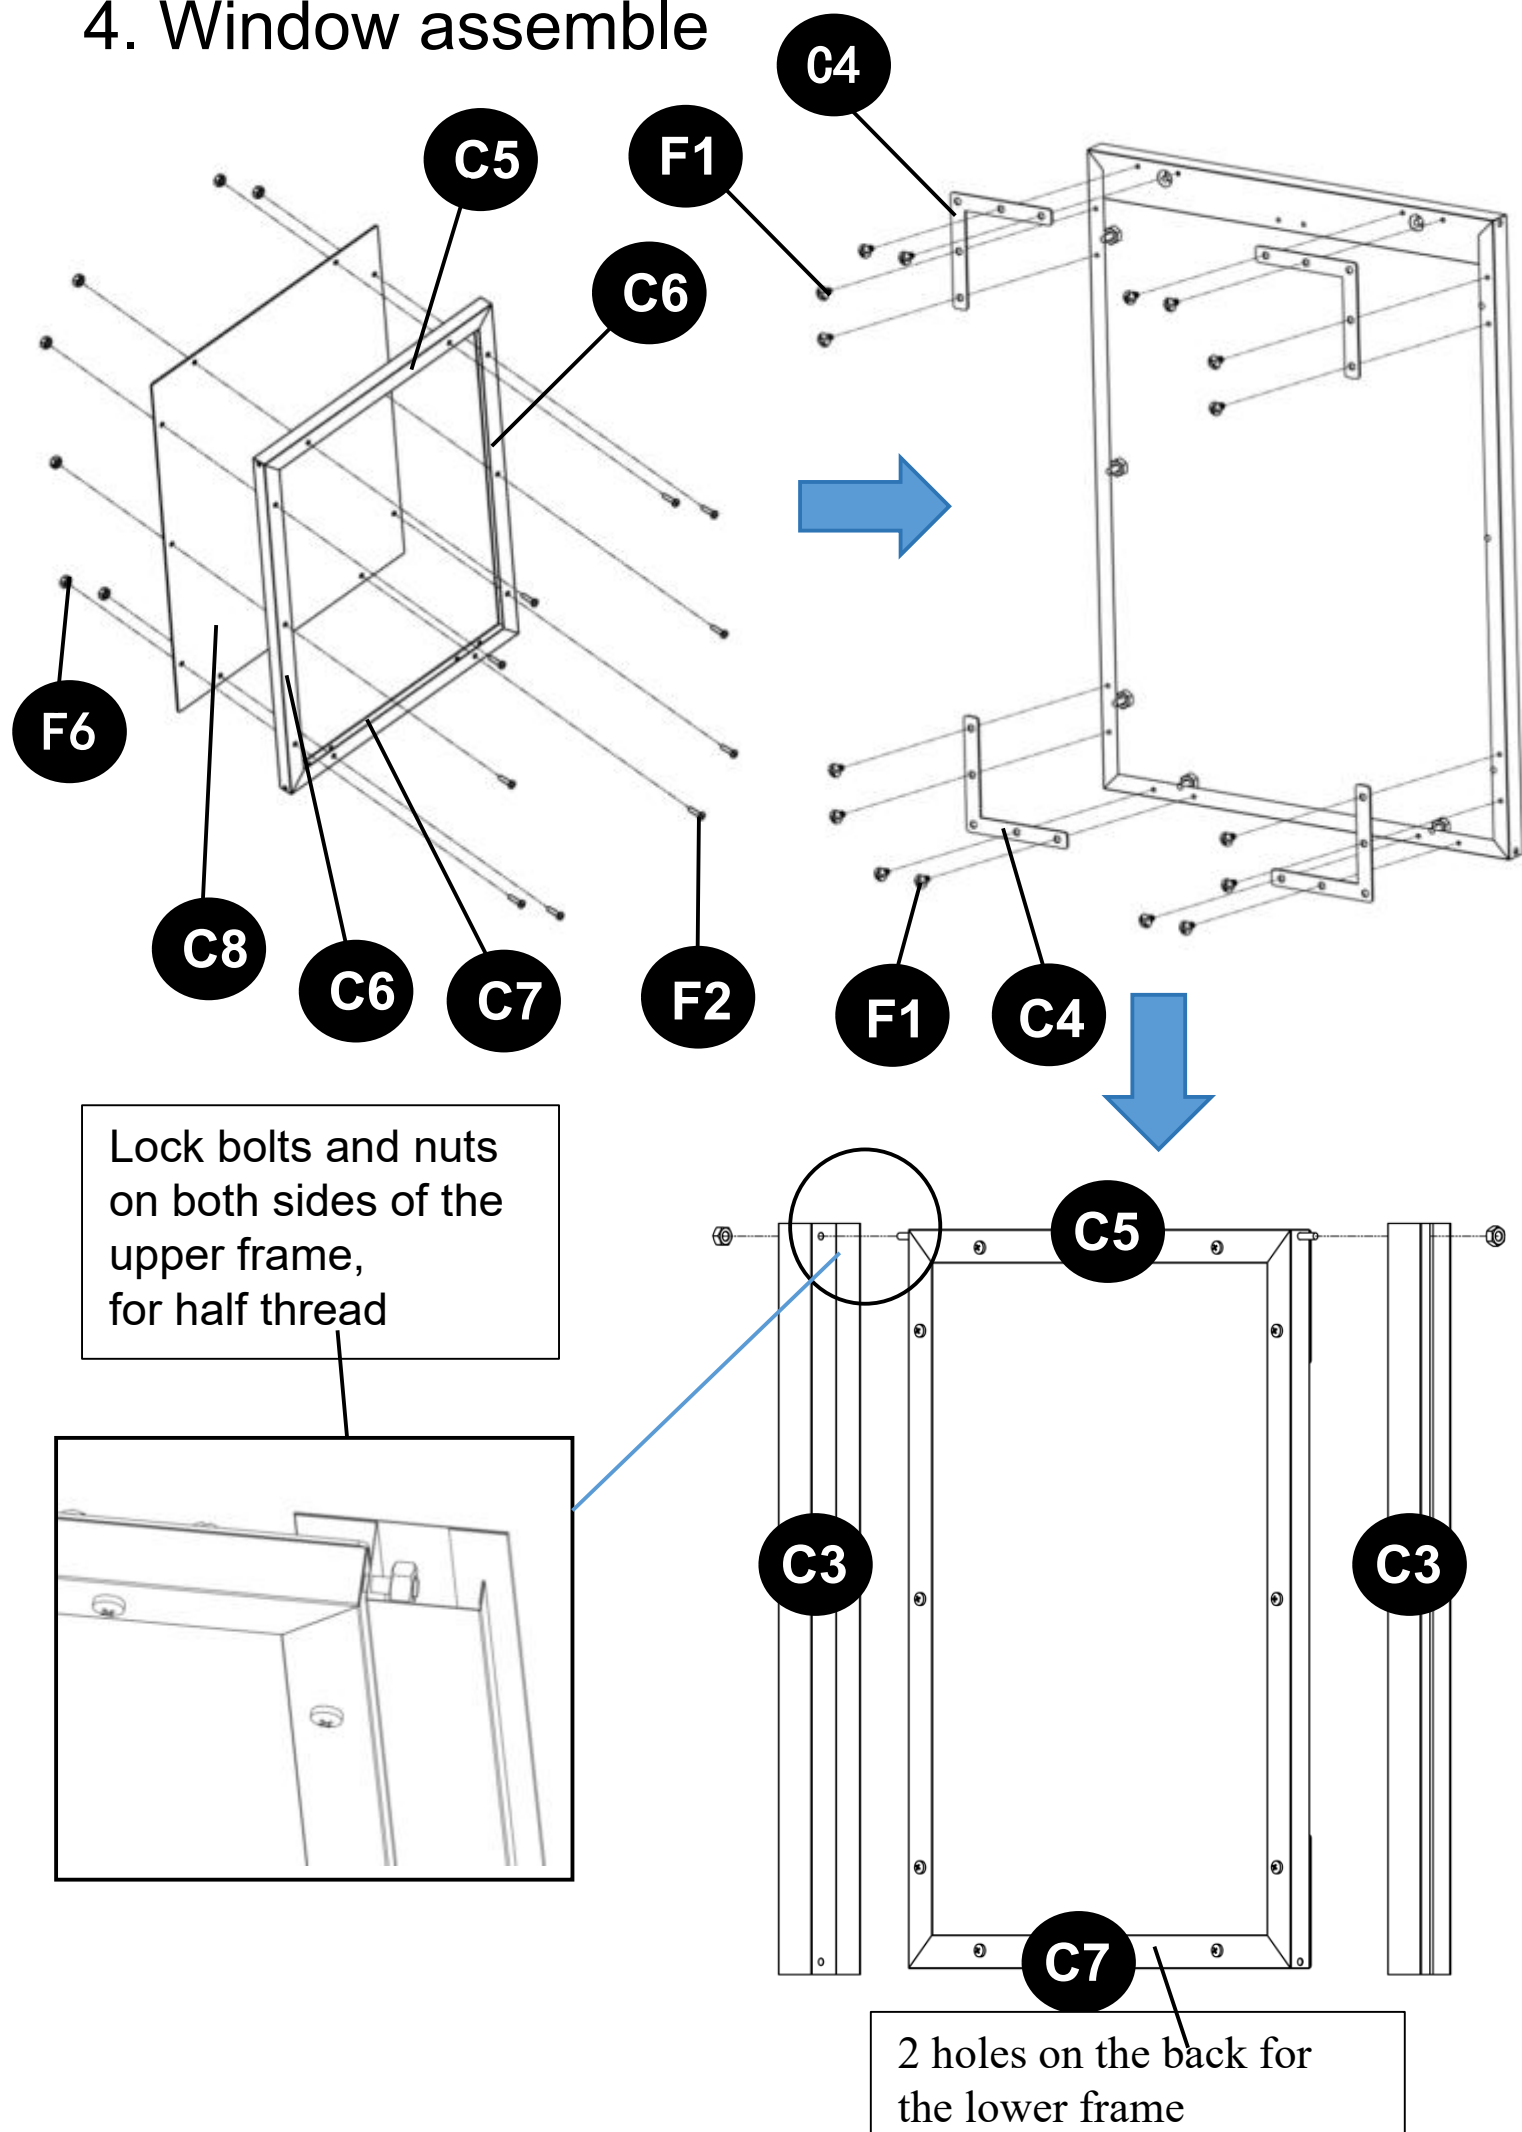


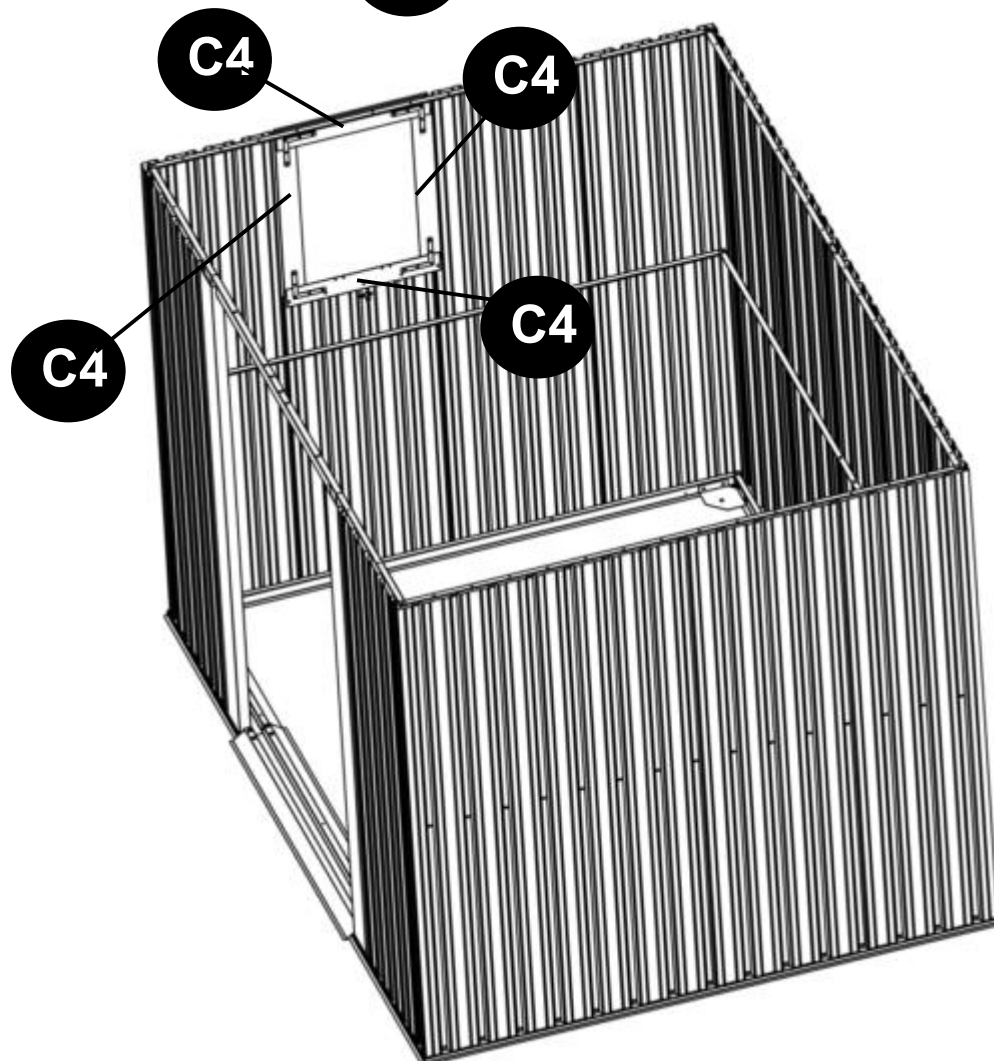
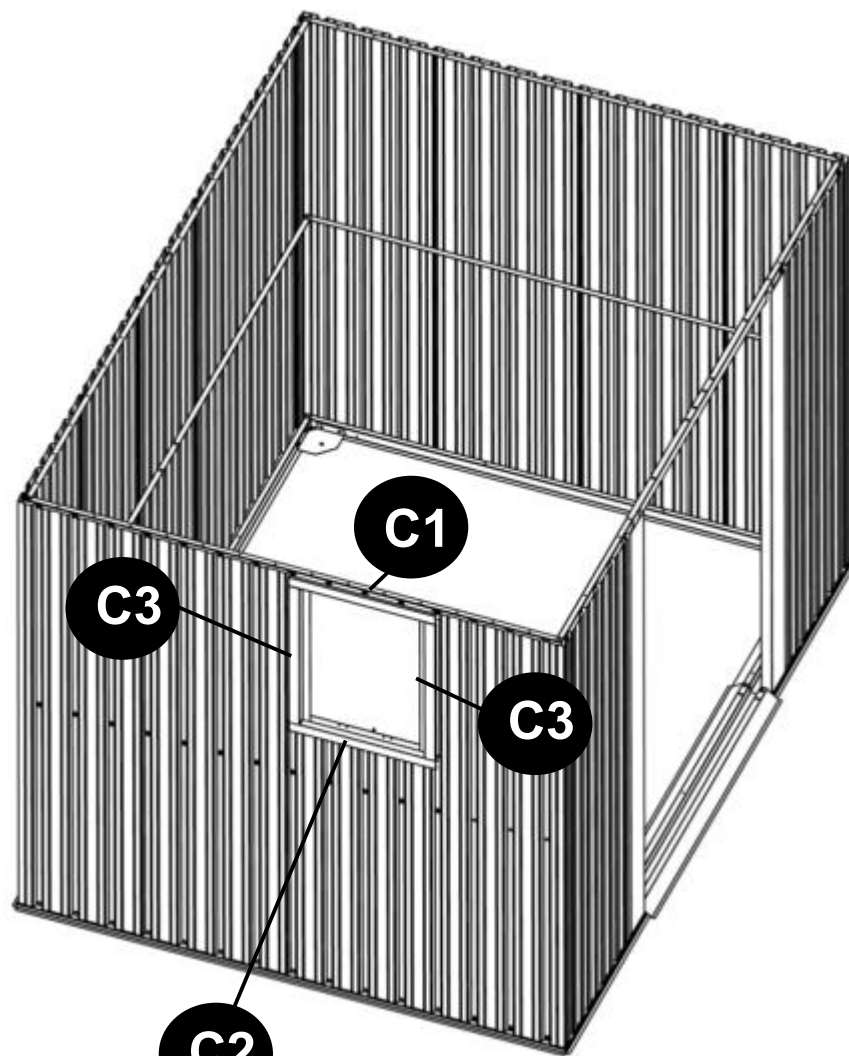


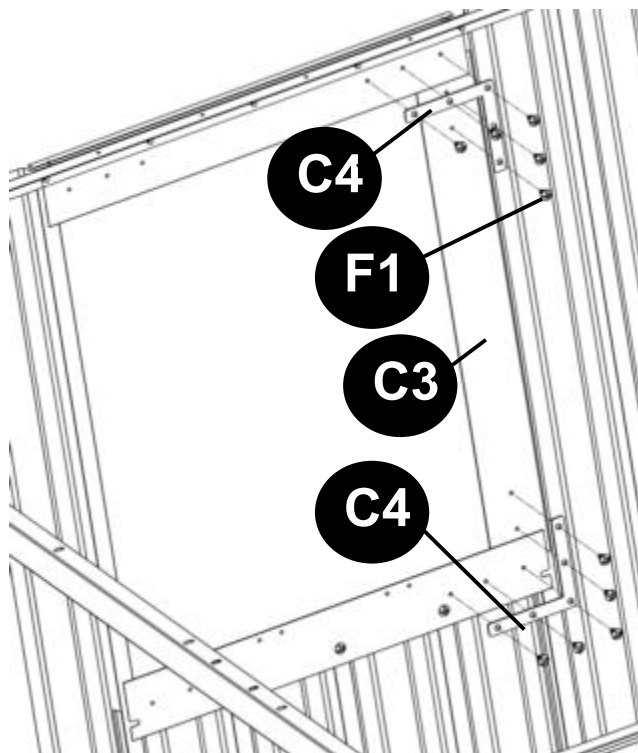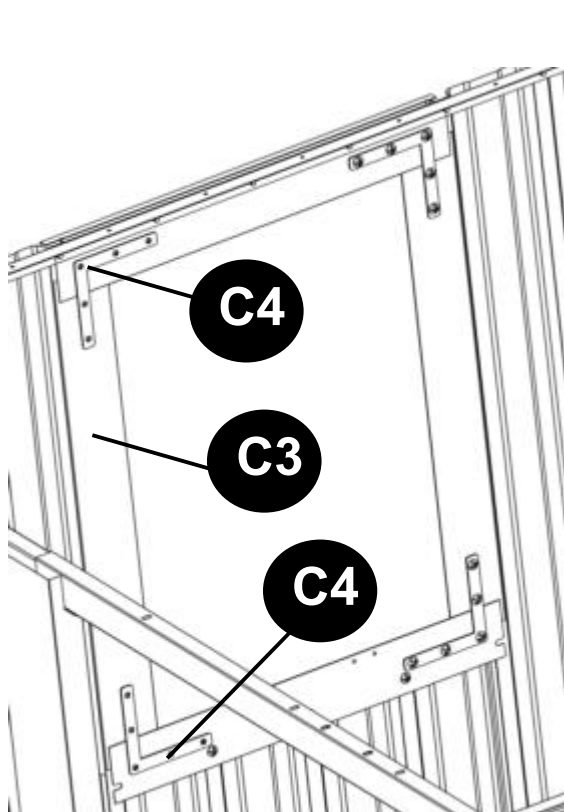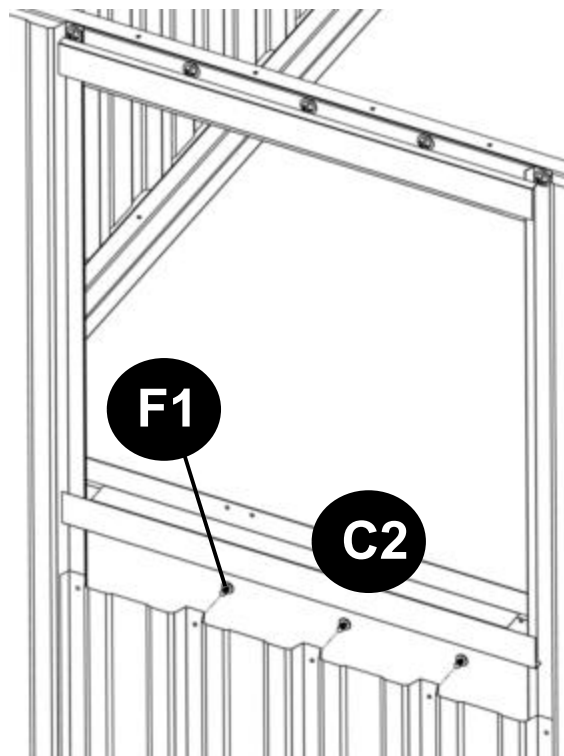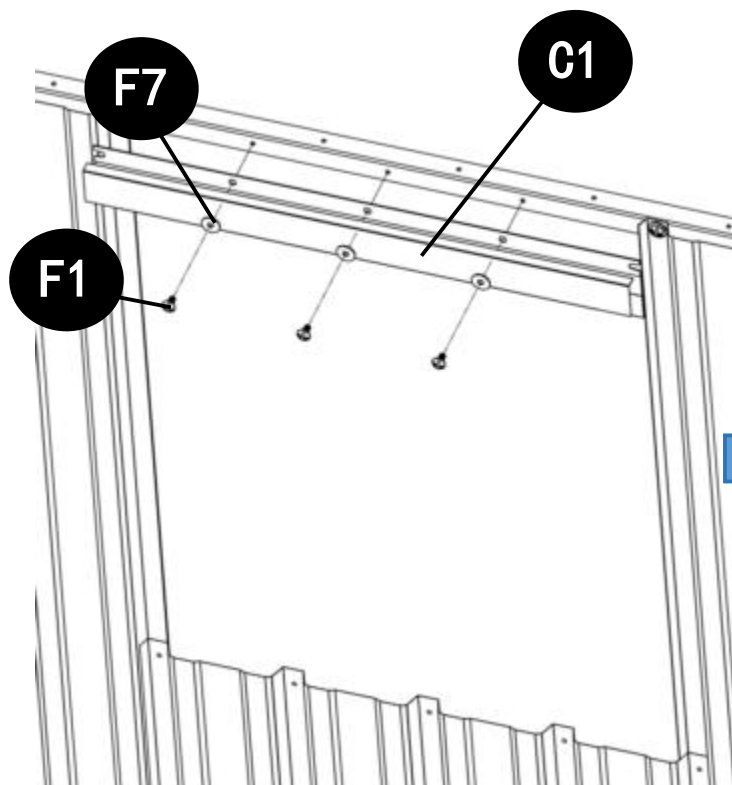

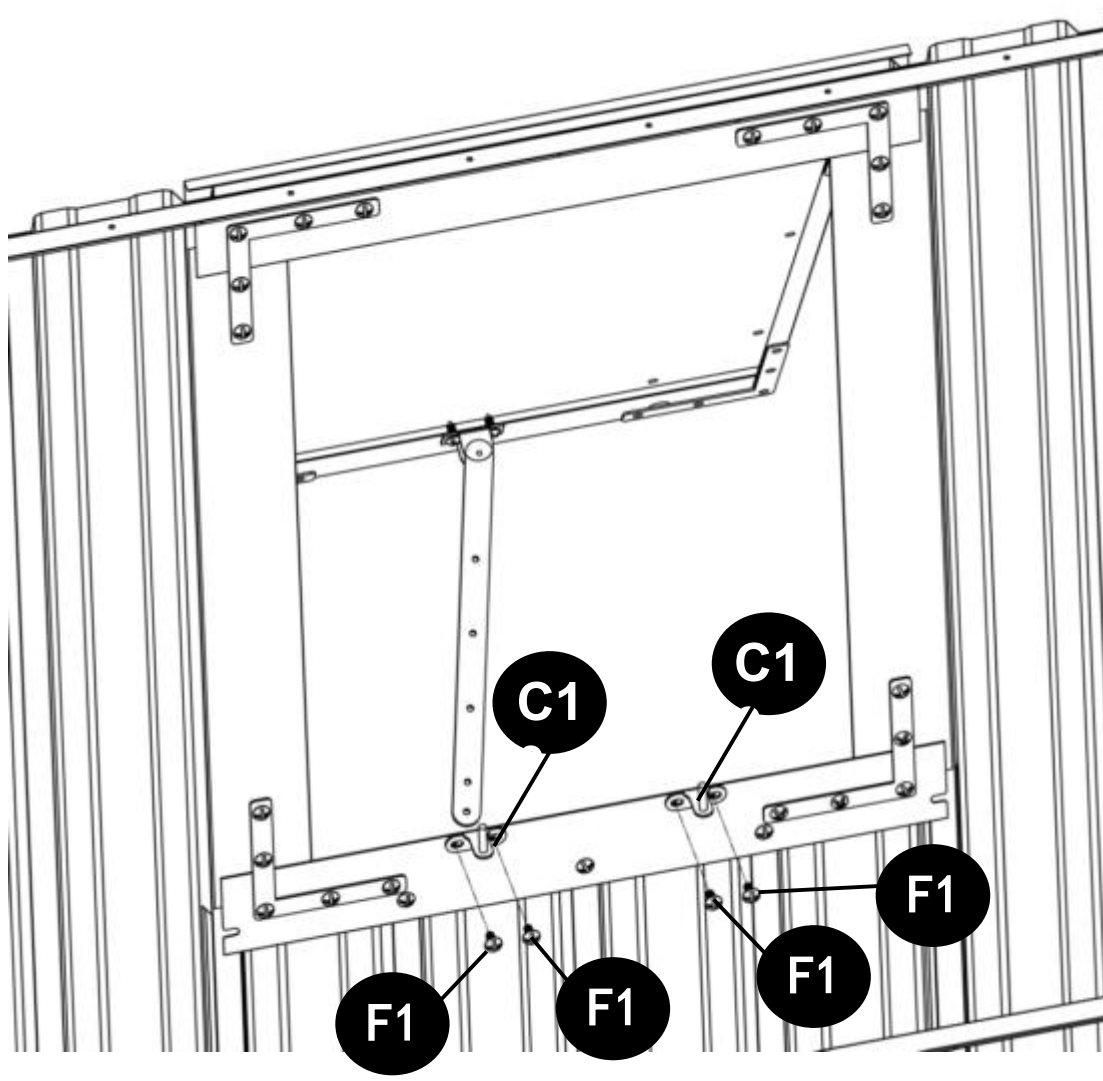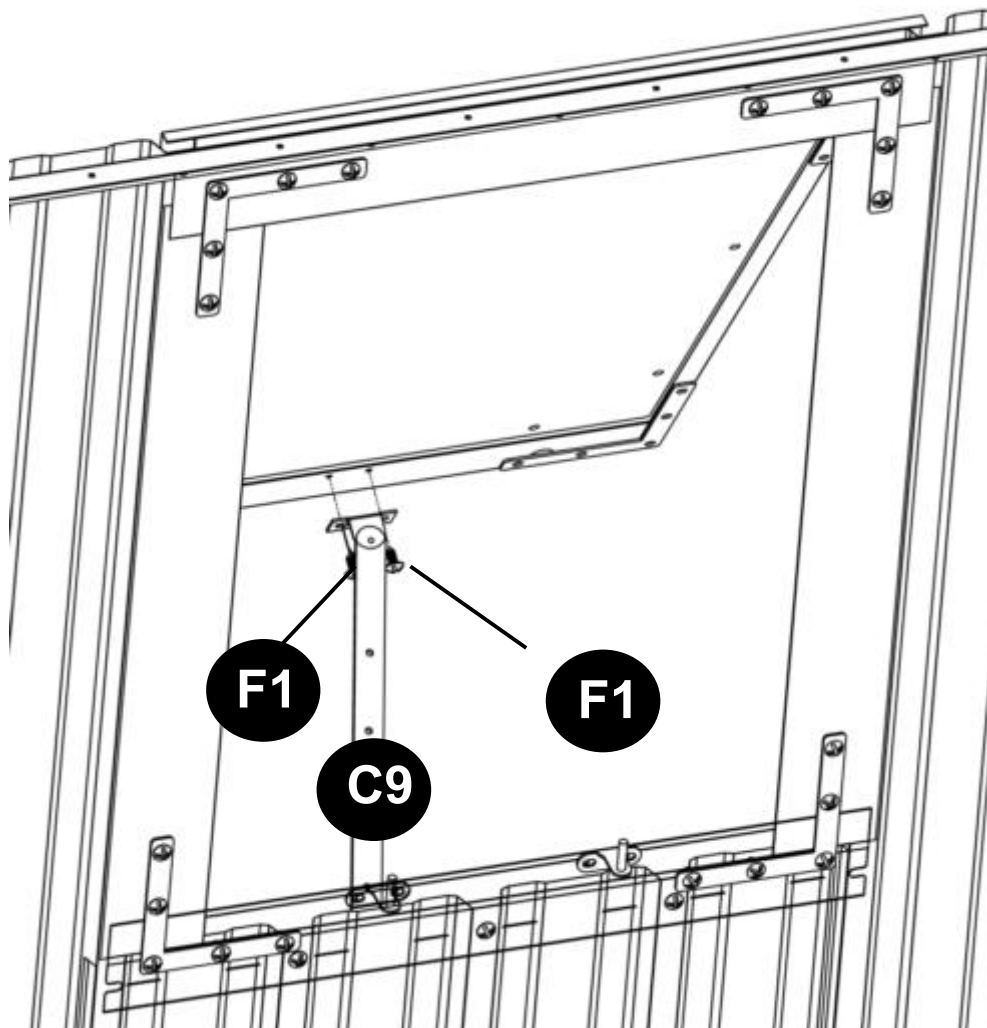


3.Roof support section installation


ST3.5X9.5		ST4.8X10		M5X12		M5	
							
F4	20	F1	8	F2	17	F6	17

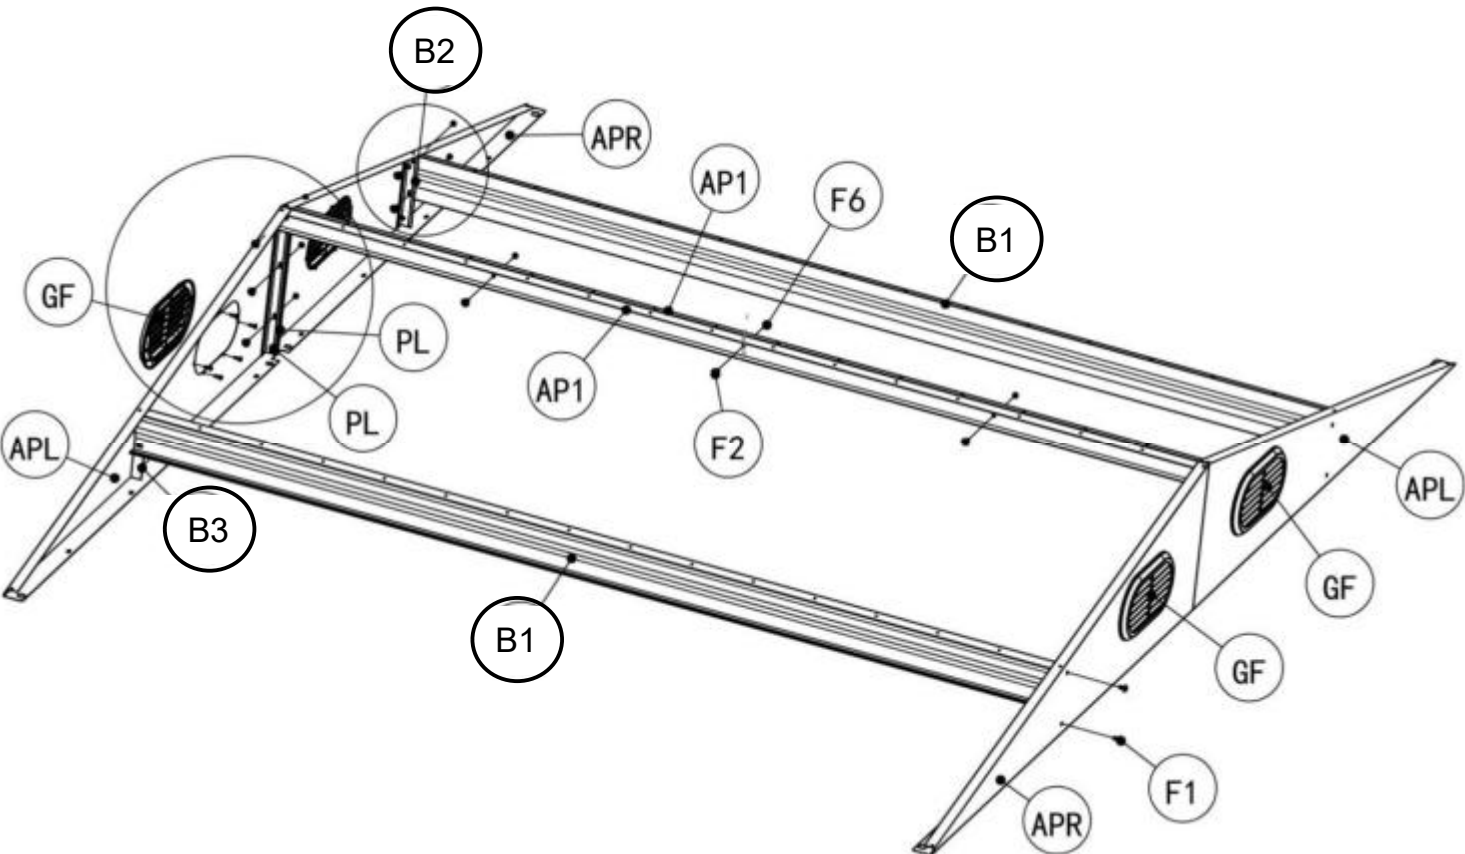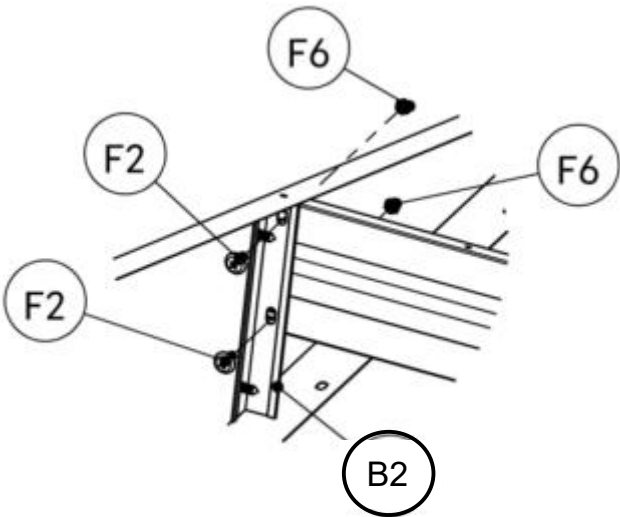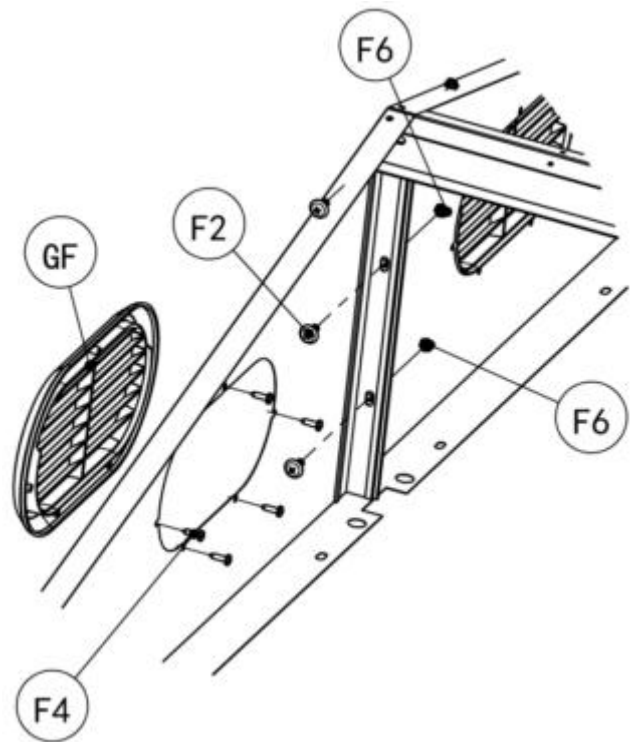



ST4.8X10	
	
F1	20

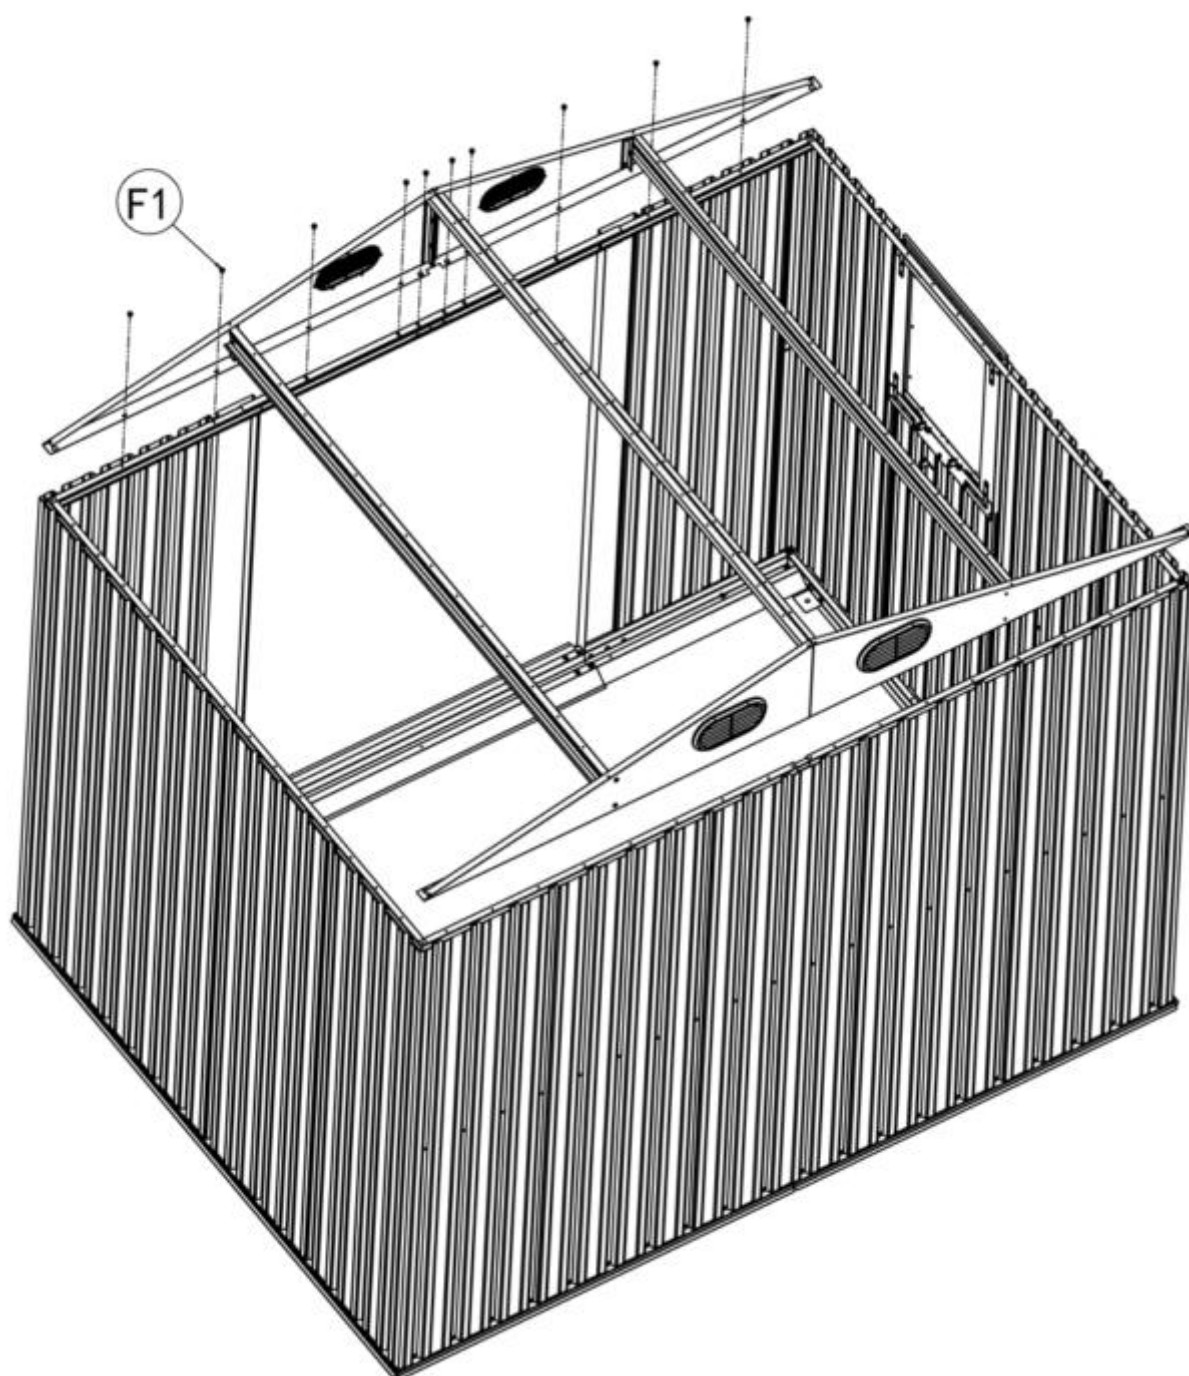

ST4.8X10			
			
F1	64	F7	64

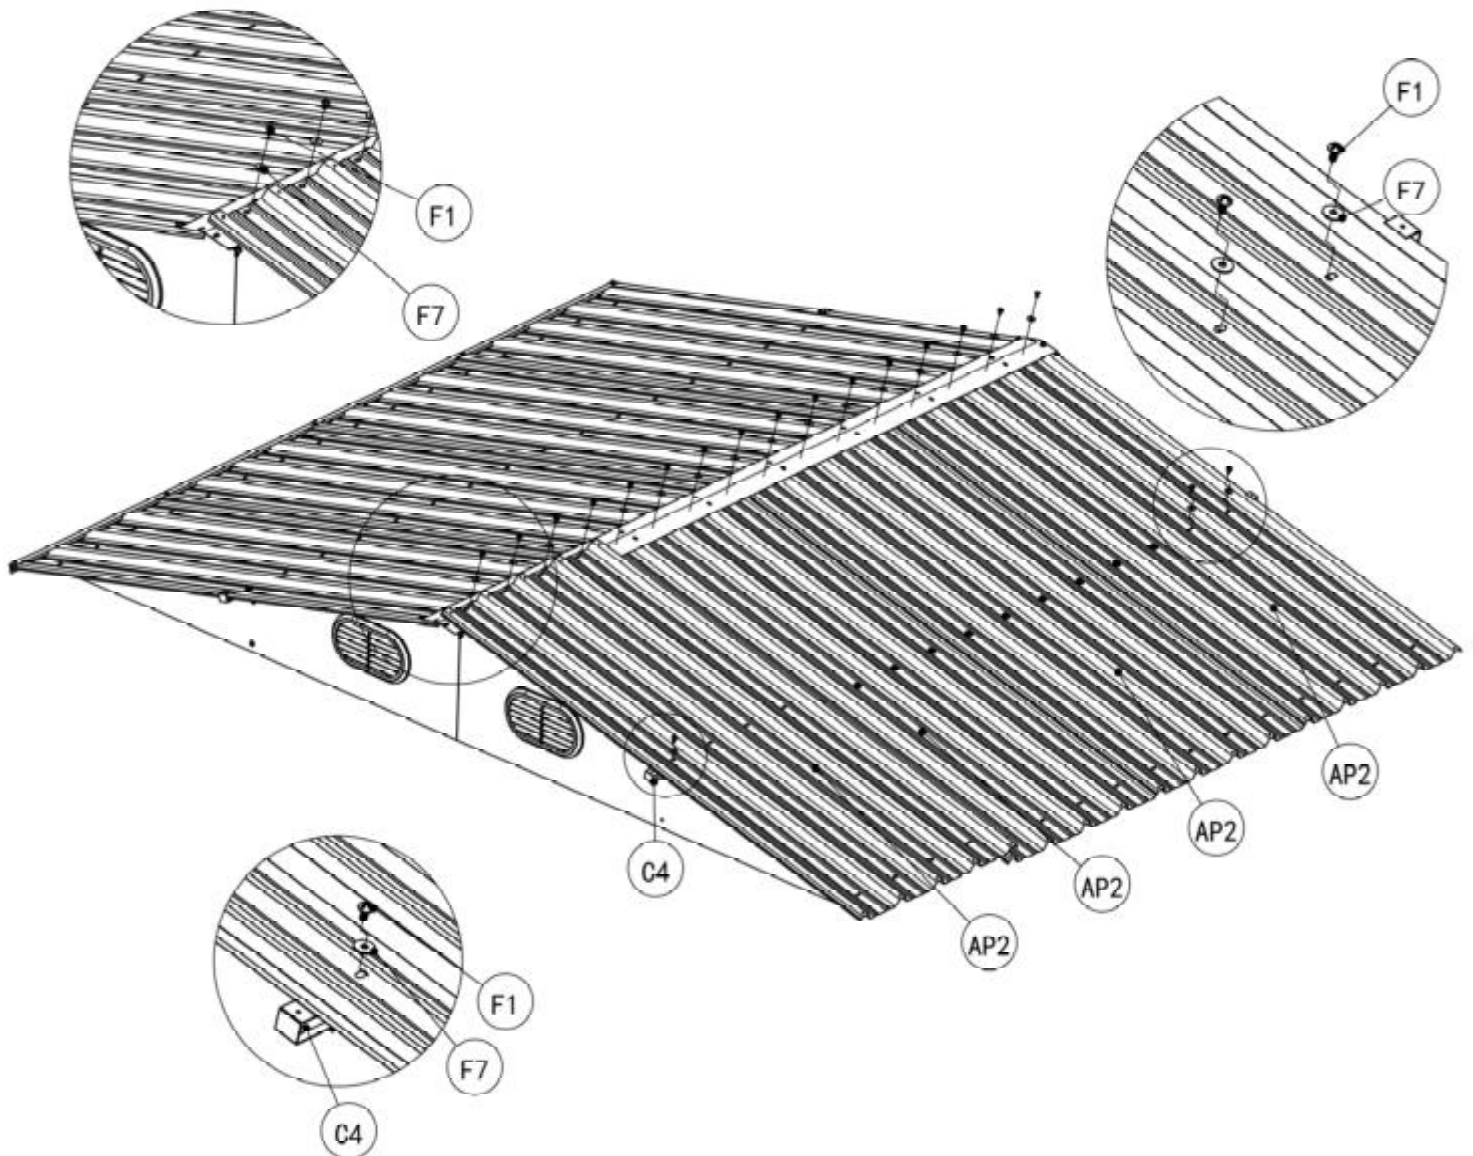


Note: C4 should be inserted under the tile and aligned with the first hole, and locked with F1

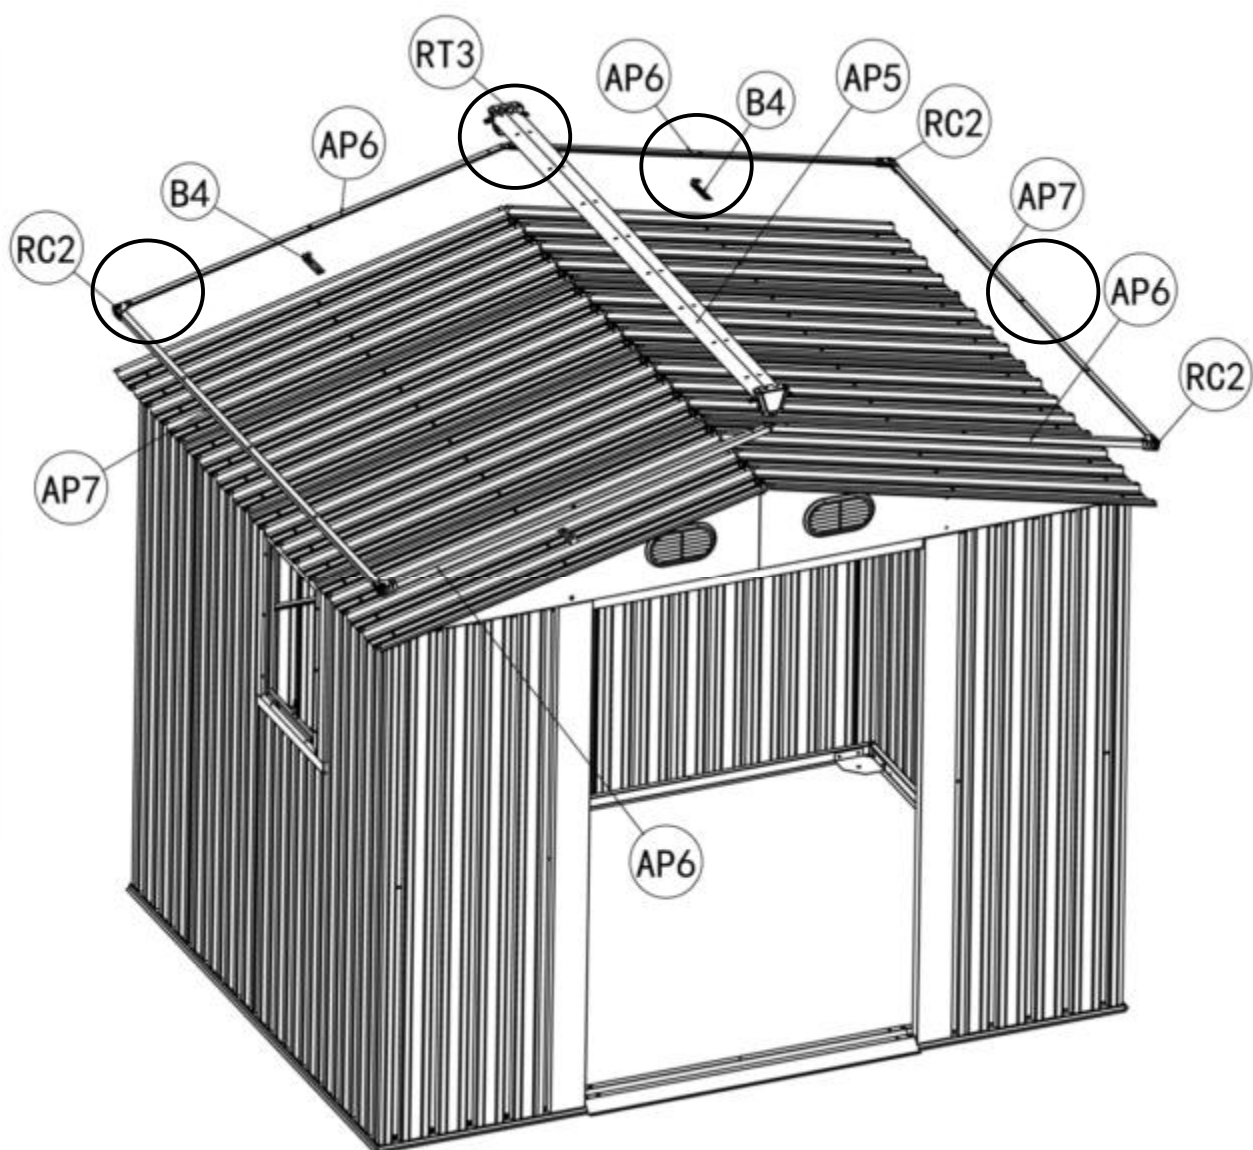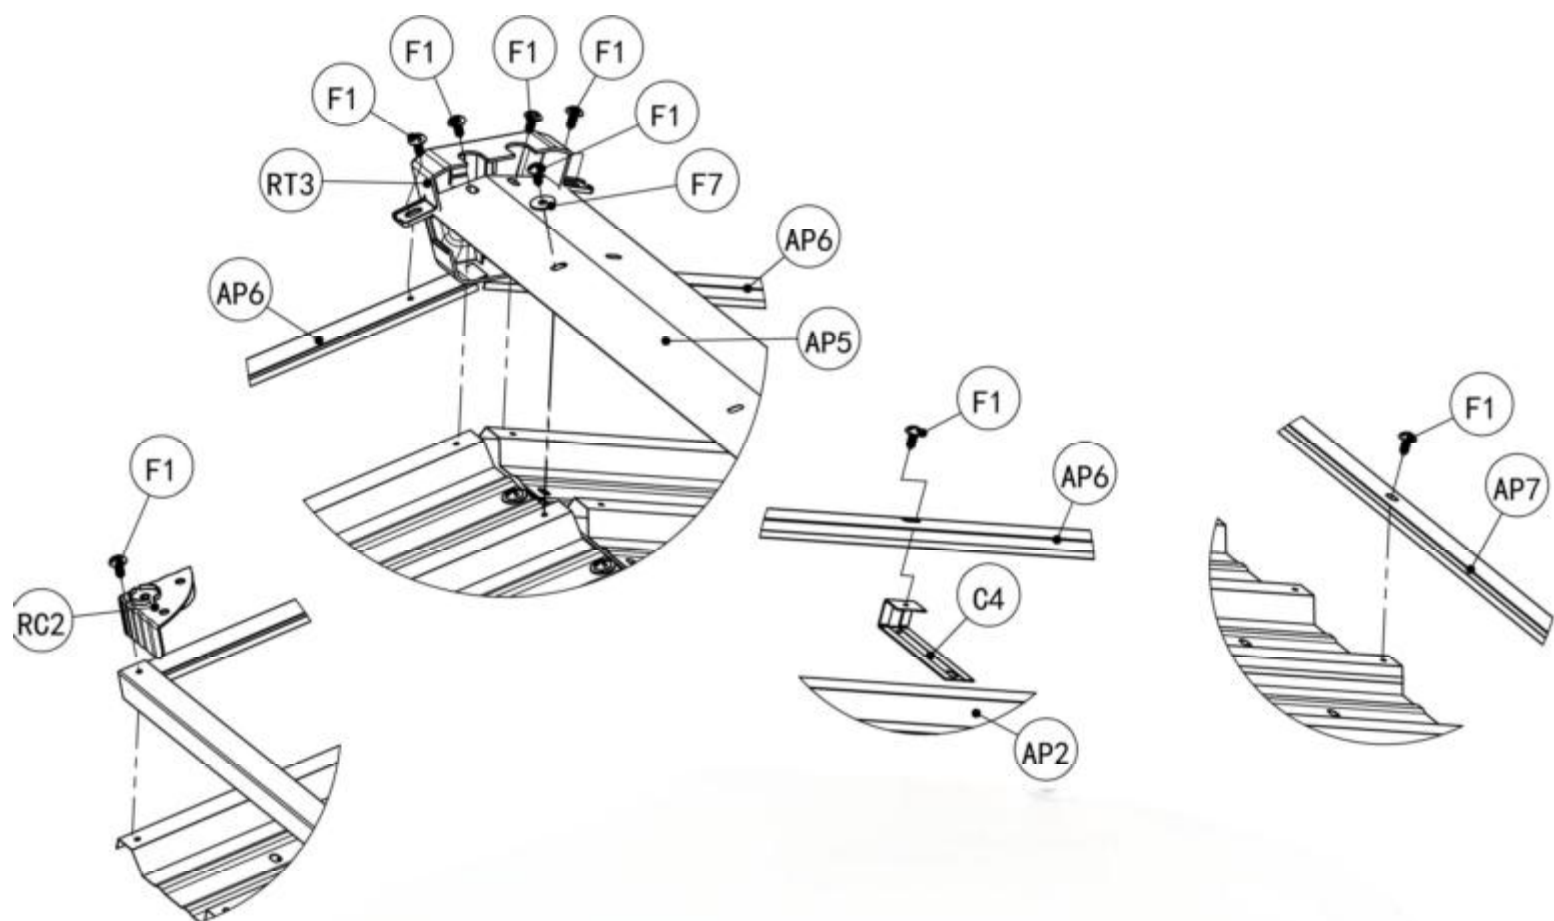

4.door installation



Note: This four-hole non-locking F1 screw is used to fix the door.

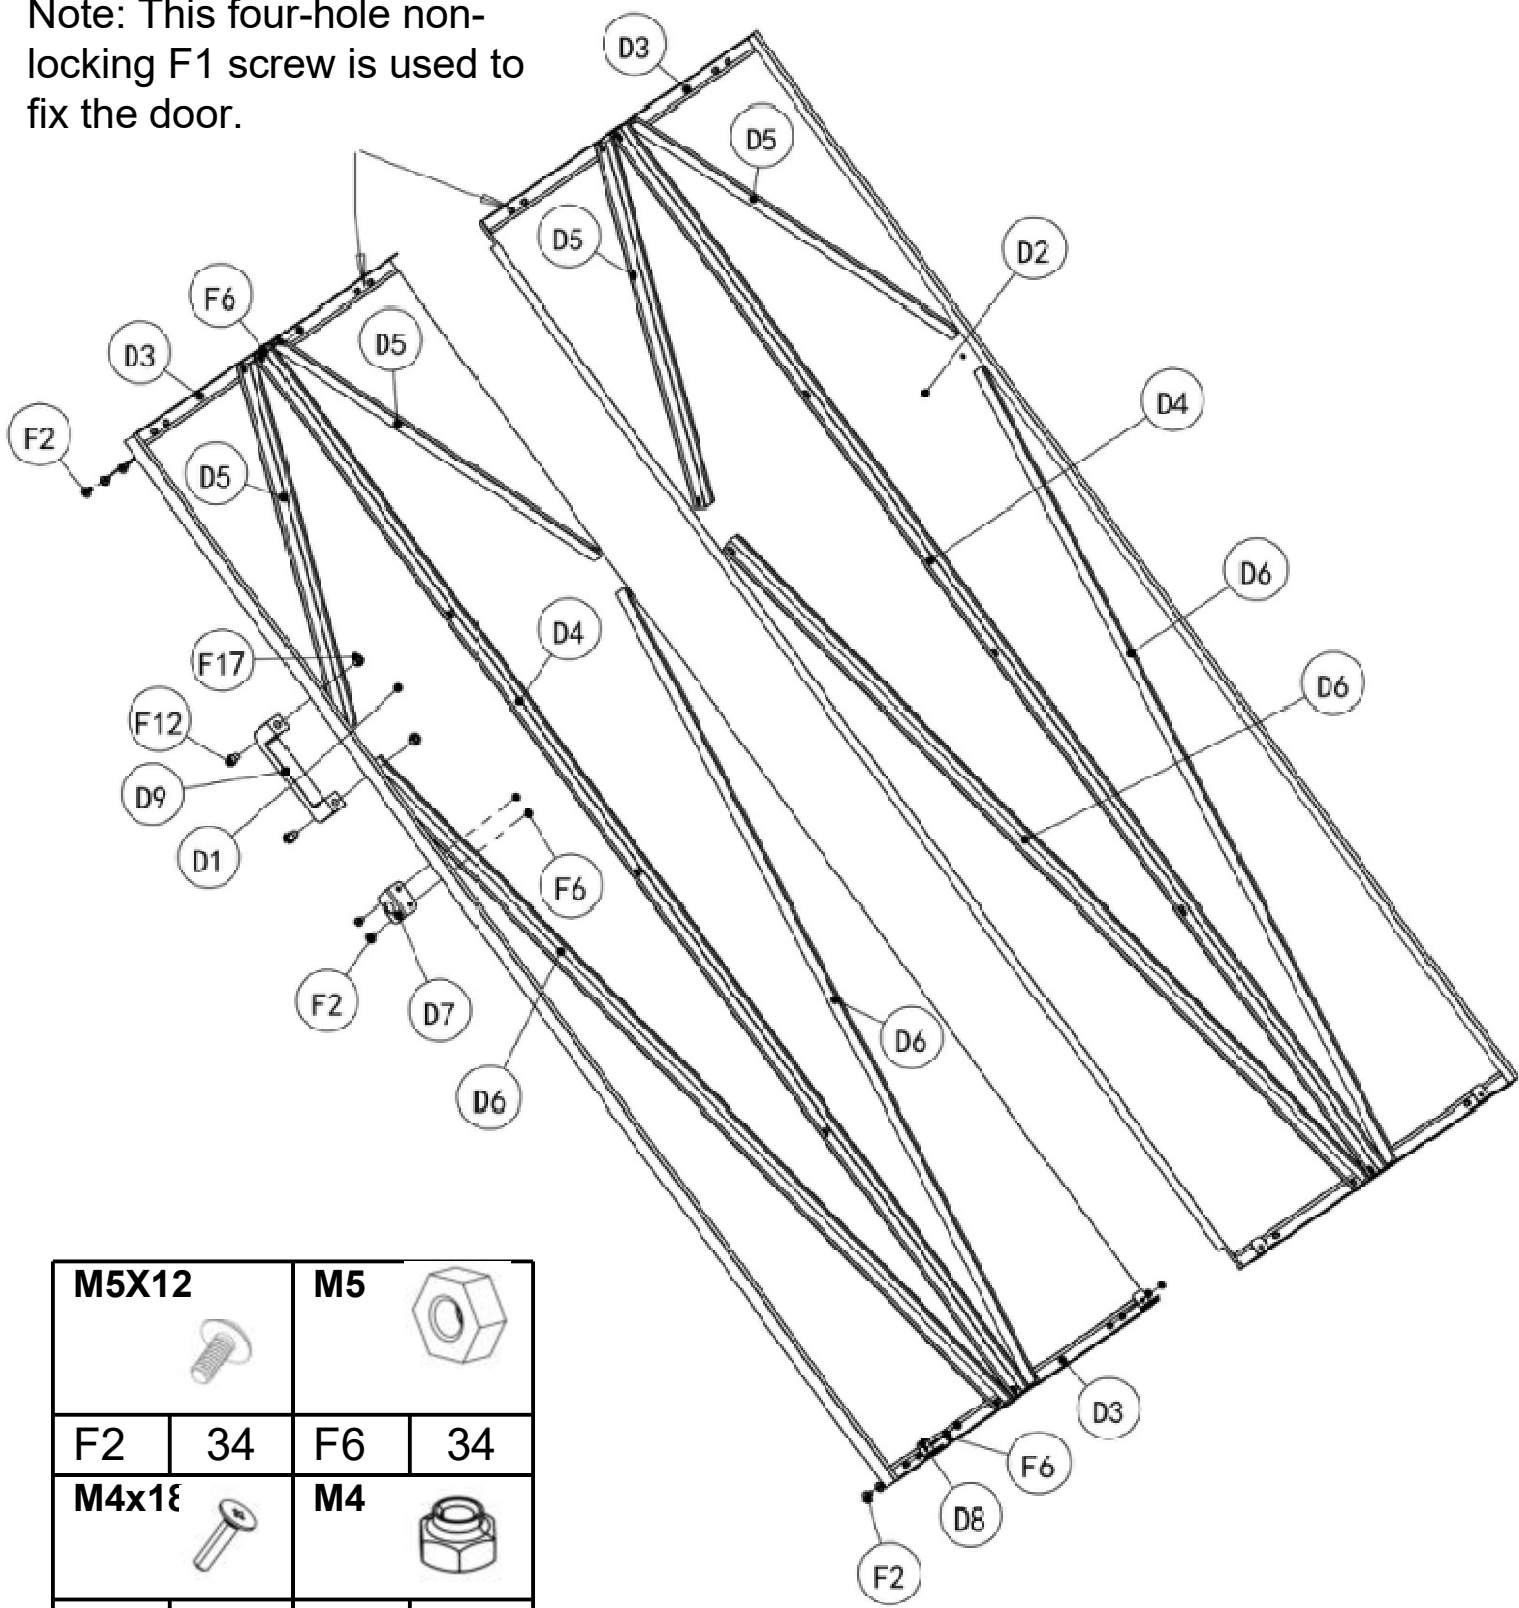

M5X12		M5	
			
F2	34	F6	34
M4x18		M4	
			
F1	4	F1	4
2		7	

5.Final assembly

ST4.8X10	
	
F1	8

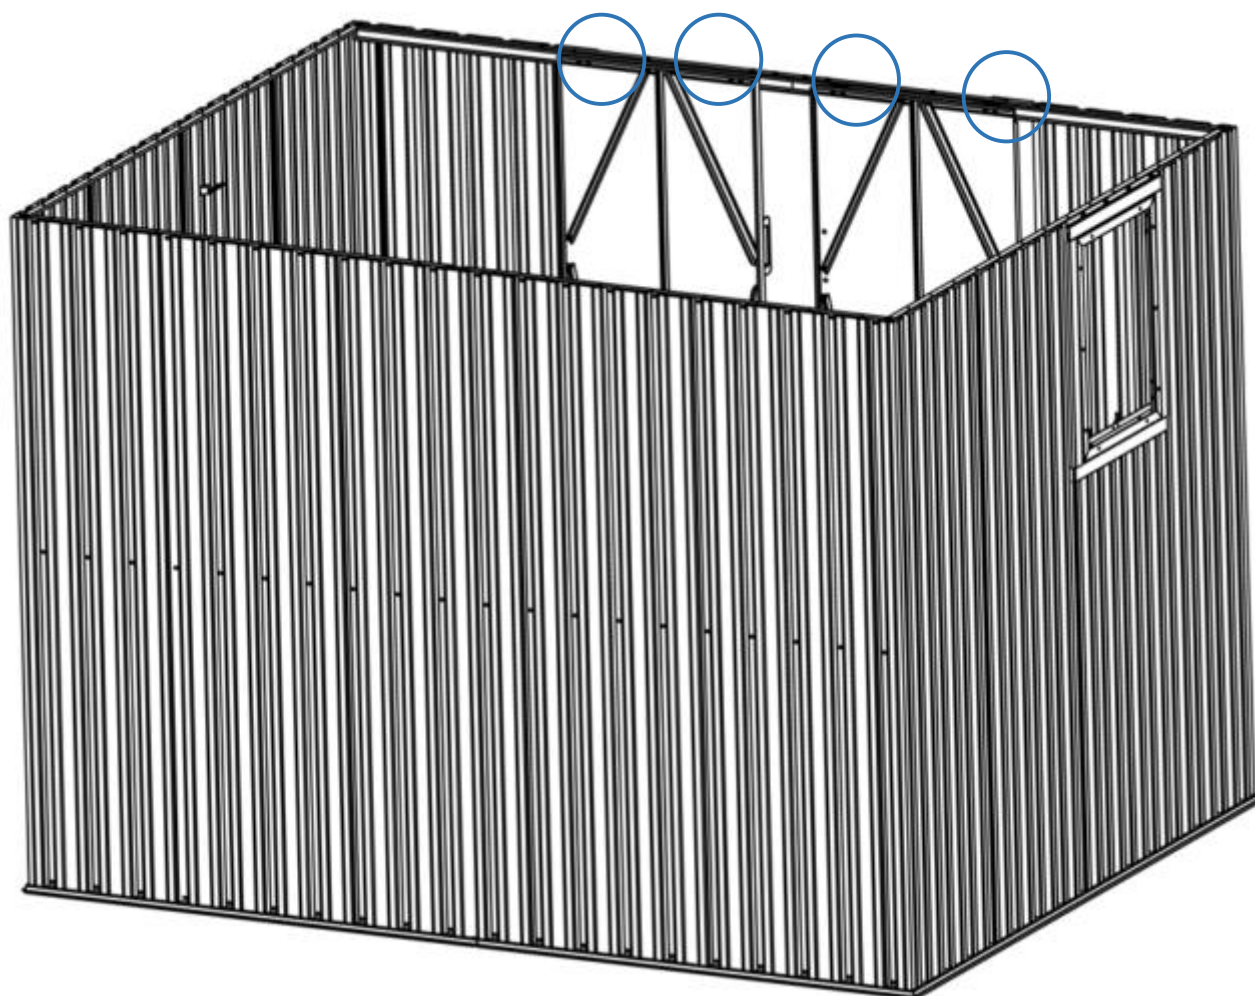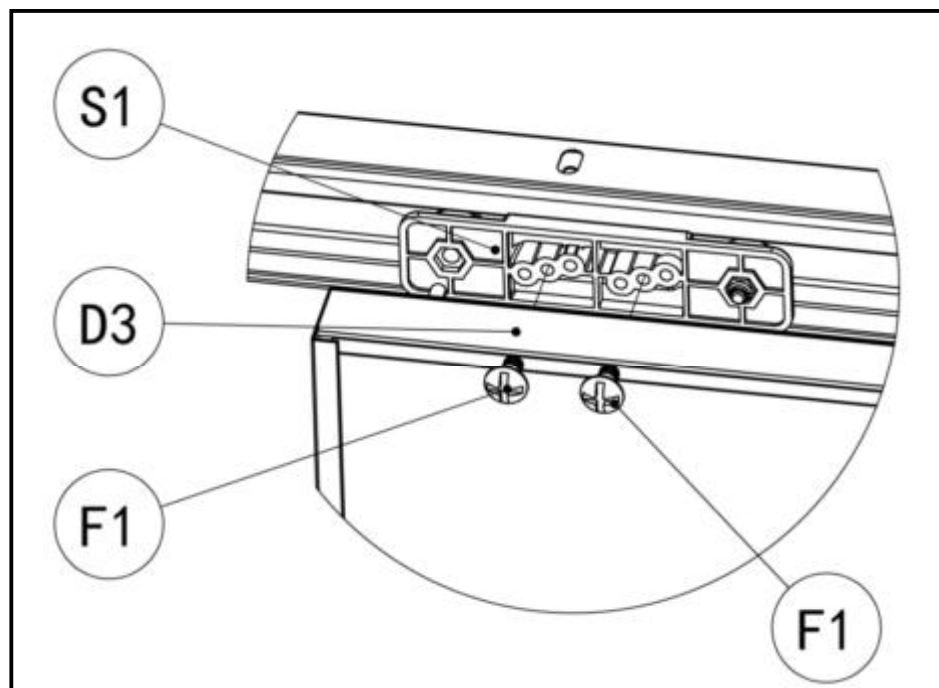

	
F8	138

Use F8 to protect
the screws

