


8*10ft Garden Metal Storage Shed Installation Instructions

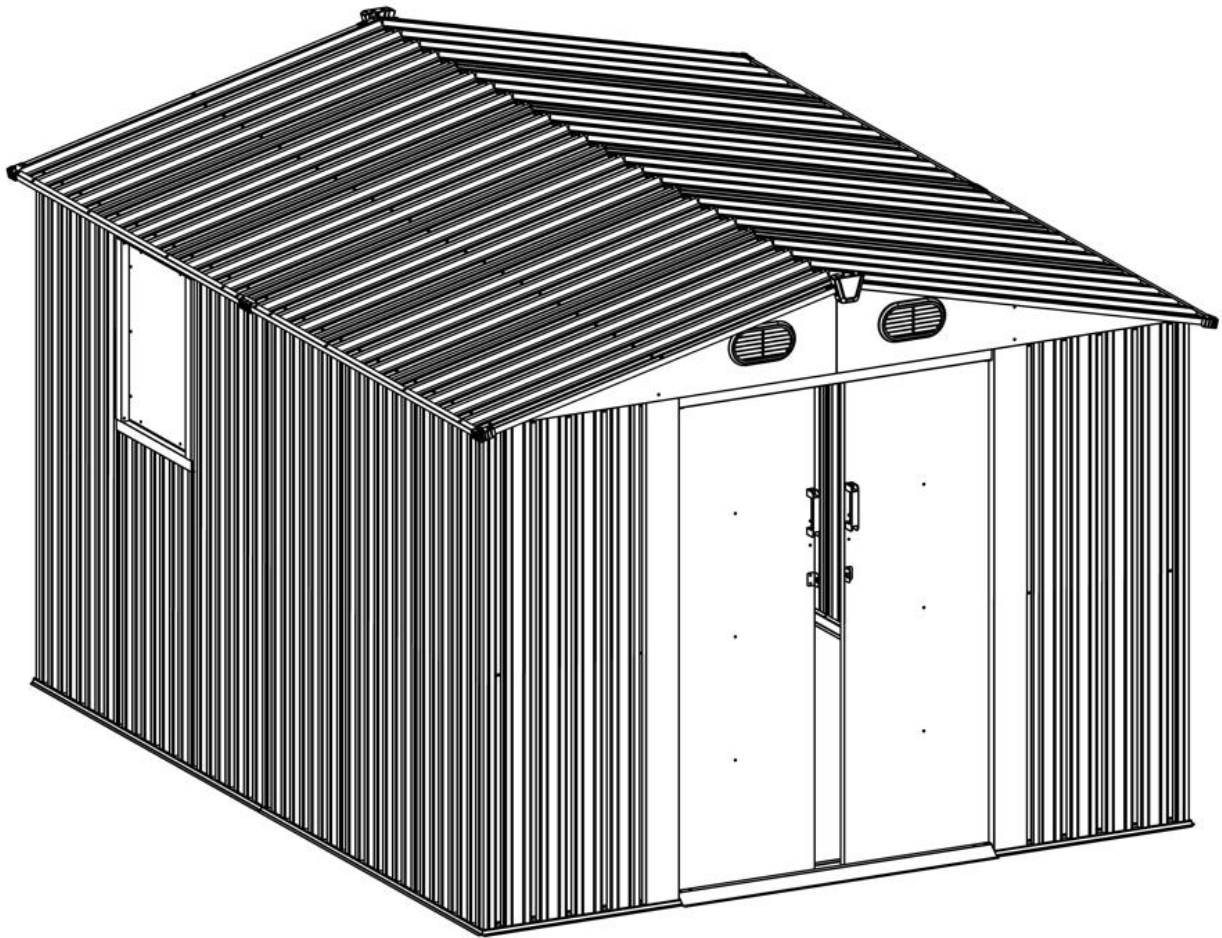

Thank you for choosing us!

Our goal is to provide high quality outdoor furniture with outstanding customer service all at an affordable price.

Please let us know if you have any concerns.


Please wear gloves to avoid injury!

The product comes in two cartons. Please install after receiving all cartons.

Please prepare below tools before installation. (Not Included)



Electric Screwdriver



+ Manual Screwdriver



Ladder



Spanner

Package included Tools



Gloves X 1 Pair

ATTENTION:

1. Please read this instruction carefully before installation and follow it strictly during installation.
2. Ensure that there are no problems later due to installation errors.
3. We have prepared extra screws for you to use in case of loss or damage.

Installation Notes

Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.

Make sure the colored panels are facing outwards and all the holes match. The panels are textured, please install the panels in the order specified in the instructions. All lines and holes should be matched to make the storage shed more stable. Please ensure that all screws are tightened to prevent the product from falling apart.

There is a protective film on the surface to protect the product, you can tear it off after installation. If you do not damage the film during installation, it can also remain on the product to protect.

Please place the product on a flat ground to prevent leaning and collapse. If the ground is uneven, the door may can't be closed.












Safety Precautions













We recommend **two adults** to complete the installation. Two adults installed together will make the installation process easier and safer.

The gloves must be carried to prevent hand cuts during installation.


Take care when using power tools near water the use of a residual current device (RCD) is advised. Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand. (We recommend that beginners use a manual screwdriver for installation.) Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.



PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENC


									
4L	1	4R	1	1L	2	2	1	3	1
									
5	1	P1	4	P2	11	P3	2	P4	1
									
P6	1	13R	1	13L	1	A2	1	8	1
									
7	1	A1	1	10R	2	12L	1	12R	1
									
9L	1	9R	1	11L	2	14	2	24	2
									
C1	1	C2	1	C3	2	C4	8	C5	1
									
C6	2	C7	1	C8	1	ABL	2	APL	2
									
APR	2	PL	4	AP2	14	AP5	2	AP6	4

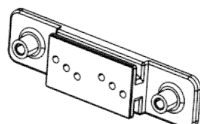

									
AP7	4	CL	2	B2	2	B3	2	B4	4
									
D1	1	D2	1	D3	4	D4	2	D5	4
									
D6	4	D7	2	D8	4	C9	1	C10	2
									
S1	4	S2	8	F4	20	F1	568	F6	94
									
F2	94	F12	4	F17	4	F8	182	F7	412
									
RC2	4	GF	4	RT3	2	F9	8	F10	8
									
F5	8	D9	2	1R	2	P5	2	E9	12
									
10L	2	11R	2	ABR	2	CR	2	RC3	2



[illegible]

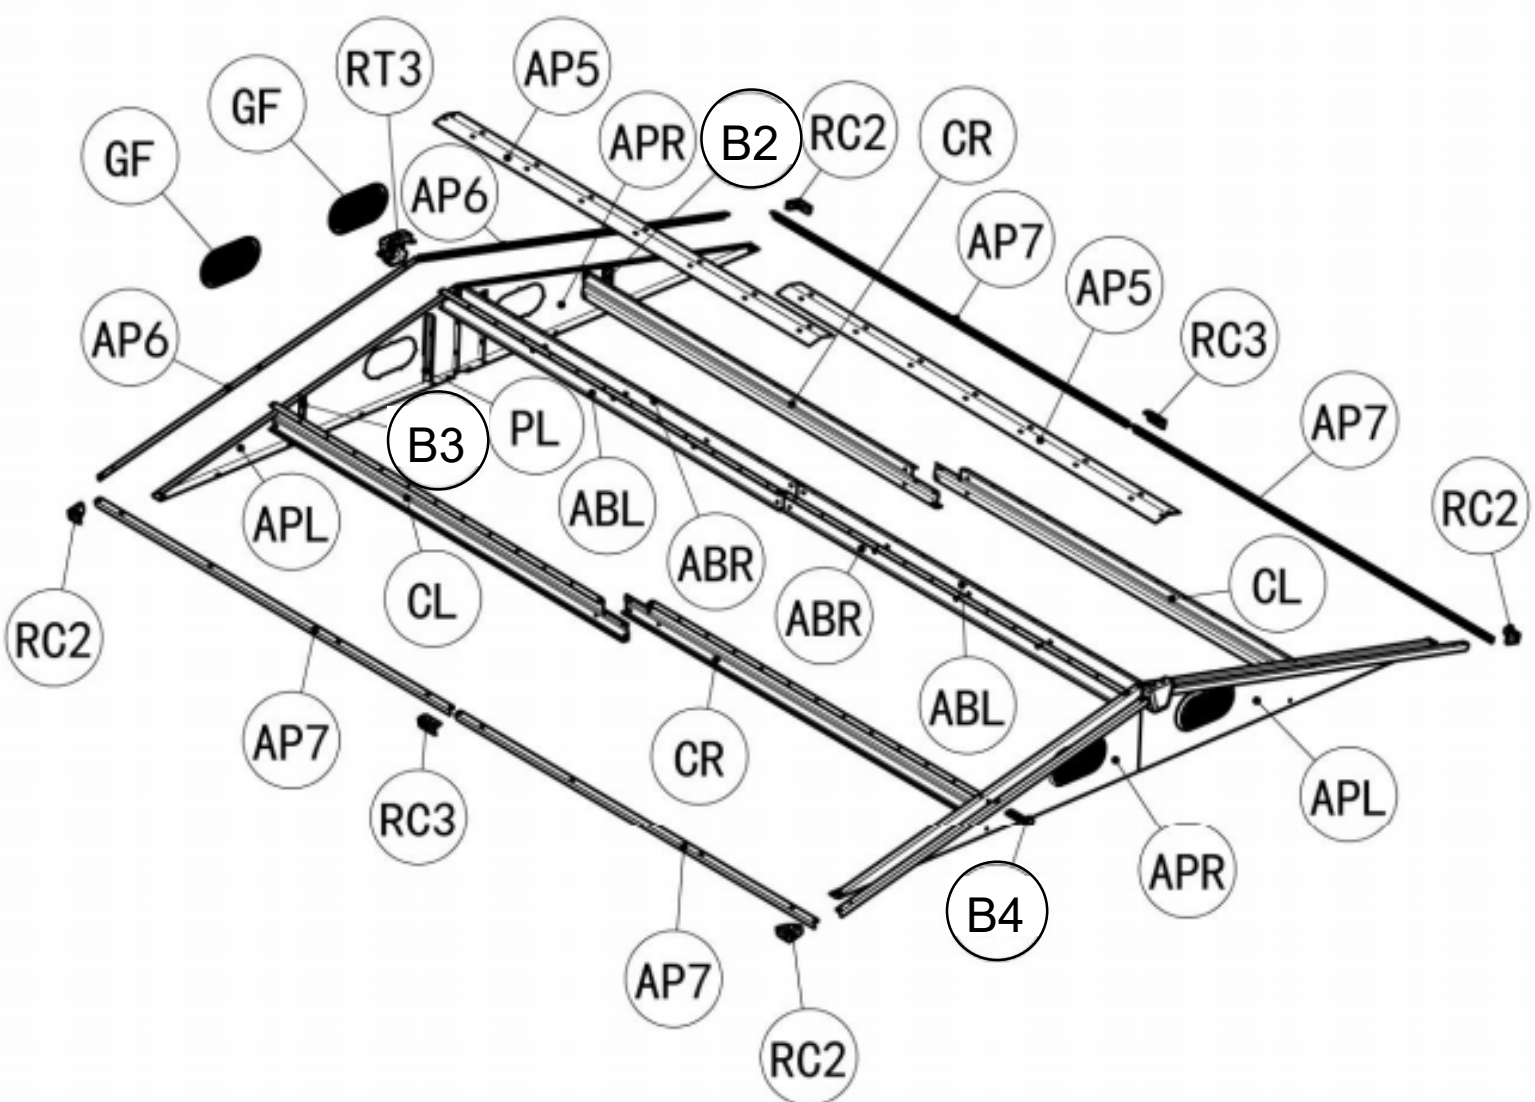

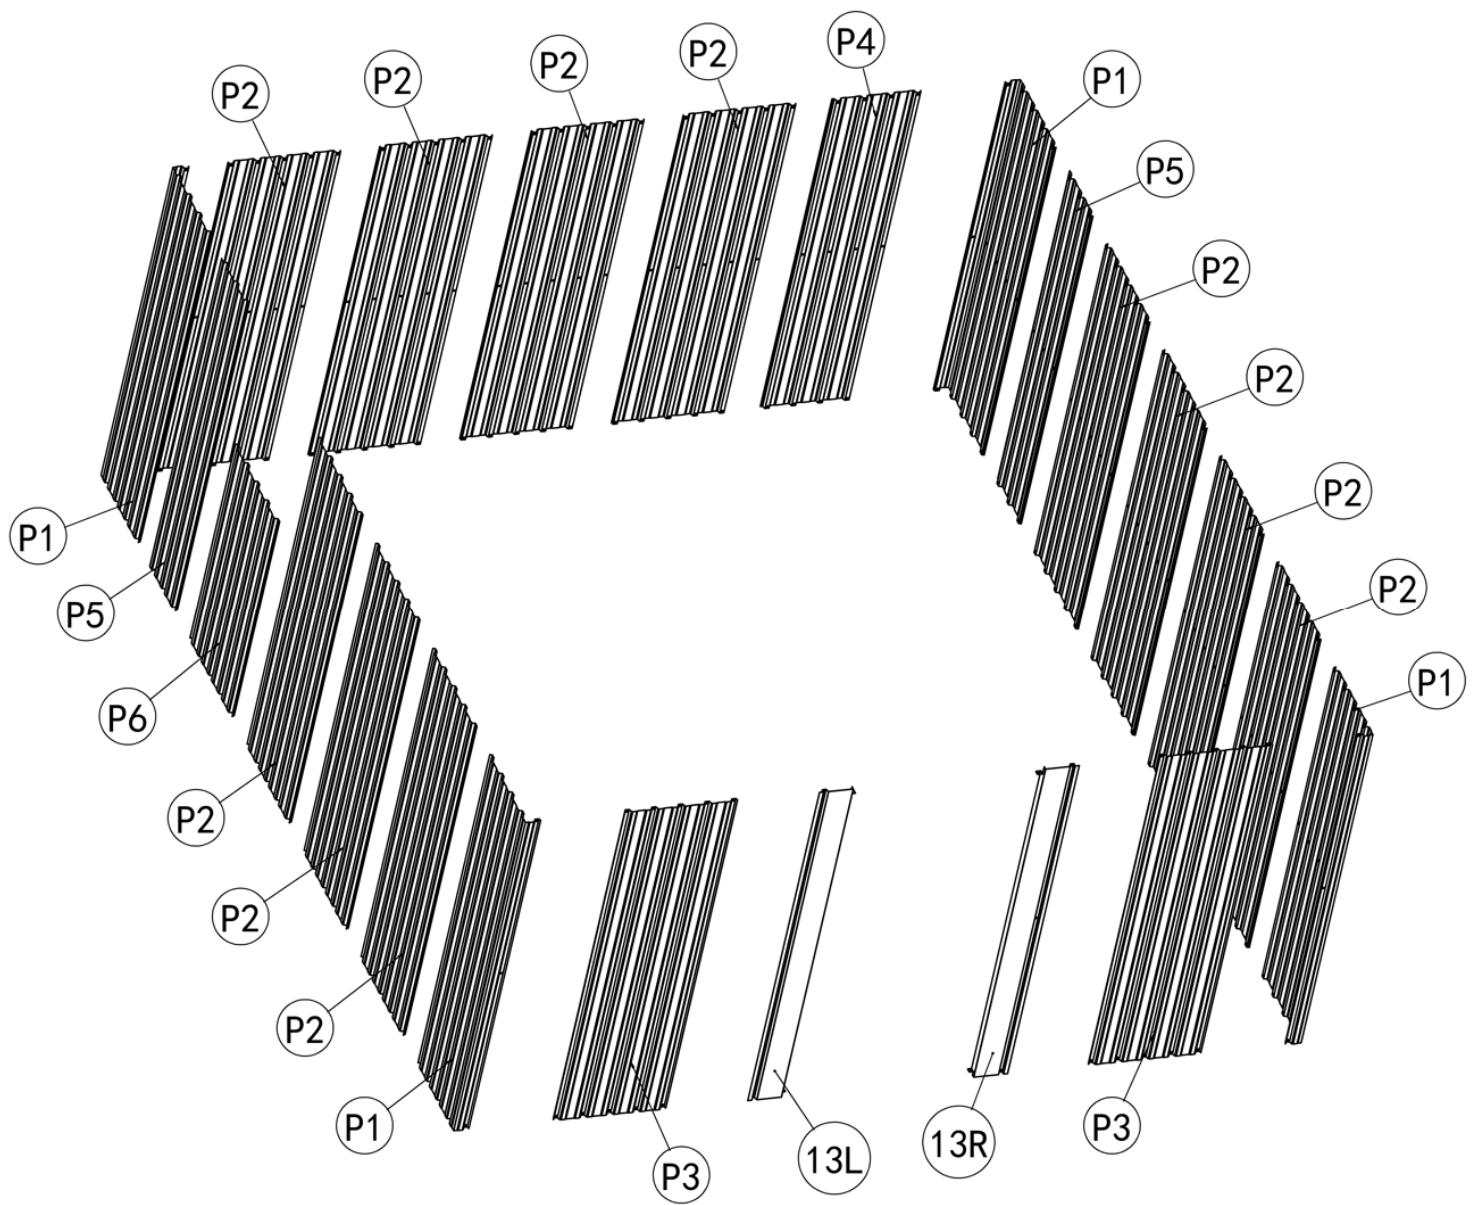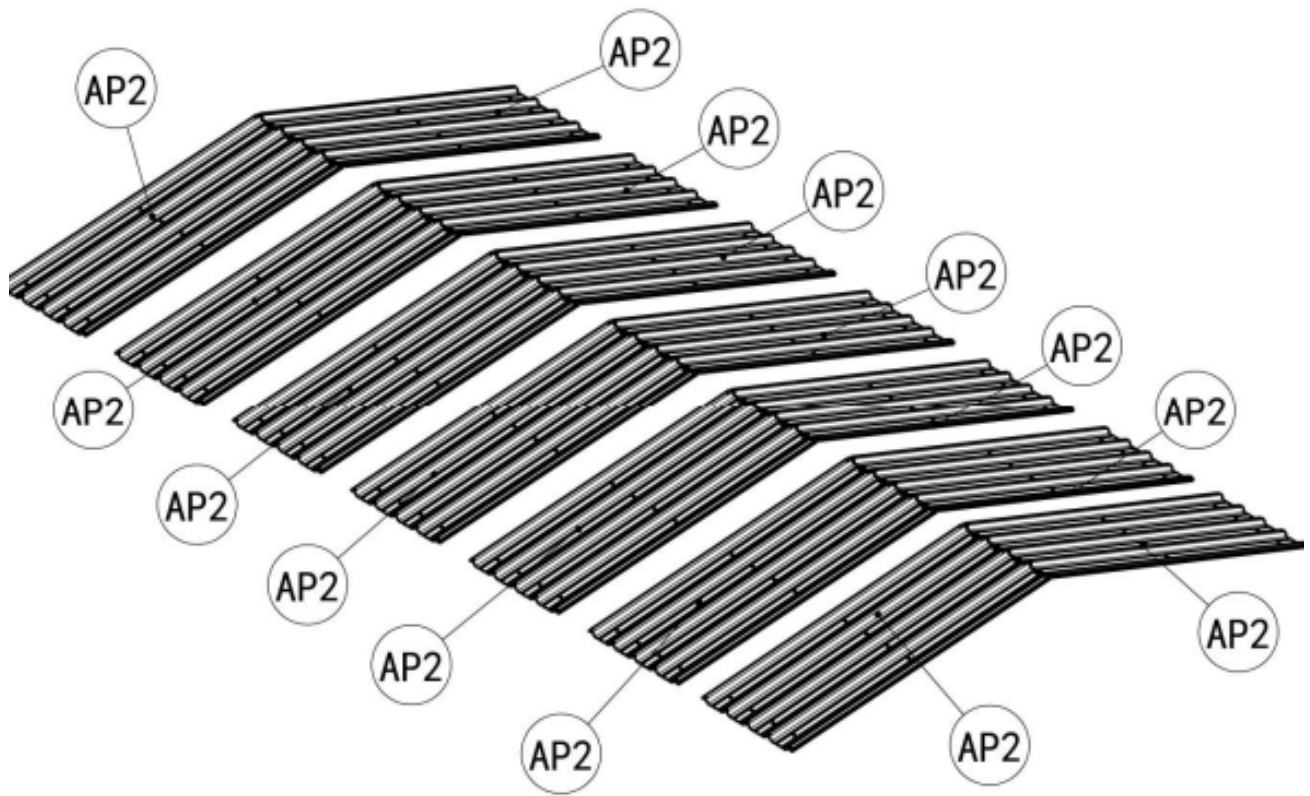

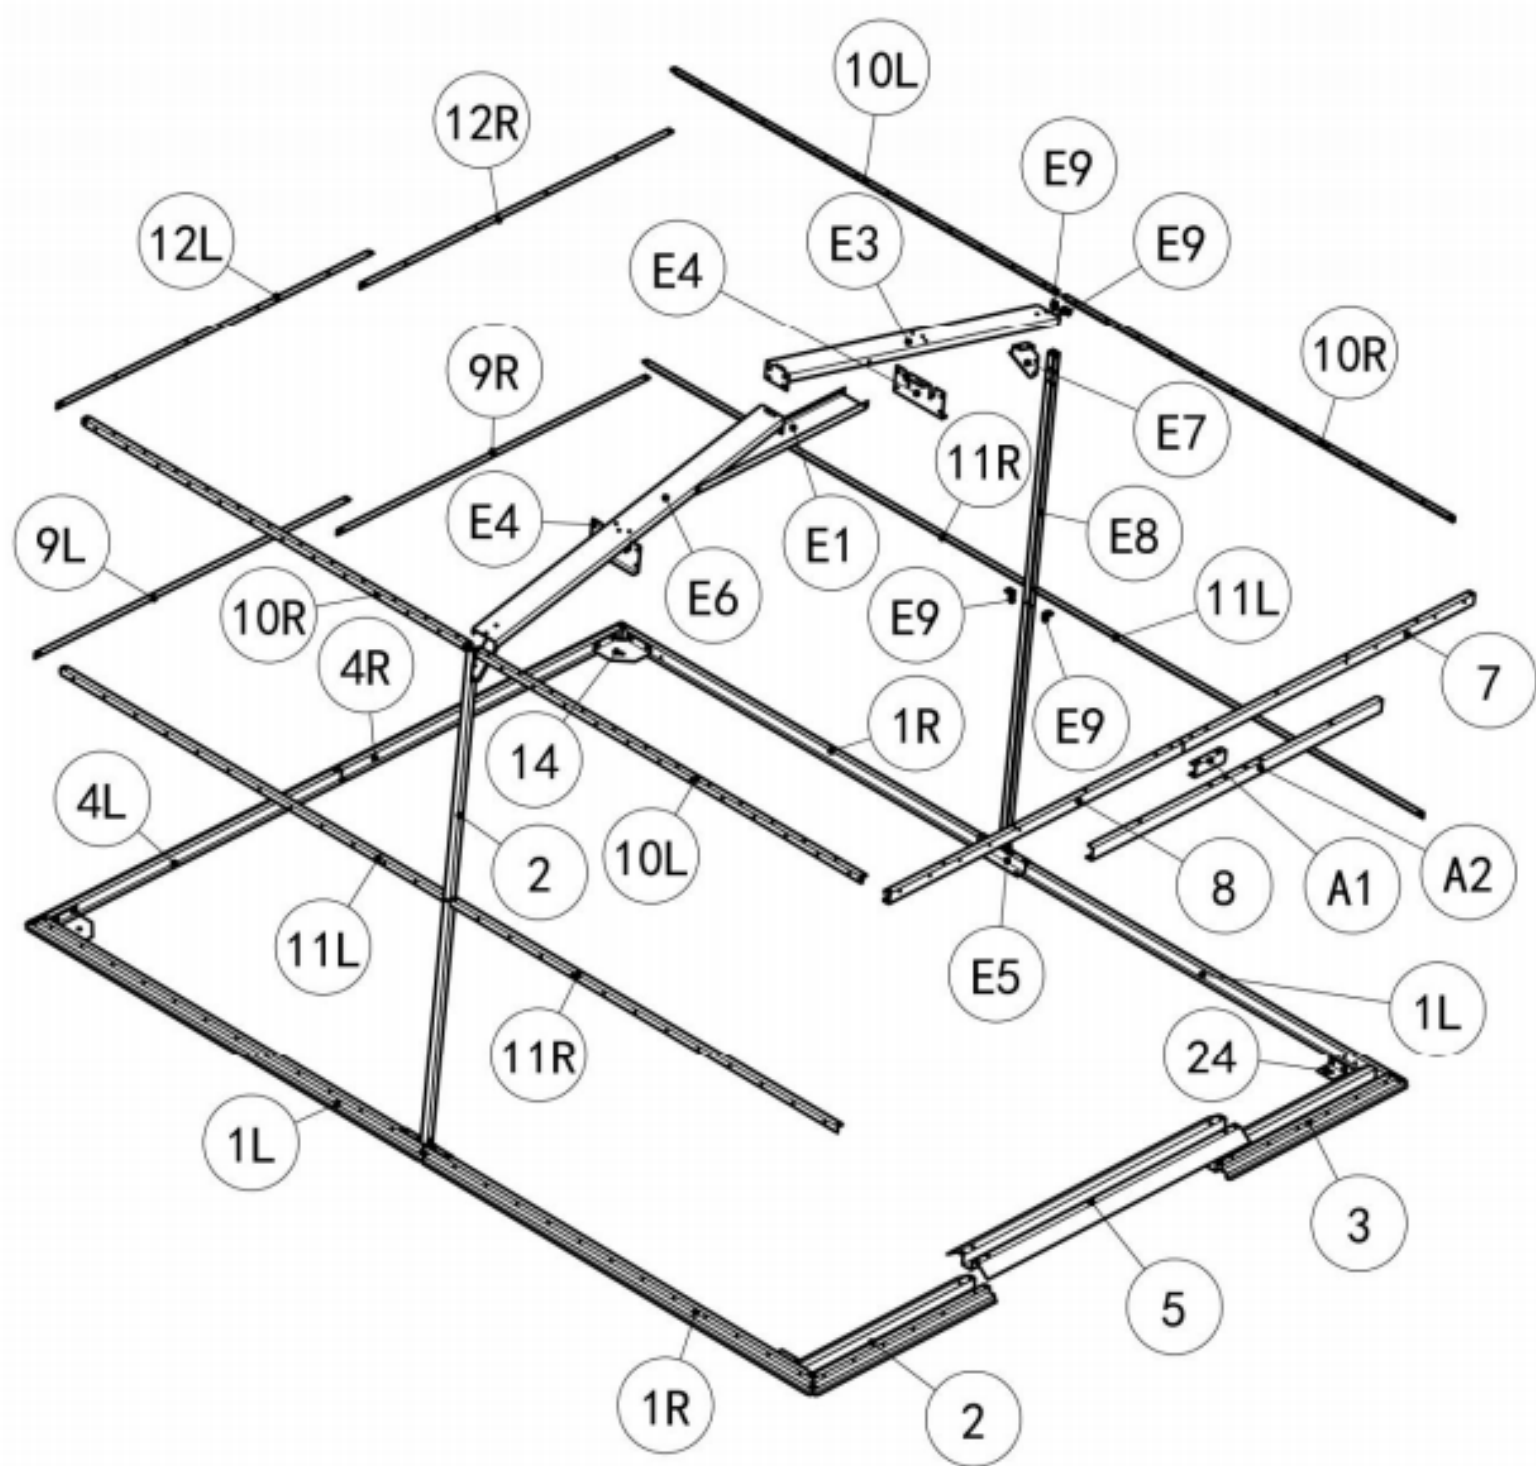

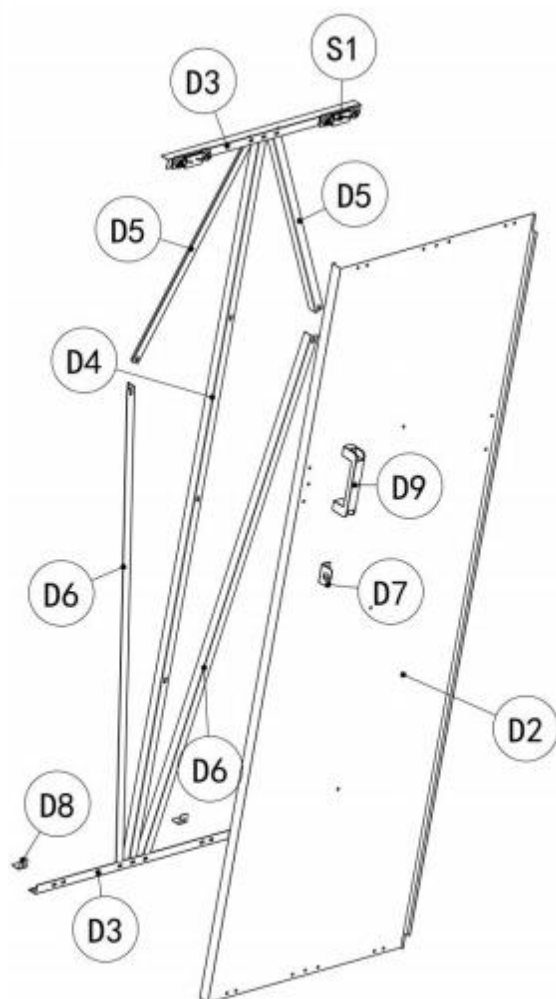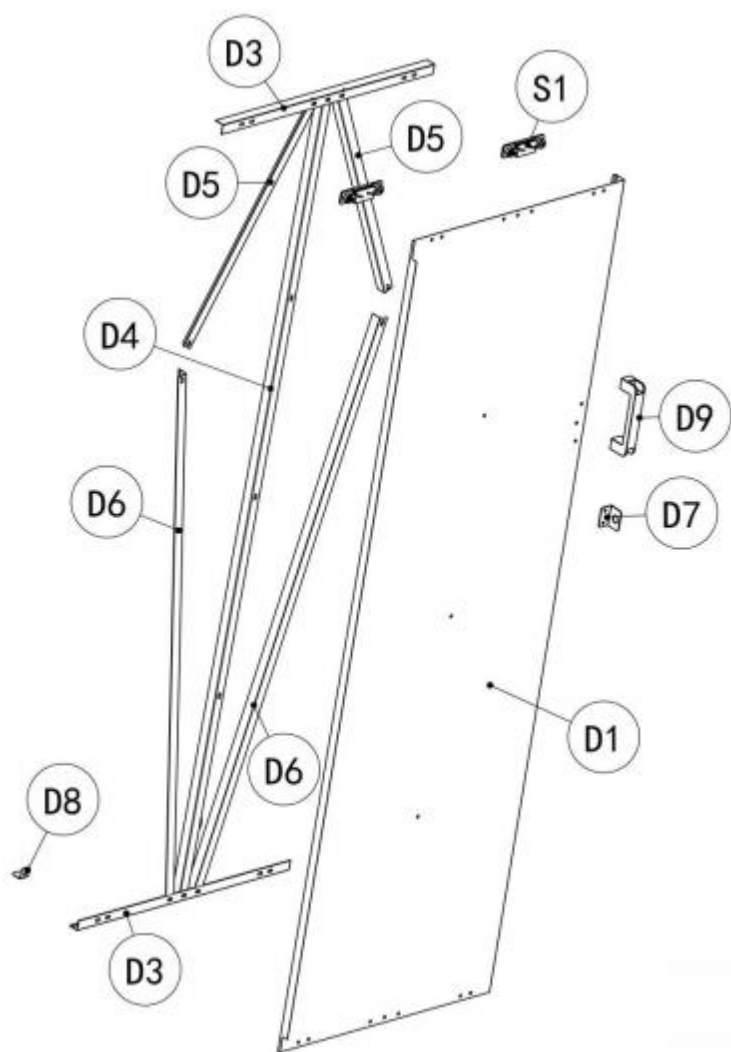

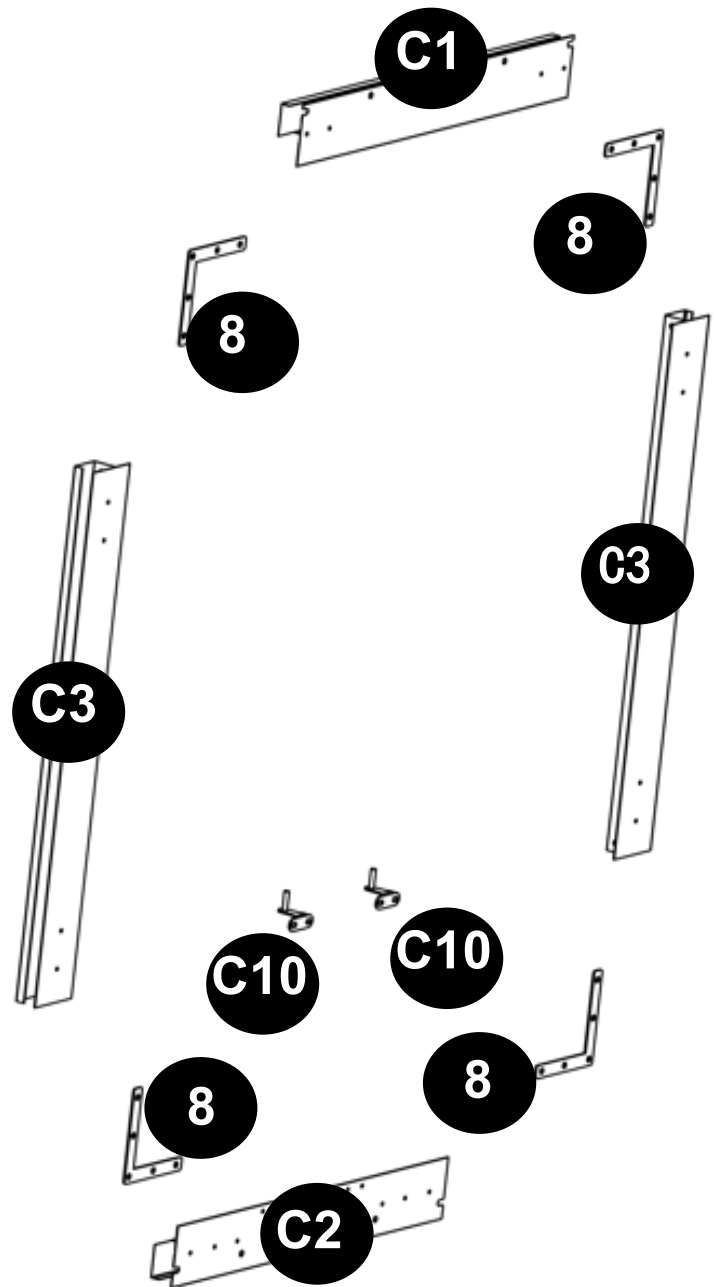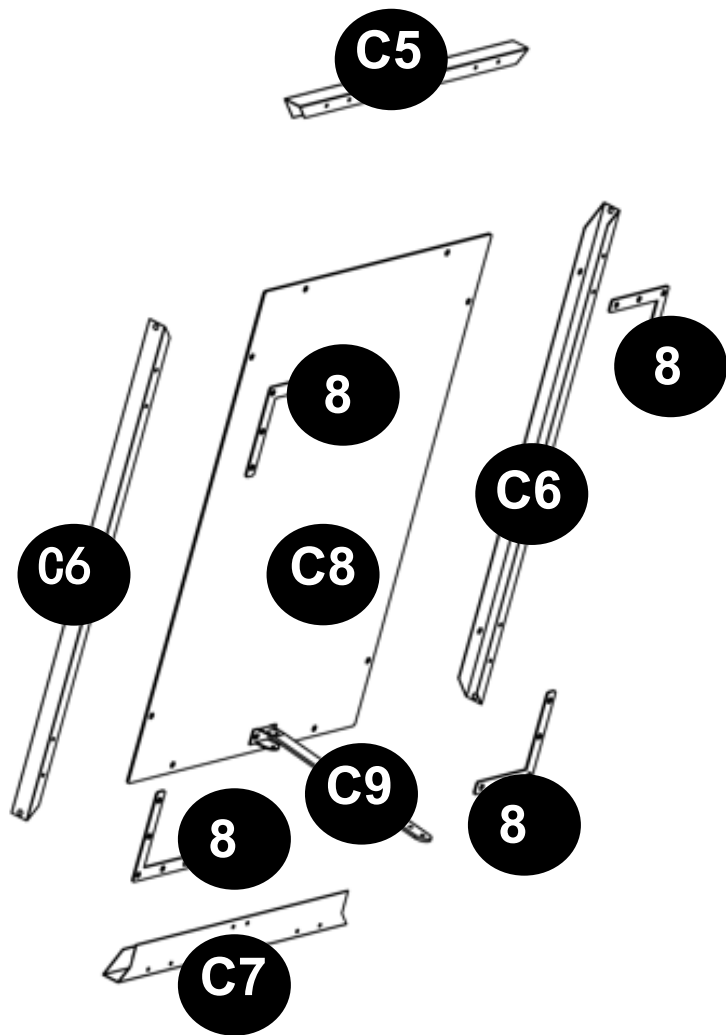





1.Base installation

ST4.8X10





F1





30

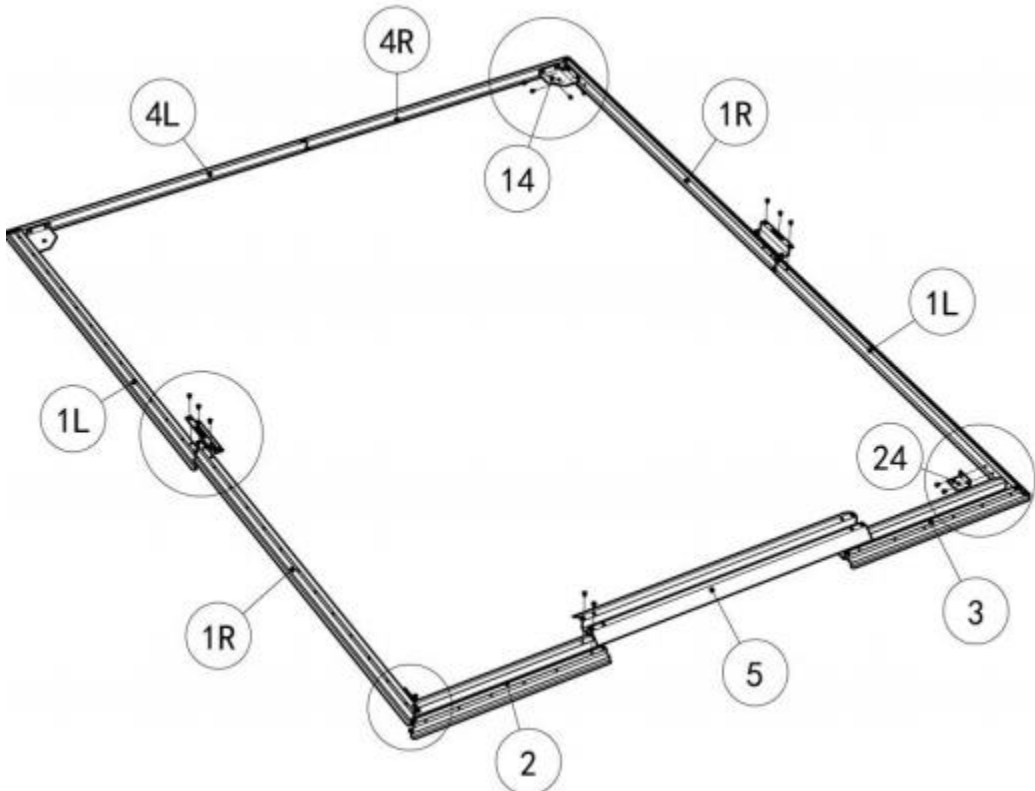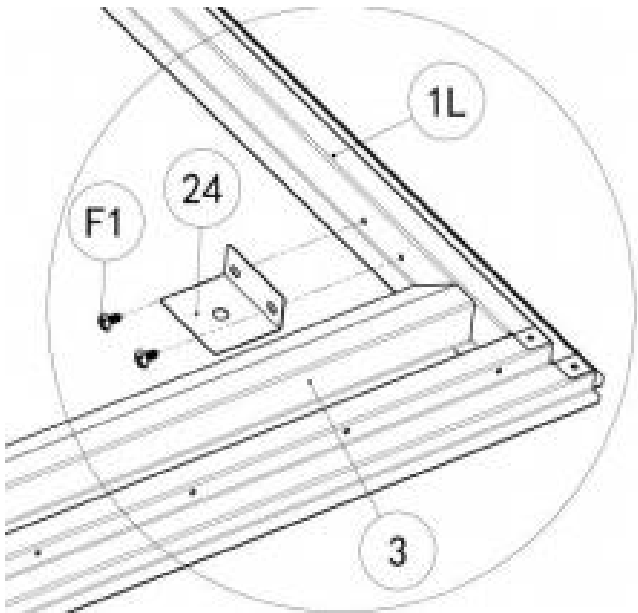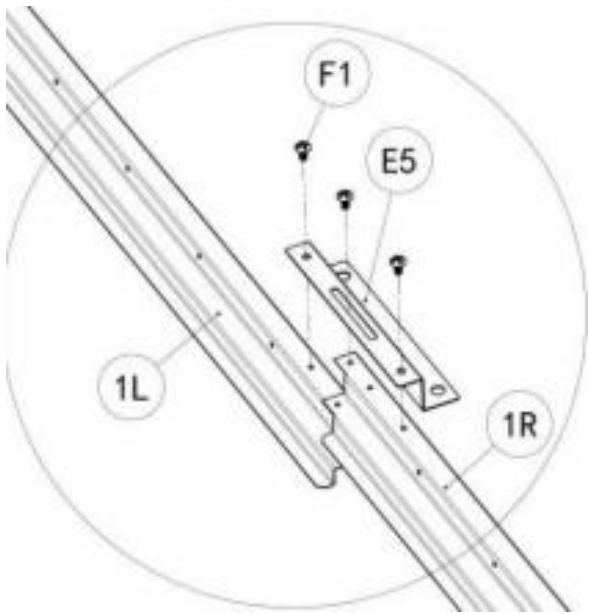
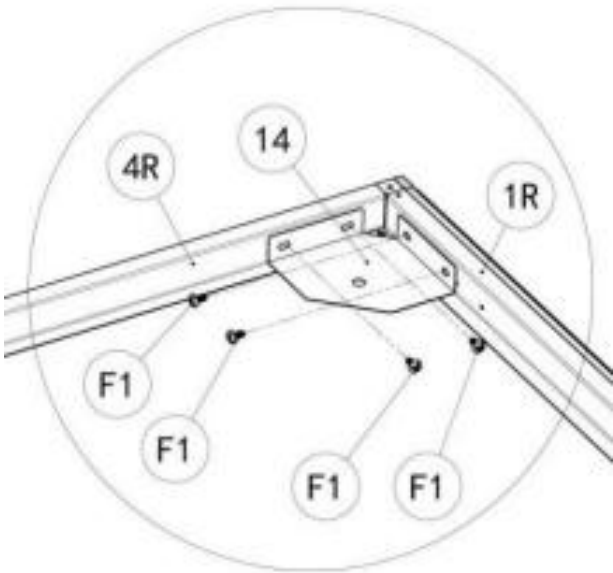


2.Wall installation



ST4.8X10		M5X12		M4X18		M5				M4			
													
F1	272	F2	4	F5	8	F6	4	F7	230	F9	8	F10	8

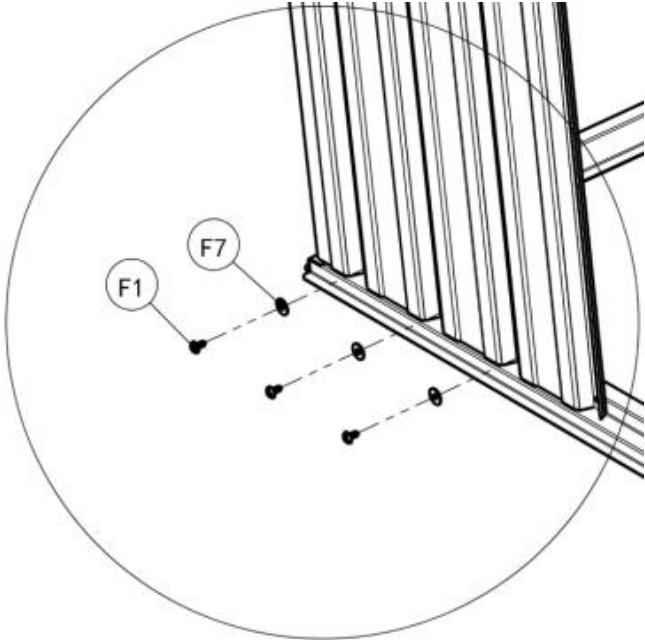
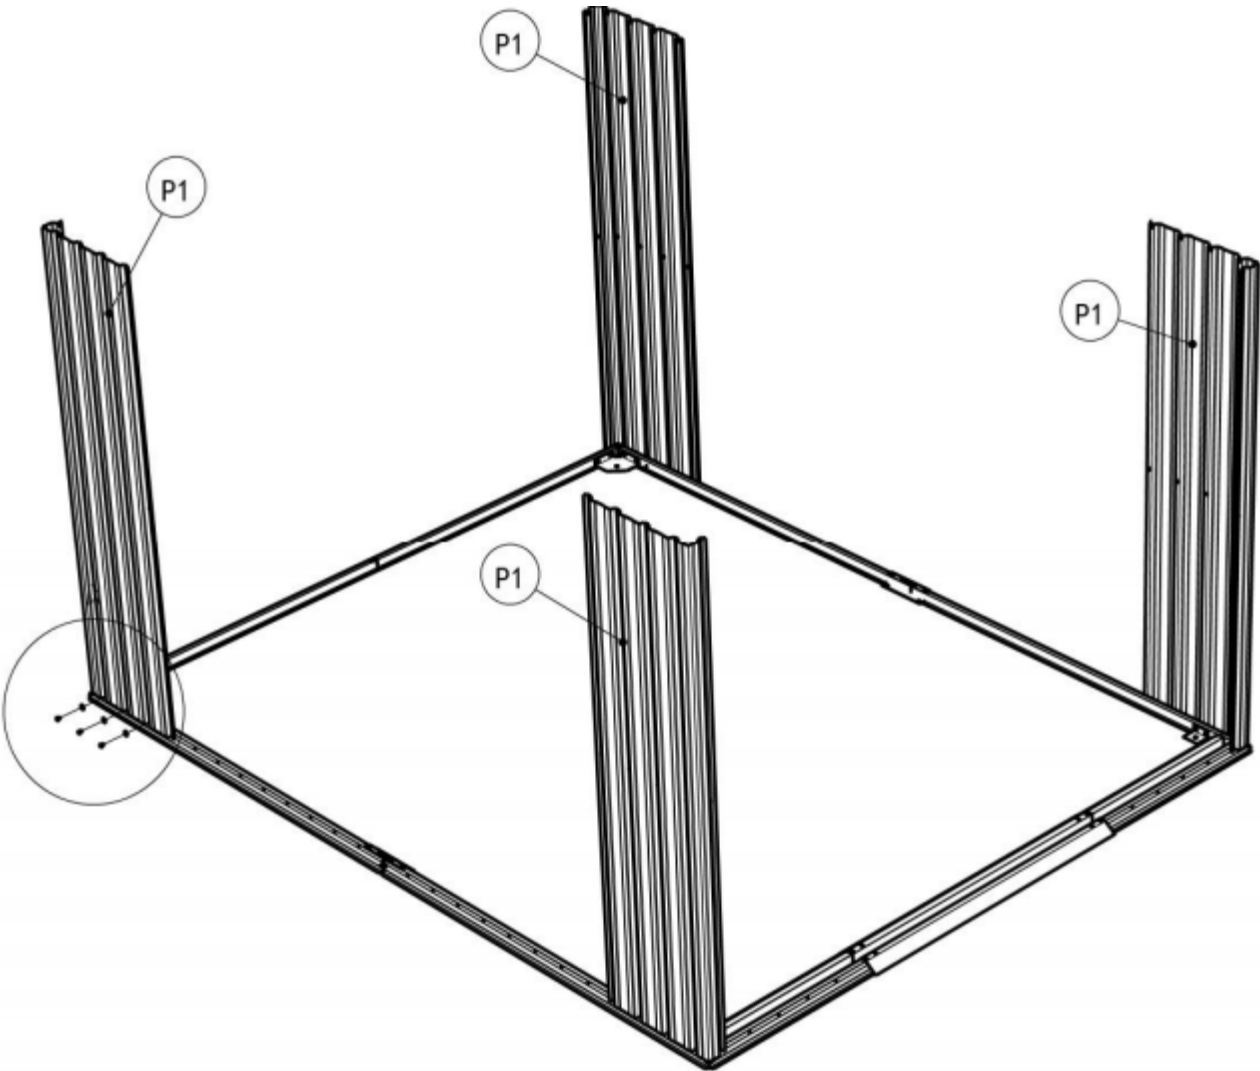


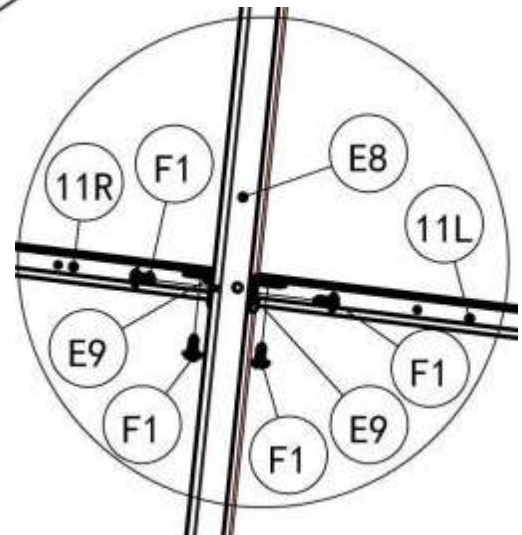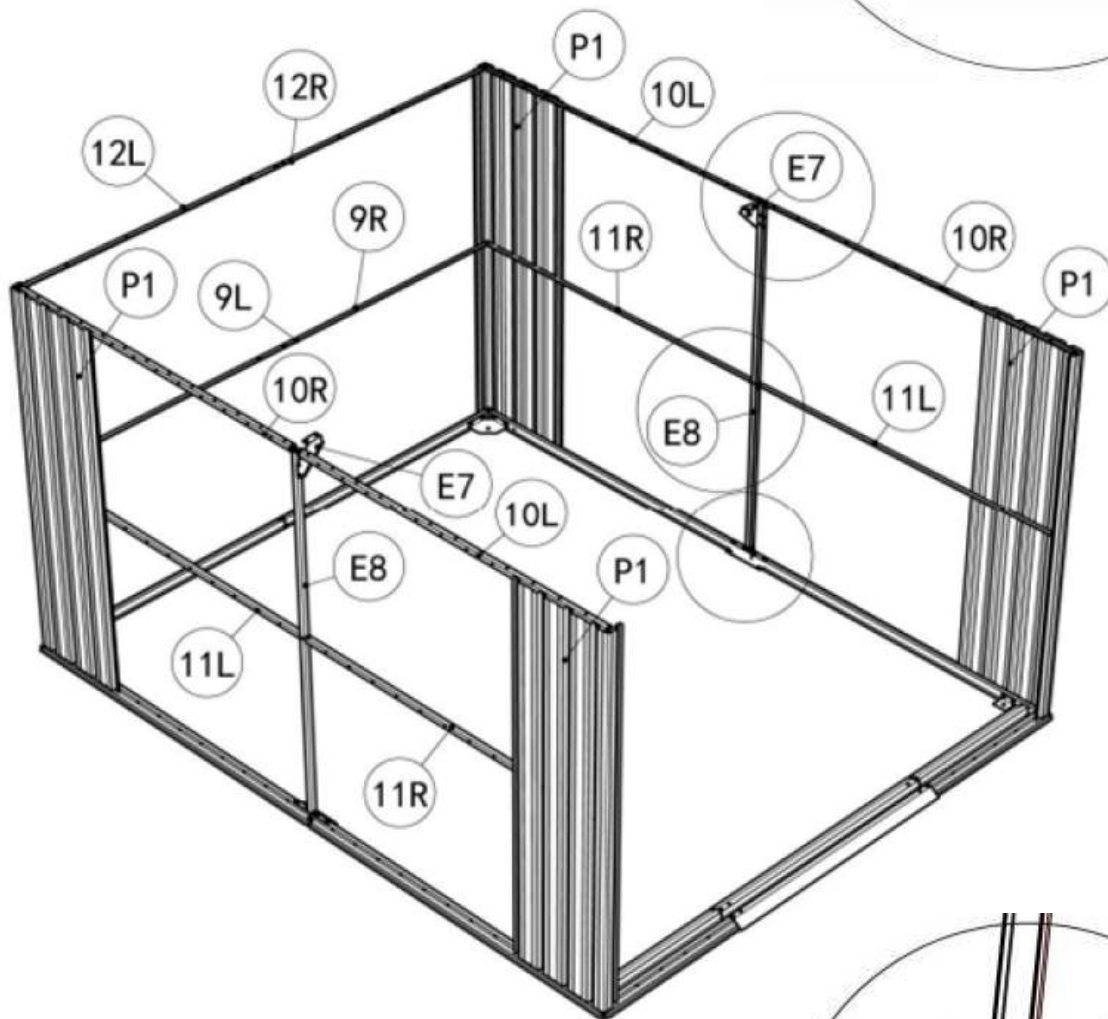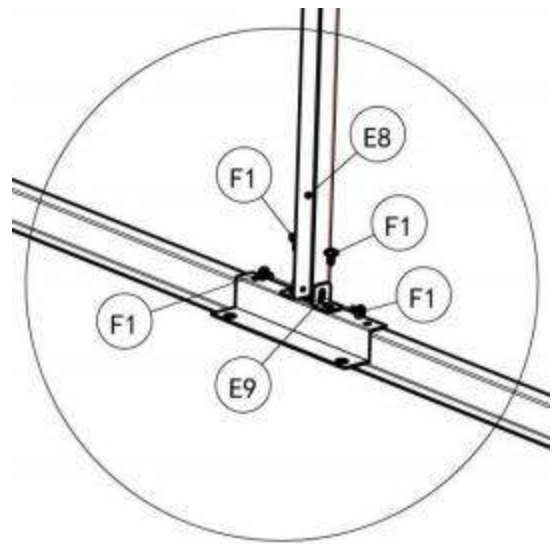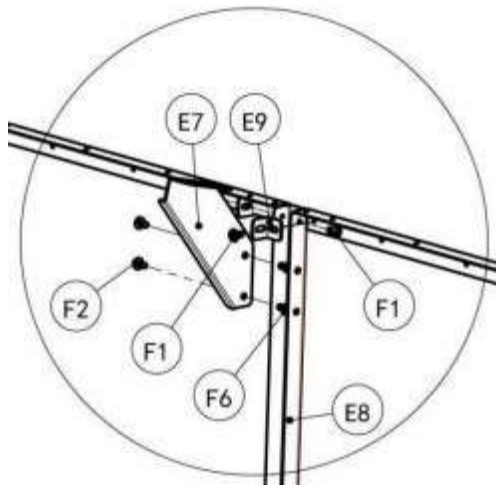

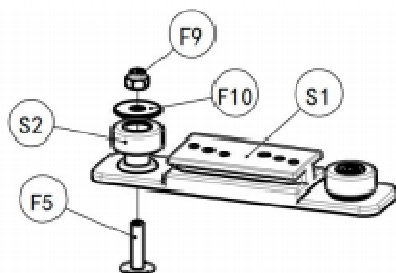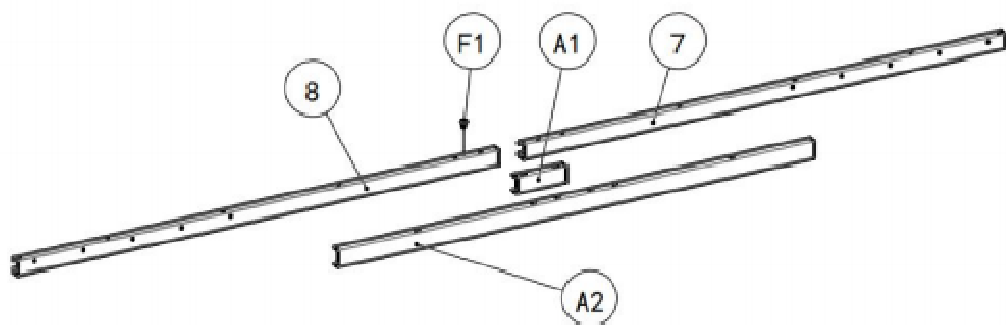


Note: Put the installed S1 and S2 into slots 7 and 8 in advance.

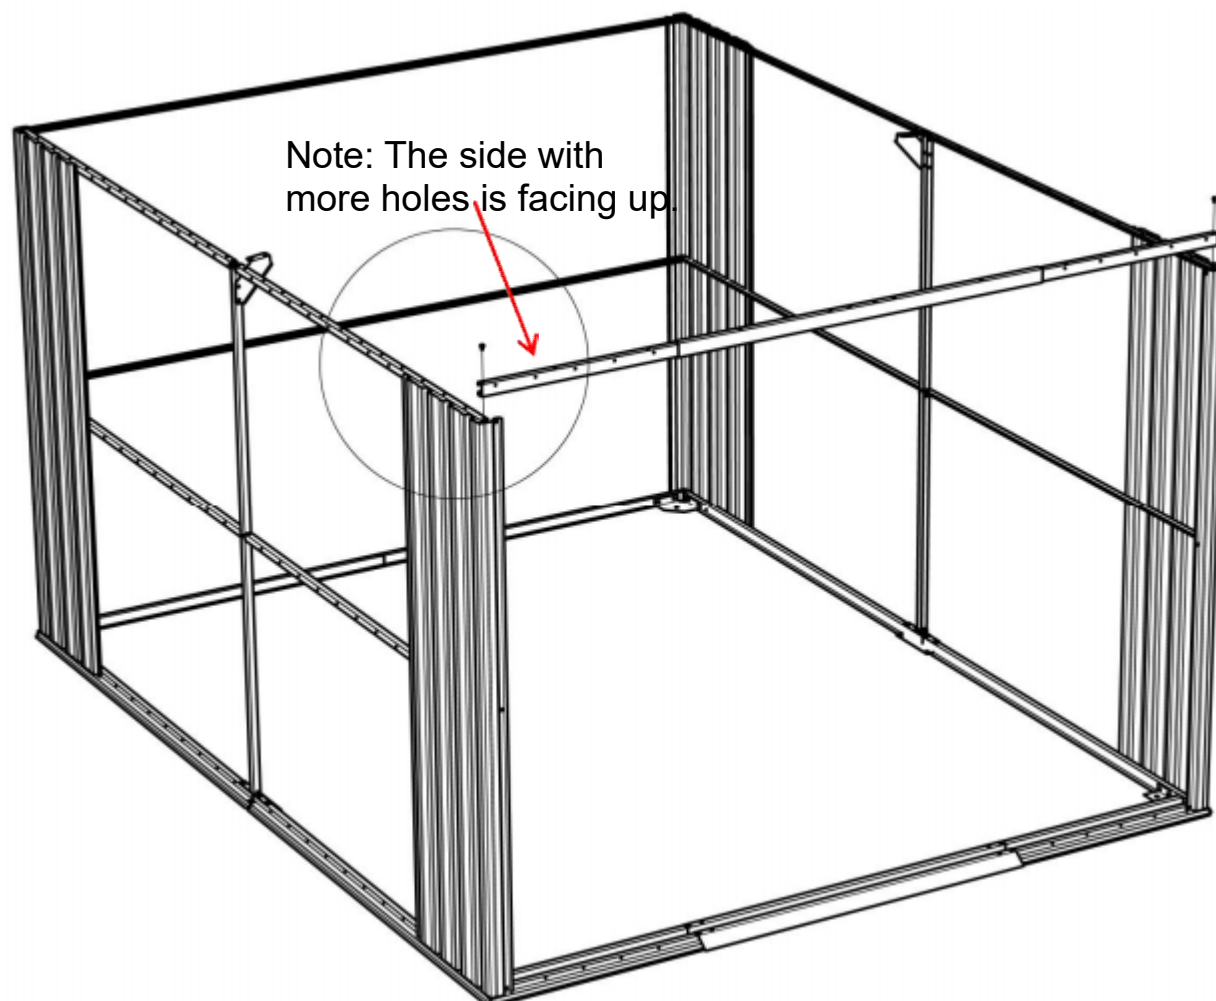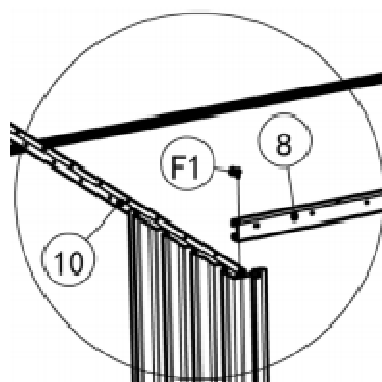

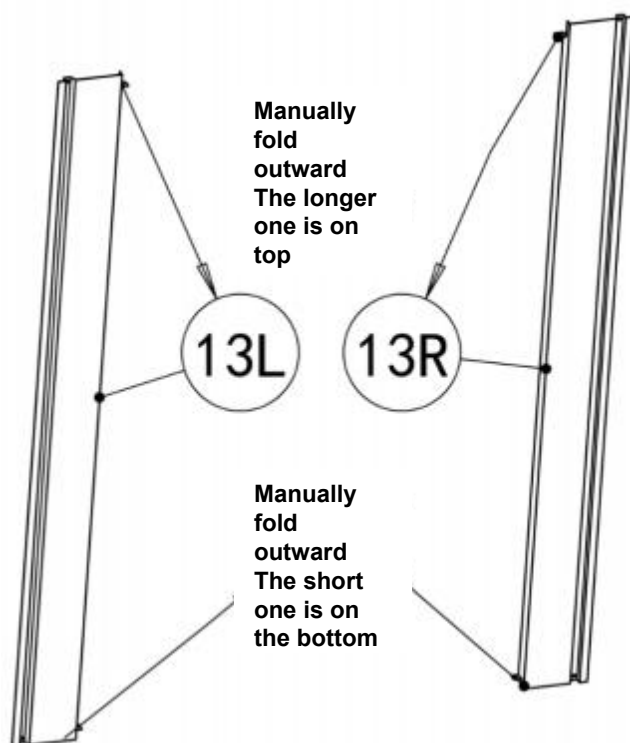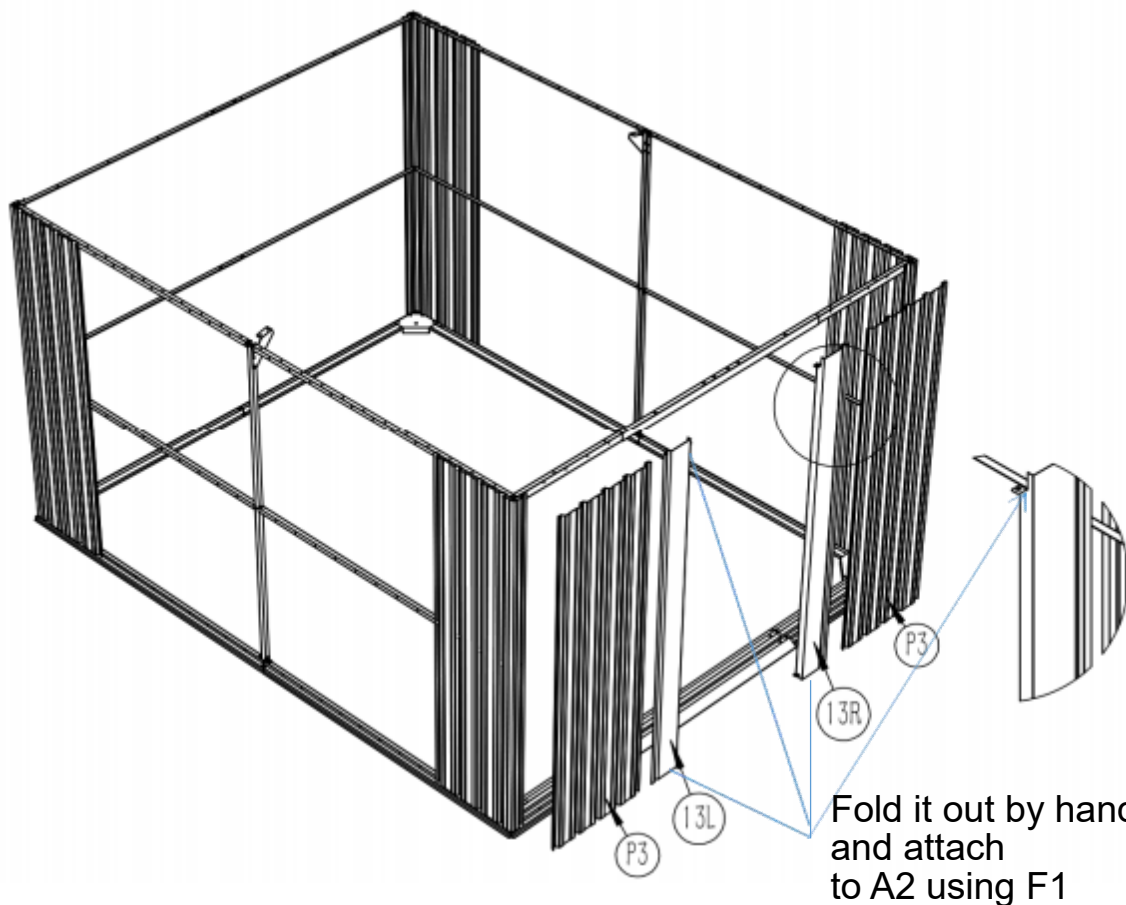




P4 and P5 are placed under p2.





Note: P4 has no holes. The overlapping tiles can be drilled according to your needs. Use F1 to lock P4


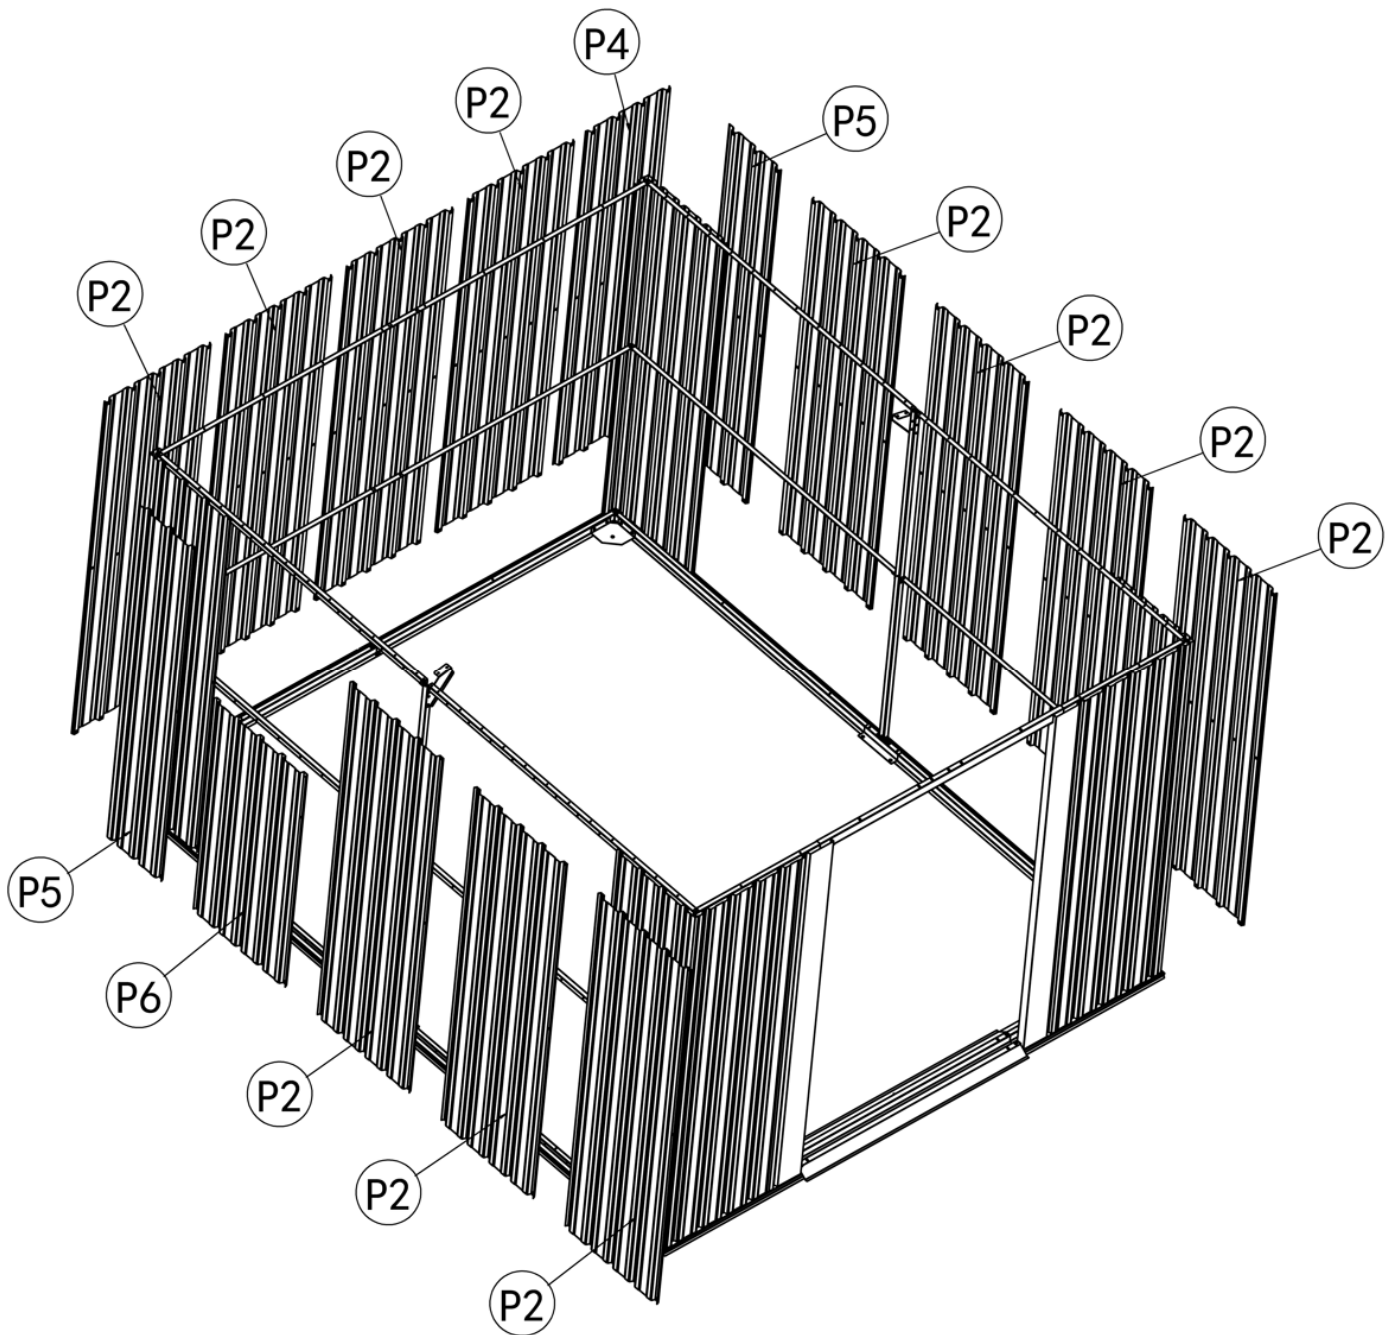


3.Window assemble

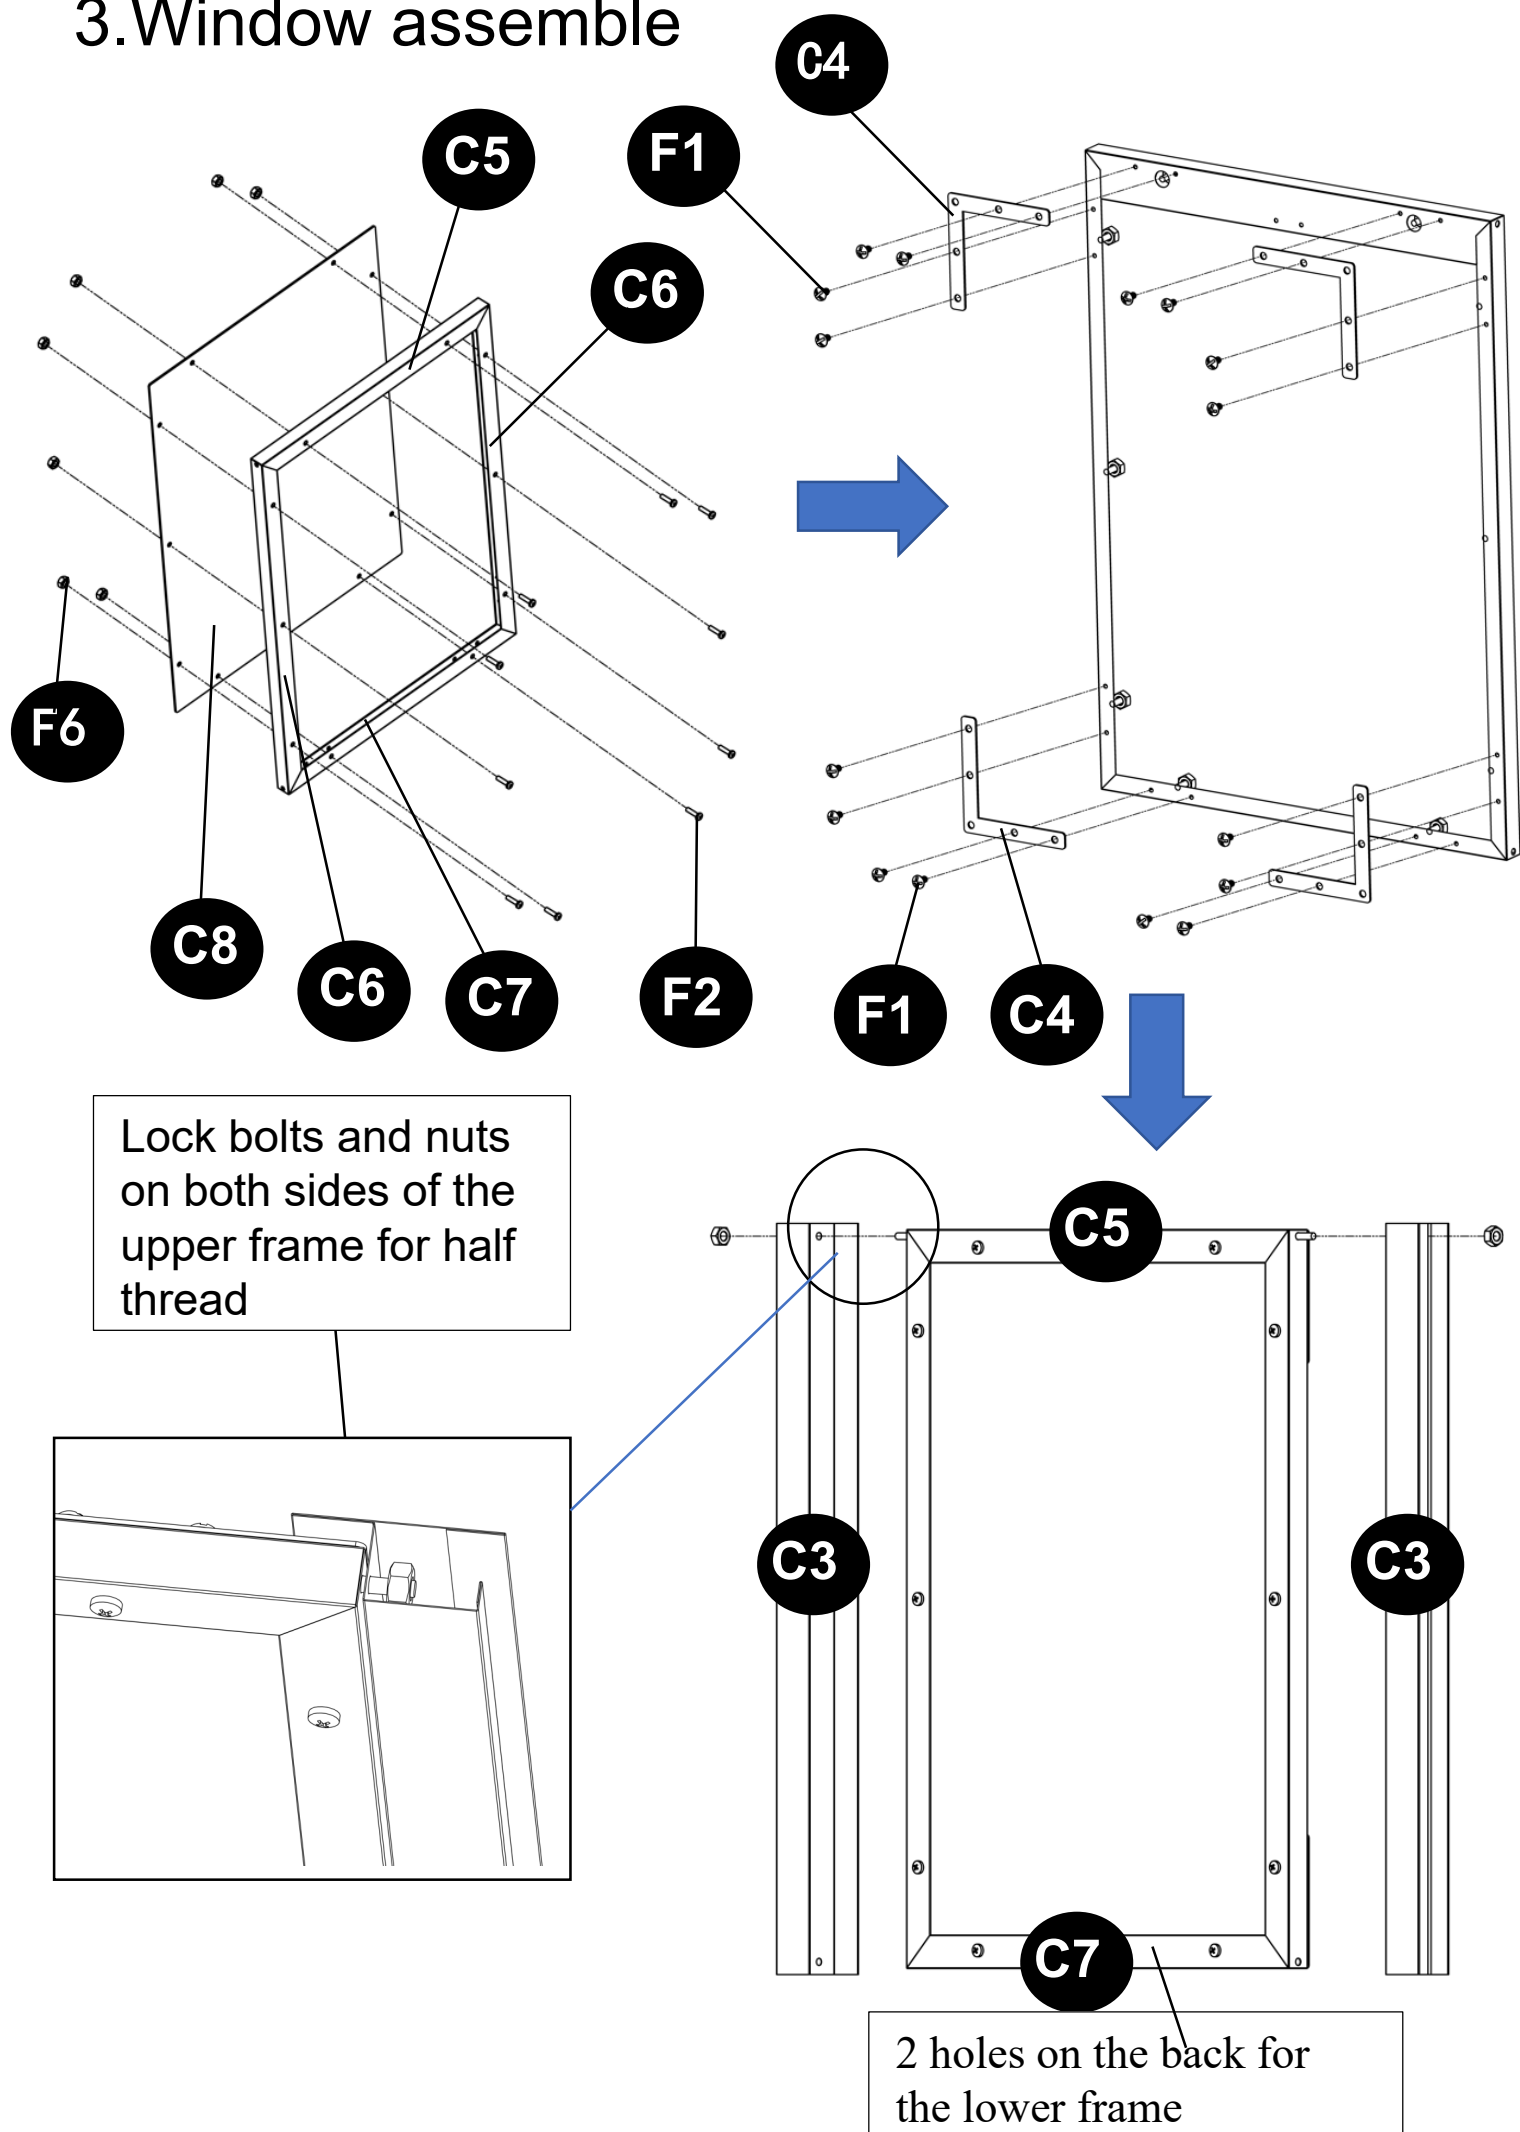

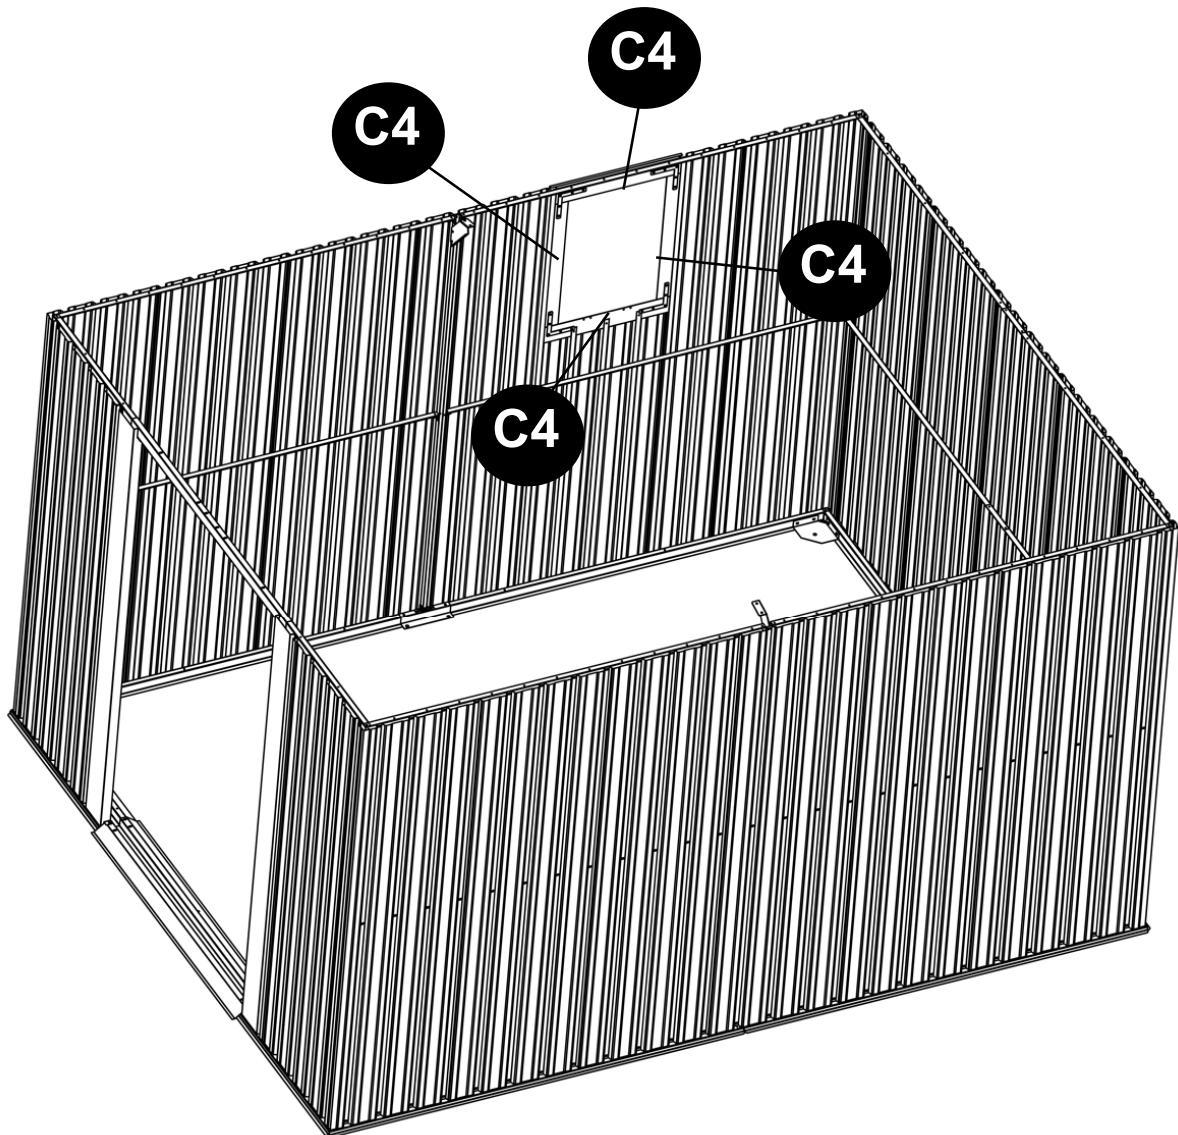
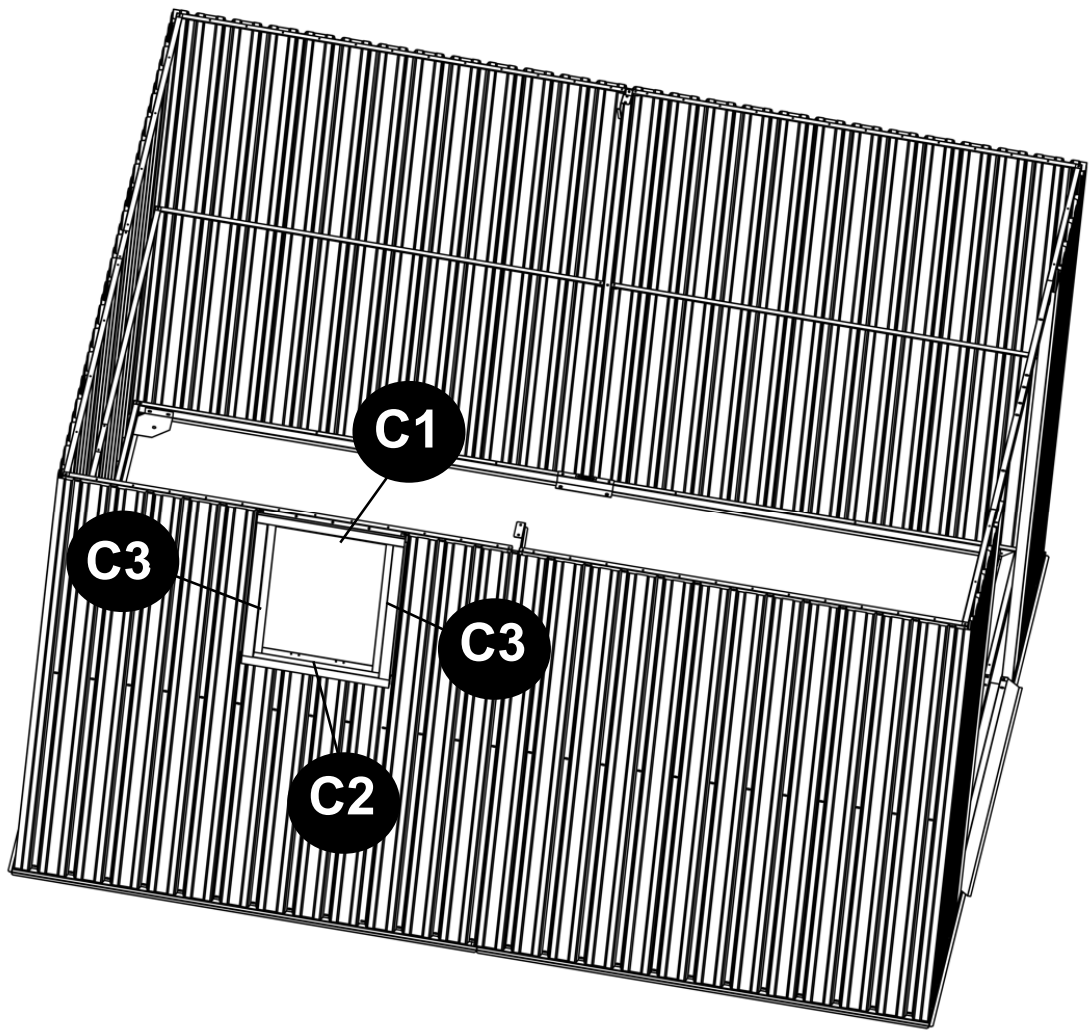


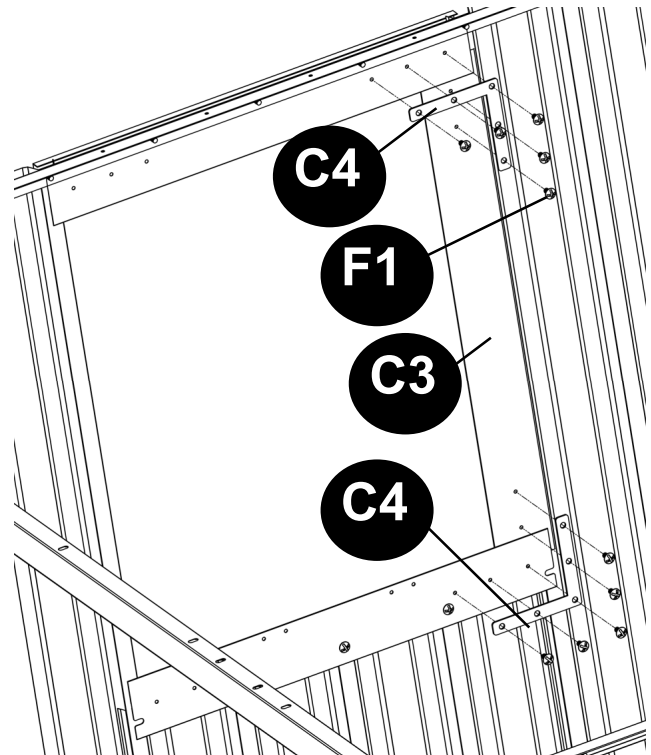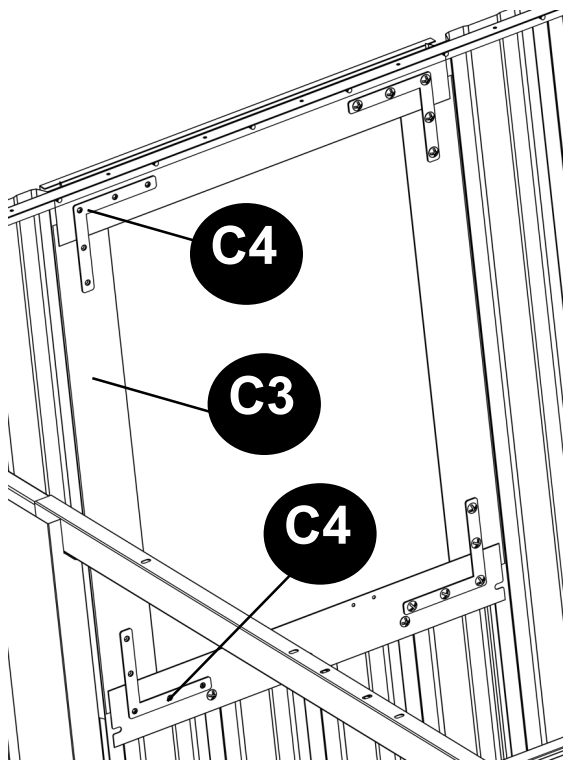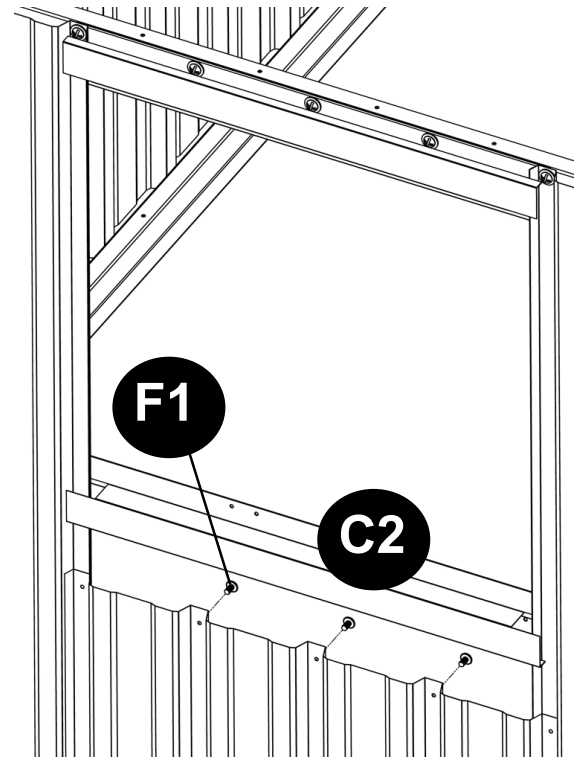
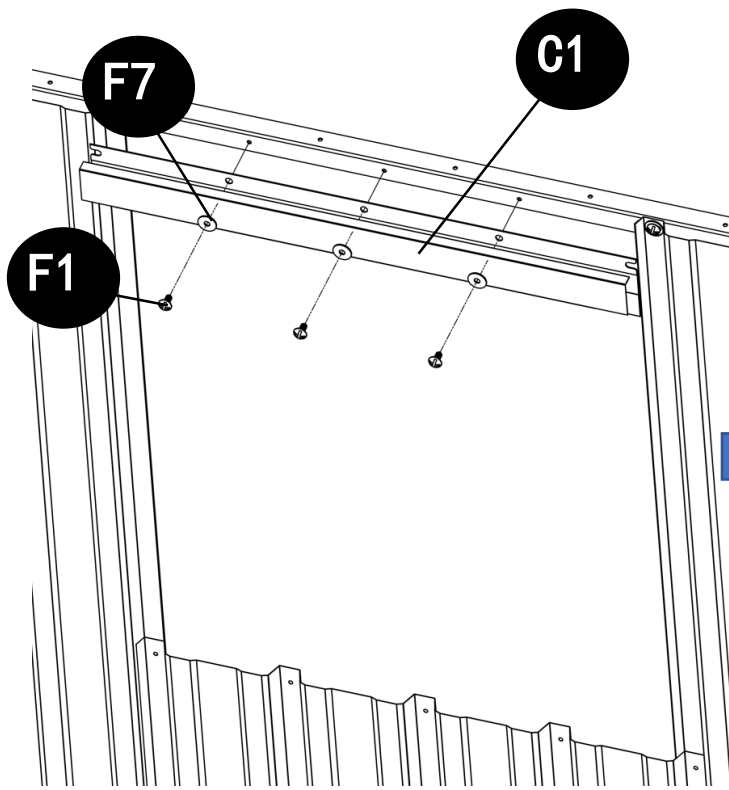




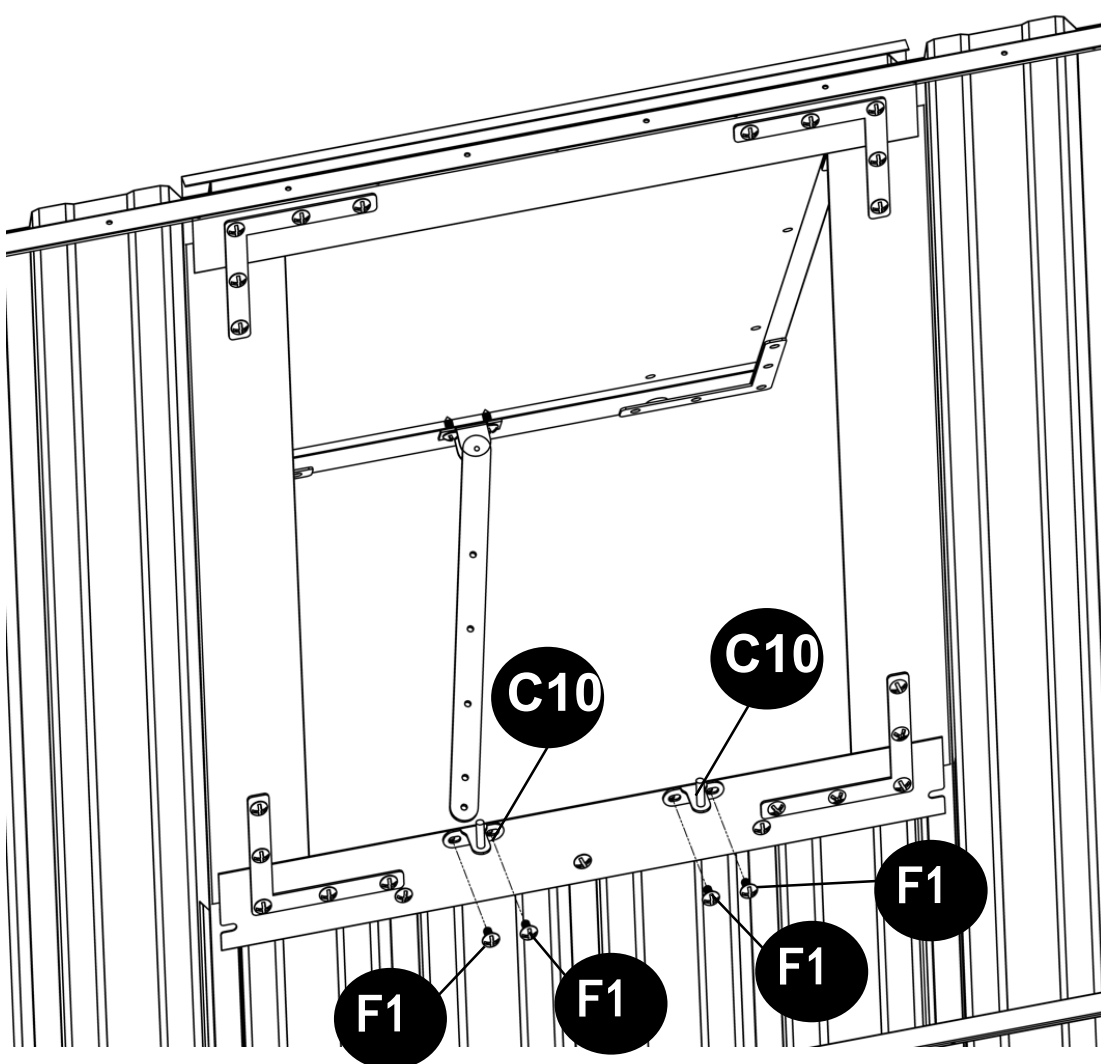
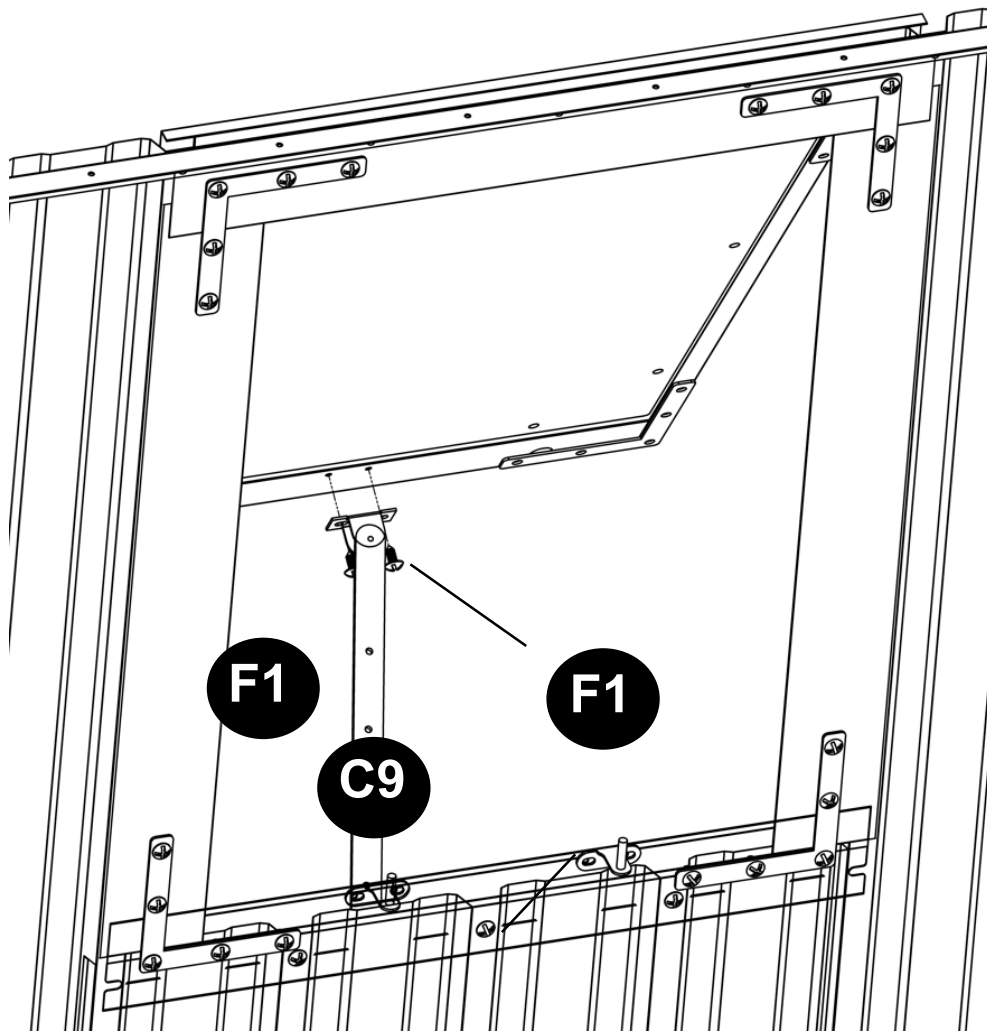



4.Roof support section installation

ST4.8X10 		M5X12 		ST3.5X9.5 		M5 			
F1	246	F2	58	F4	20	F6	58	F7	182

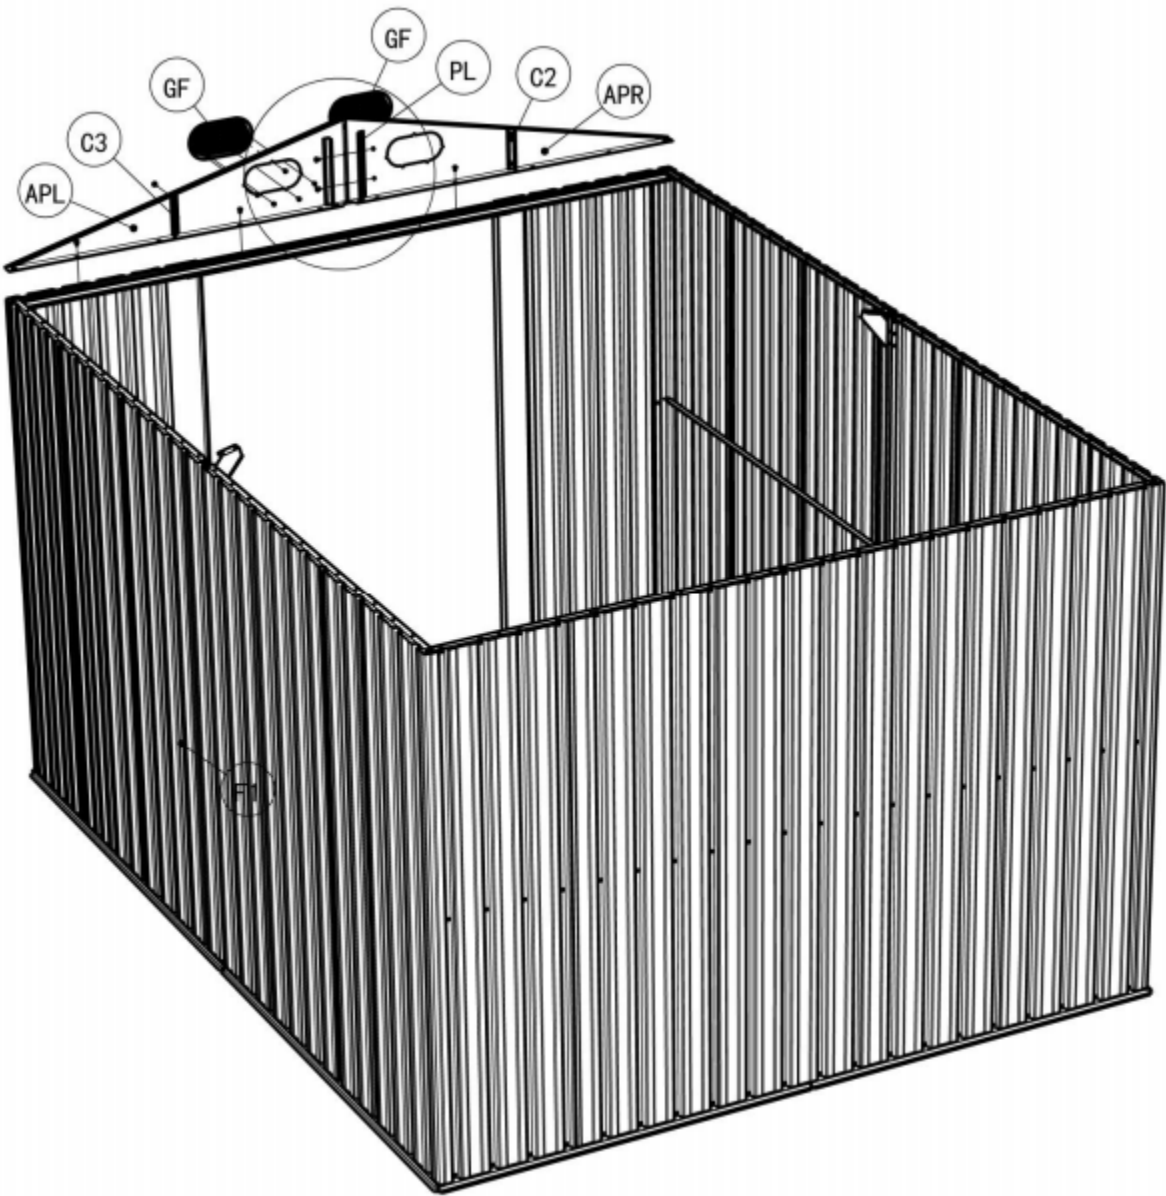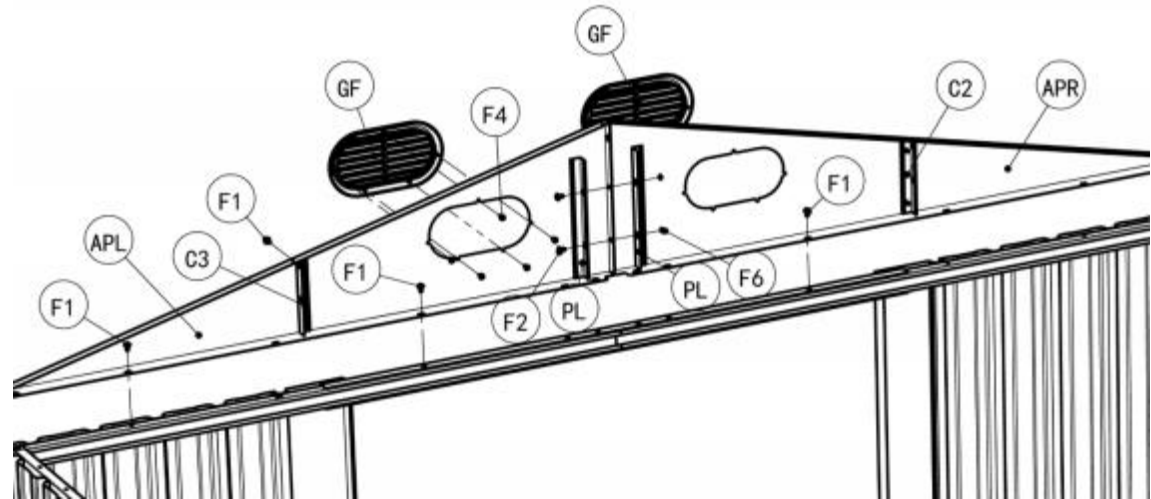


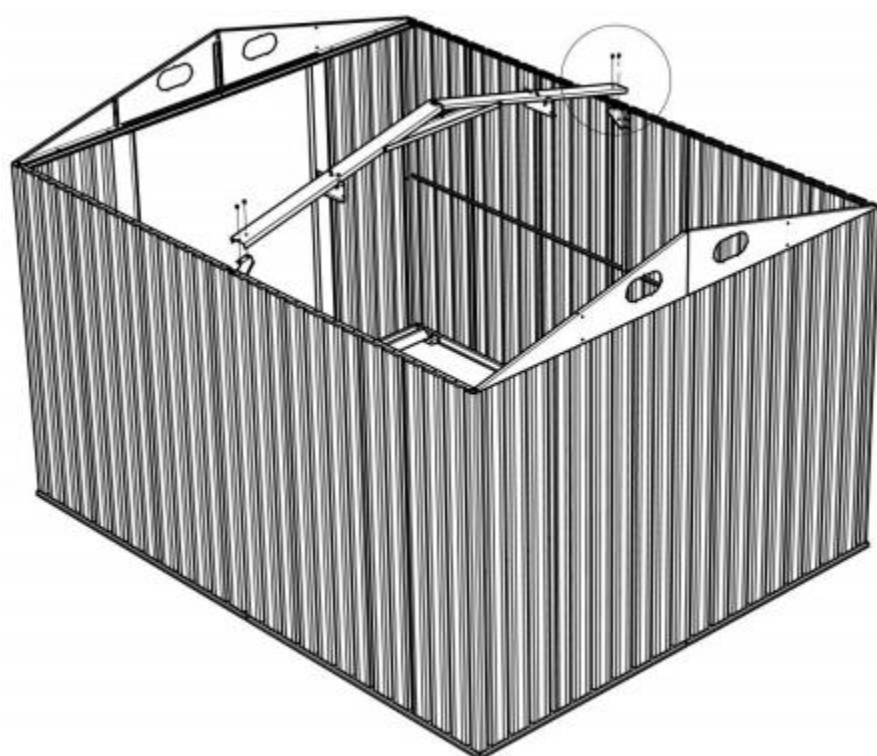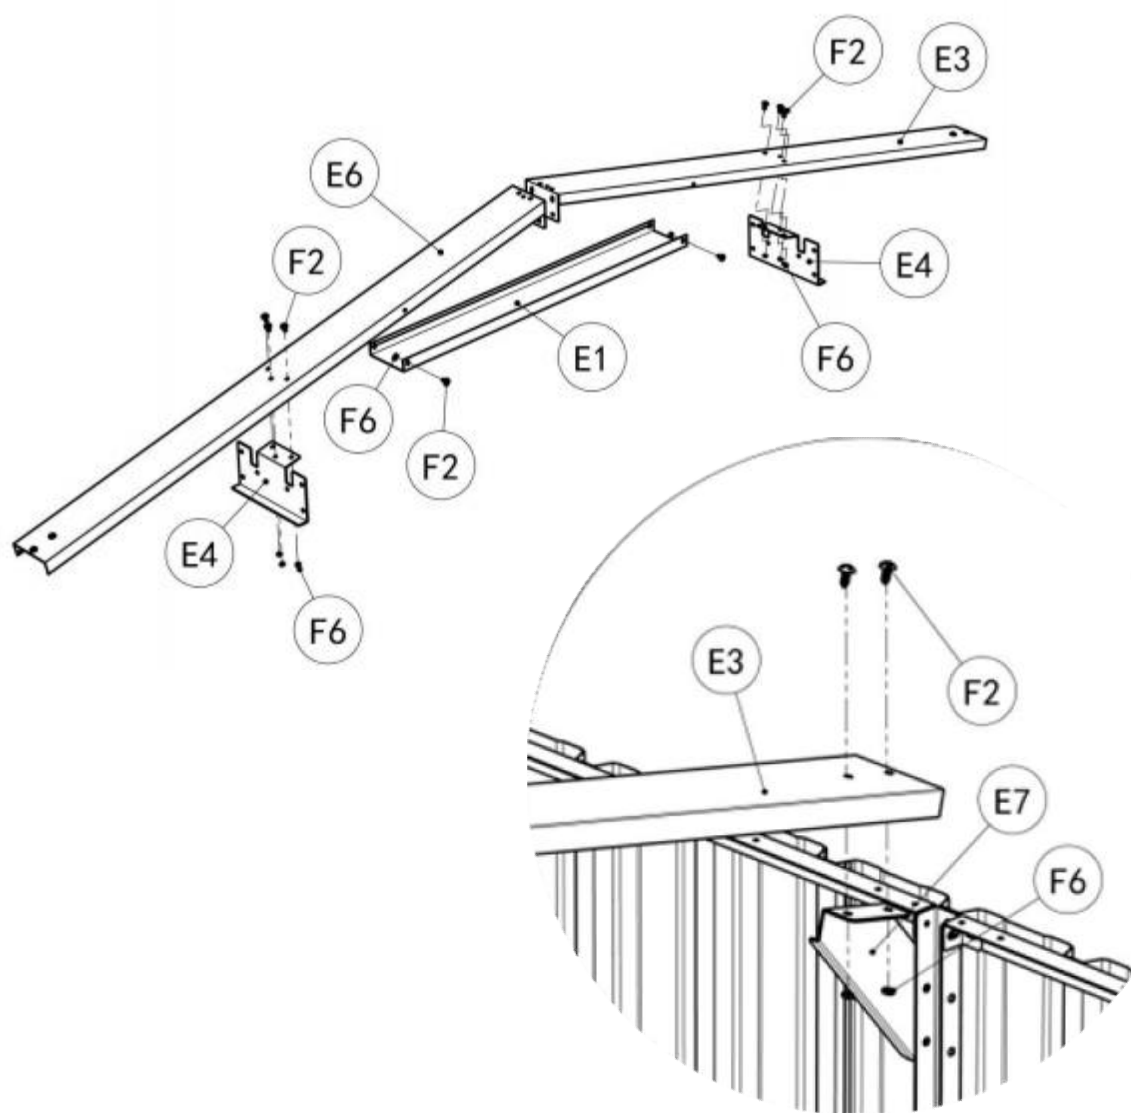

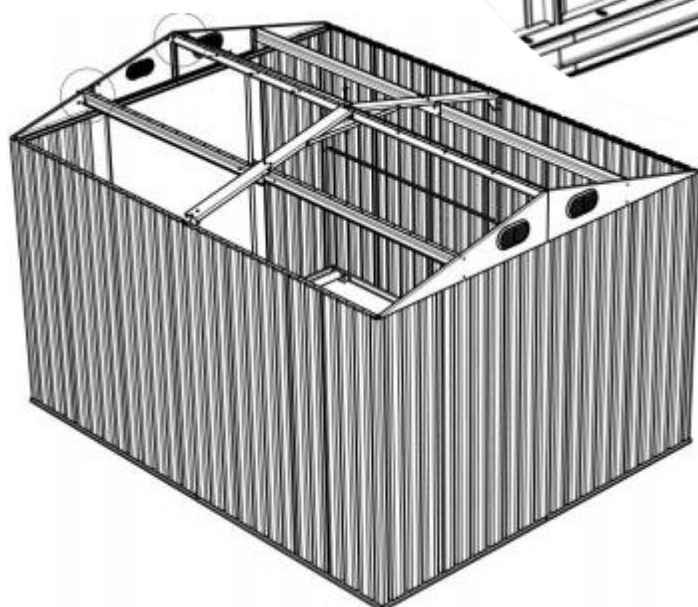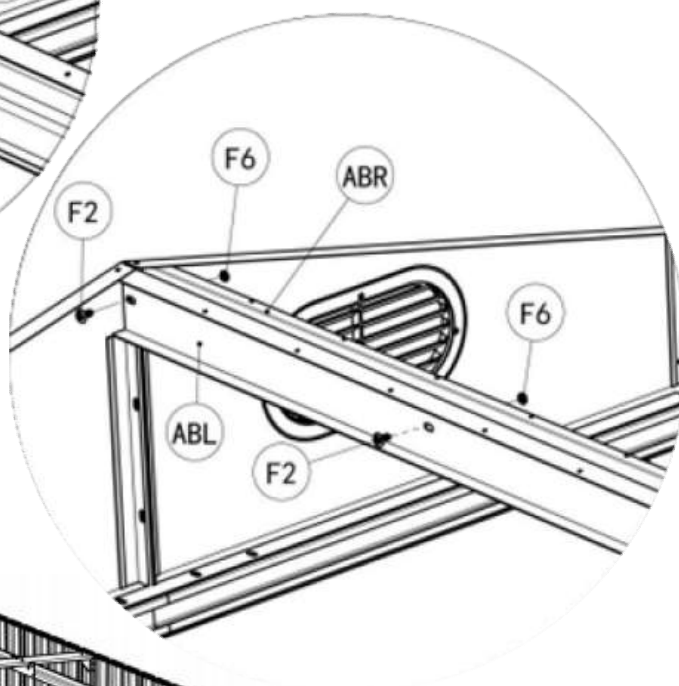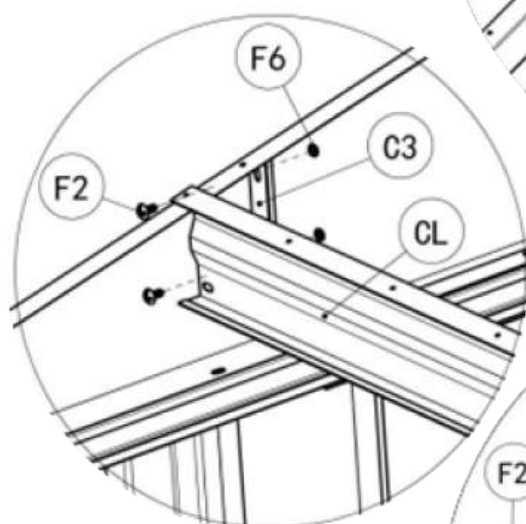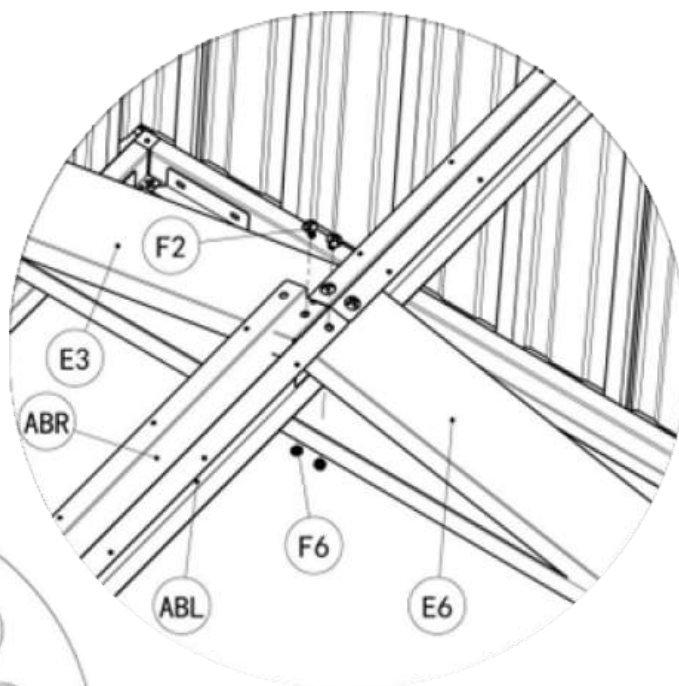



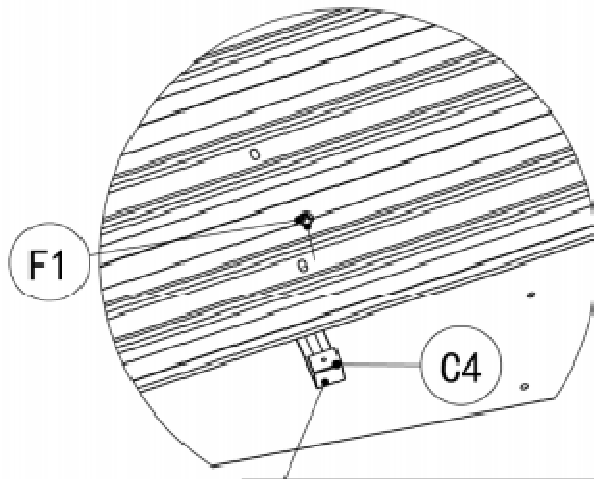


Note: C4 must be inserted under the board and aligned with the first hole and locked with F1

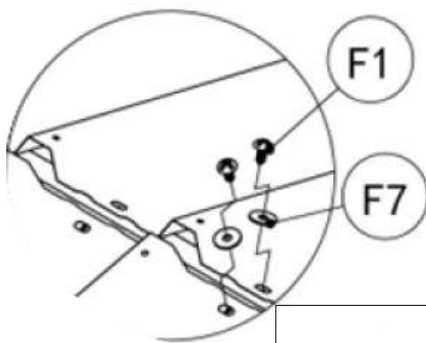


NOTE: The top 2 panels should overlap

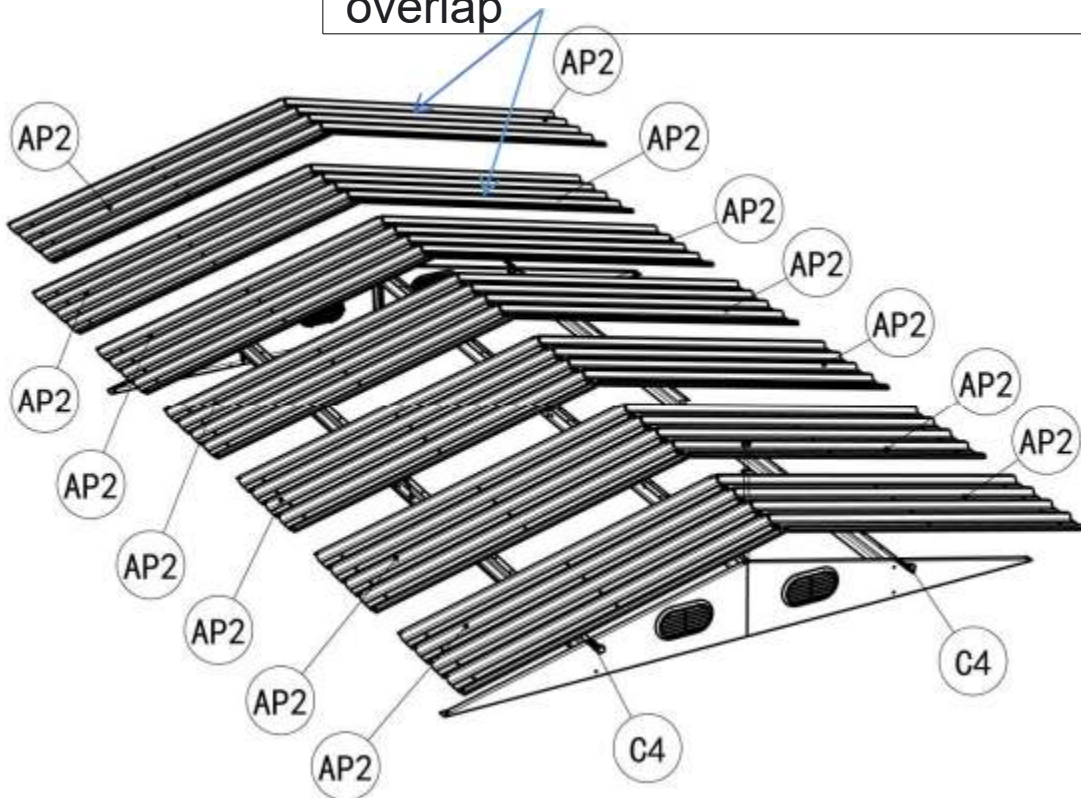

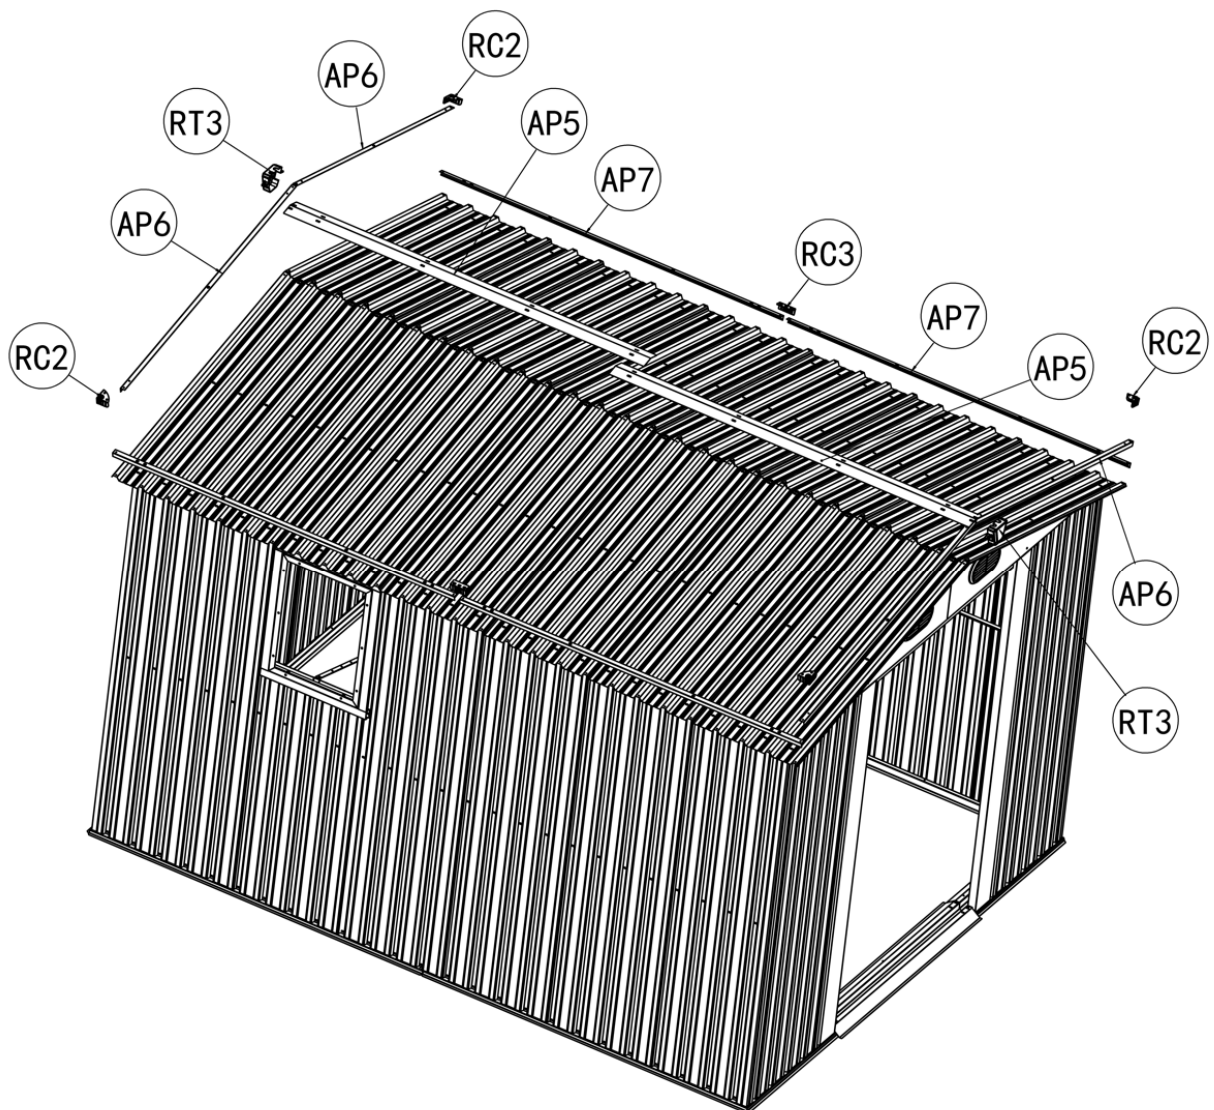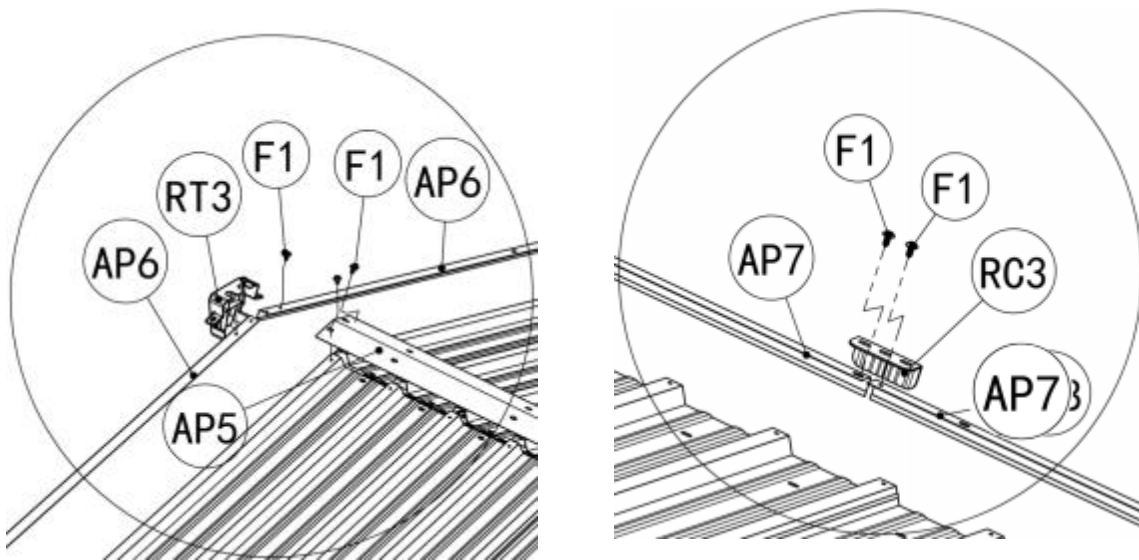

4.door installation



Note: This four-hole non-locking F1 screw is used to fix the door.

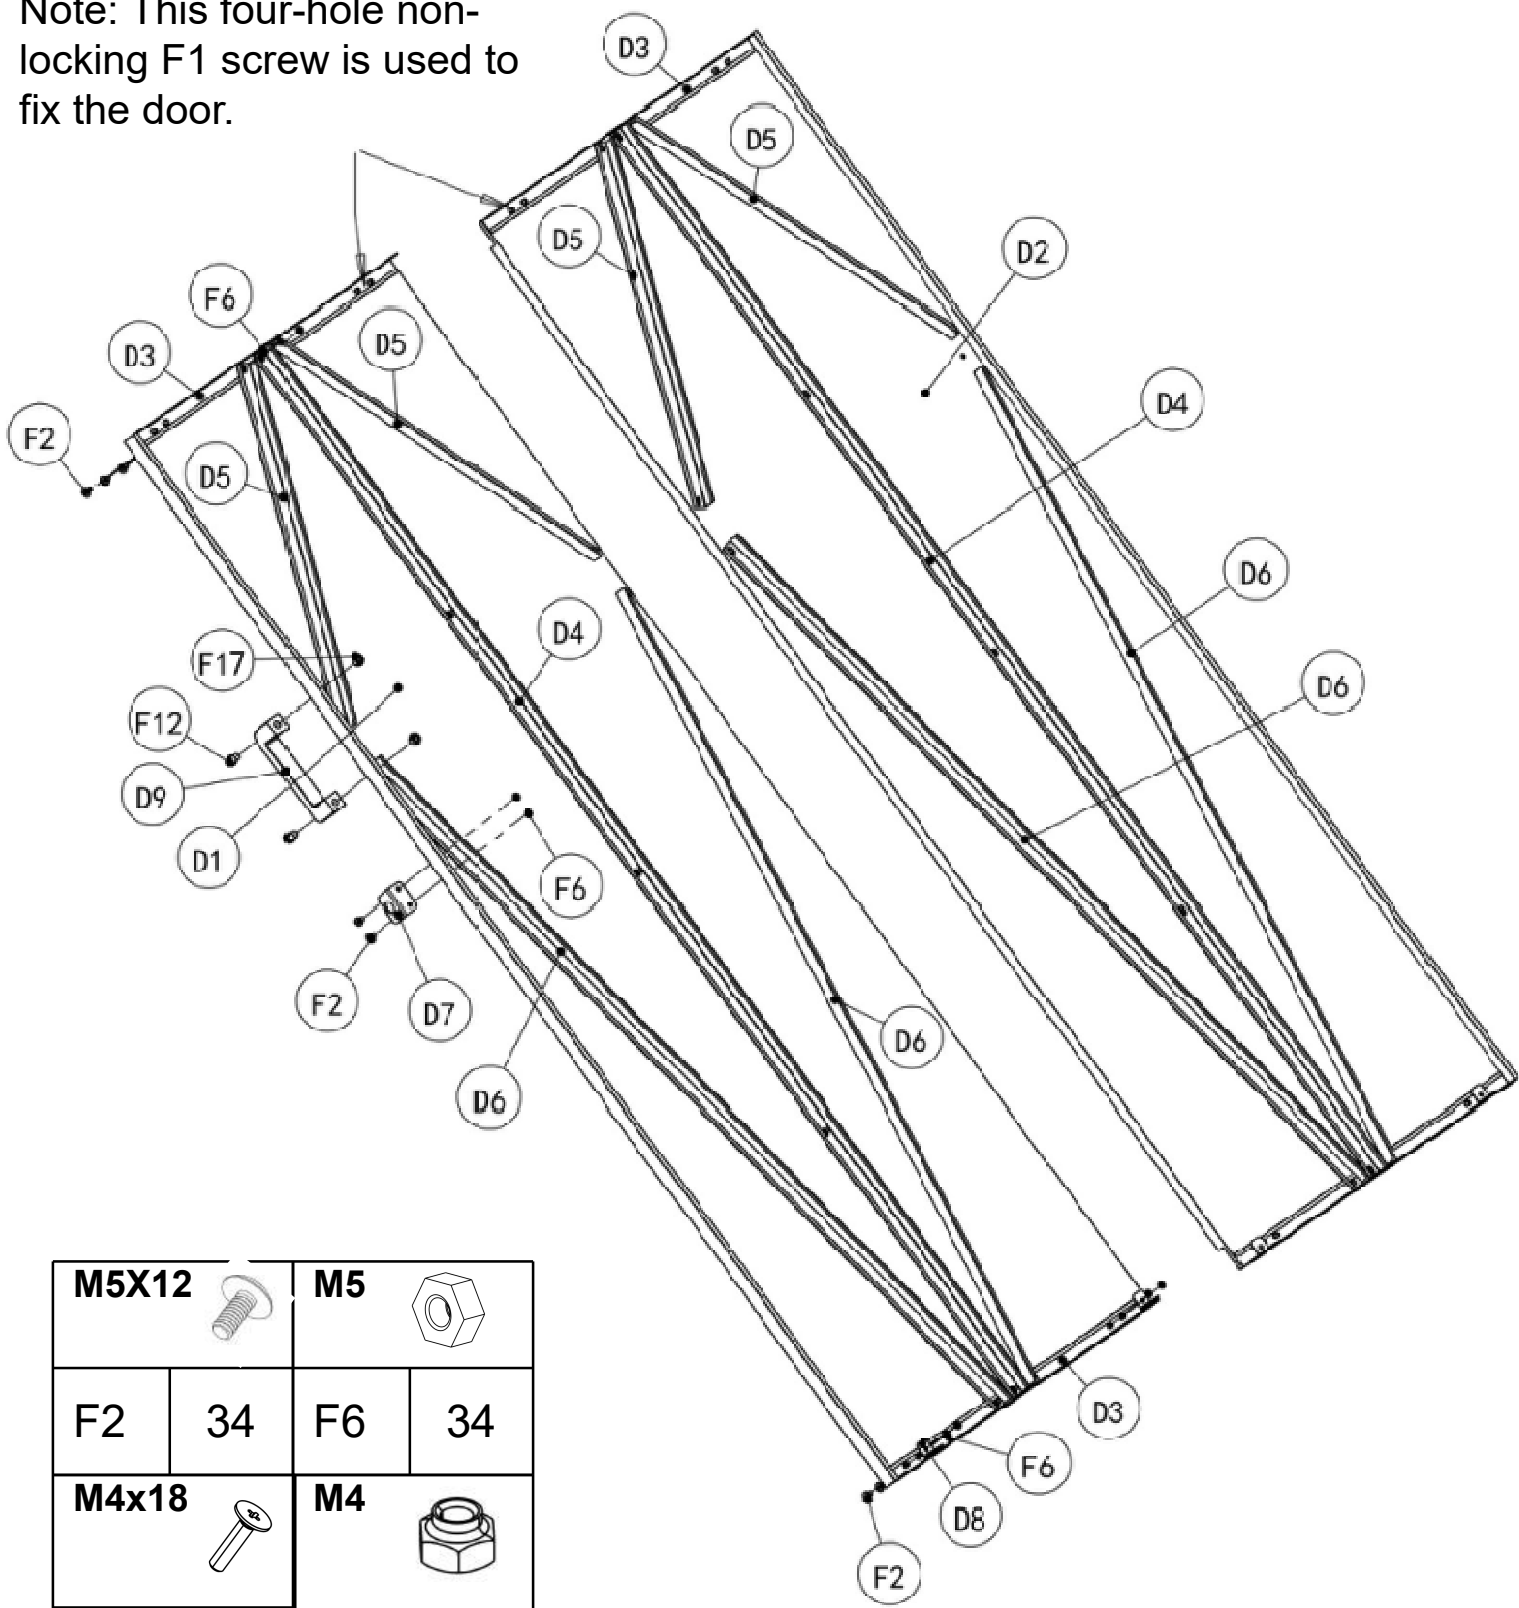


M5X12 		M5 	
F2	34	F6	34
M4x18 		M4 	
F12	4	F17	4

5.Final assembly

ST4.8X10 	
F1	8

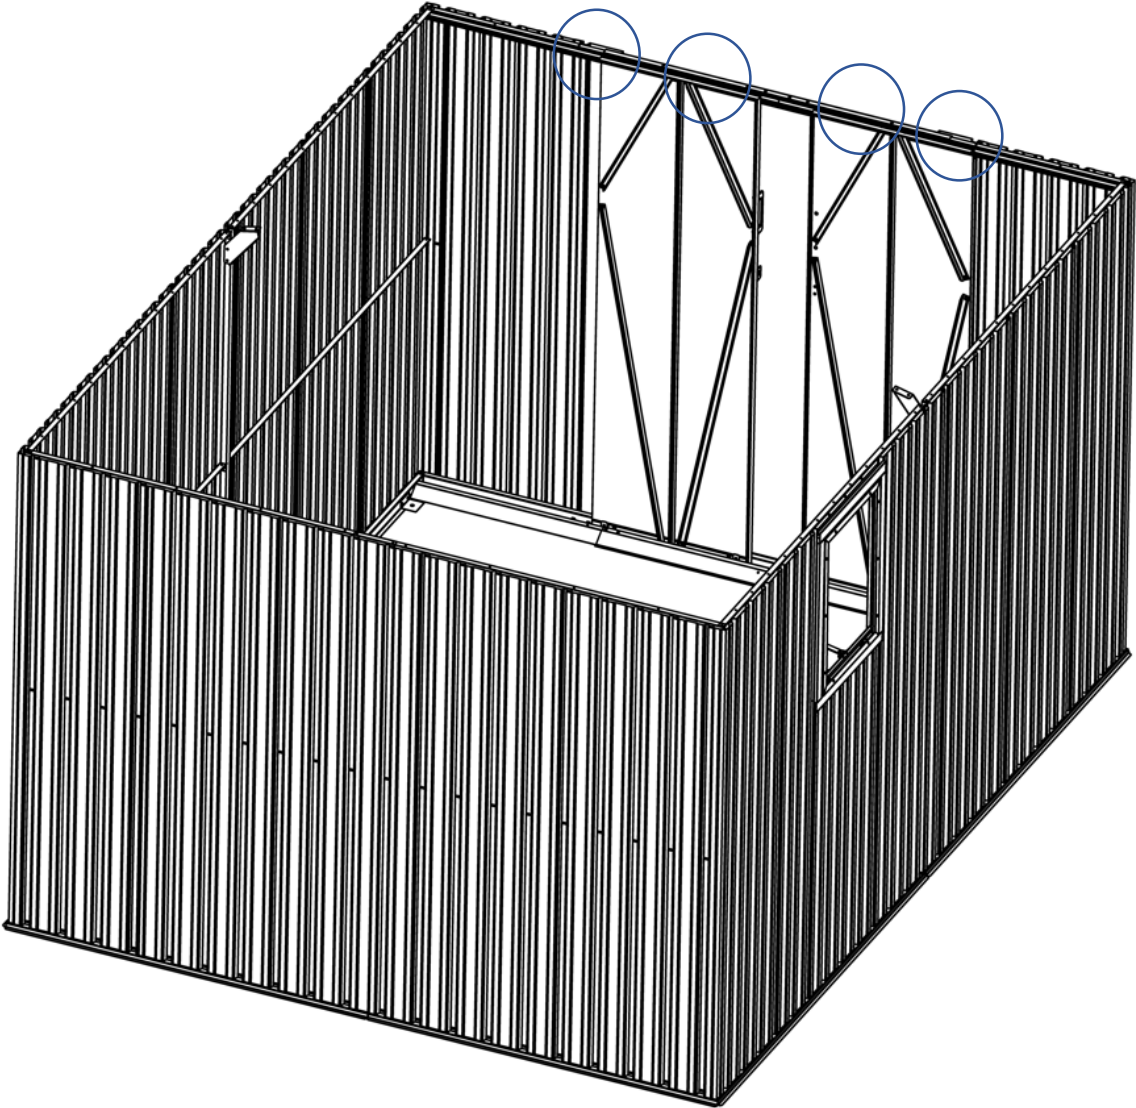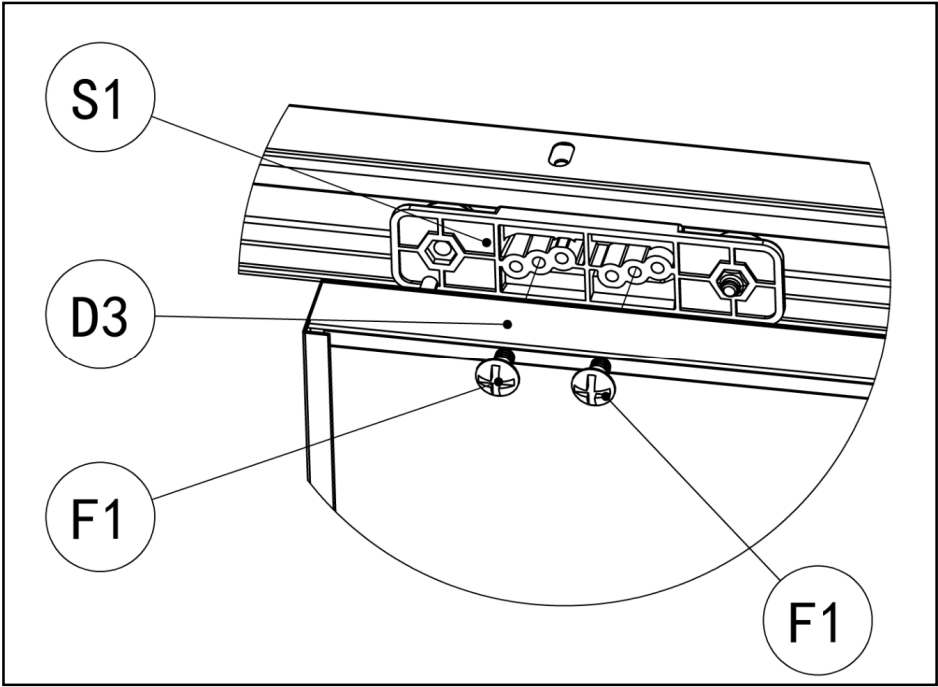

Use F8 to protect
the screws

	
F8	138

