




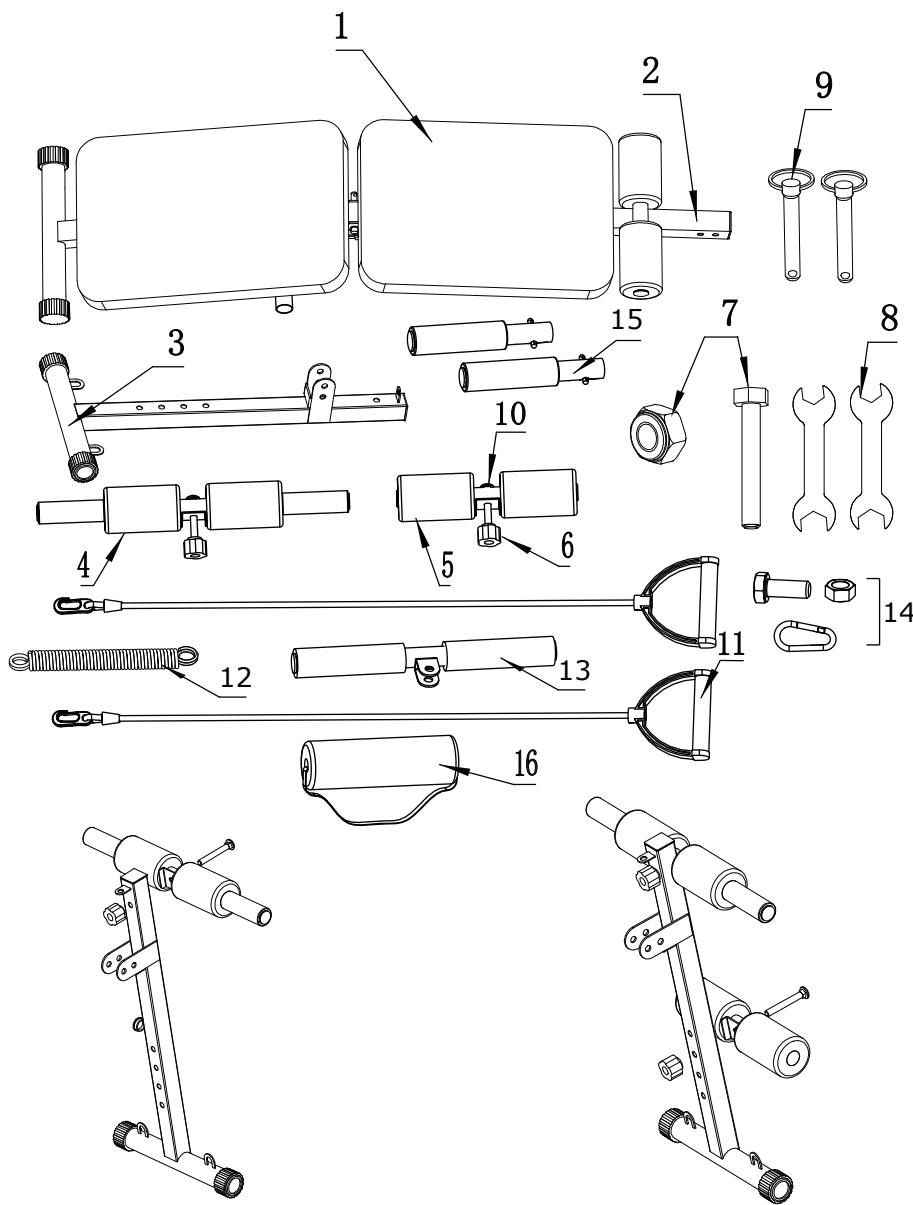


- 1、Supine board
- 2、Main Frame
- 3、T-frame
- 4、Long cotton
- 5、Short cotton
- 6、Plum nut
- 7、Screw and nut
- 8、Wrench
- 9、Plug
- 10、Carriage Bolts
- 11、Pull Rope
- 12、pullback spring
- 13、Handle tube
- 14、M8 screw nut, karabiner
- 15、pipe handrail
- 16、Headrest

A、Connect T-frame(3) with long rubber cotton(4).

B、Connect T-frame (3) with short rubber cotton(5).

C、Fix the main frame(2) with screw and nut(7) and T-frame(3).

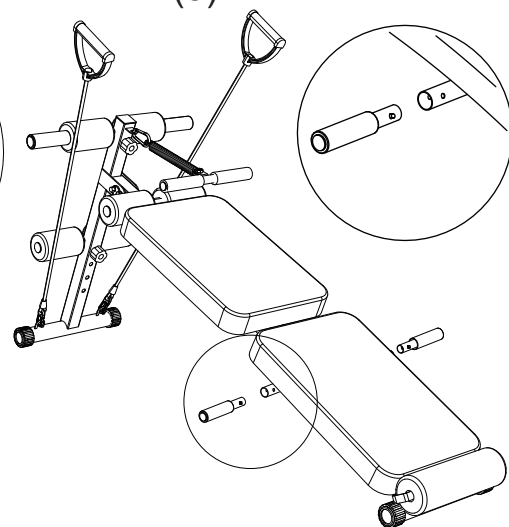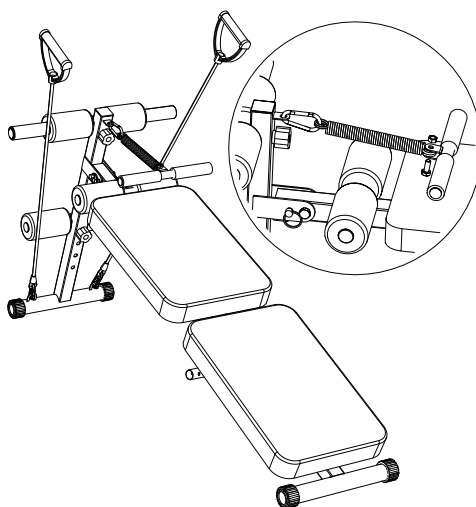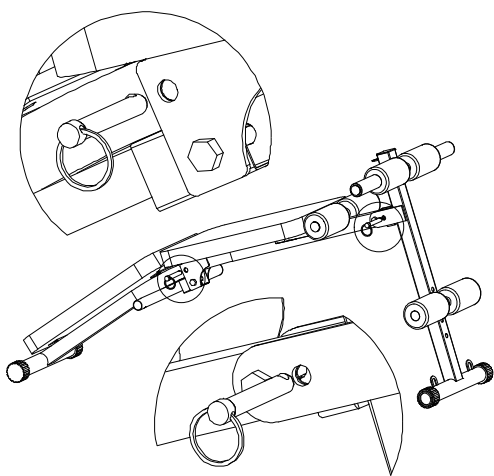

D、Insert the plug(9) into the Main Frame(2) two holes.

E、Connect the pullback spring(12) and Handle tube(13) to the T-frame (3) with screw nut and karabiner (14). Install the Pull ropes(11).

F、Insert pipe hand-rails on both sides. Then buckle up the headrest(16).