

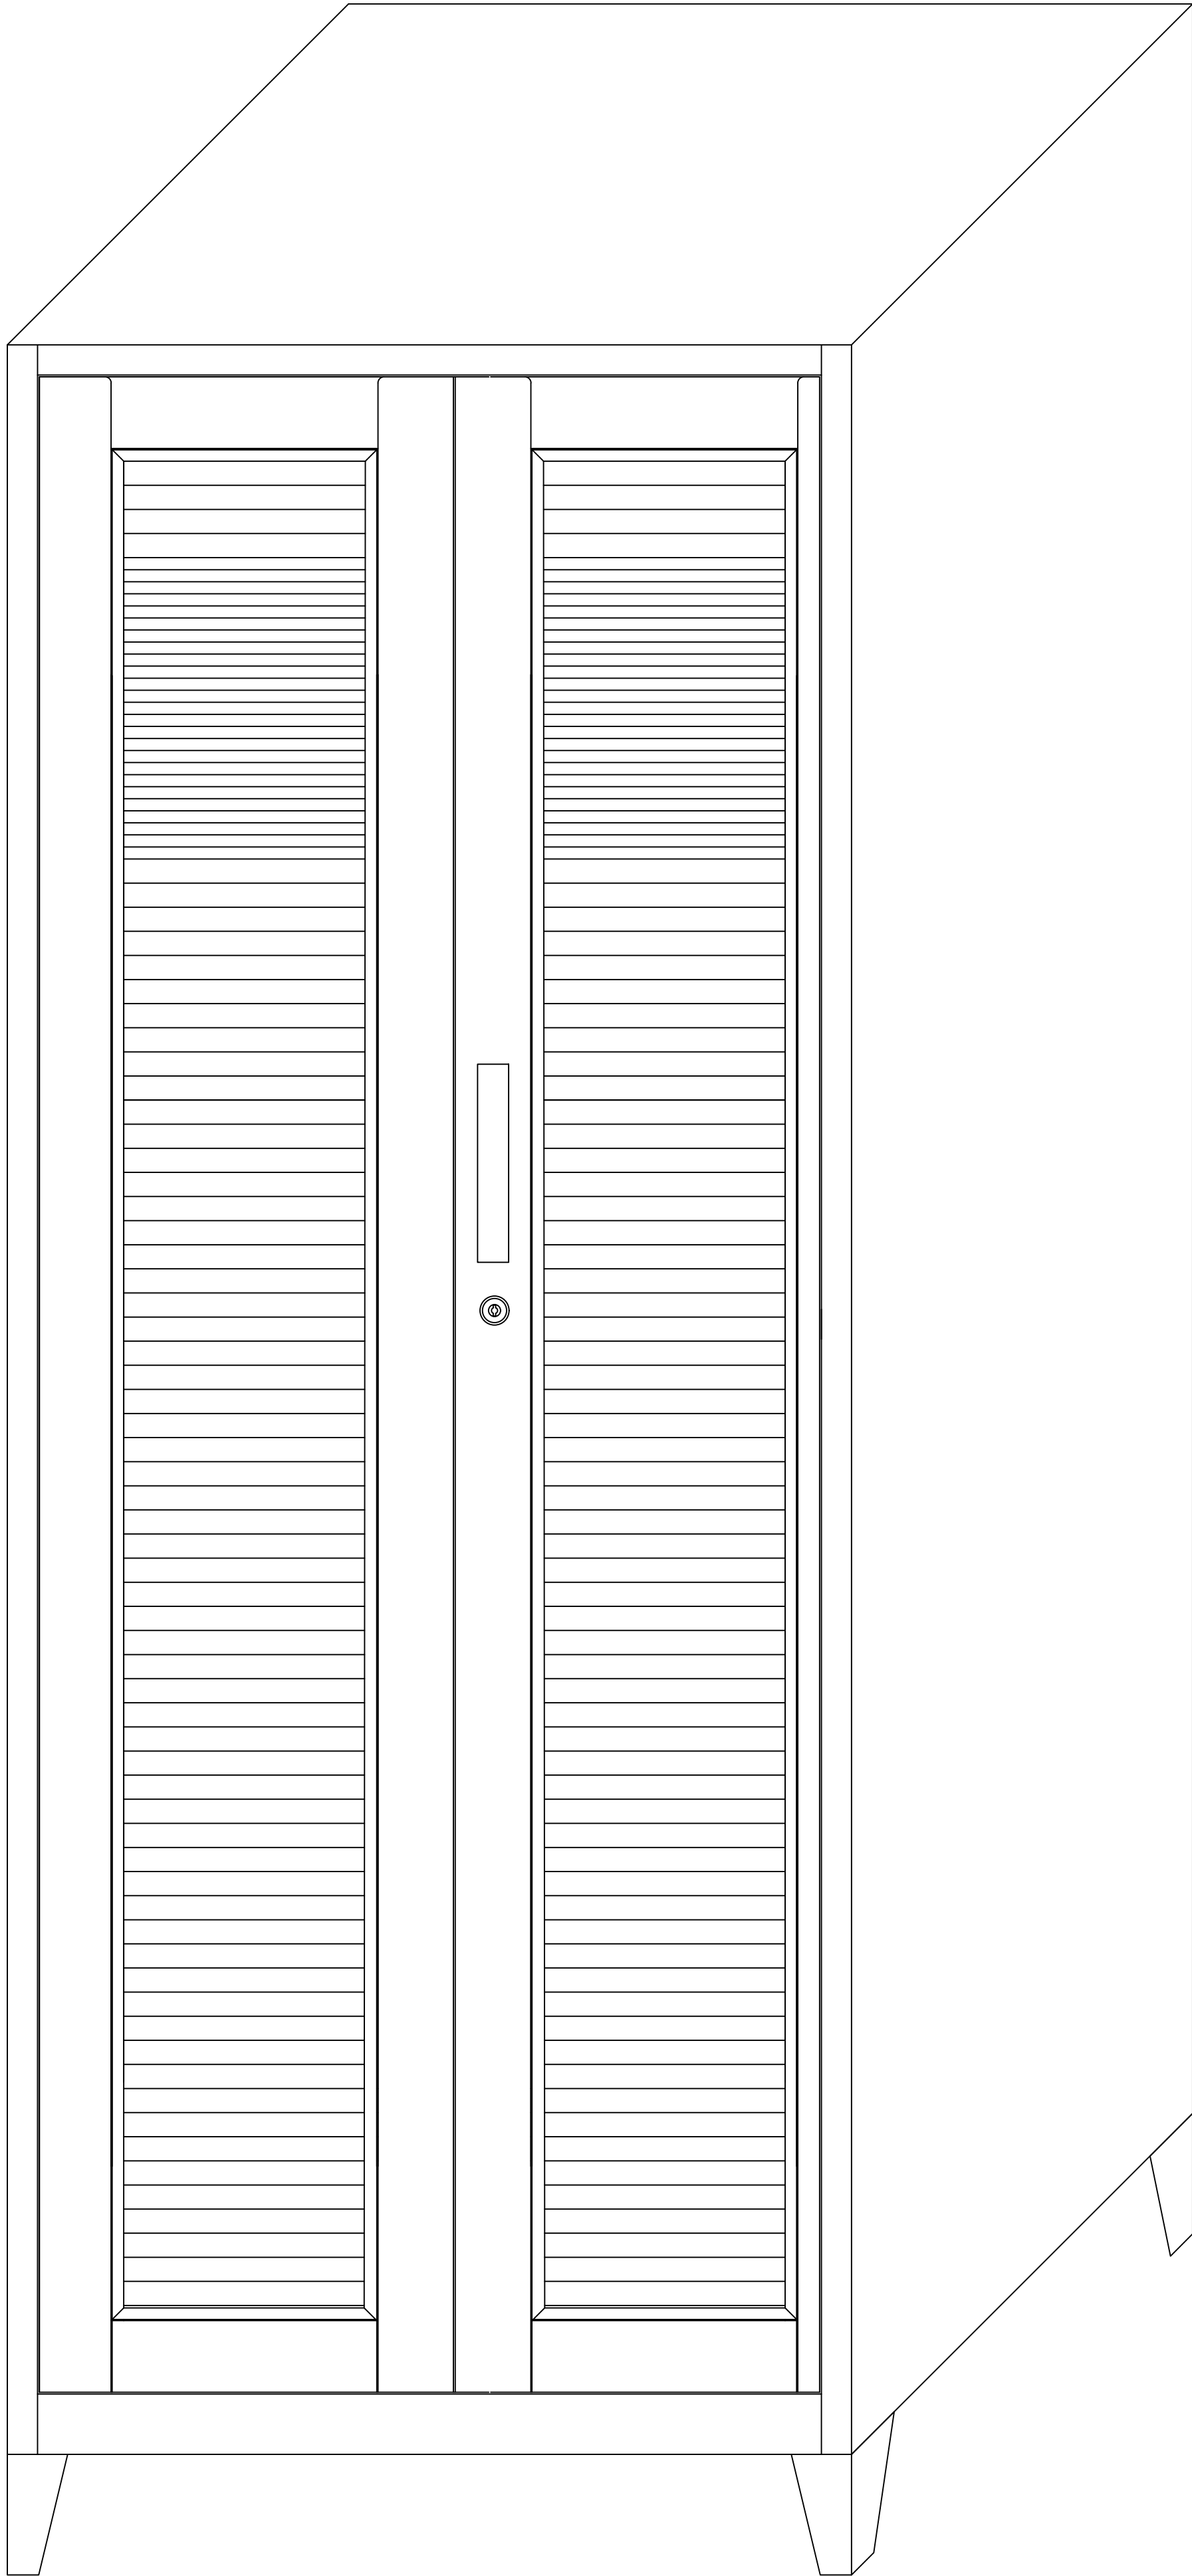
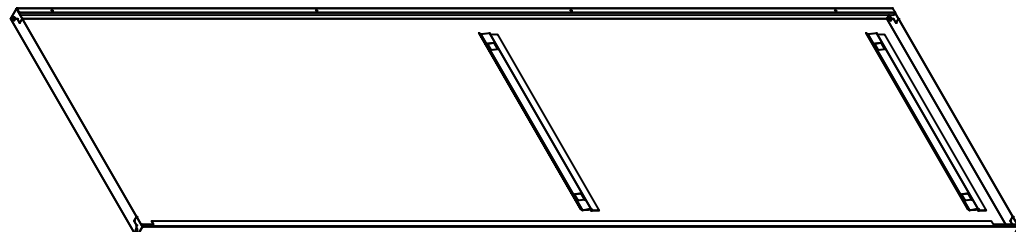
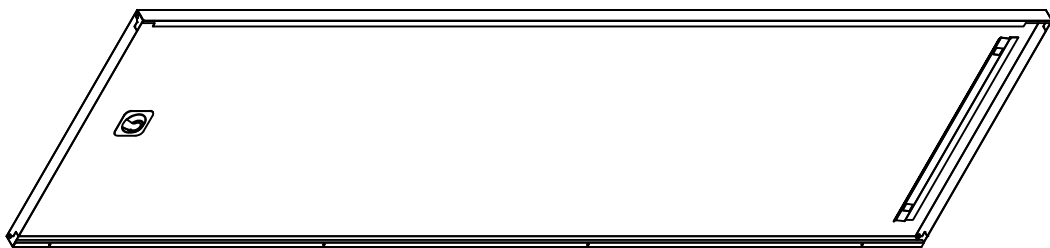
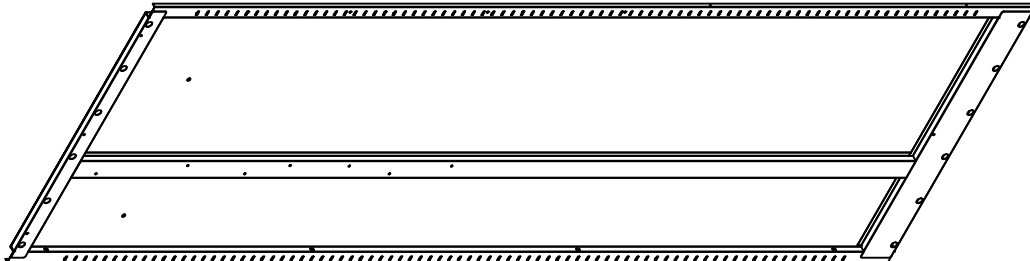
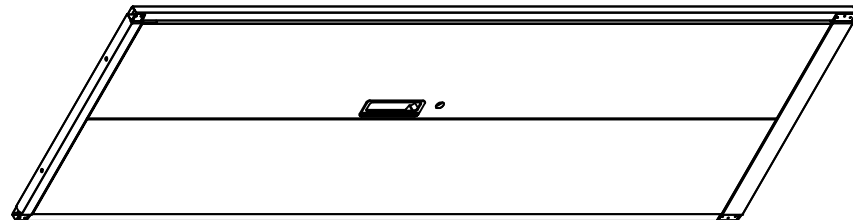
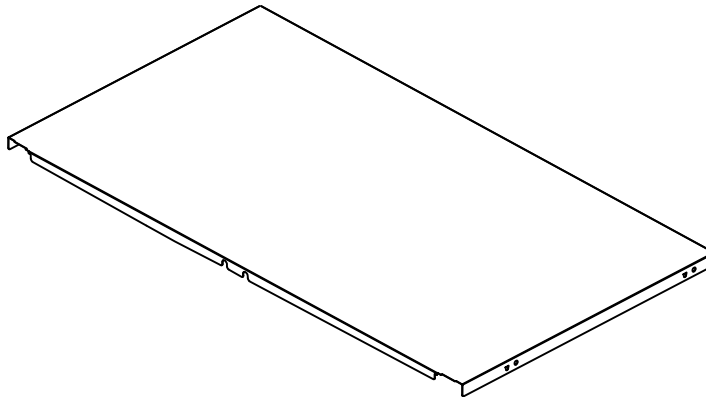
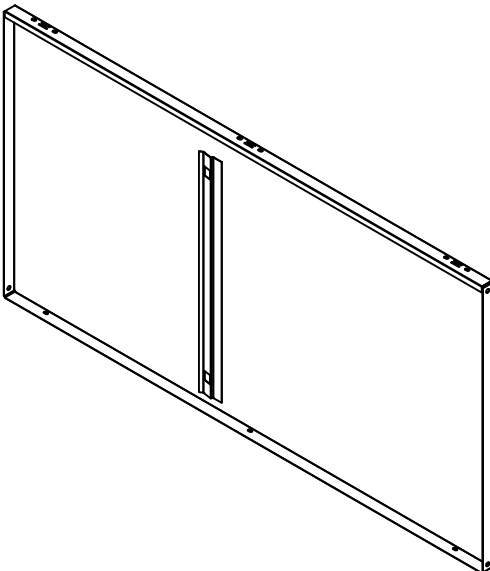
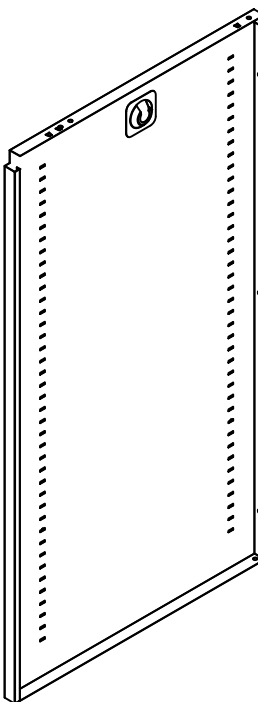
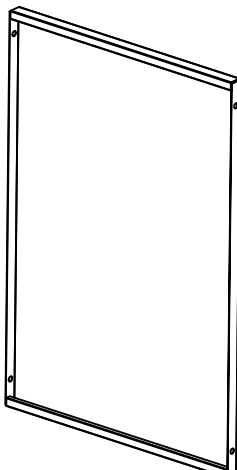
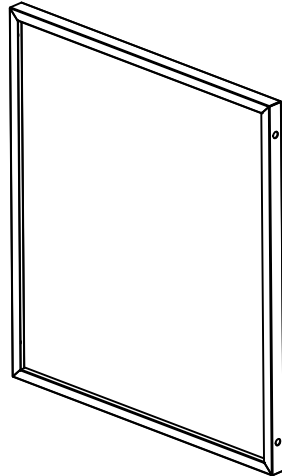
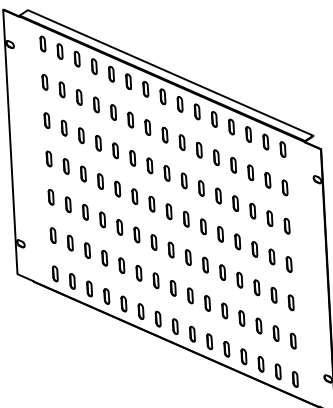
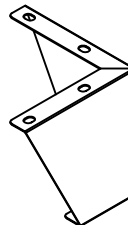
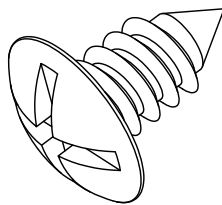
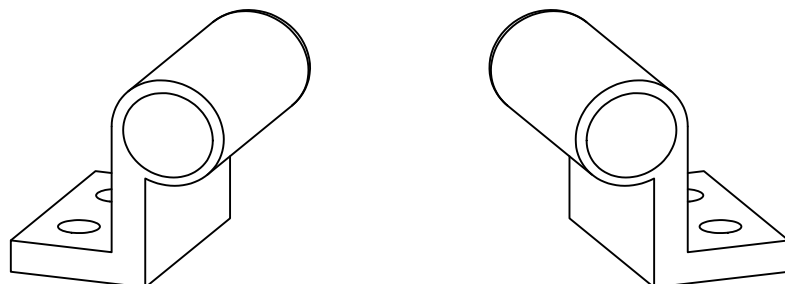

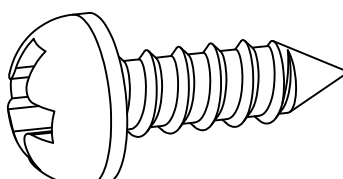

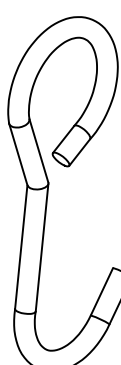
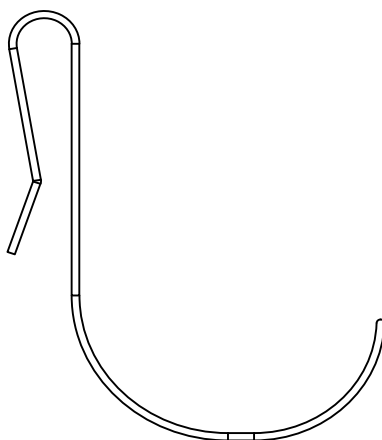
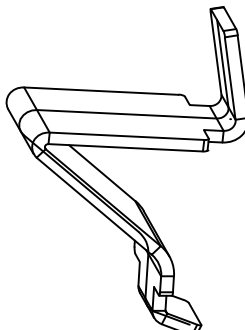


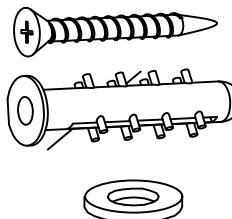


① × 1 	② × 1 	③ × 1 	
④ × 1 	⑤ × 1 	⑥ × 1 	
⑦ × 1 	⑧ × 1 	⑨ × 2 	⑩ × 2 
⑪ × 4 			Ⓐ × 44 
Ⓑ × 2 	Ⓒ × 2 	Ⓓ × 8 	Ⓔ × 1 
Ⓕ × 3 	Ⓖ × 10 	Ⓗ × 8 	Ⓘ × 2 

1) Use 8 A screws and connect panels 1, 2, and 3.

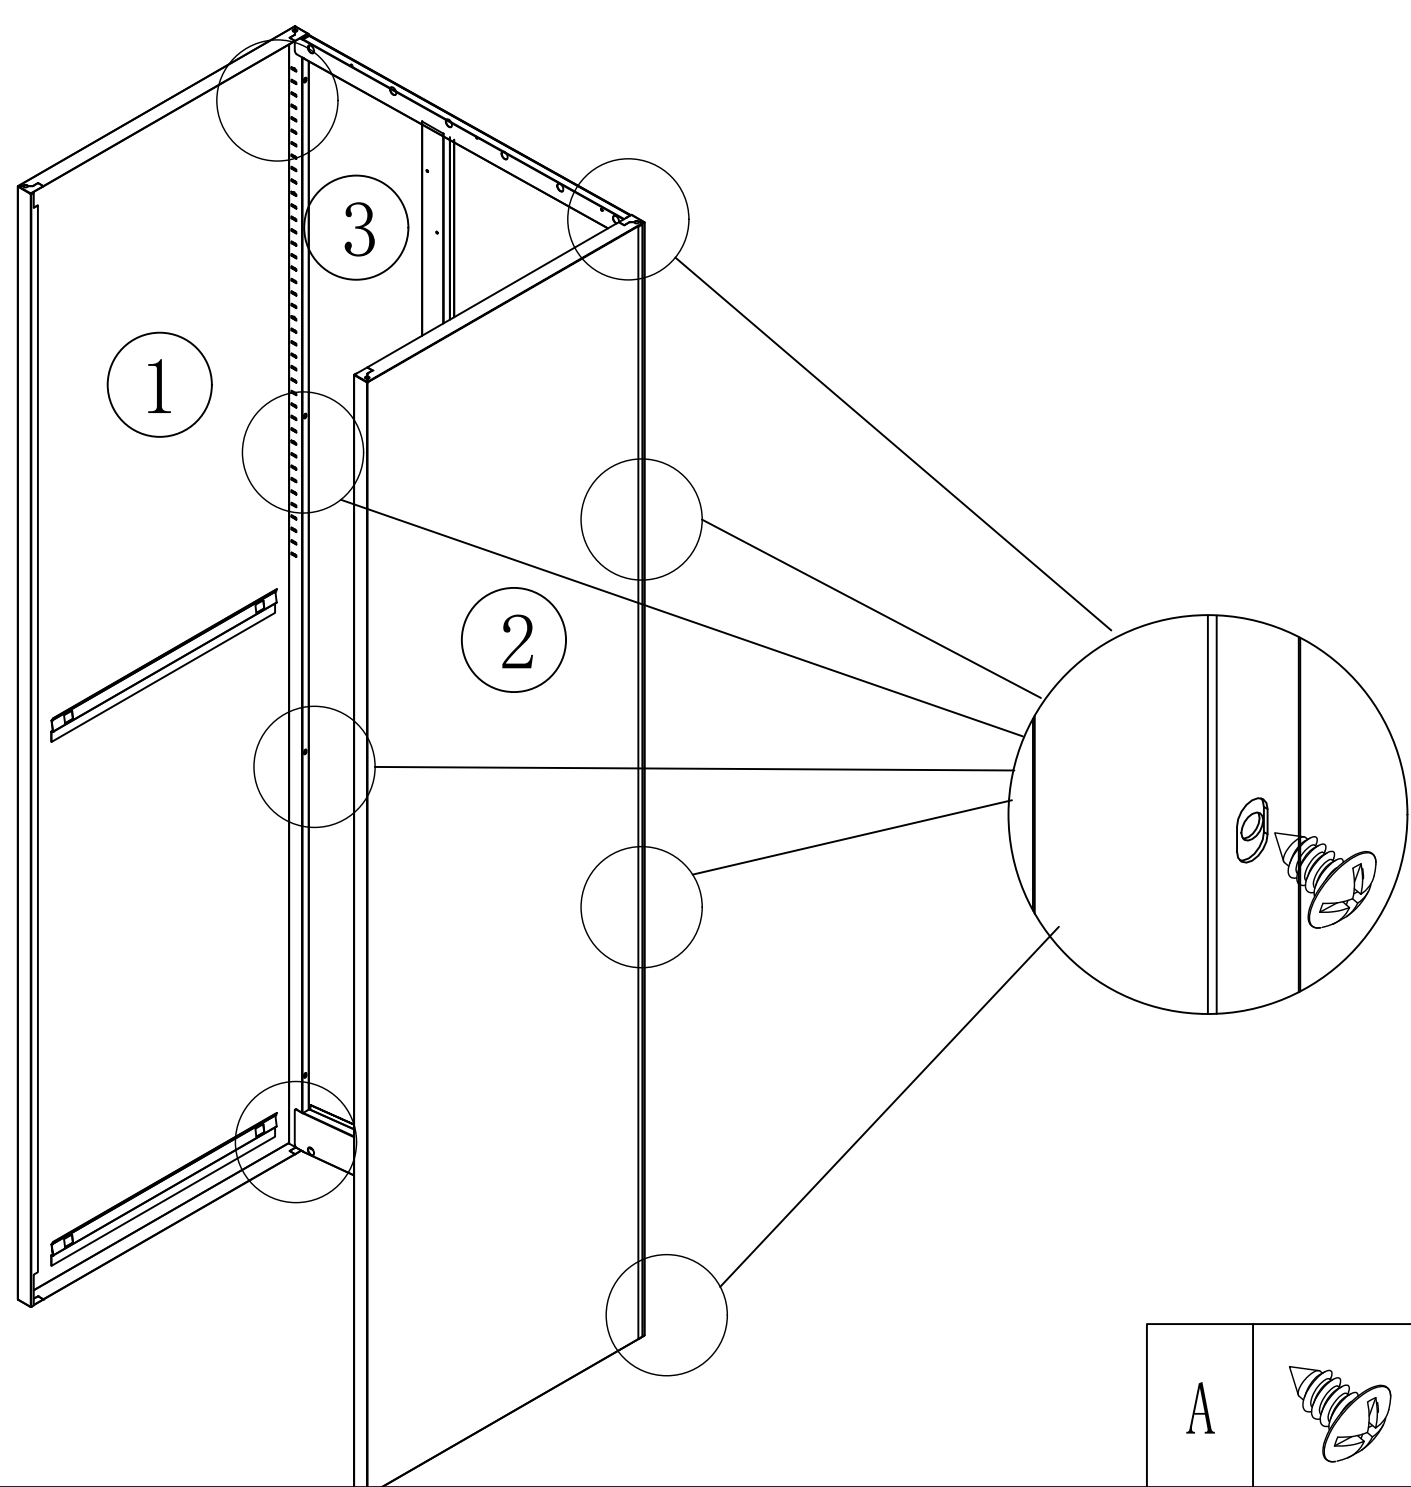


A  × 8

2) Move the front frame panel 4 forward until it aligns flush with the side panels of the cabinet body.

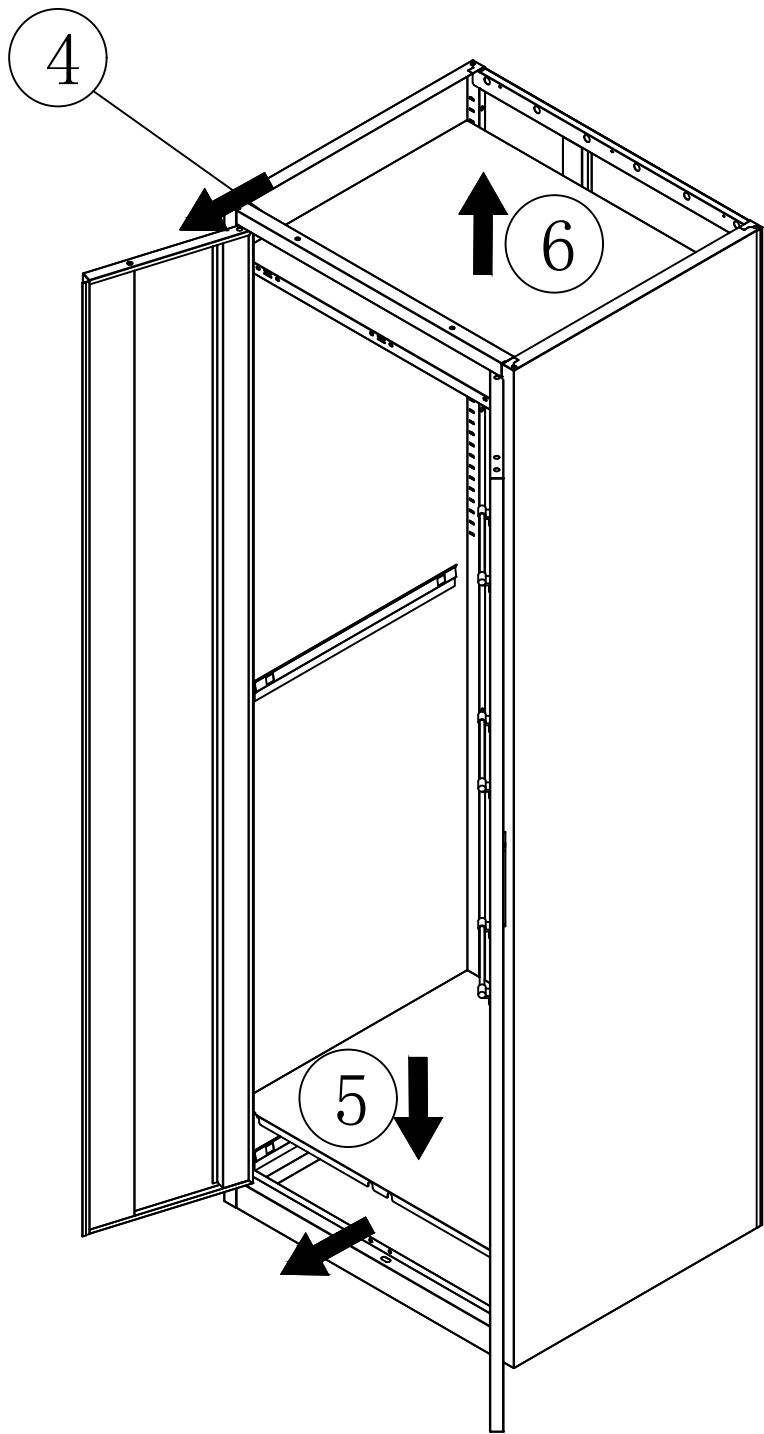



3) Use 28 A screws to connect parts 5, 6, 7, 11 with the cabinet body.

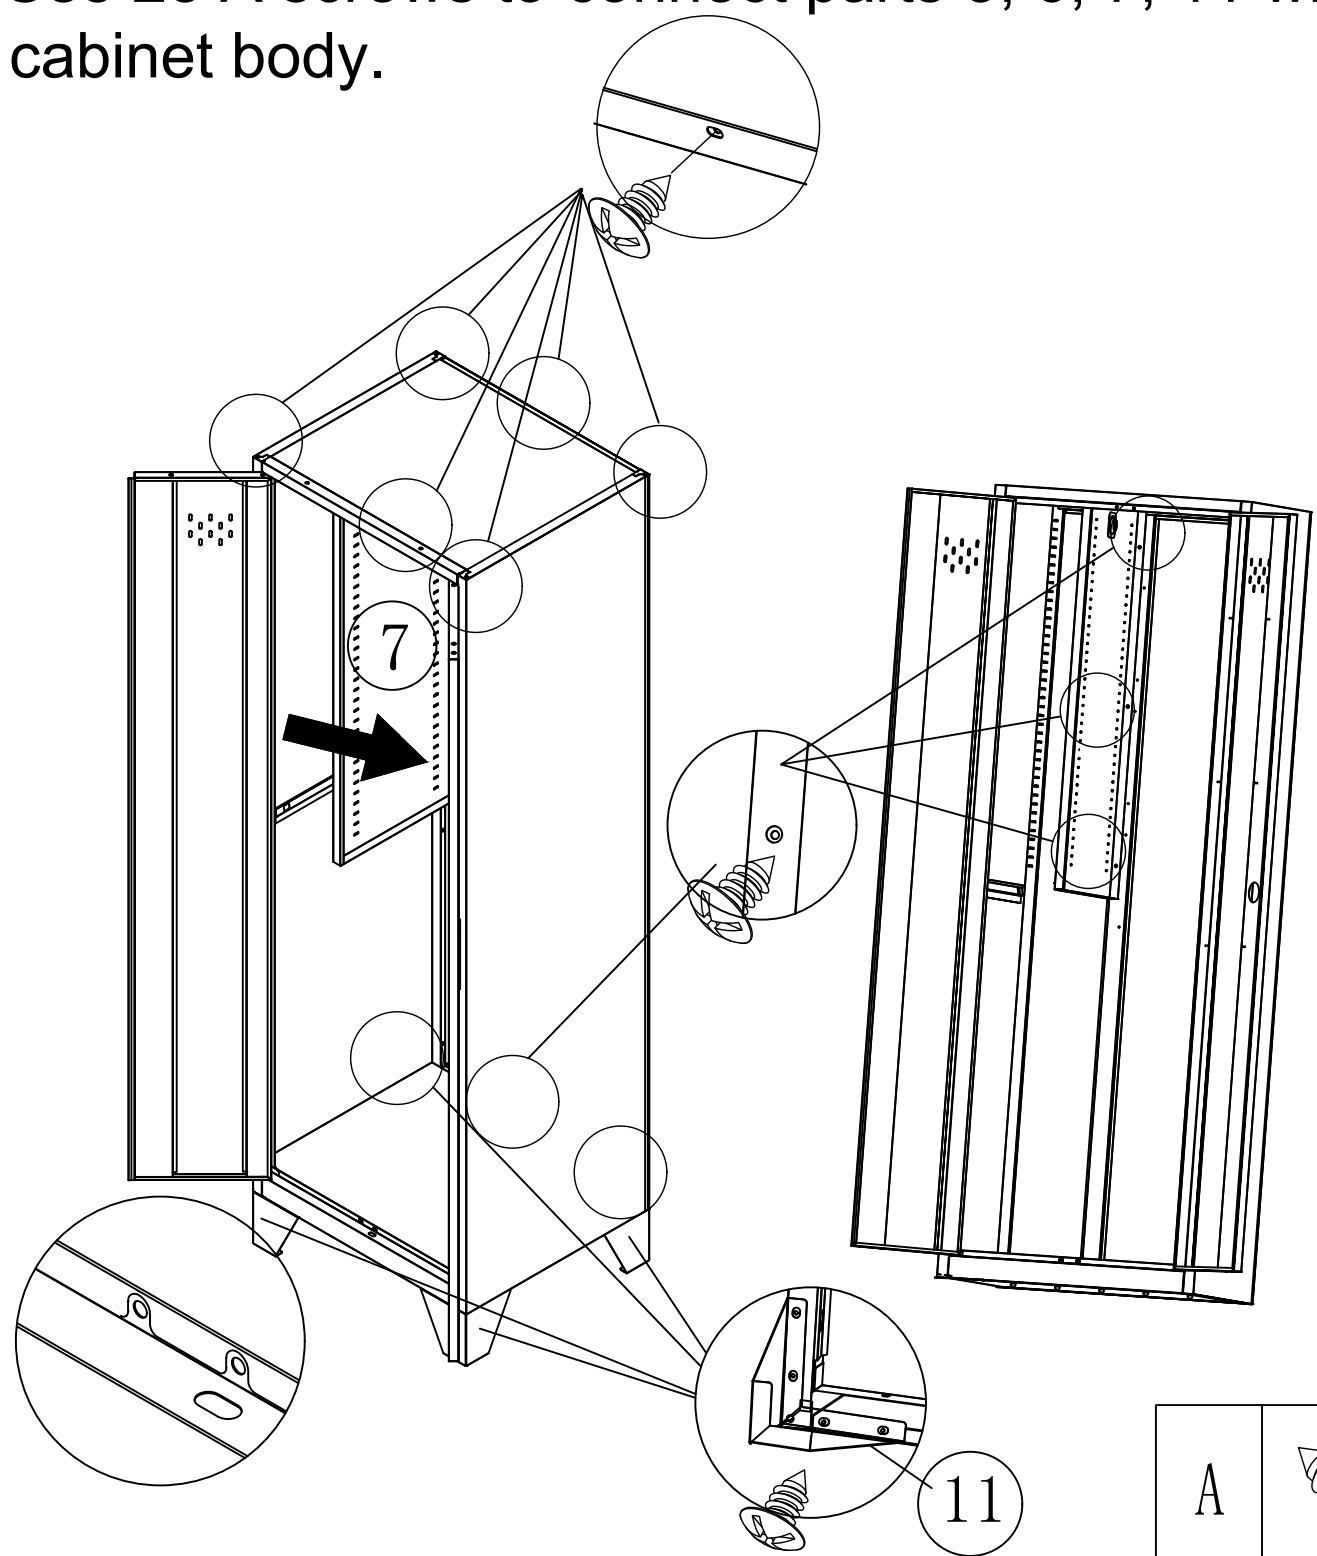


A  × 28






4) Attach part 8, then place the corner clips H in the holes at the same horizontal level. Position the two parts 9 shelves onto the corner clips.

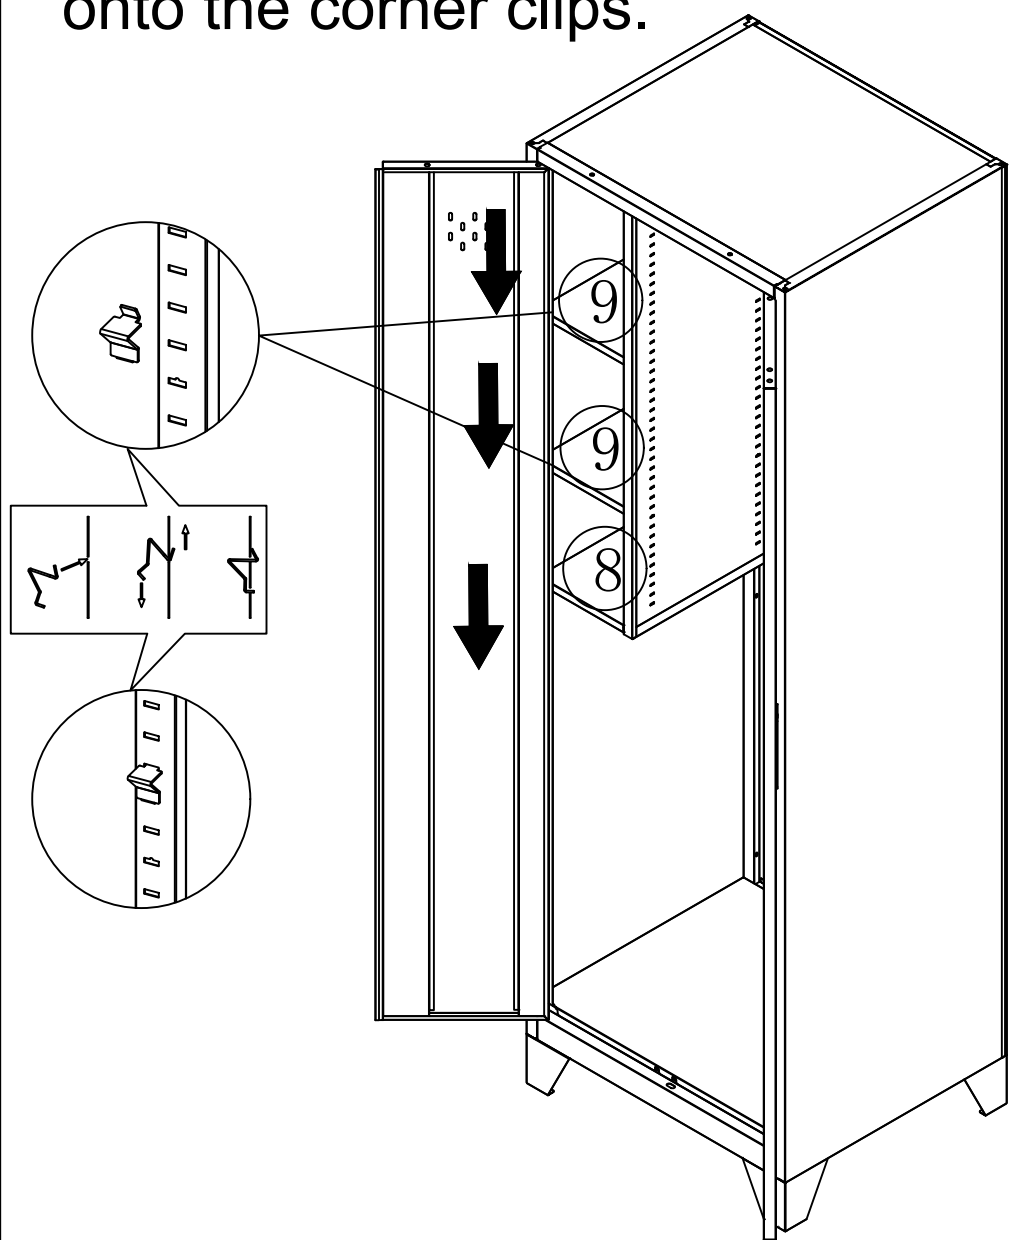

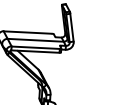
H  × 8

5) Use 8 A screws to attach part 10 inside the cabinet body, then use 8 D screws to install hanging rod part C. Next, position hanging rod part E and pegboard hook of part G.

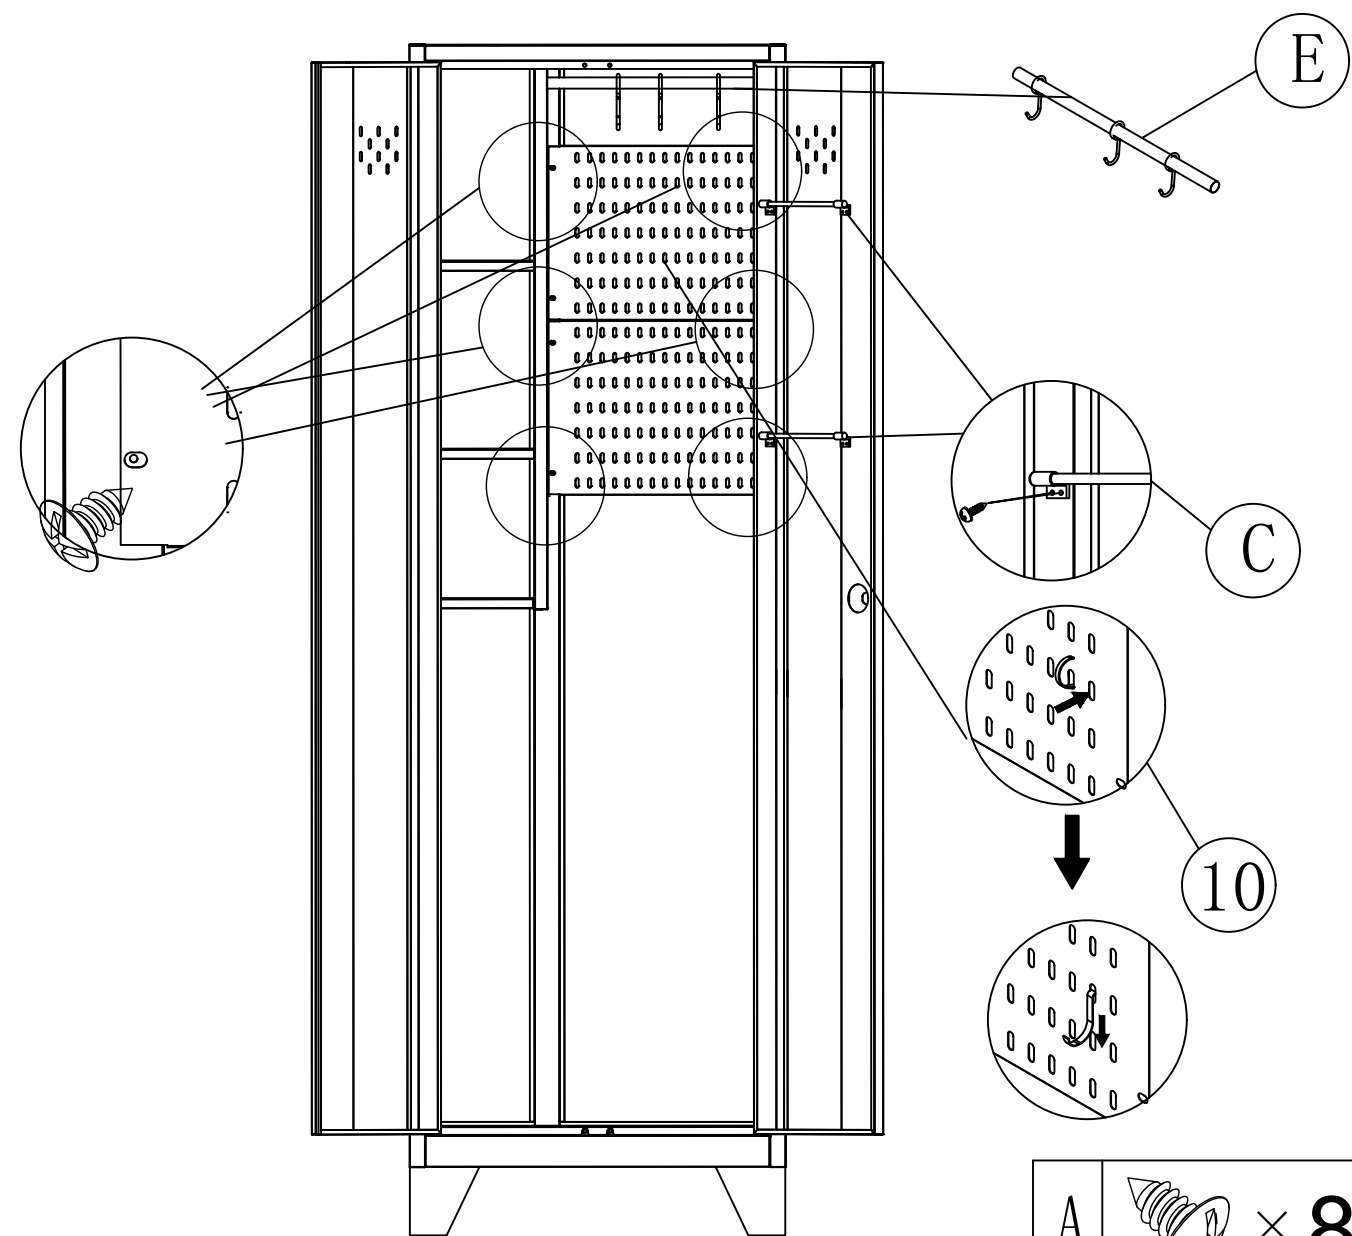

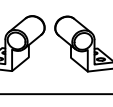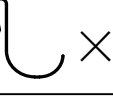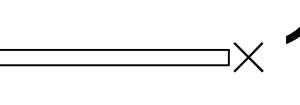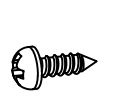A	 × 8	F	 × 3
B	 × 2	G	 × 10
E	 × 1	D	 × 8
		C	 × 2

6) Recommend using two anchor bolts to connect the cabinet to the wall to prevent tipping.

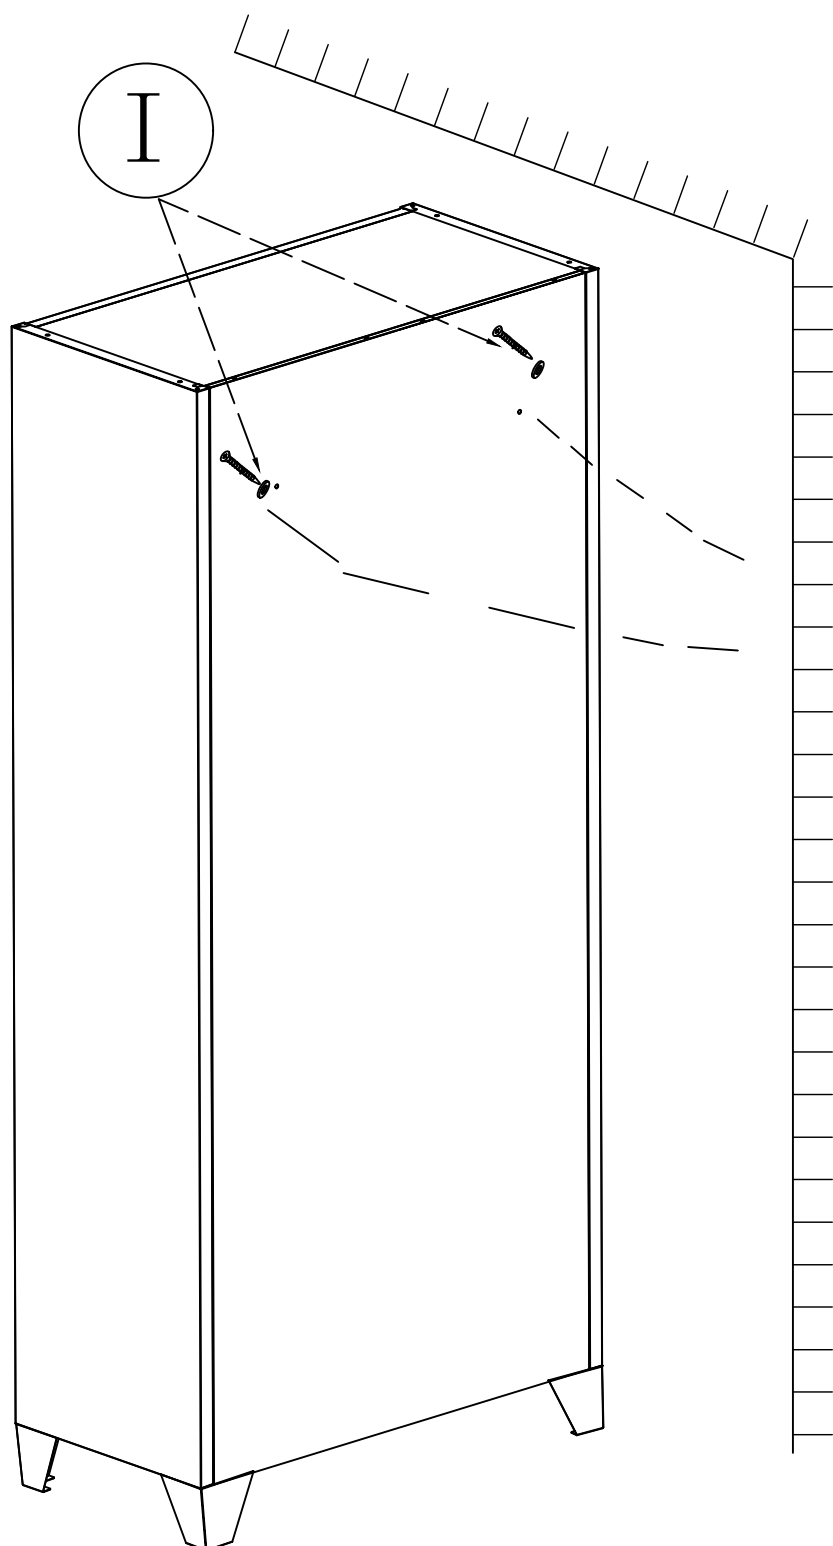

I 