

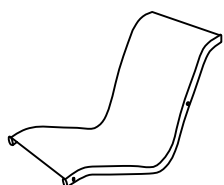



ASSEMBLY INSTRUCTION

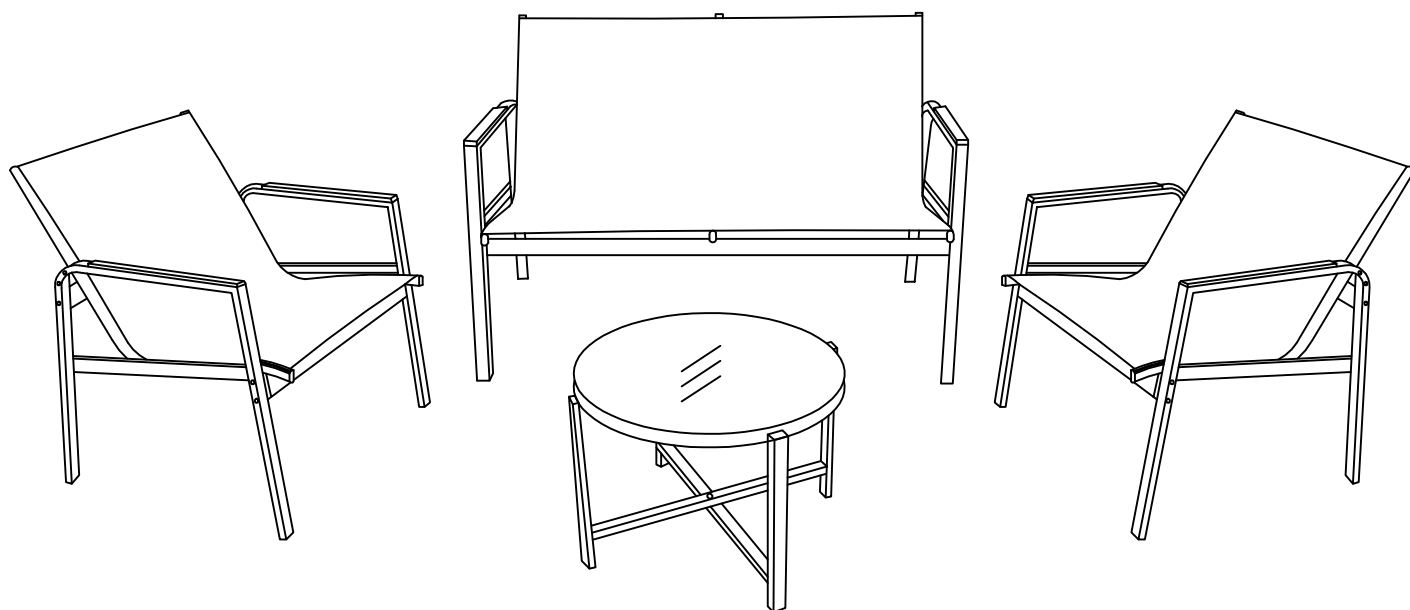

A X2

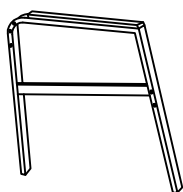


B X3

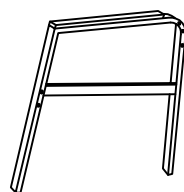


C X3




D X4




E X1




F X1




G X4



H X2

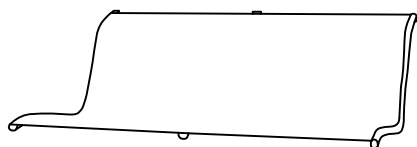


I X1

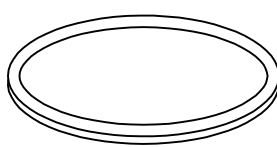

J X1



K X1

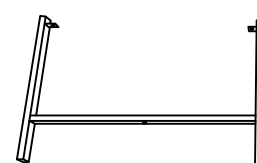

L X1



N X1



Ø6
a X50



Ø6
b X6



M6
c X15




M6
d X37




M6
e X15




M6*15
f X4




M6*30
g X2



M6*35
h X1



M6*40
i X18






M6*60
j X12




M6
m X1




M6
n X1

				 M6*15	 M6*35	 Ø6
K X1	L X1	J X1	N X1	f X4	h X1	a X5
 M6	 M6	 M6	 M6	 M6		
c X1	e X1	d X5	m X1	n X1		


STEP 1






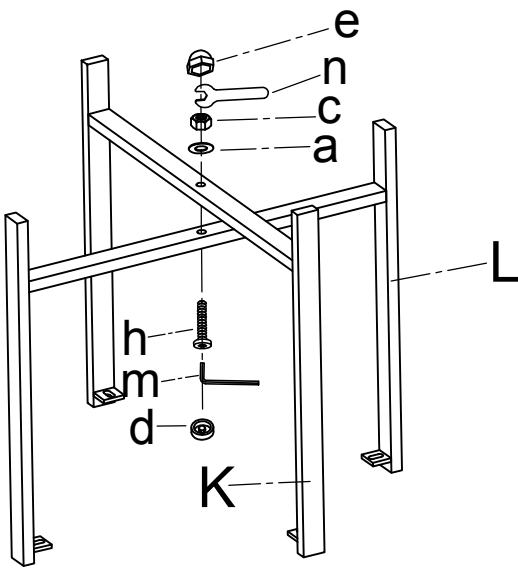


STEP 2

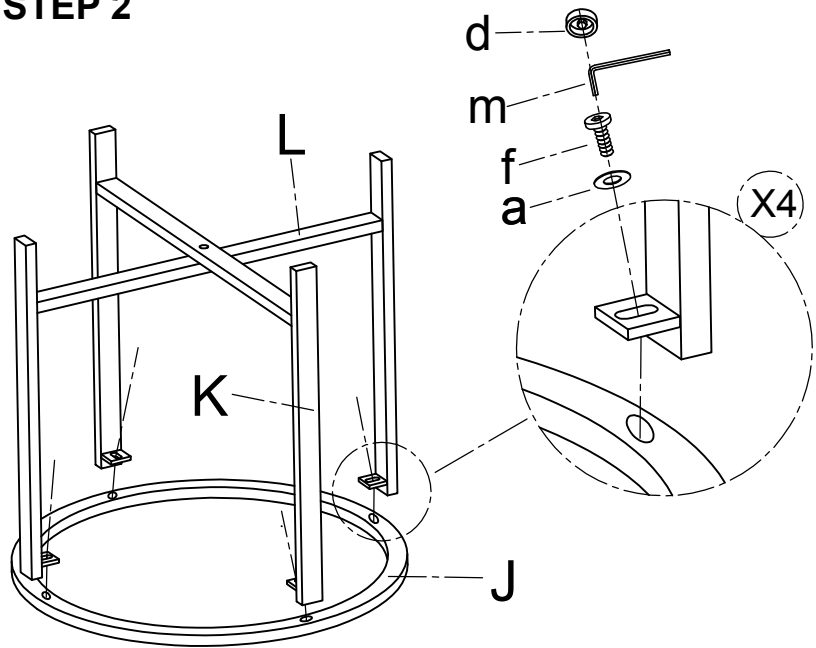


STEP 3

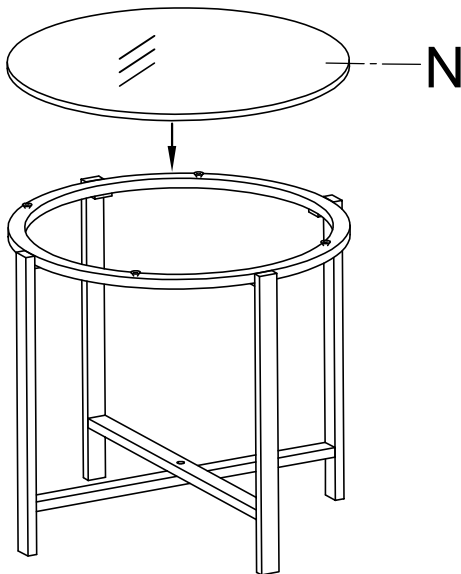


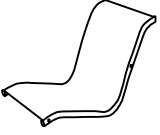					 M6*40	 M6*60
A X1	B X1	C X1	D X2	G X2	i X6	j X4
 Ø6	 M6	 M6	 M6	 Ø6	 M6	 M6
a X16	c X6	e X6	d X10	b X2	m X1	n X1


STEP 1

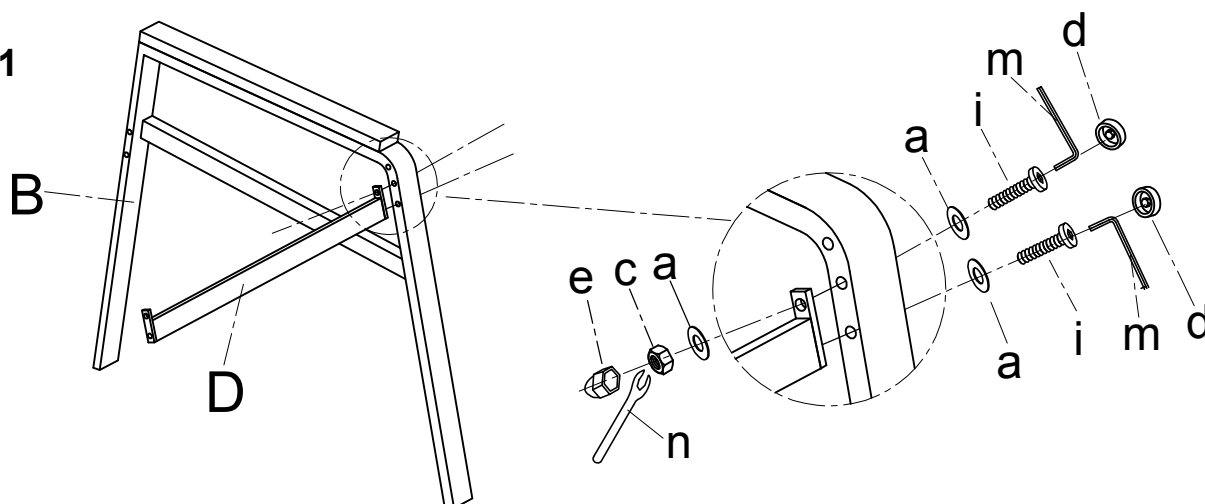


STEP 2

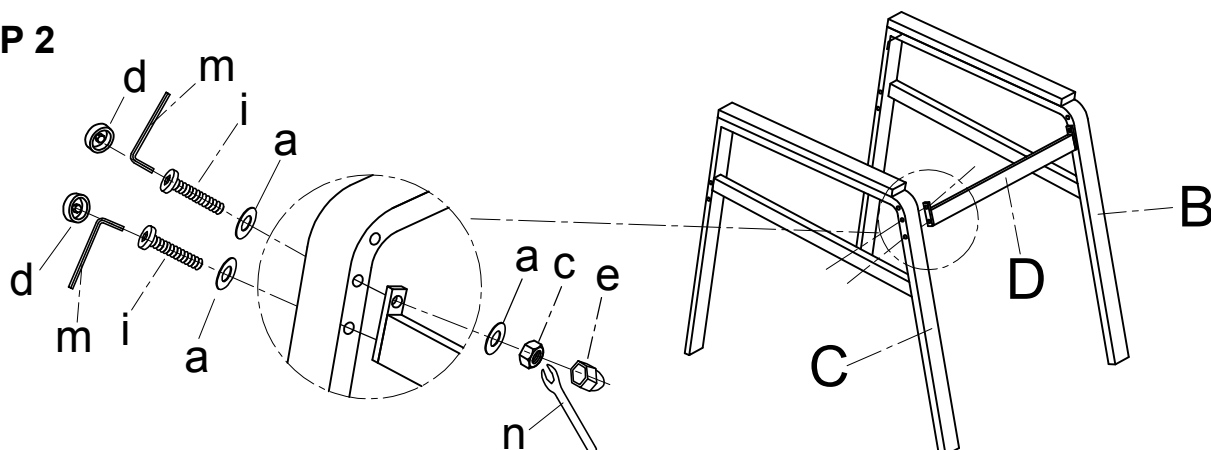


STEP 3

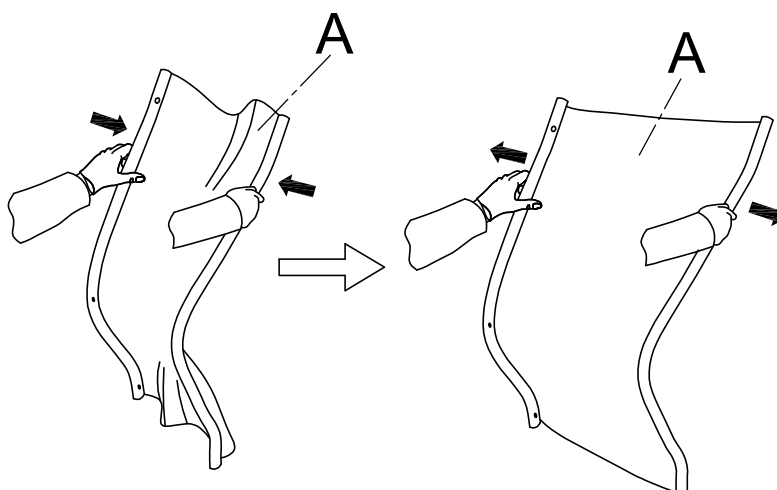


STEP 4

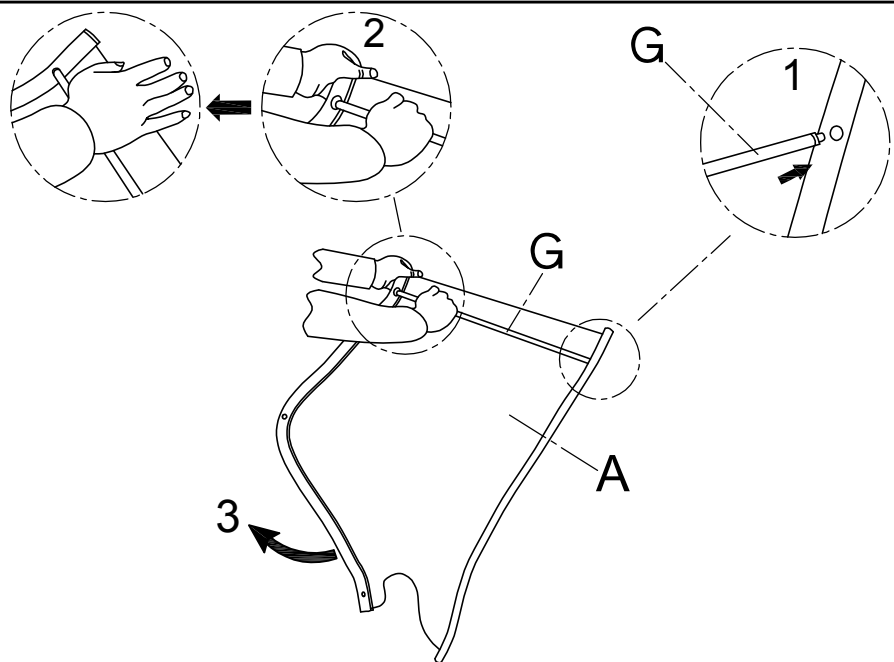

STEP 5

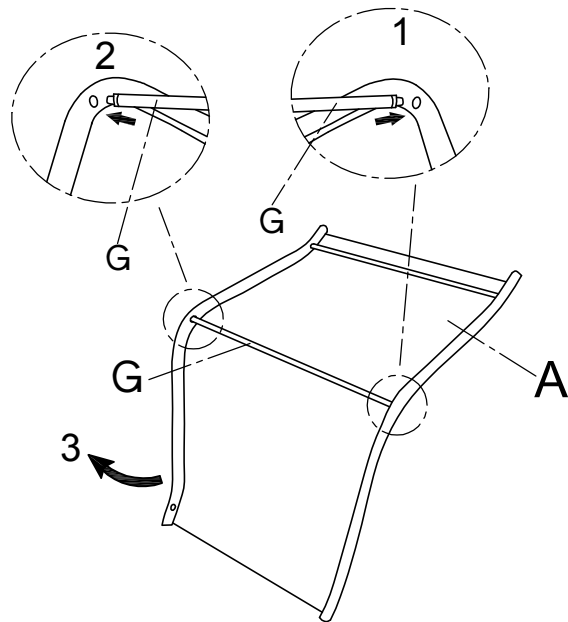


STEP 6

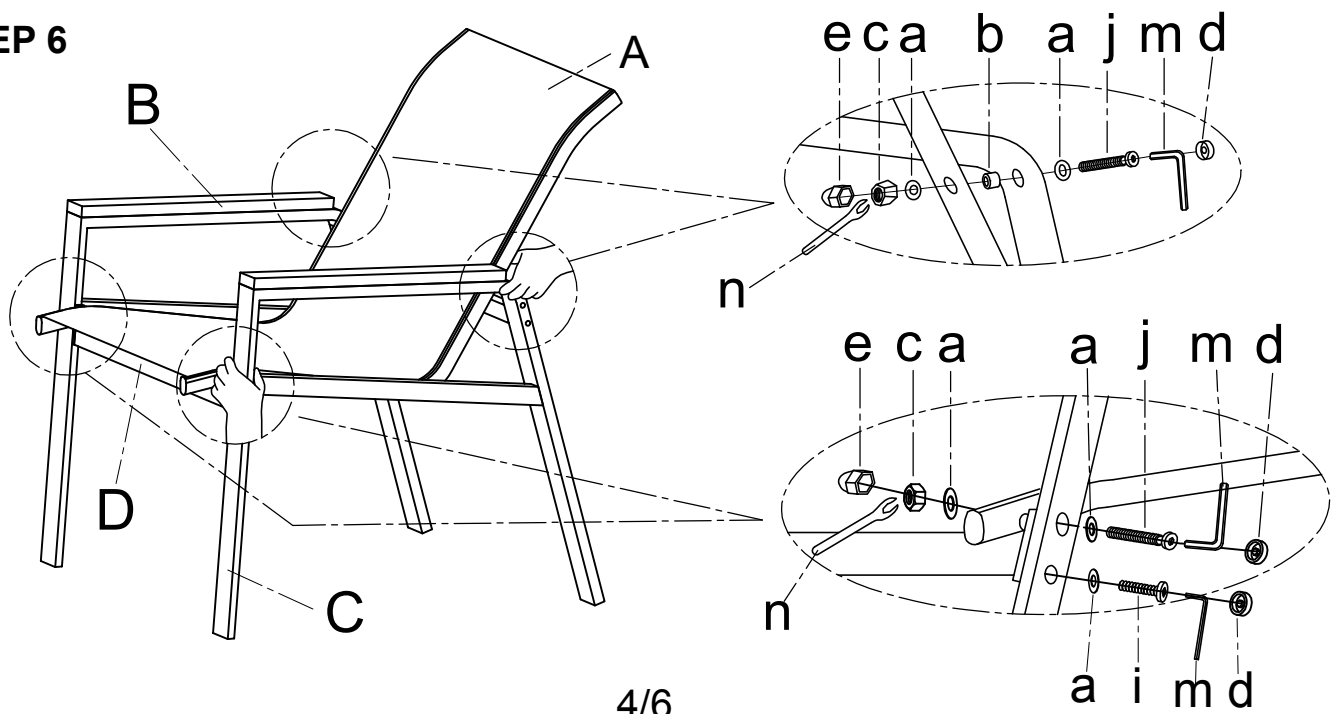


I X1	B X1	C X1	E X1	F X1	H X2	g X2	i X6
j X4	a X18	c X8	e X8	d X12	b X2	m X1	n X1


STEP 1

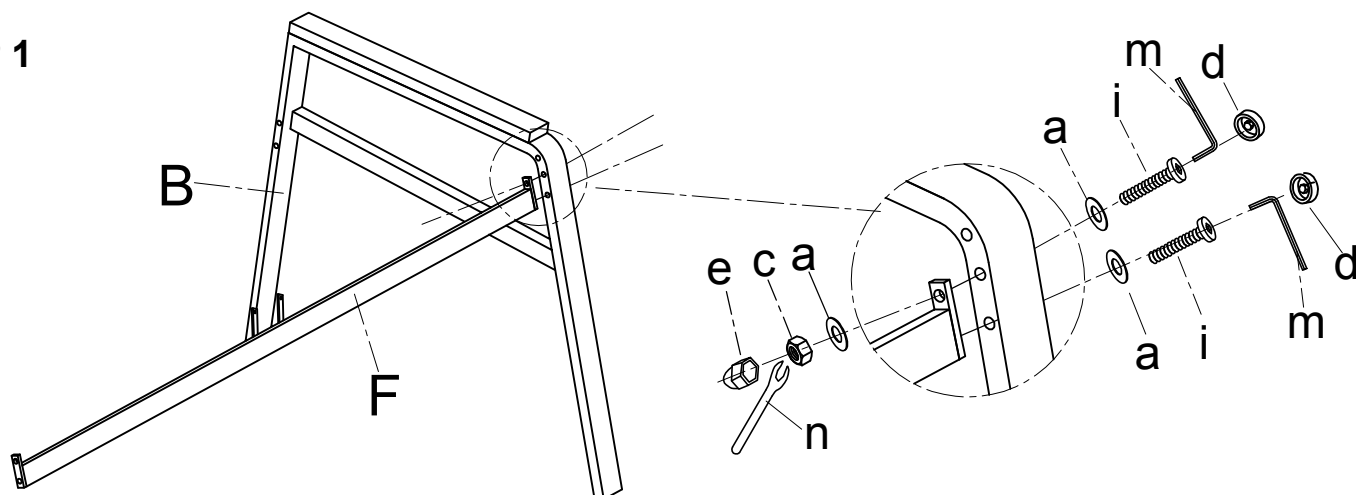


STEP 2

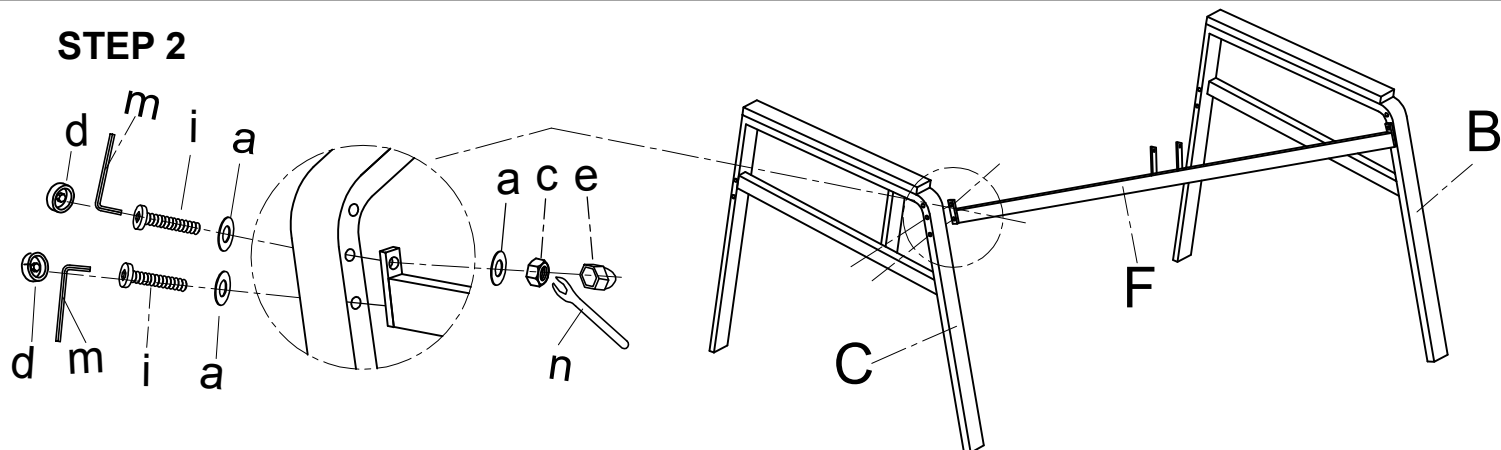


STEP 3

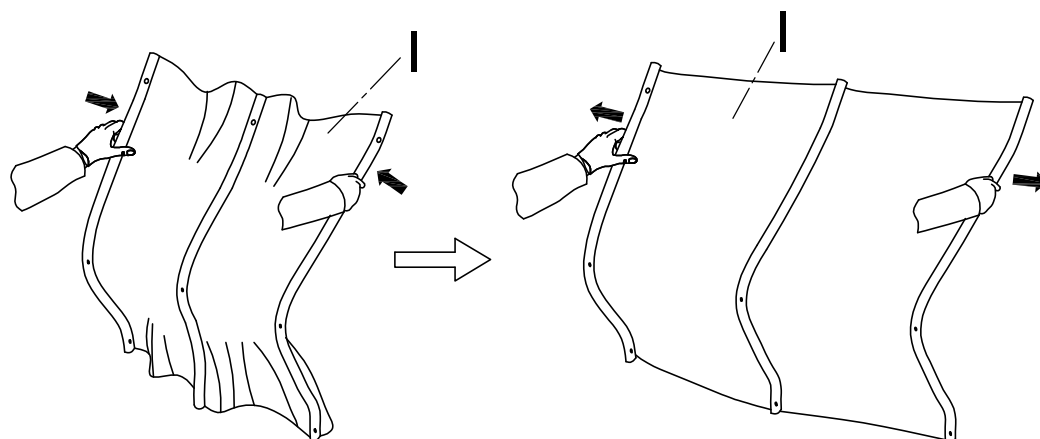

STEP 4

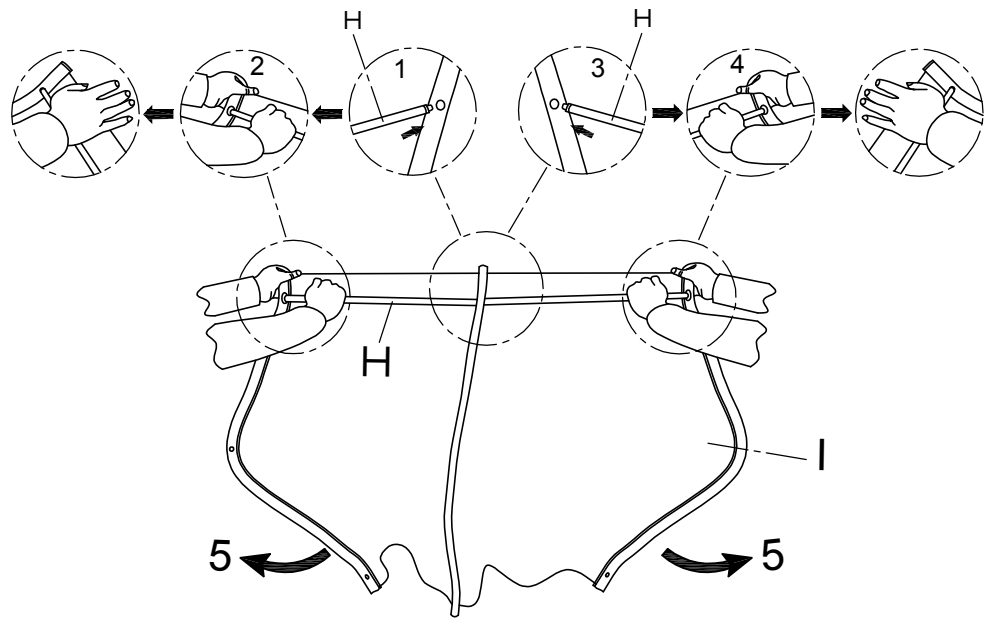

STEP 5

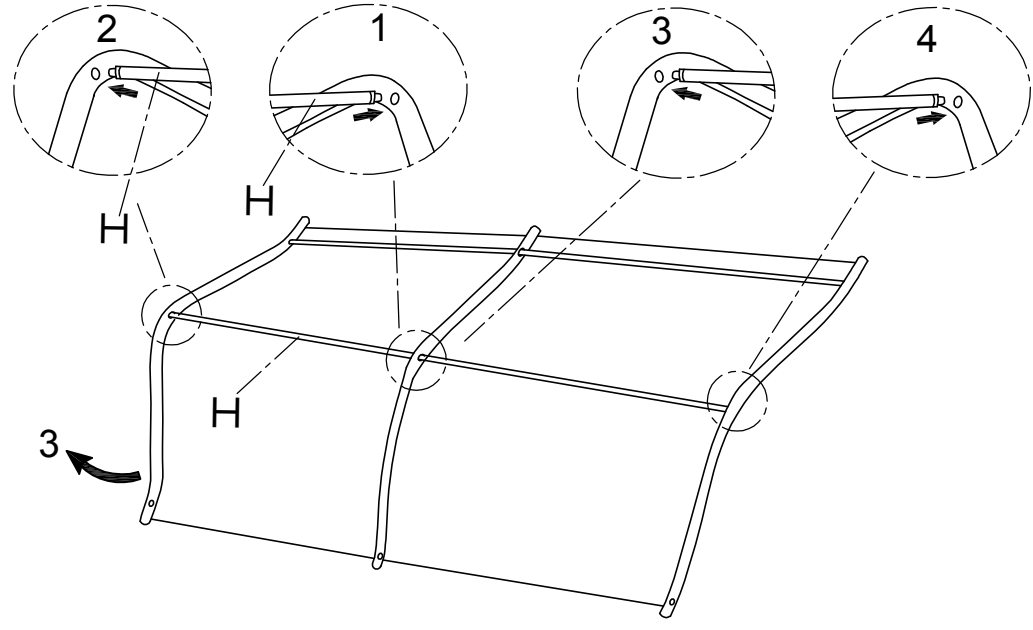

STEP 6

