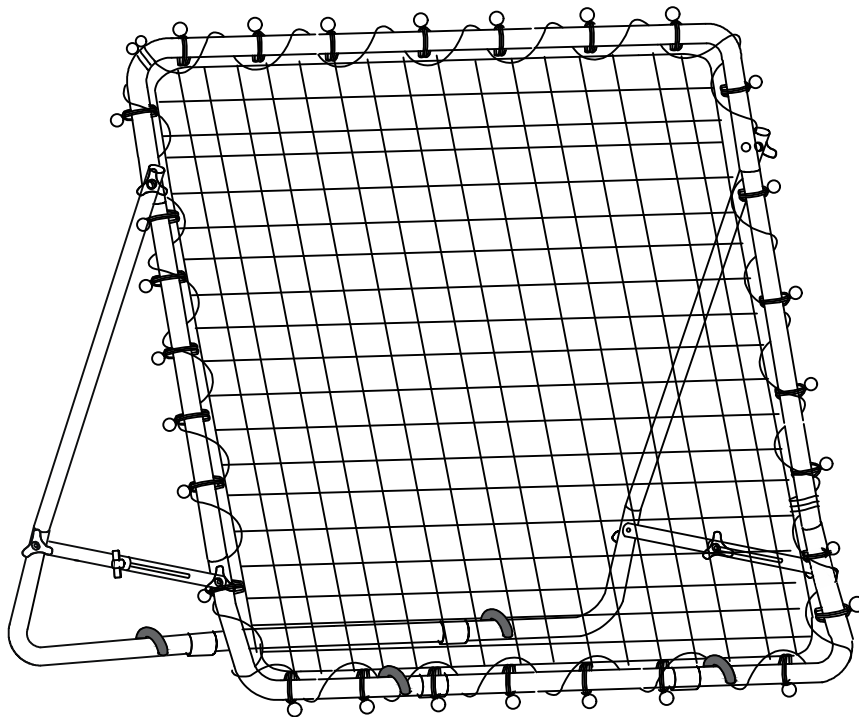


MODEL: GT23021



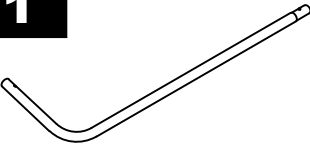
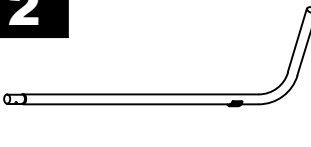
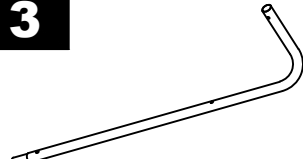
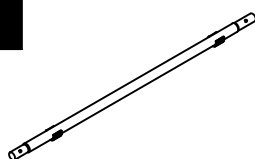
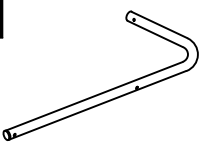
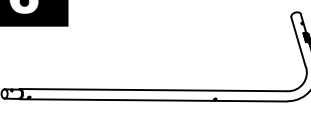

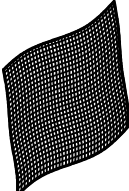
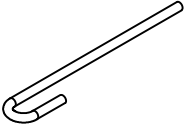


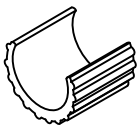
Missing parts, damages, and any other problems, please contact us via email.



raykeepgoods@outlook.com

ENGLISH

GT23021 PARTS LIST

1  Tube x1	2  Tube x1	3  Tube x1	4  Tube x1
5  Tube x2	6  Tube x1	7  Adjusting Iron plate-A x2	8  Adjusting Iron plate-B x2
9  Rubber Band Buckle x28	10  Net x1	11  U-Nail x4	12  Wrapping Rope x1
A1  M6x45mm Bolt x4	A2  M6 Washer x6	A3  M6 Nut x8	A4  M6x20mm Bolt x2
A5  Wrench x1	A6  M6x70mm Bolt x2	P1 Pre-Installed  Pipe Plug x2	P2  Spring Buckle x6
P3  Plastic Spacer x4			

ENGLISH

ASSEMBLY INSTRUCTIONS:

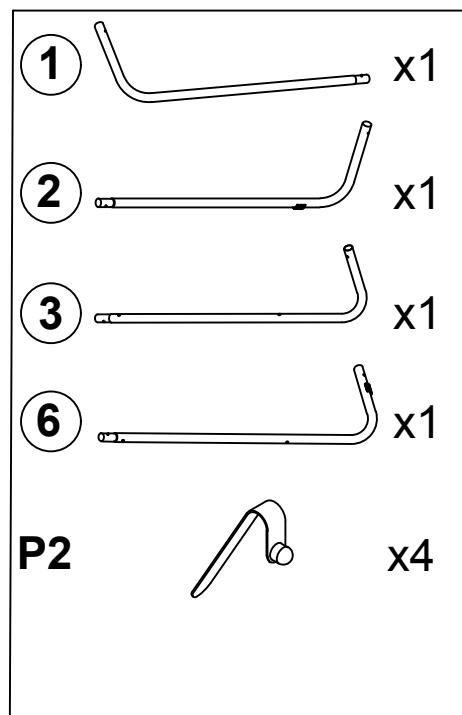


Fig 1

1. Connect Tube(#1), Tube(#2), Tube(#3) and Tube(#6) as shown FIG.1. Pay attention to press the Spring Buckle (P2)

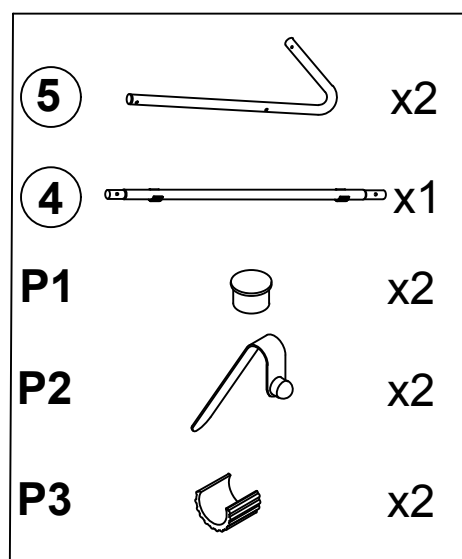


Fig 2

2. Connect Tubes(#5) and Tubes(#4) as shown FIG.2. Pay attention to press the Spring Buckle (P2)

Fig 1

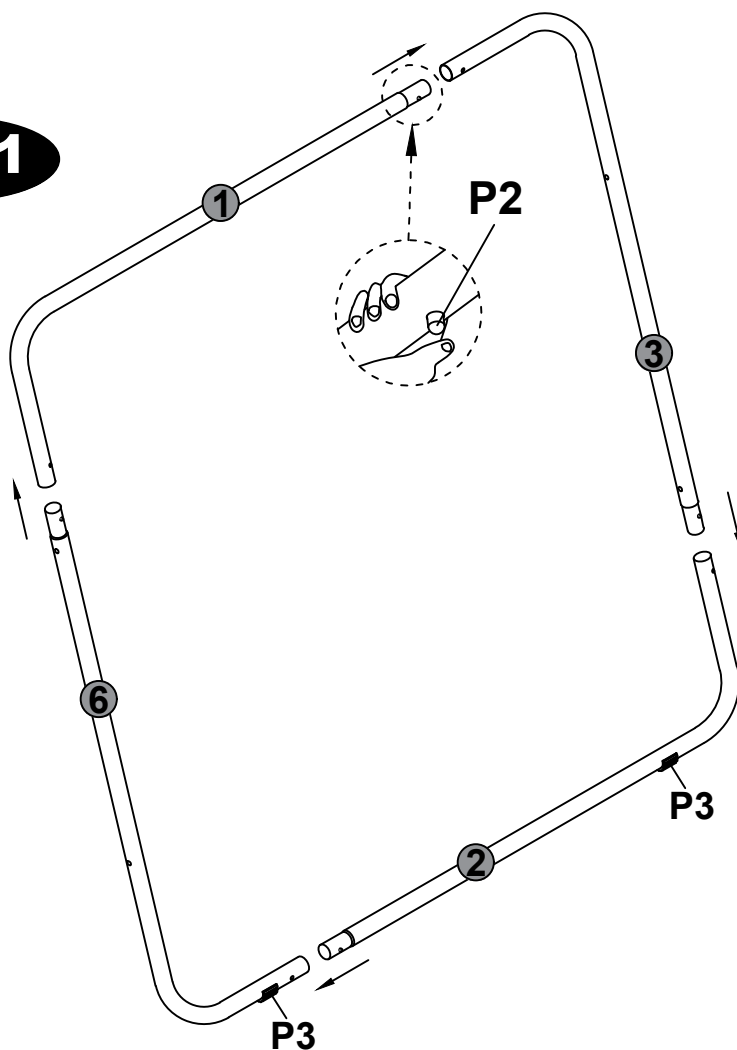


Fig 2

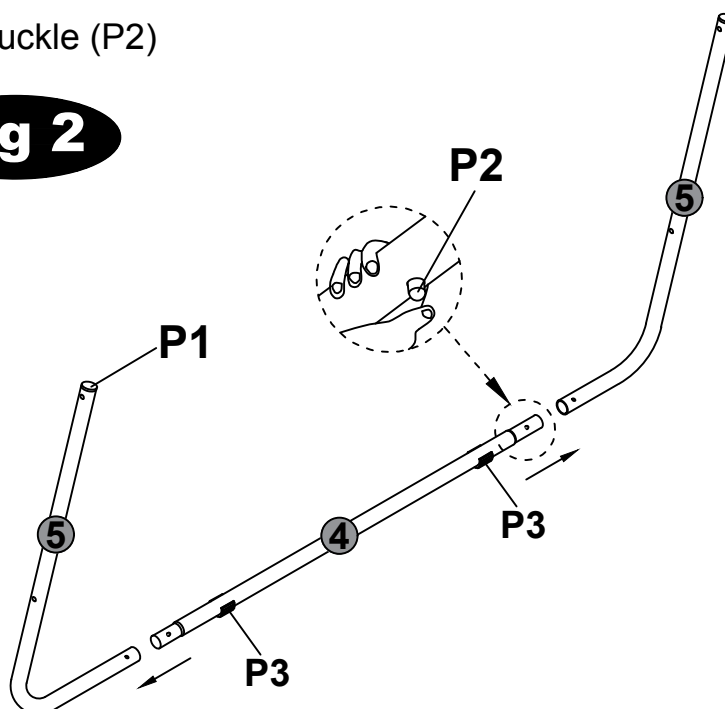


Fig 3

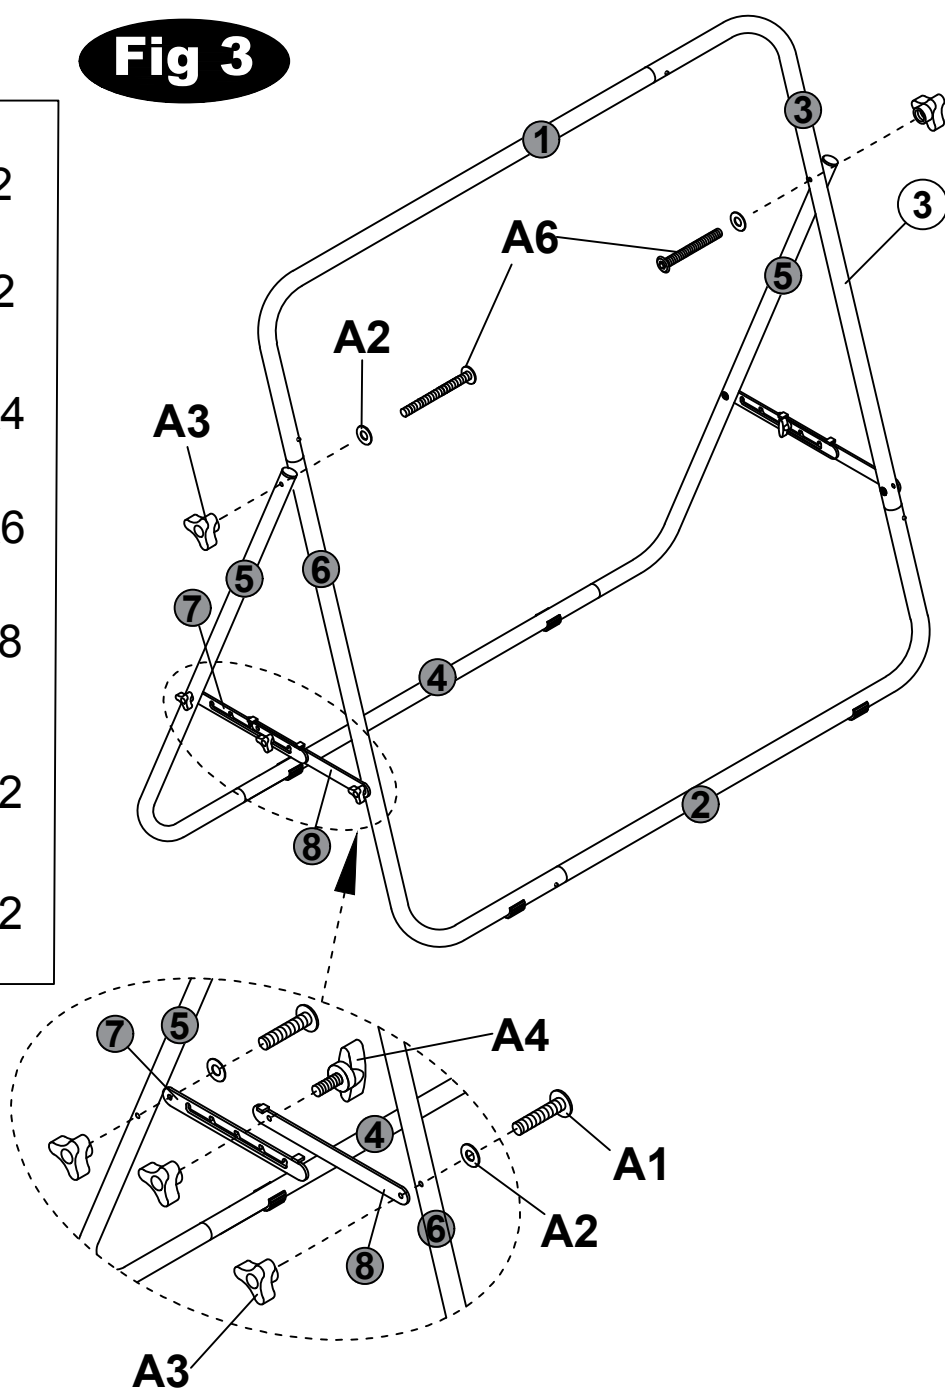
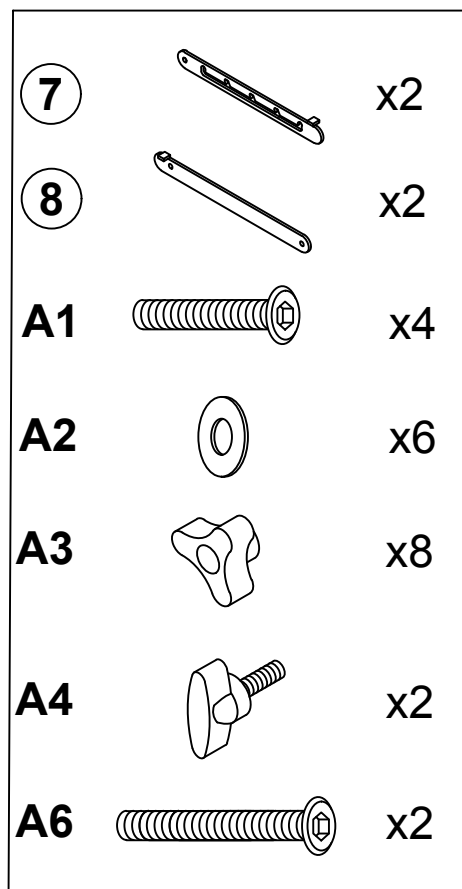


Fig 3

3. Attach the Tube(#5) to the Tube (#3 & #6) using a Bolt (A6),a Washer(A2) and a Nut(A3) per Tube(#5). See FIG. 3.
4. Attach the Adjusting Iron plate-A(#7) to the Adjusting Iron plate-B(#8) Using a Bolt(A4) and a Nut(A3).
5. Attach the Adjusting Iron plate(#7 & #8) to the Tube(#3 and #5,#6 and #5) using two Bolt (A1), two Washers(A2) and two Nut(A3).See FIG. 3.

Fig 4

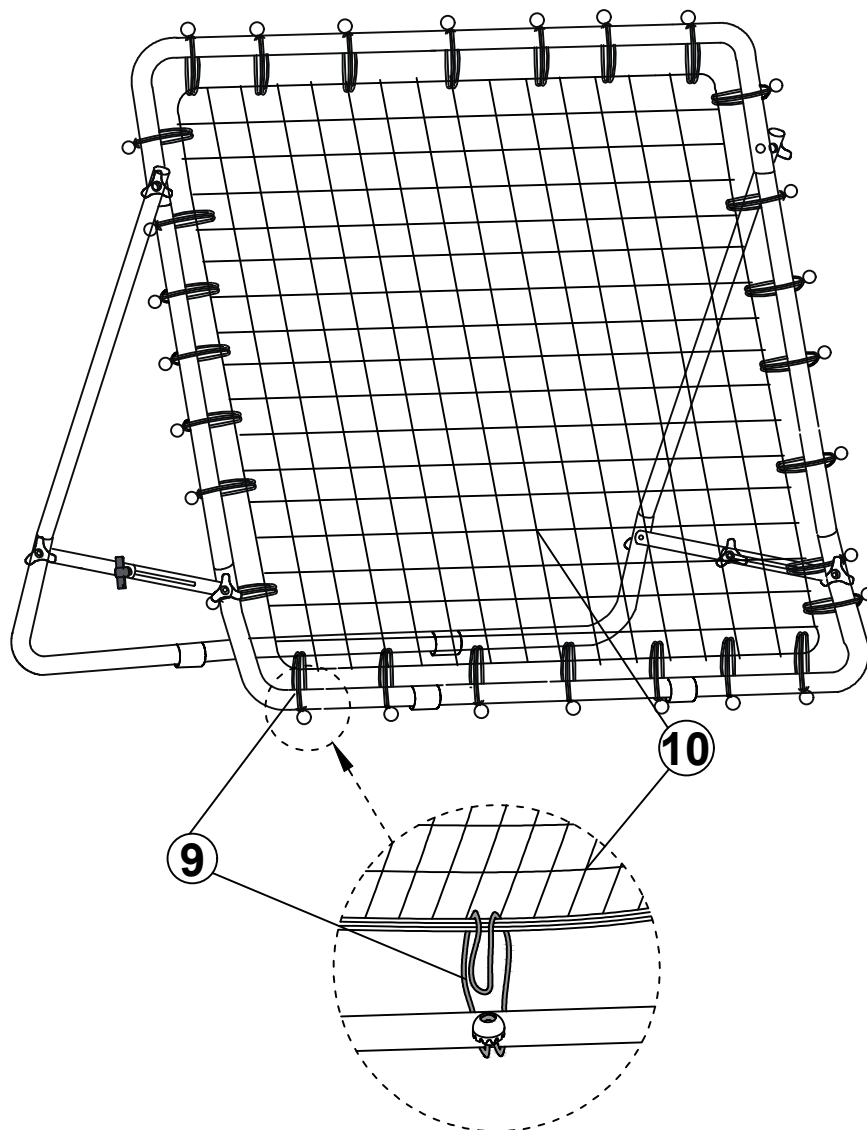
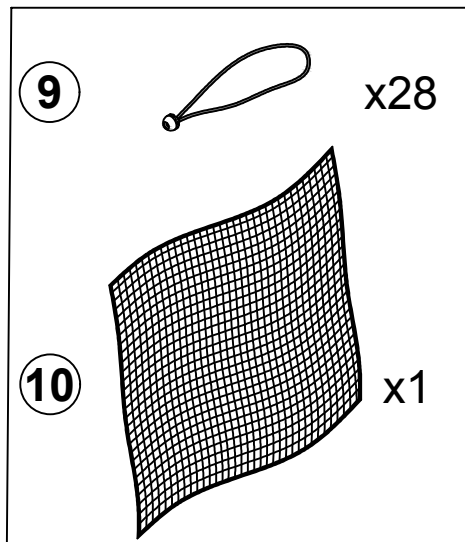


Fig 4

6. Tie the net(#9) to the Tube(#1, #2, #3 and #6) using twenty eight rubber band buckles. See FIG. 4.

Fig 5

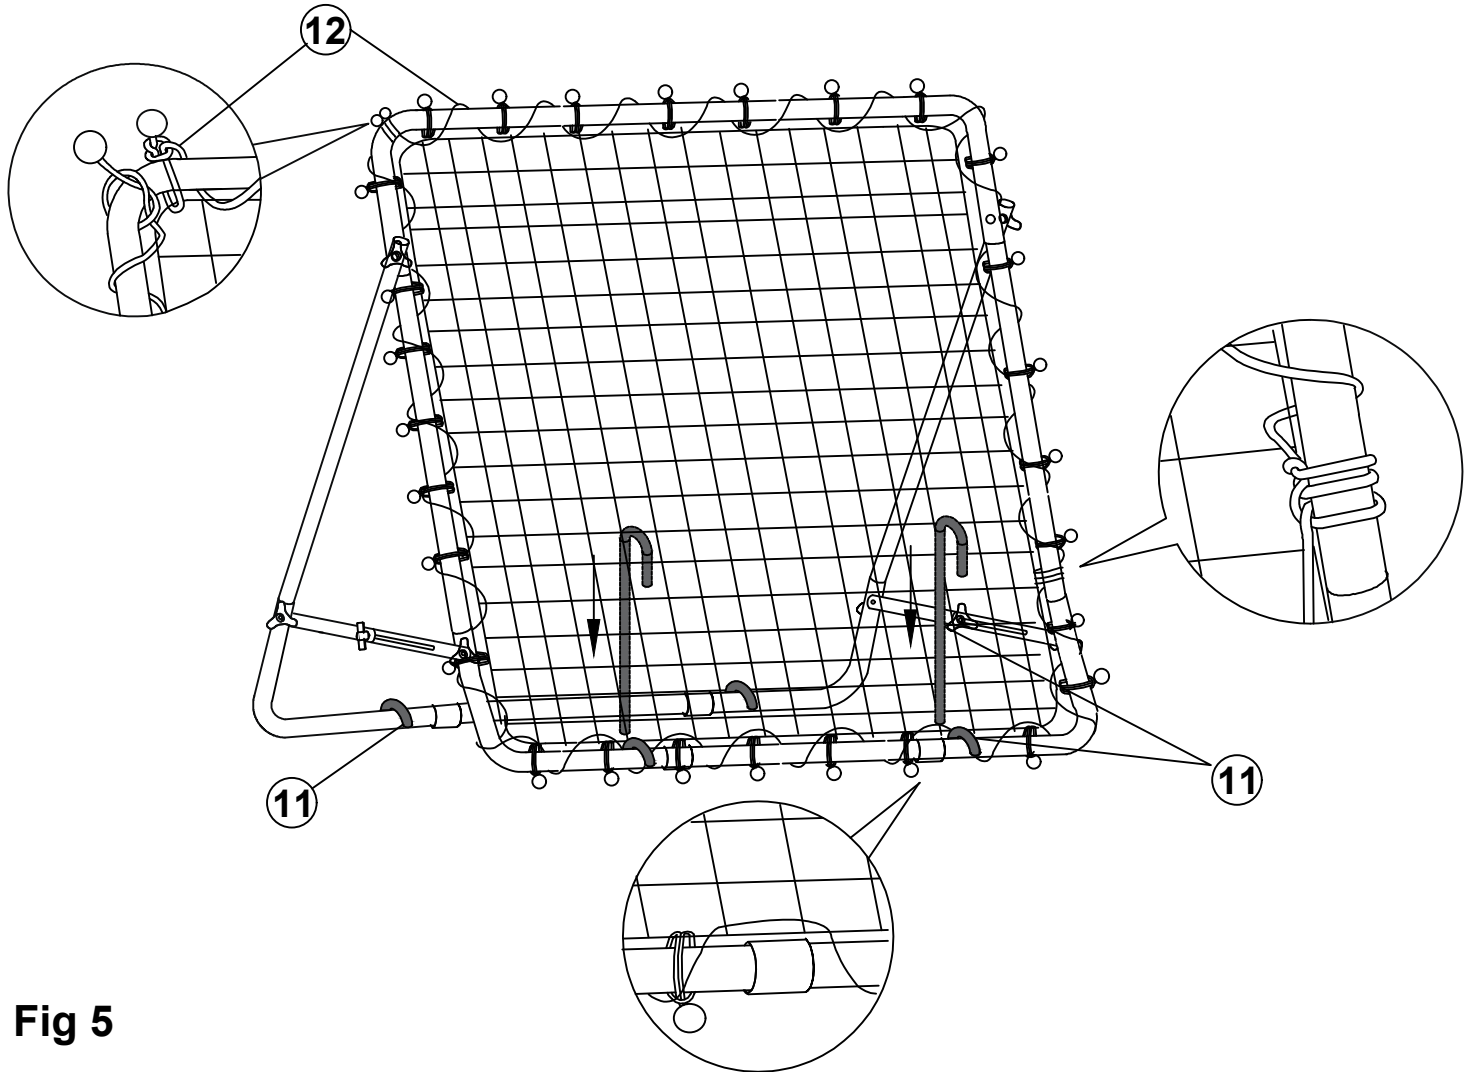
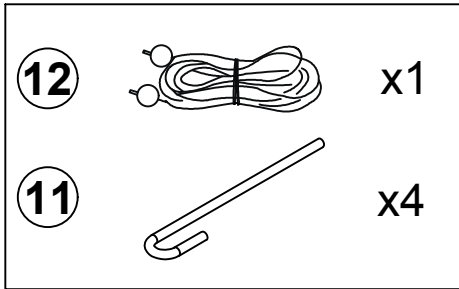


Fig 5

7. Tie a knot at the left top corner of frame to fasten the strength wrapping rope(#12), then start to wrap mesh by mesh and avoid the tube connecting part at the side frame. Besides, the wrapping rope can be tightened to ensure the tension of rope.
8. Wrapping 3 times and make a knot to fix the rope to ensure it will not slide back; Avoiding the non-slip tube when wrap at bottom frame part. Tie a knot when the wrapping finished. Please note that the rope can be tightened to ensure the tension of the rope.
9. Fix Tube on the grass with U-Nails(#11) as shown in Fig.5.