




INSTALLATION MANUAL
Severn 50/40 (28 mm) Log Cabin
E9 - 5040SPP (28)

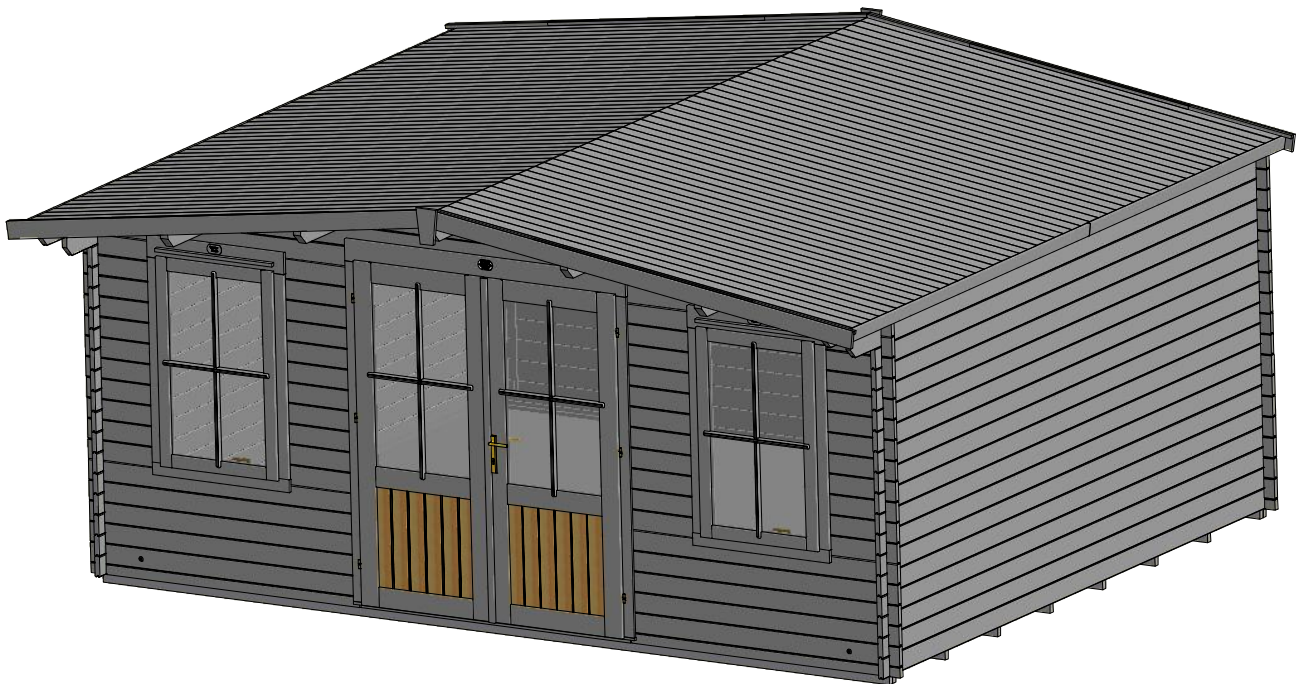

Important!

If you have bought shingles, please use our provided shingle installation instructions.



Unique Cabin Reference Number.

www.dunsterhouse.co.uk

Component details for Severn 50/40 (28mm)


EN.4860

10 of required
Bearer
(Pressure treated)

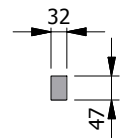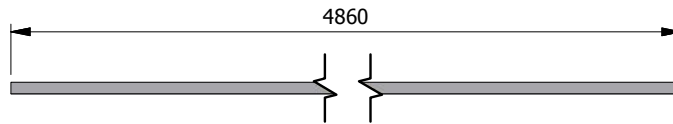



A28.435.0.0.0

22 of required
Wall log





A28.435.70.0.0

22 of required
Wall log

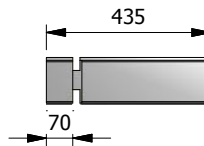



A28.1660.70.0.0

12 of required
Wall log

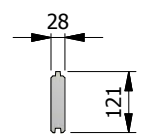



A28.4000.70.70.0

32 of required
Wall log

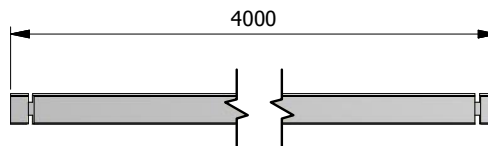



A28.4250.70.320.0

2 of required
Wall log

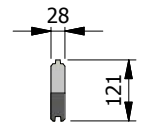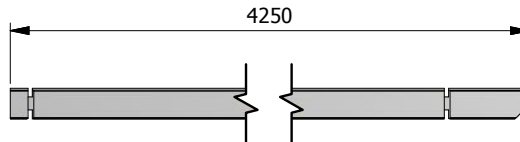



A28.5000.70.70.0

18 of required
Wall log
(Inc. one spare)

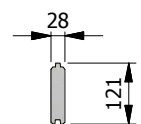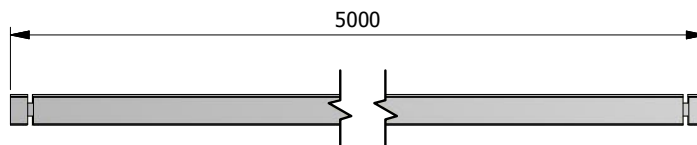



B28.1660.70.0.0

2 of required
Bottom wall log

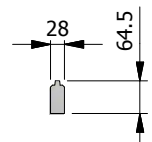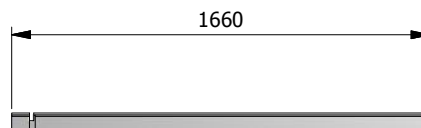



B28.5000.70.70.0

1 of required
Bottom wall log

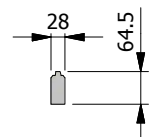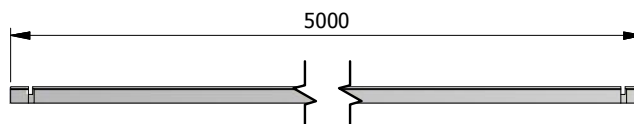

XN28.8L.4500.70.570.0


1 of required
Top wall log

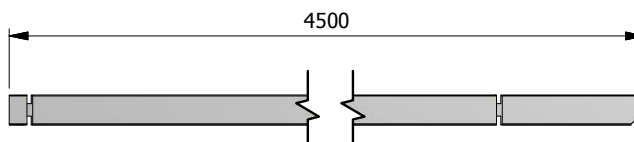

Component details for Severn 50/40 (28mm)


XN28.8R.4500.70.570.0

1 of required
Top wall log

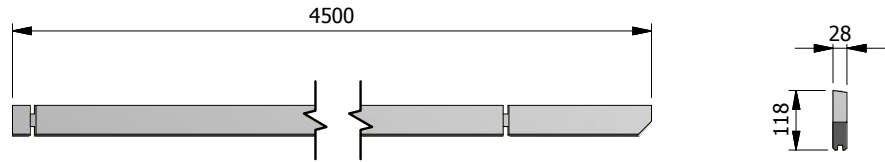


HN.3000

3 of required
Eaves edging

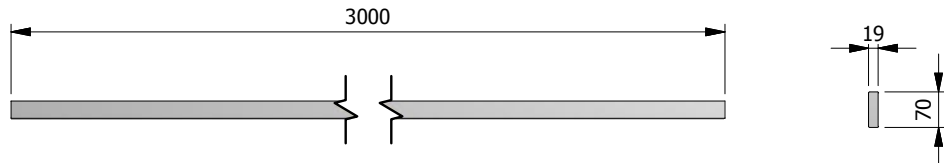


J.1960.A

4 of required
Storm brace

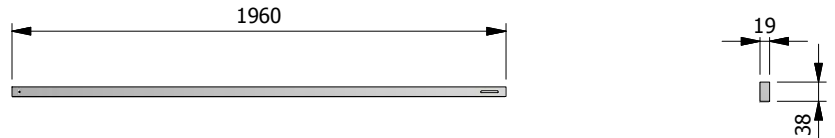


J.1960

15 of required
Floor trims & roof edging
reinforcement
(Required to be
cut to size one site)

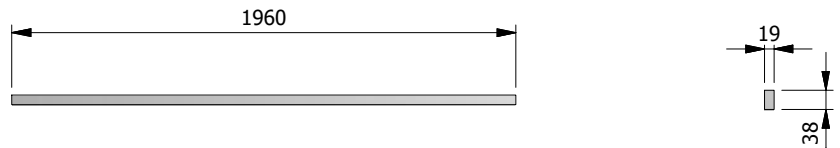


N.1960

12 of required
Apex trim & wind brace
(Required to be
cut to size one site)

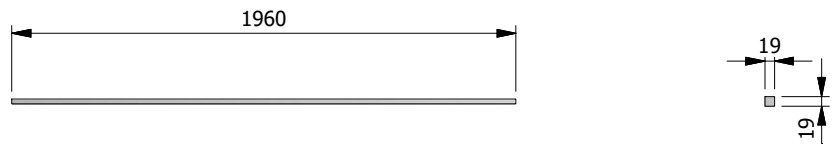


P45.8L.4500.65.565.0

2 of required
Purlin

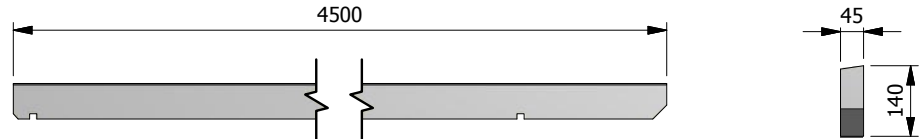


P45.8R.4500.65.565.0.

2 of required
Purlin

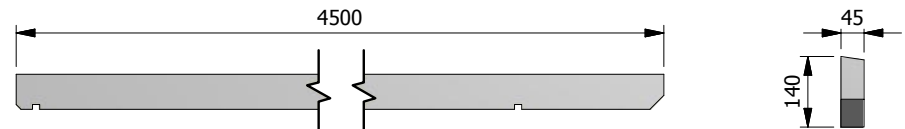

P45.4500.65.565.0

1 of required
Purlin

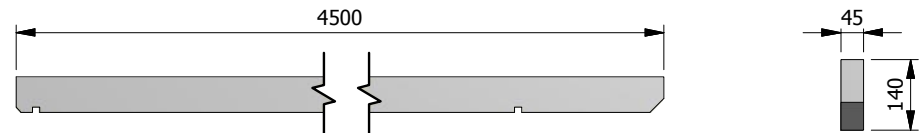


Z.195.A

2 of required
Trapezoid



ZN.2640.C8



4 of required
Fascia board

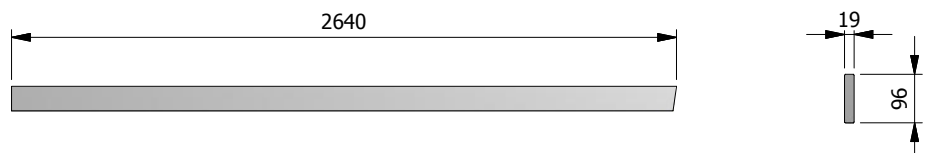

Component details for Severn 50/40 (28mm)



F.2570

102 of required
Roof Board





F.3770

54 of required
Floor Board
(Inc. one spare)



AP.28.5000

2 of required

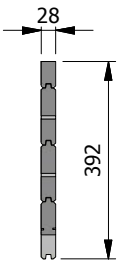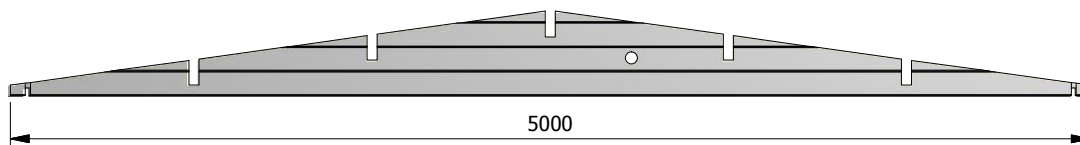


E9 - Double door 28mm

1 of required



E9 - Window 28mm


2 of required

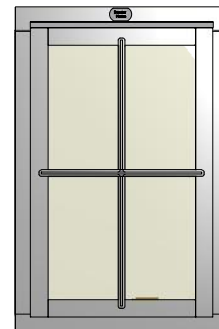

ACCESSORIES	
ITEM	QTY
35mm screw for securing door to first 3 wall logs, wind braces, apex trims, roof edge reinforcements, eaves edging, trapezoid & SMB brackets	211
50mm screws for fascias and double bearers	55
55mm screws for floor trims	40
70mm screws for first logs, door frame and purlins	50
M6 x 60mm bolts and nuts for storm braces	8
M6x25mm Washers for Storm Braces	16
20mm screws for vents	9
40mm nails for floor and roof boards	1100
Set of vents	2
Door handle set and accessories	1
Window handle set and accessories	2
SMB075 (28mm) Interlocking window connecting bracket	16
SMB077 (28mm) Interlocking Door to log Connecting Bracket	16
Installation manual	1
Generic Assembly Instructions	1


50/40 Severn Log Cabin Bearer Layout

We suggest preparing minimum overall base dimension of 5060x4060mm

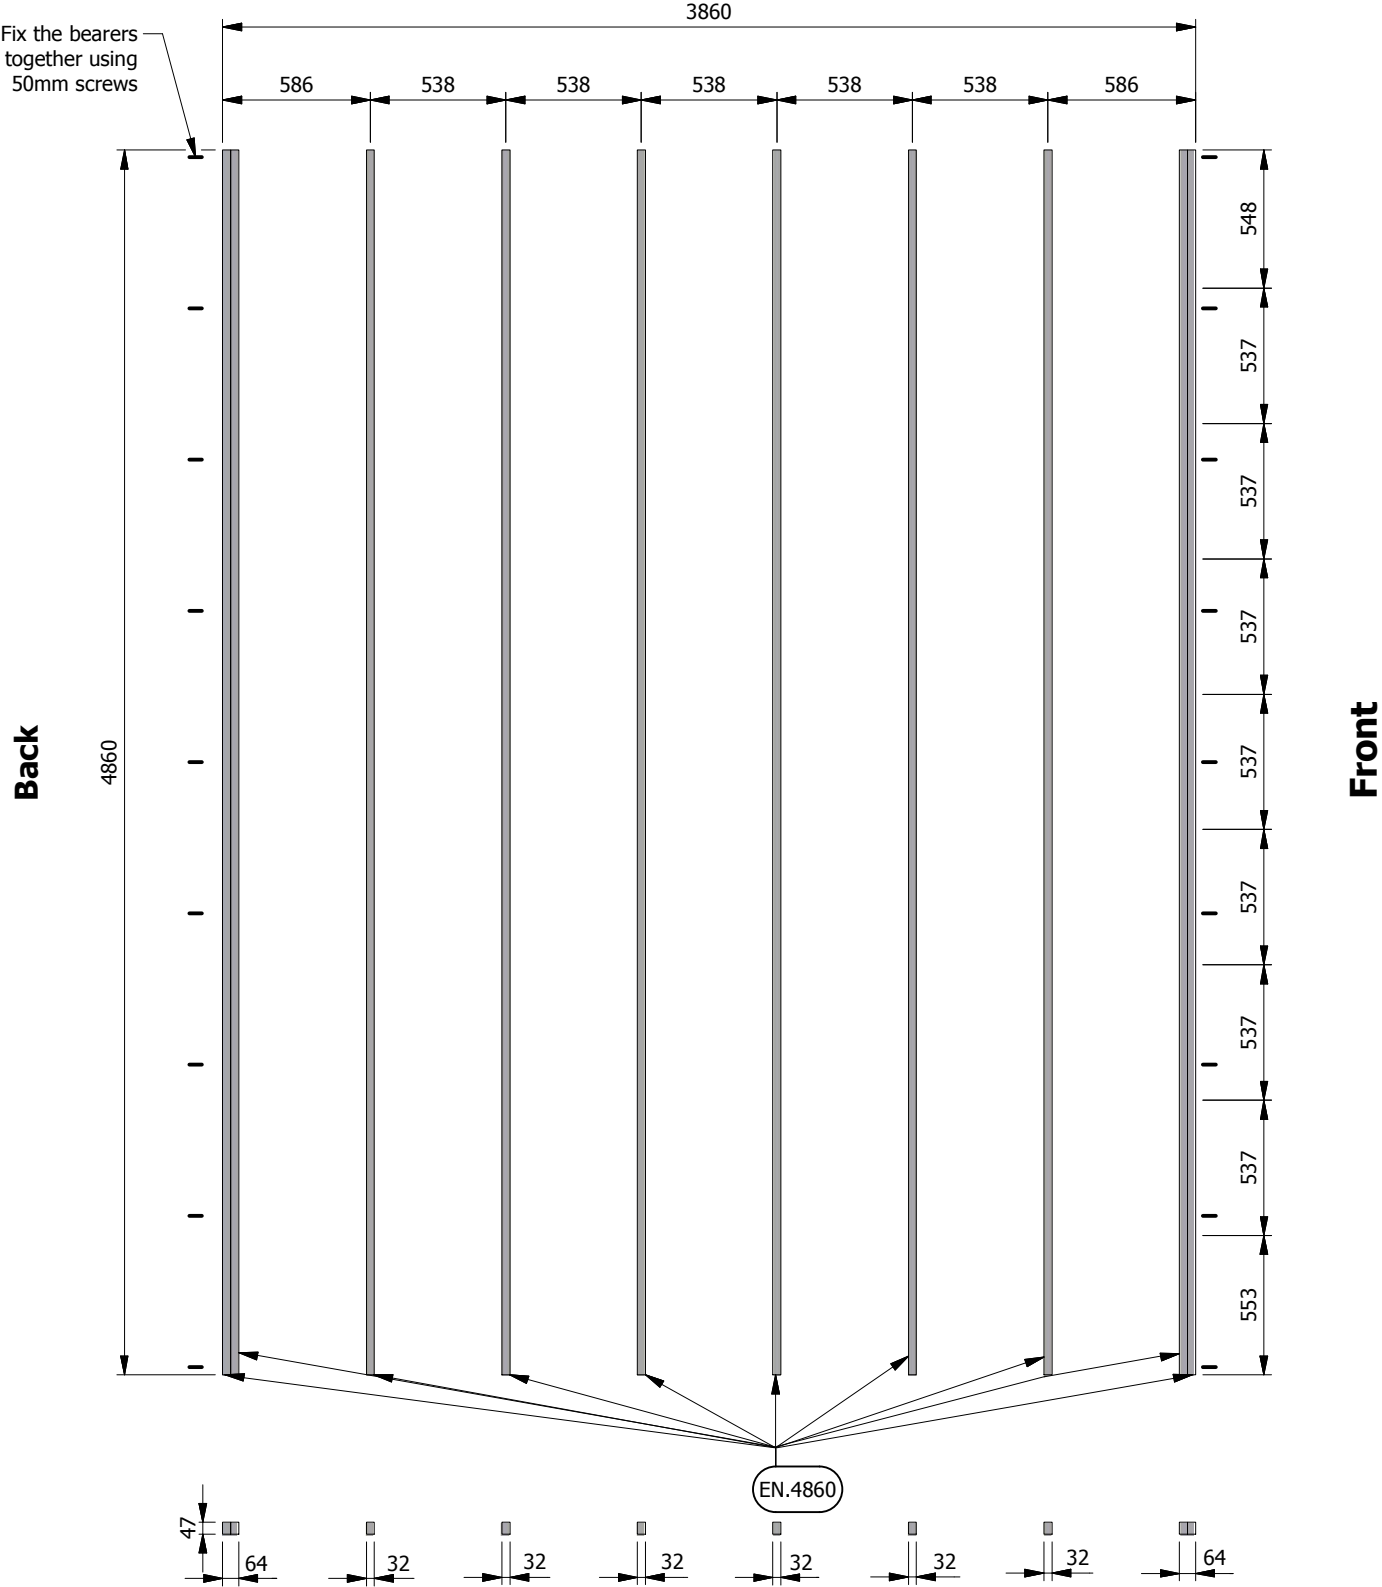


Wall Layout for Severn 50/40 (28mm)

Front Wall

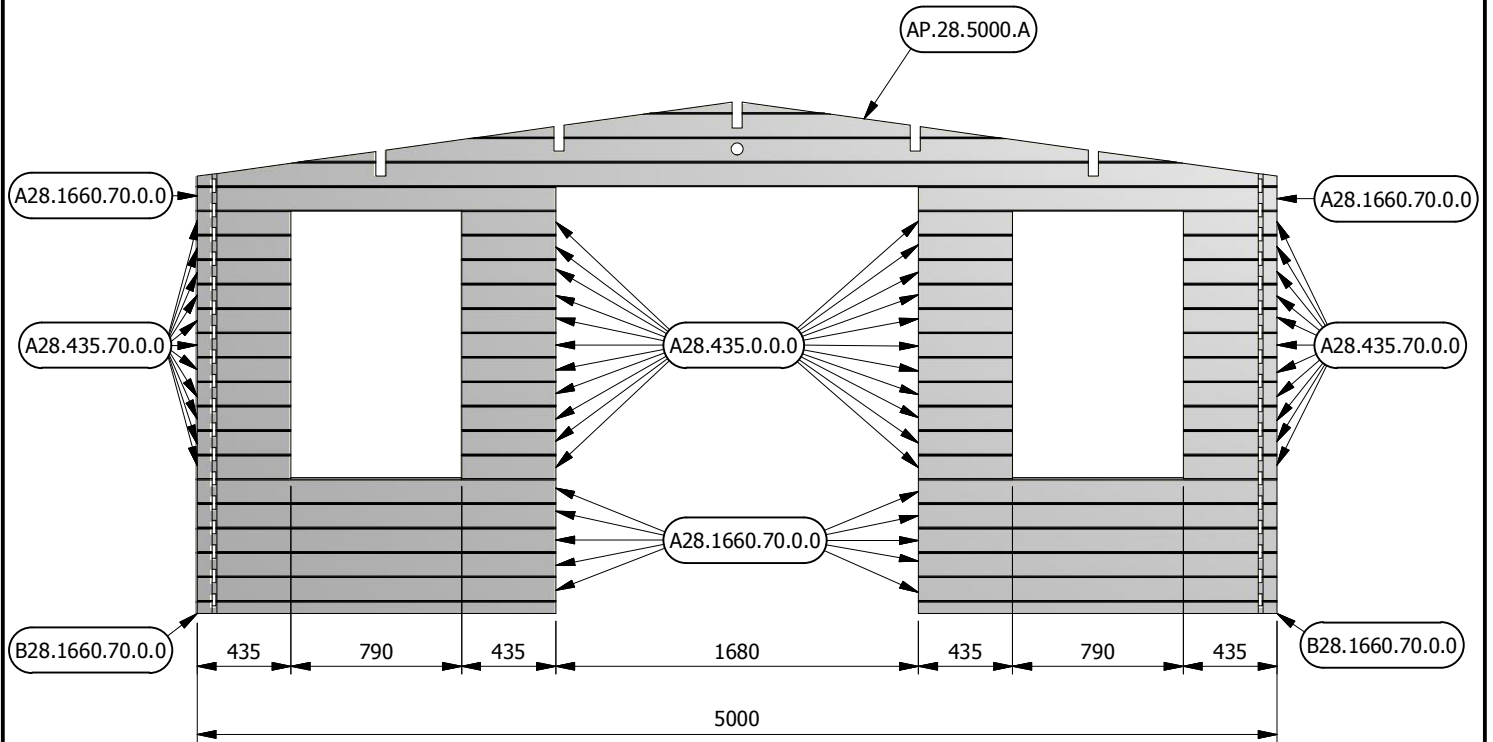


Back Wall

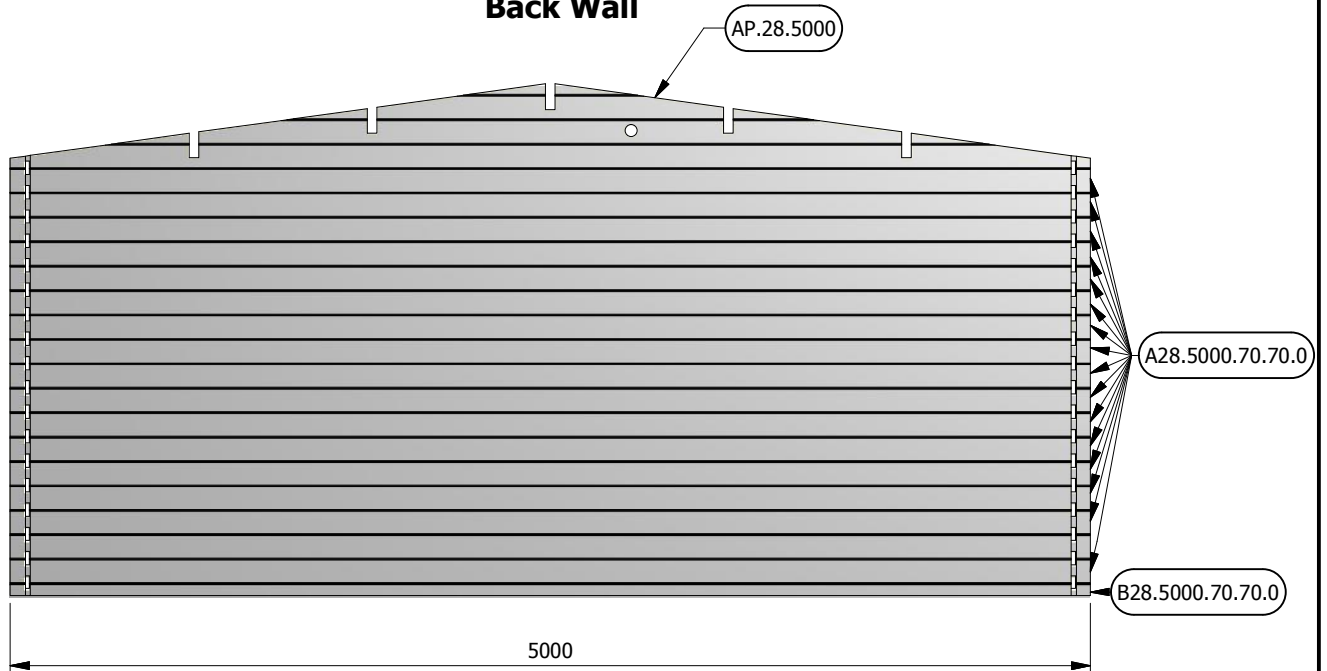


Wall Layout for Severn 50/40 (28mm)


Side Wall

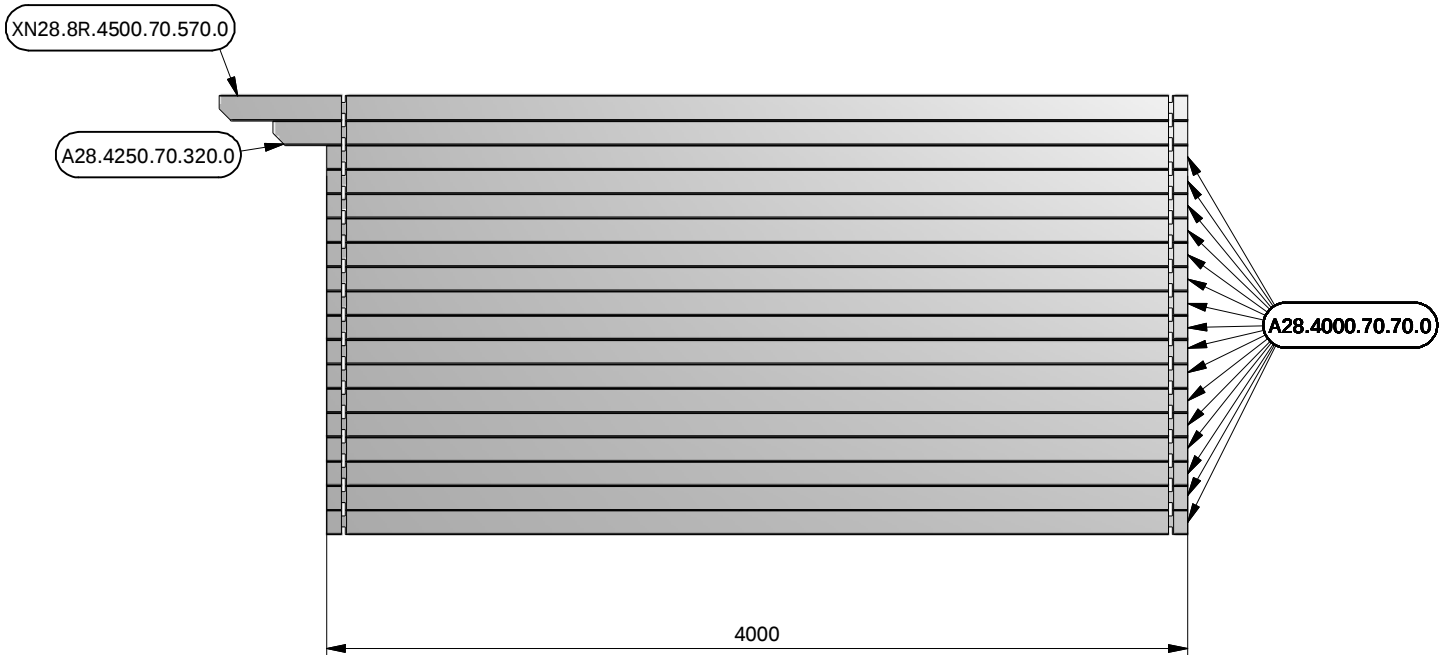


Side Wall

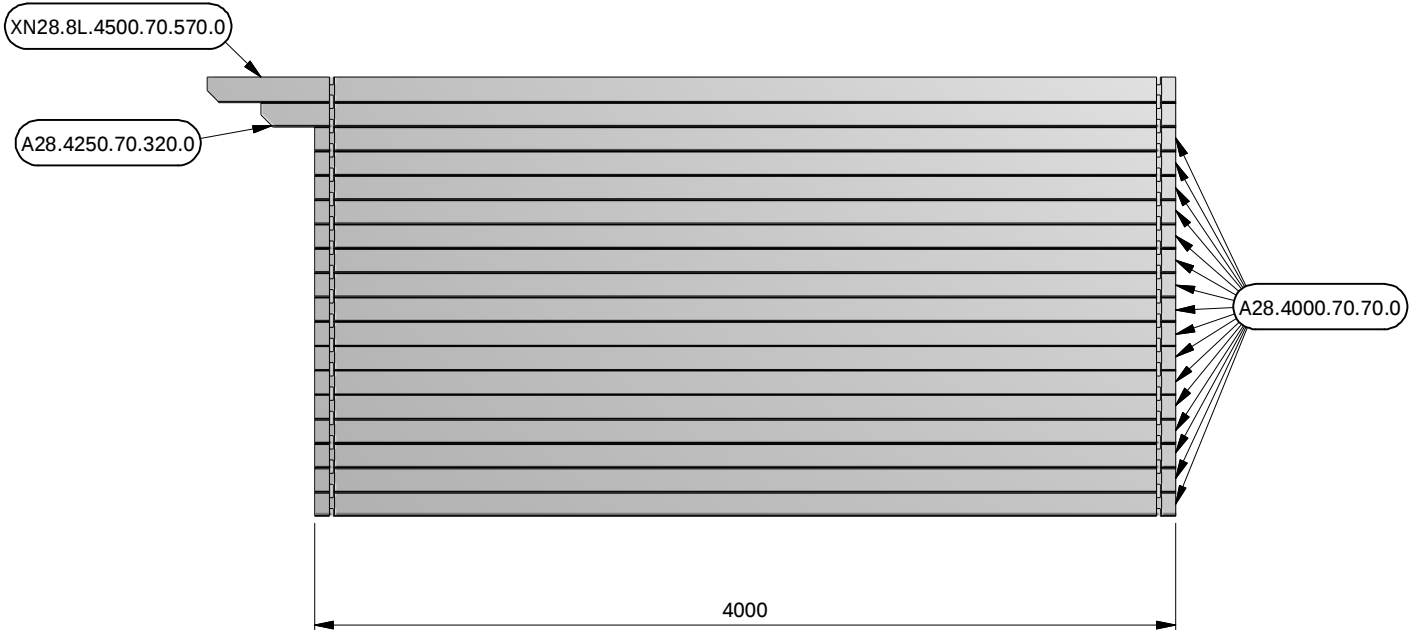

Purlin and Roof Installation for Severn 50/40 (28mm)

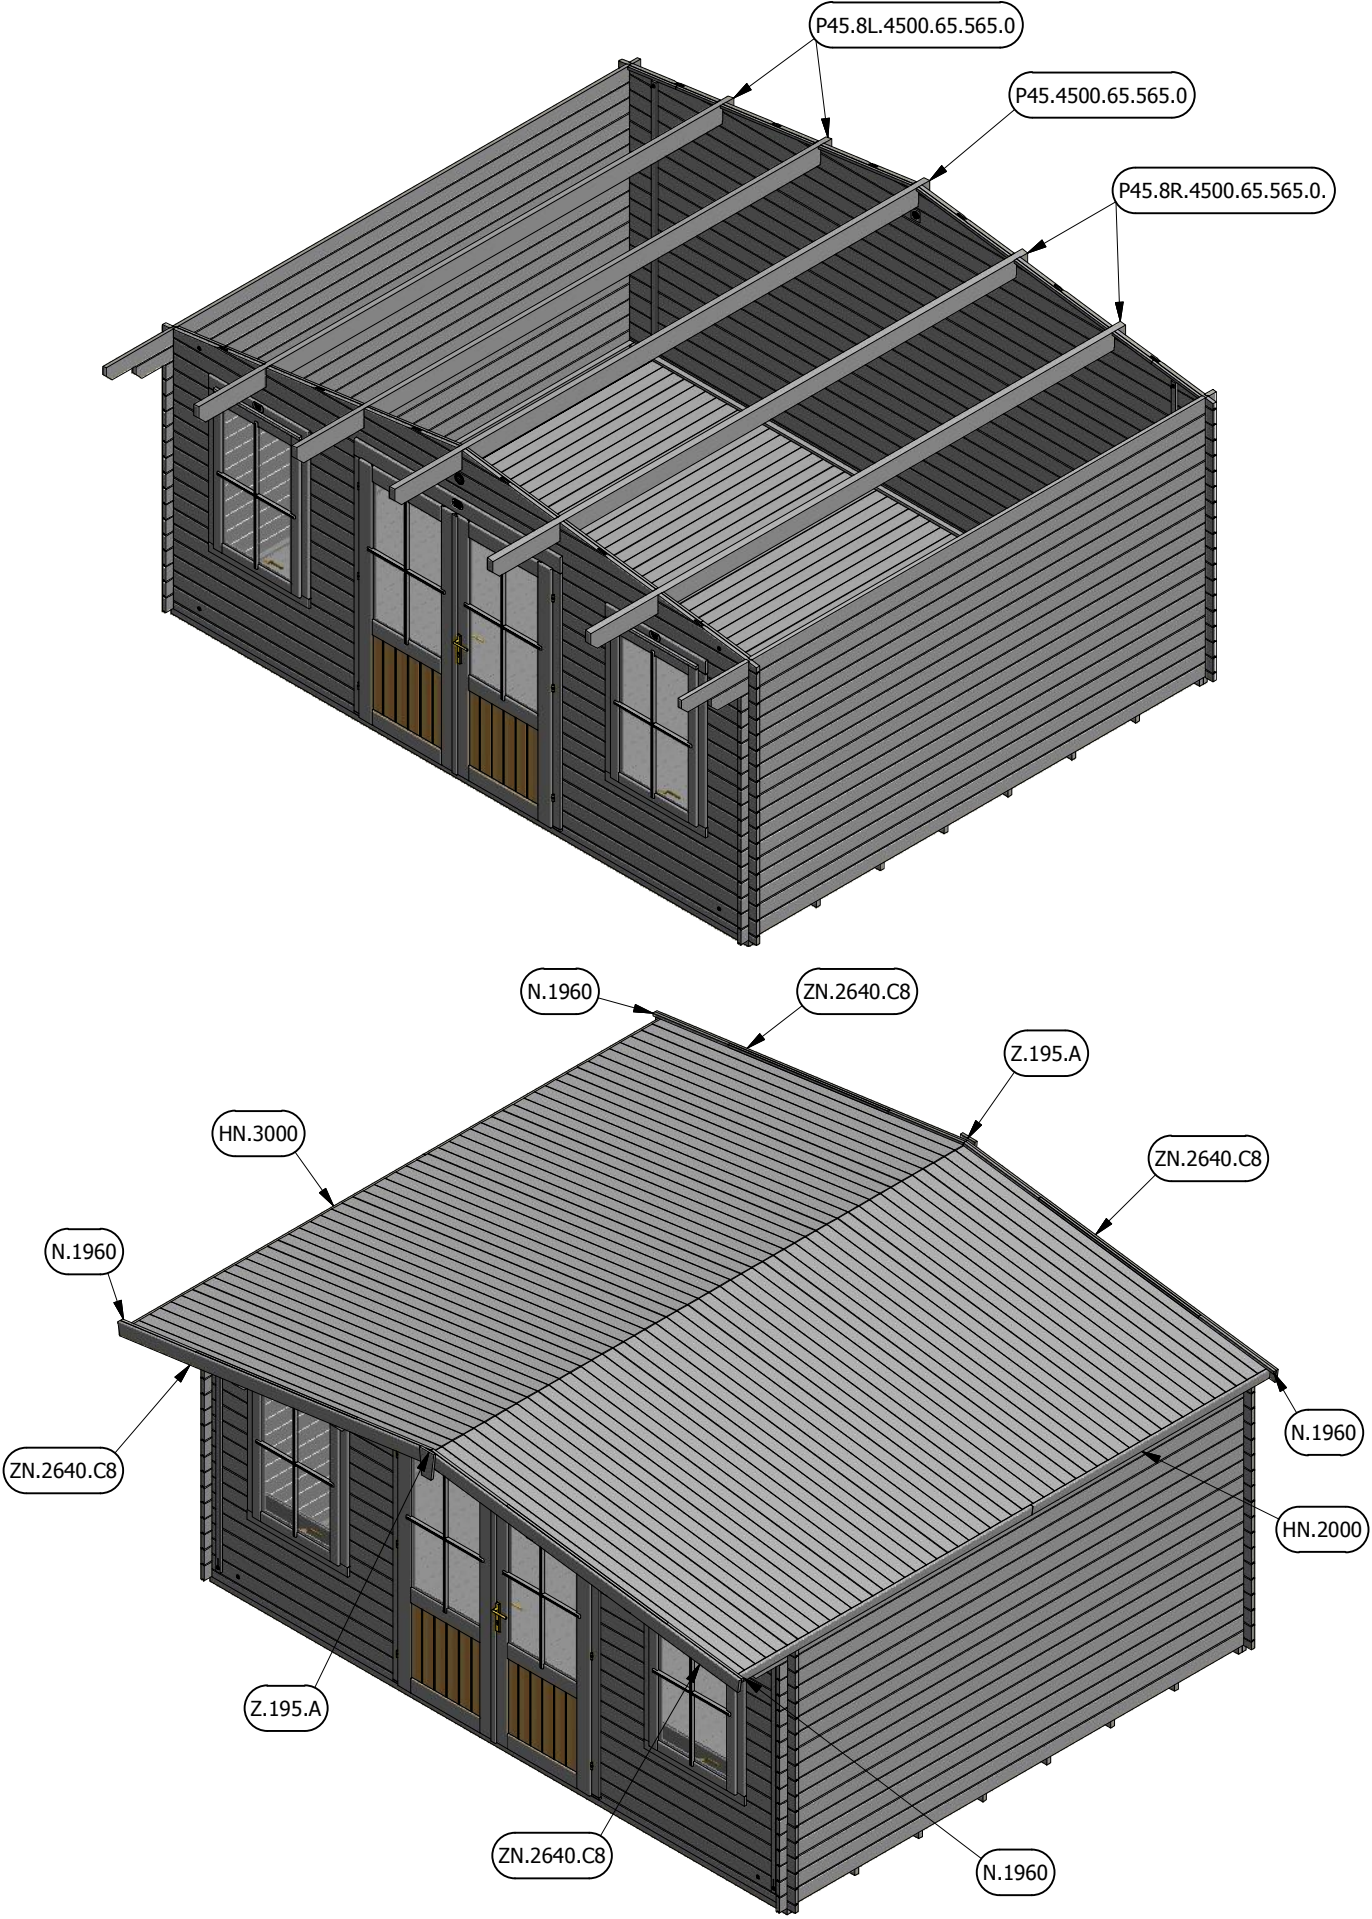

Roof Insulation Panel Layout for Premium Plus Severn 50 / 40

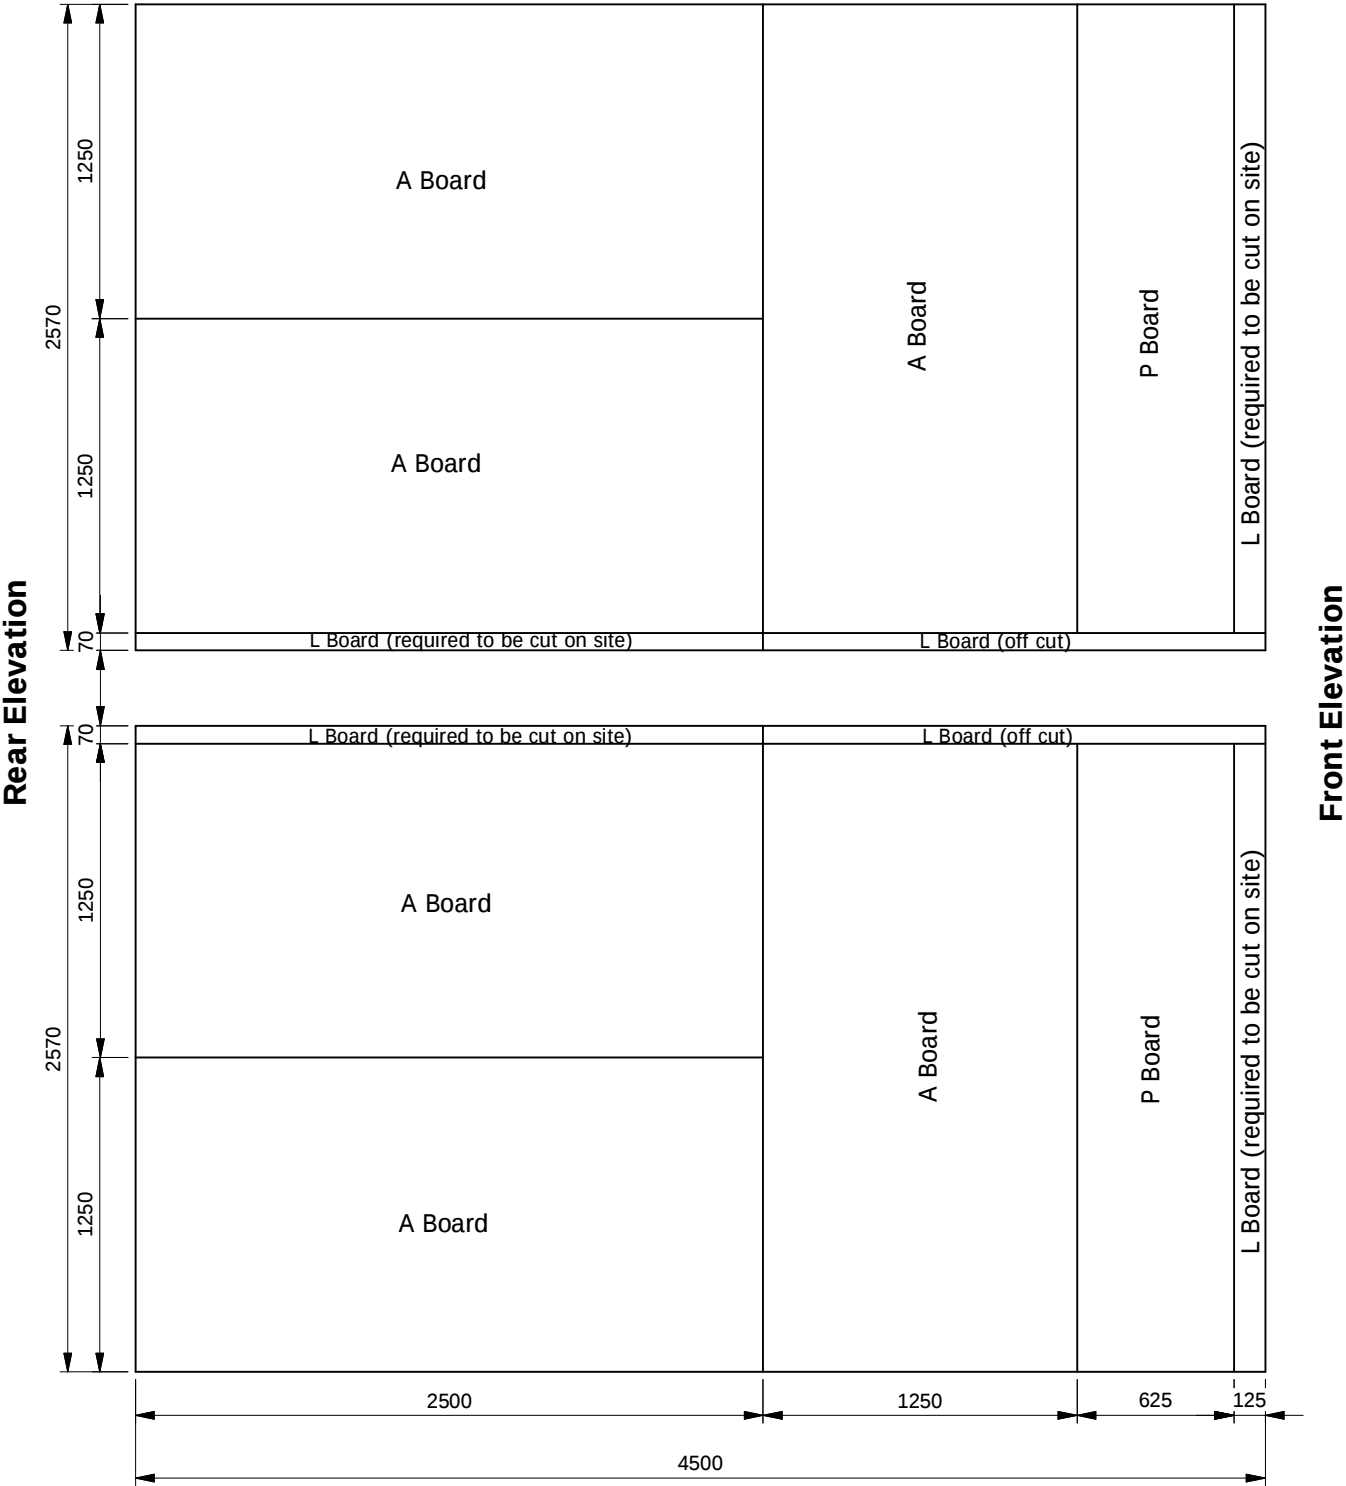

INSULATION BOARDS	
Description	Qty
Panel A (1250x2500mm)	6
Panel P (625x1250mm)	2
Panel L (155x1250mm)	4

SCREWS AND METAL BRACKETS	
Description	Qty
Diameter 3x50mm Screws for roof insulation	220
Diameter 3x20mm Screws for metal brackets	60
Metal brackets	14