
NORTH BAYOU


G200

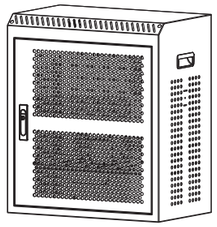

http://www.nbavmount.com E-mail:info@nbavmount.com

A	B	C	D	E	F	G	H	I
2X	2X	4X	4X	2X	4X	4X	1X	2X



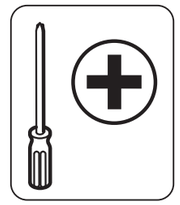


G200适应产品类型：
AV cabinet G200 can be added onto our following TV cart models and become mobile workstations.

- AVF1500-50-1P
- AVF1500-60-1P
- T70
- T52-2A
- AVF1800-70-1P
- CF100
- AVT1800-100-1P
- AVT1800–60–2A
- CA100

安装在单立柱上需 2 人
Install on single post needs 2 persons } AVF1500-50-1P, AVF1500-60-1P, T70, T52-2A


单立柱 Single post

Step 1

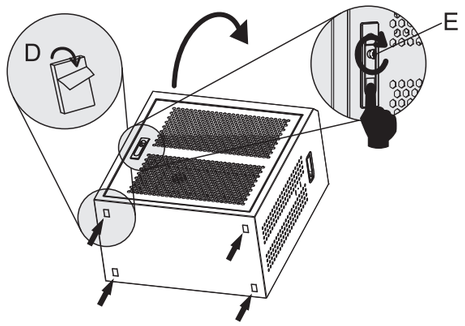


Step 2

Step 3

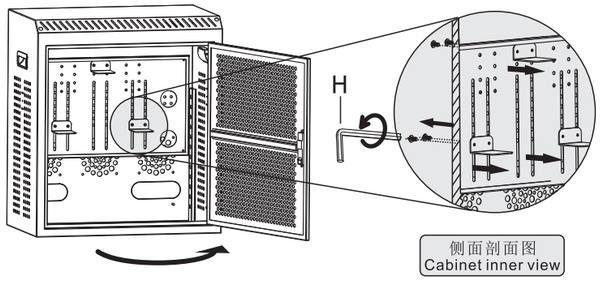


Step 4

Step 5

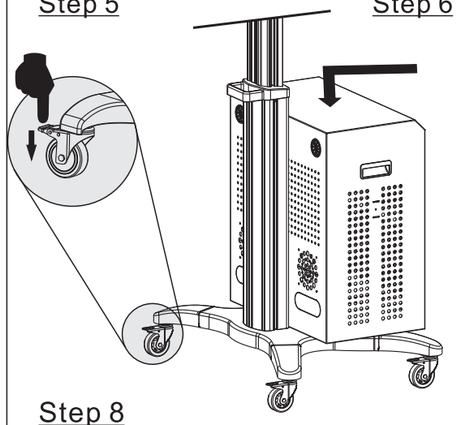


Step 6


Step 7

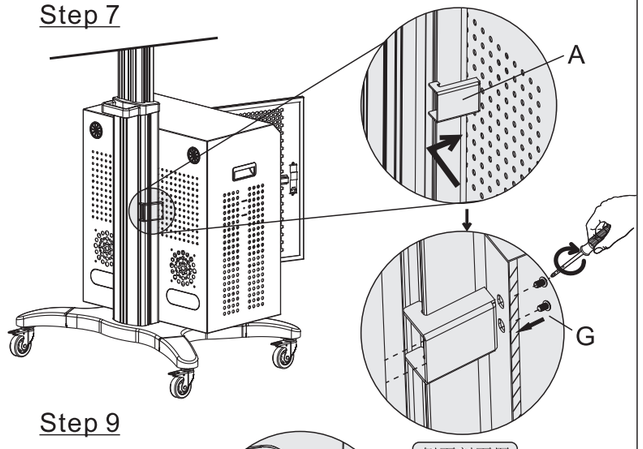

Step 8

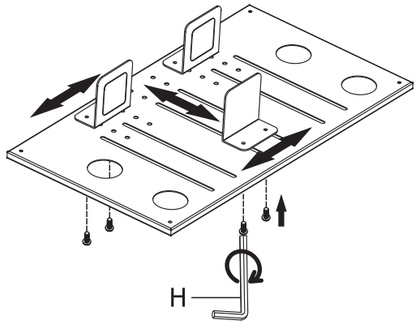


Step 9

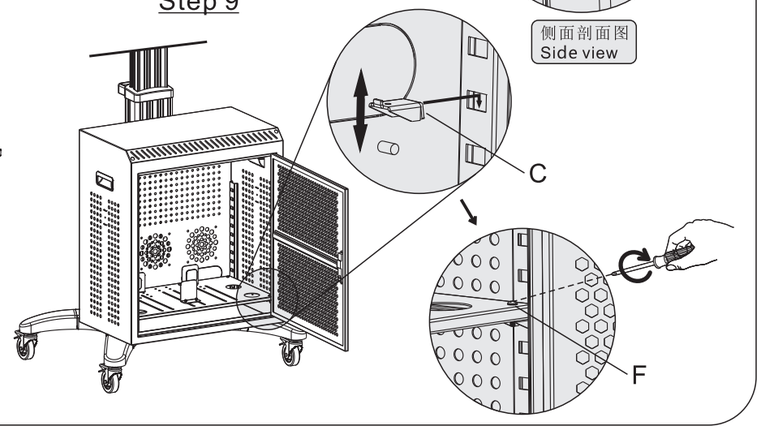

安装在双立柱上需 2 人
Install on dual posts needs 2 persons } AVF1800–70–1P


双立柱 Dual posts

Step 1

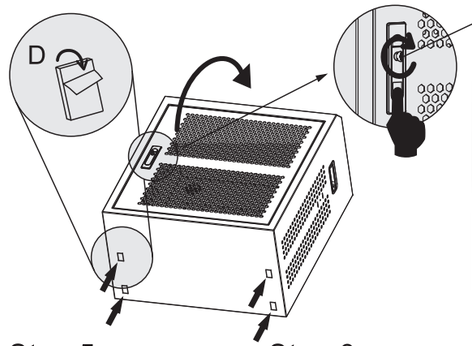

Step 2

Step 3

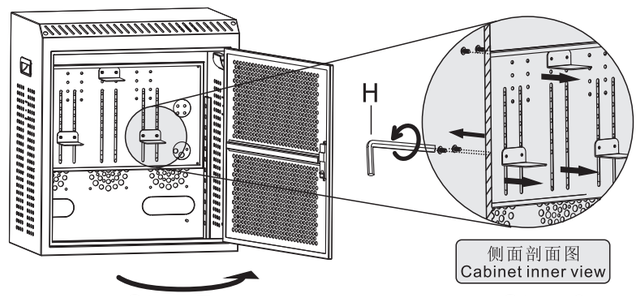


Step 4

Step 5


Step 6

Step 7


Step 8

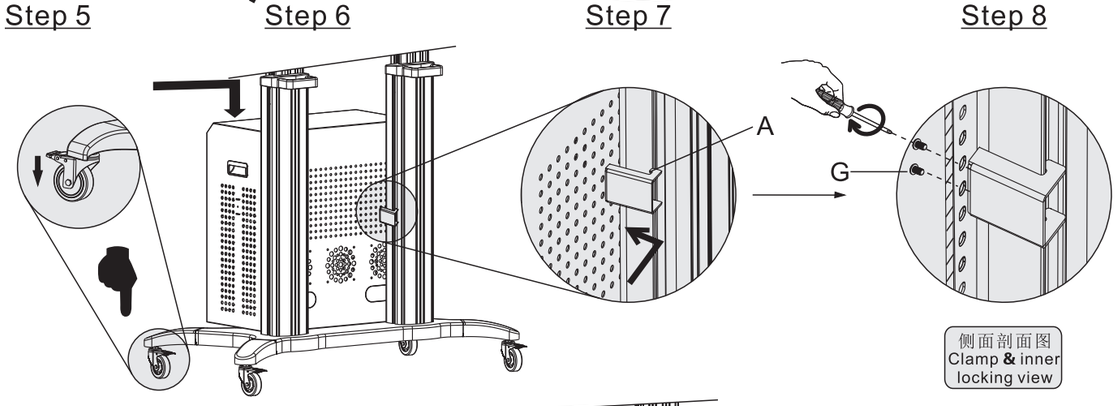

Step 9

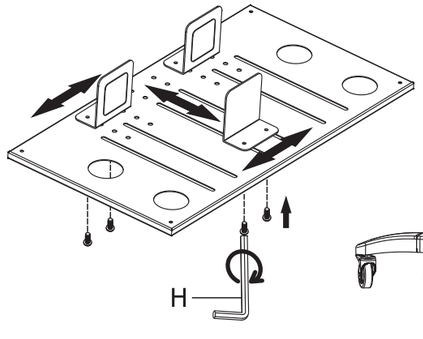


Step10

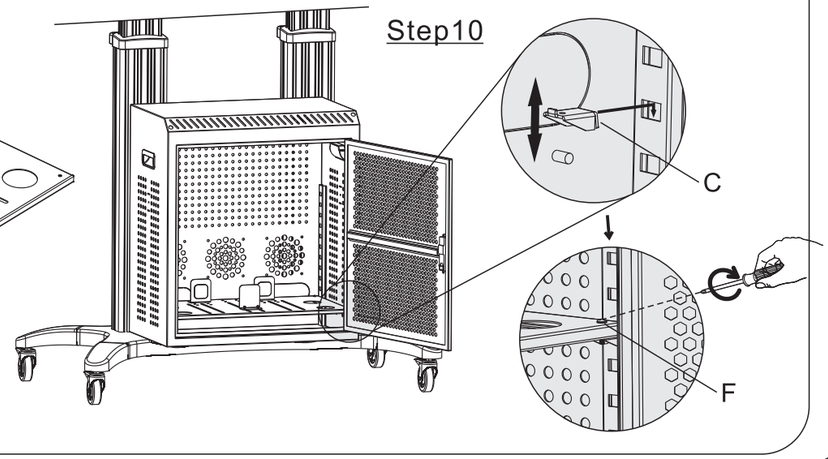

4001069401 A4 - G200

NORTH BAYOU


G200

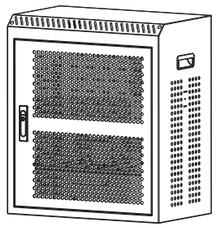

http://www.nbavmount.com E-mail:info@nbavmount.com

A	B	C	D	E	F	G	H	I
2X	2X	4X	4X	2X	4X	4X	1X	2X



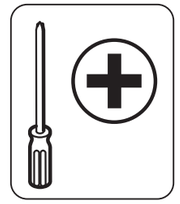


G200适应产品类型：
AV cabinet G200 can be added onto our following TV cart models and become mobile workstations.

AVF1500-50-1P
AVF1500-60-1P
T70
T52-2A
AVF1800-70-1P
CF100
AVT1800-100-1P
AVT1800–60–2A
CA100

安装在双立柱上需 2 人
Install on dual posts needs 2 persons } **CF100**


双立柱 Dual posts

Step 1

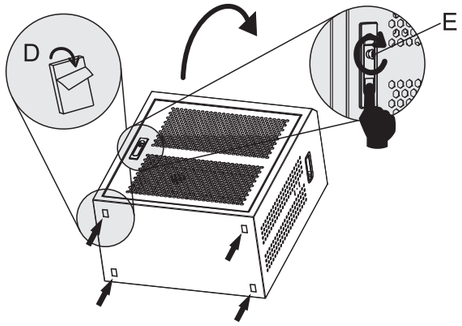


Step 2

Step 3

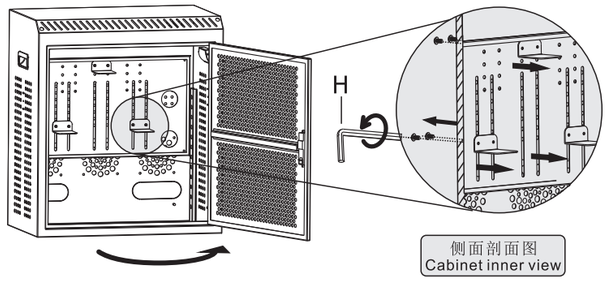


Step 4

Step 5

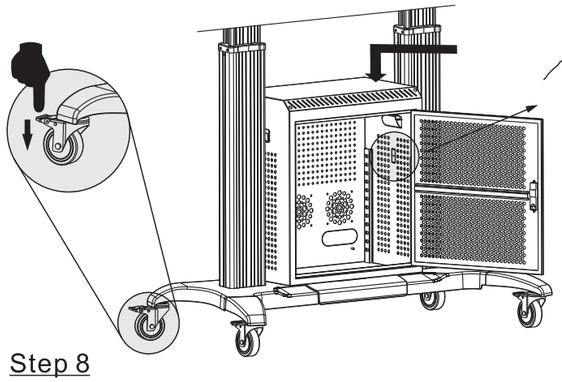


Step 6

Step 7

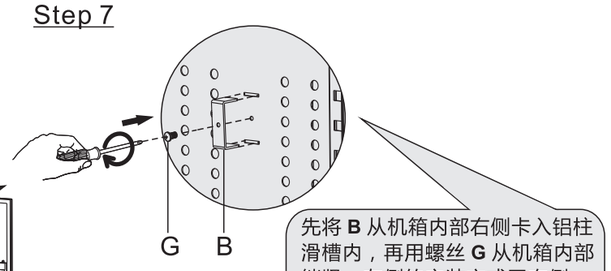


先将 **B** 从机箱内部右侧卡入铝柱滑槽内，再用螺丝 **G** 从机箱内部锁紧。左侧的安装方式同右侧。
Insert 2X lockblades '**B**' into left and right horizental slots, then put screw '**G**' through '**B**' center hole and tighten firmly.

Step 8

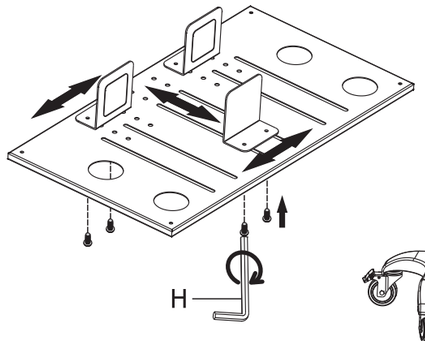


Step 9

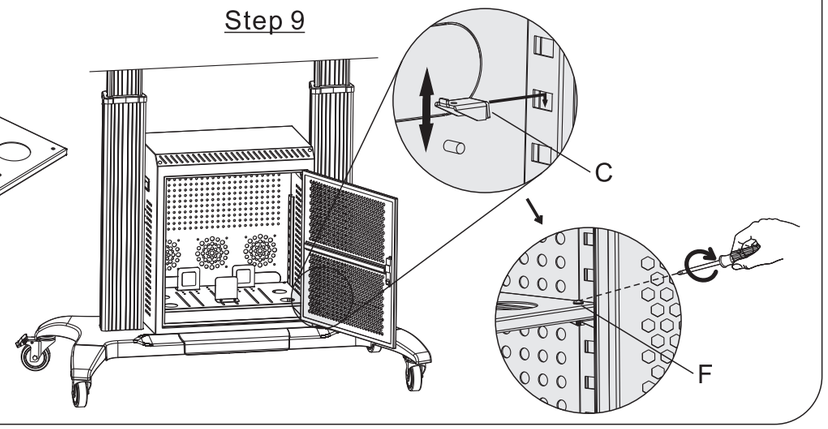

安装在双立柱上需 2 人
Install on dual posts needs 2 persons } **AVT1800-100-1P** **AVT1800–60–2A** **CA100**


双立柱 Dual posts

Step 1

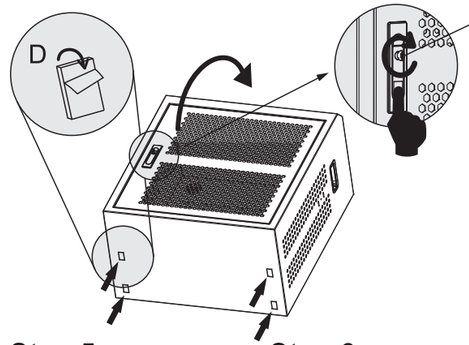


Step 2

Step 3

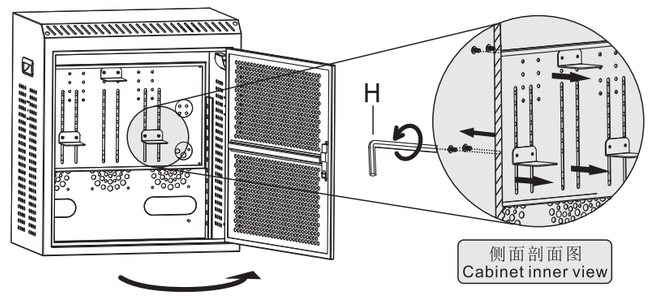


Step 4

Step 5

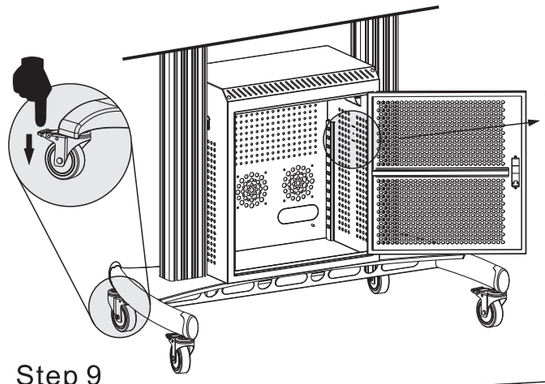

Step 6


Step 7

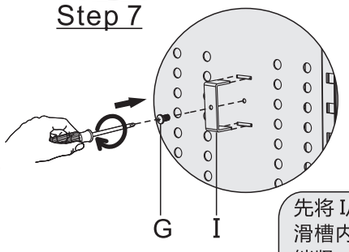


先将 I从机箱内部右侧卡入铝柱滑槽内，再用螺丝 G 从机箱内部锁紧。左侧的安装方式同右侧。
Insert 2X lockblades '**I**' into left and right horizental slots, then put screw '**G**' through '**I**' center hole and tighten firmly.

Step 8

Step 9

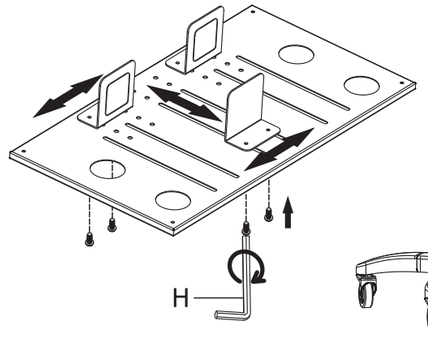

Step10

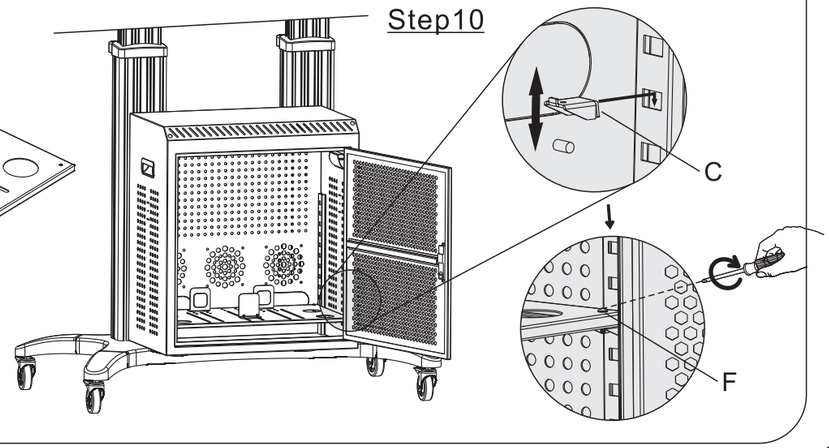

4001069401 A4 - G200