



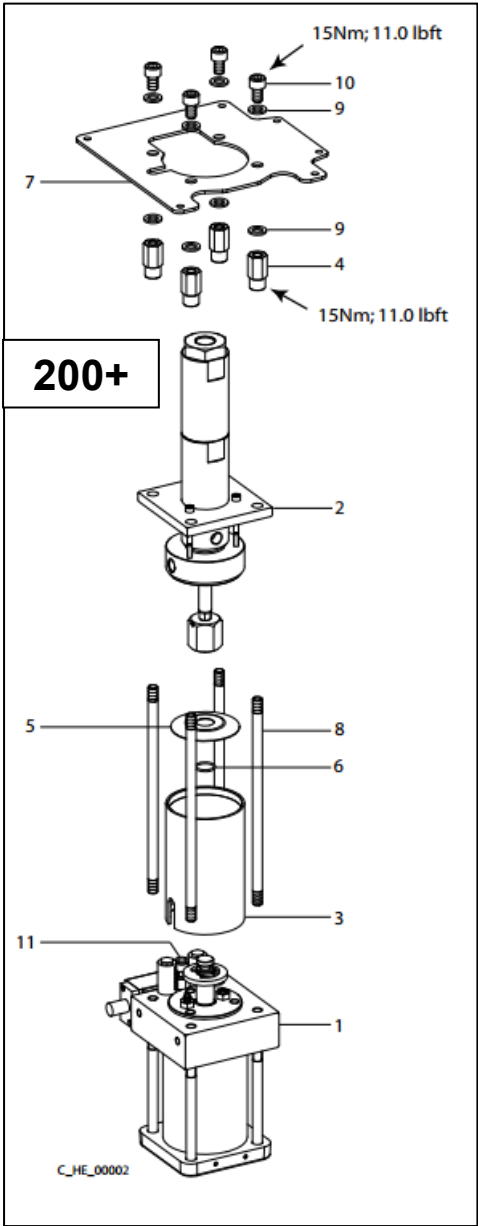


| Pump replacement parts list - Order no. U1540015HEA |    |     |             |                      |
|-----------------------------------------------------|----|-----|-------------|----------------------|
| Pos                                                 | K  | Stk | Order No.   | Designation          |
| 1                                                   |    | 1   | U3B08018060 | Air motor M80 EM     |
| 2                                                   |    | 2   | U2B015AI03  | Fluid section 15cc   |
| 3                                                   |    | 1   | A359.71C    | Motor pump spacer    |
| 4                                                   |    | 4   | K307.62B    | D 25 X 160 spacer    |
| 5                                                   | ★◆ | 1   | G7039.05    | Rod motor protection |
| 6                                                   | ★◆ | 1   | L118.06A    | O-ring EPDM          |
| 7                                                   |    | 1   | E0092.62A   | Pump mounting plate  |
| 8                                                   |    | 4   | H124.62     | Tie rod D10x231      |
| 9                                                   |    | 8   | 9920106     | Washer, A10.5        |
| 10                                                  |    | 4   | 3136398     | Socket screw M10x16  |
| 11                                                  |    | 1   | M294.00     | Fast fitting D 1/8x8 |

◆ = Wear part  
★ = Included in the fluid section service set

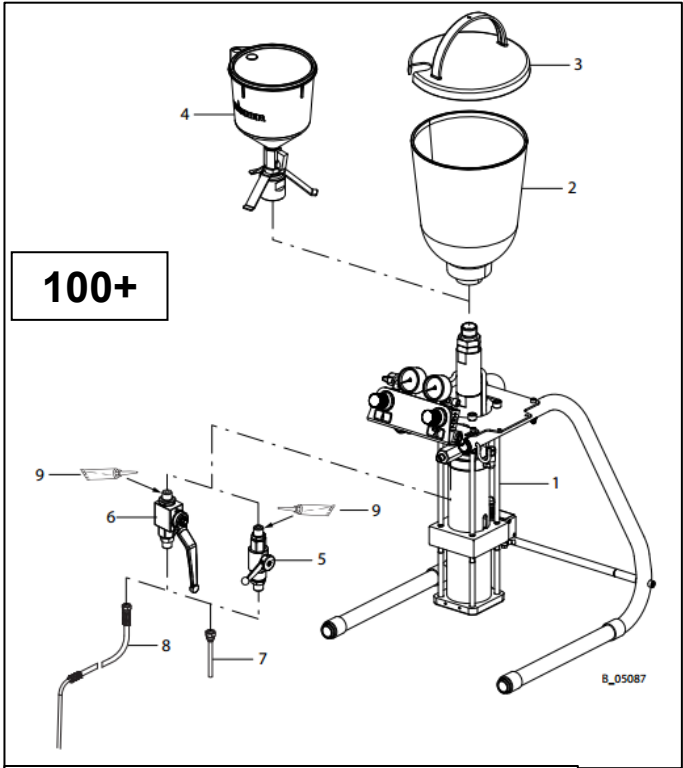



Accessories for EvoMotion 40-15 compact

| Pos | K | Order No.   | Designation                           |
|-----|---|-------------|---------------------------------------|
| 1   |   | U6S40015HEA | EM 40-15S HE pump, complete           |
| 2   |   | 340265      | 5 lt. hopper (included in the unit)   |
| 3   |   | 340429      | 5 lt. tank cover (included in device) |
| 4   |   | 2344741     | 2 lt. hopper (optional)               |
| 5   |   | 2334488     | Ball valve R1/4"-G1/4"-PN350-SSt      |
| 6   |   | 2334472     | Ball valve R1/4"-G1/4"-PN350-CS       |
| 7   |   | 2331752     | Return tube DN6-G1/4"-100mm-PA        |
| 8   |   | 2329046     | Return hose DN6-PN310-G1/4"-PA        |
| 9   |   | 9992831     | Loctite® 542                          |

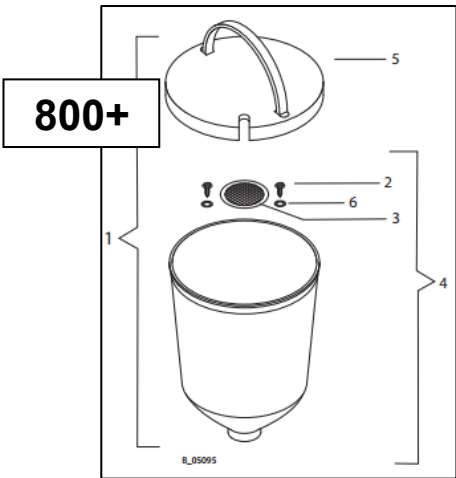

| Pos | K | Stk | Order No. | Designation                         |
|-----|---|-----|-----------|-------------------------------------|
| 1   | ◆ | 1   | 2344505   | Hopper set Ex, 5 L; 1.3 gal         |
| 2   |   | 2   | 9902313   | Cylinder self-tapping screw         |
| 3   | ◆ | 1   | 3756      | Filter disk, mesh 0.4 mm; 0.02 inch |
| 3a  | ◆ | 1   | 37607     | Filter disk, mesh 0.8 mm; 0.03 inch |
| 4   | ◆ | 1   | 340265    | Hopper Ex                           |
| 5   | ◆ | 1   | 340429    | Cover                               |
| 6   |   | 2   | 9920314   | Washer                              |

◆ = Wearing part

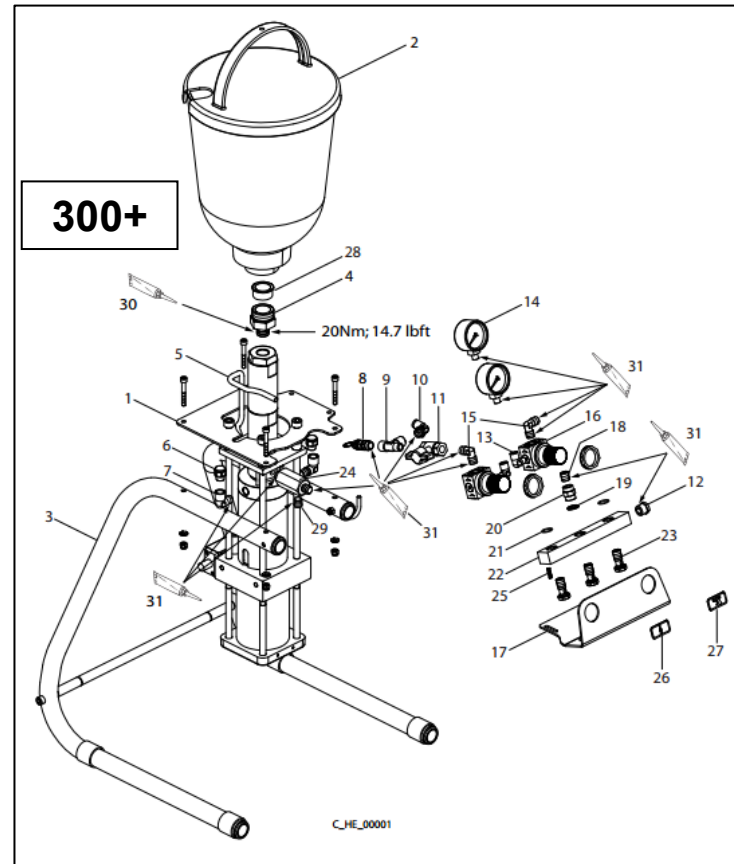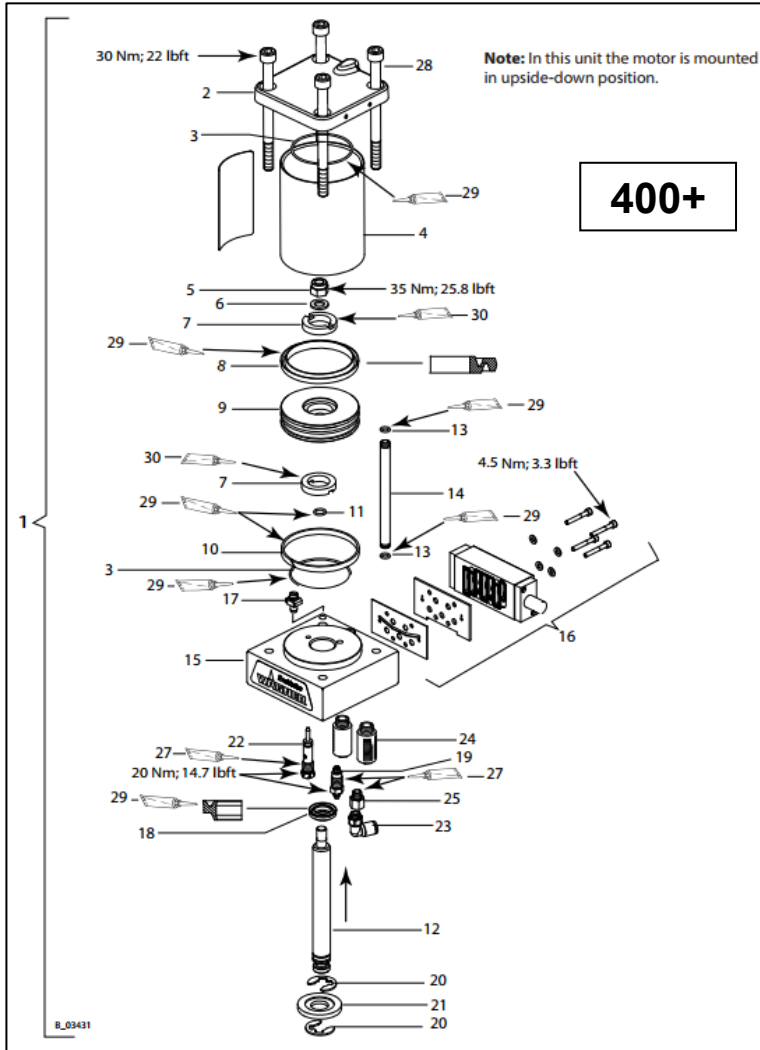

#### Air motor spare parts list EM M80

| Pos | K   | Stk | Order No.   | Designation                                                             |
|-----|-----|-----|-------------|-------------------------------------------------------------------------|
| 1   | 1   | 1   | U3B08018060 | Air motor EM M80                                                        |
| 2   | 1   | 1   | F132.91C    | Motor flange, upper, M50 EM                                             |
| 3   | ◆ ★ | 2   | L108.06     | O-ring                                                                  |
| 4   | 1   | 1   | D608.81     | Cylinder motor                                                          |
| 5   | 1   | 1   | 3055157     | Hexagon nut with clamp                                                  |
| 6   | 1   | 1   | 9920106     | Washer                                                                  |
| 7   | ◆ ★ | 2   | G903.06     | Steamer                                                                 |
| 8   | ◆ ★ | 1   | L413.06     | Gasket DE 80                                                            |
| 9   | 1   | 1   | A164.01     | Motor piston                                                            |
| 10  | ◆ ★ | 1   | L802.08     | Sliding ring                                                            |
| 11  | ◆ ★ | 1   | L110.06     | O-ring                                                                  |
| 12  | 1   | 1   | D404.12     | Piston rod, M80 EM                                                      |
| 13  | ◆ ★ | 2   | L109.06     | O-ring                                                                  |
| 14  | 1   | 1   | A408.12     | Air tube, M80 EM                                                        |
| 15  | 1   | 1   | T616.00C    | Motor flange, complete M80 EM, at bottom                                |
| 16  | ◆   | 1   | P498.00KNE  | Reversing valve ISO N/1 (for replacement part list, see Chapter 14.4.1) |
| 17  | 1   | 1   | 367258      | Grounding, complete                                                     |
| 18  | ◆ ★ | 1   | L403.06     | Rod seal                                                                |
| 19  | ◆ ★ | 1   | T703.00     | Sensor below, M80                                                       |
| 20  | 2   | 2   | K606.02     | Lock washer for shaft                                                   |
| 21  | 1   | 1   | A160.01A    | Washer                                                                  |
| 22  | ◆ ★ | 1   | 369290      | Pilot valve                                                             |
| 23  | 1   | 1   | 9992757     | Screw in angle                                                          |
| 24  | ◆   | 2   | H505.07     | Silencer                                                                |
| 25  | 1   | 1   | M432.00     | Reducing nipple                                                         |



◆ = Wearing part

★ = Included in service set


● = Not part of the standard equipment but available as an accessory.

#### Spraypack replacement parts list - Order no. U6S40015HEA

| Pos | K | Stk | Order No.   | Designation                     |
|-----|---|-----|-------------|---------------------------------|
| 1   | 1 | 1   | U1S40015HEA | EM 40-15S HE pump               |
| 2   | 1 | 1   | 340265      | 5 lt. tank                      |
| 3   | 1 | 1   | T6196.00A   | Frame, complete                 |
| 4   | 1 | 1   | B0558.03    | Nipple                          |
| 5   | 1 | 1   | S437.07     | Hose D.8 x 600                  |
| 6   | 2 | 2   | H509.07     | Silencer                        |
| 7   | 2 | 2   | M213.04     | Fitting 1/4"                    |
| 8   | 1 | 1   | P484.00C1   | Safety valve 1/4"               |
| 9   | 1 | 1   | M218.04     | Fitting 1/4"                    |
| 10  | 1 | 1   | M336.00     | Quick swivel fitting 1/4x8      |
| 11  | 1 | 1   | M106.00     | Ball valve 1/4"                 |
| 12  | 1 | 1   | M250.00     | Reduction 3/8"-1/4"             |
| 13  | 2 | 2   | M214.04     | Fitting 1/8"                    |
| 14  | 2 | 2   | G936.00     | Pressure gauge                  |
| 15  | 2 | 2   | M215.04     | Fitting 1/4"                    |
| 16  | 2 | 2   | G123.00     | Air pressure release valve 1/4" |
| 17  | 1 | 1   | E3385.62A   | Air regulators bracket          |
| 18  | 1 | 1   | M623.12     | Cap 1/4"                        |
| 19  | 1 | 1   | M404.00G    | Gasket                          |
| 20  | 1 | 1   | M279.00     | Socket 1/4"                     |
| 21  | 2 | 2   | L212.06     | O-ring NBR                      |
| 22  | 1 | 1   | T139.01     | Air pressure reducer manifold   |
| 23  | 3 | 3   | M404.00     | Banjo screw 1/4"                |
| 24  | 1 | 1   | B0461.03A   | Fitting R1/4" - NPSM 1/4"       |
| 25  | 1 | 1   | H261.03     | Contact spring                  |
| 26  | 1 | 1   | --          | Paint pump pressure label       |
| 27  | 1 | 1   | --          | Atomizing air pressure label    |
| 28  | 1 | 1   | 2329898     | Sealing sleeve                  |
| 29  | 1 | 1   | M826.03A    | Plugs R1/4"                     |
| 30  | 1 | 1   | 3201587     | Loctite® 577                    |
| 31  | 1 | 1   | 9992831     | Loctite® 542                    |

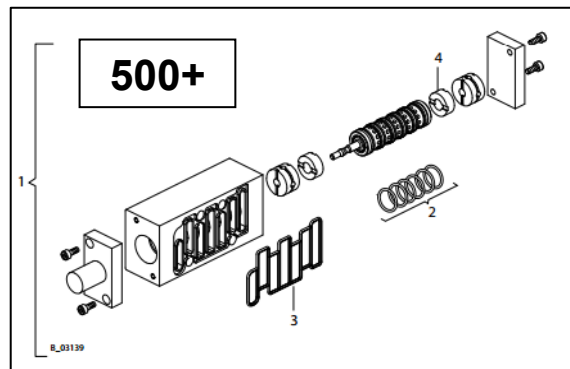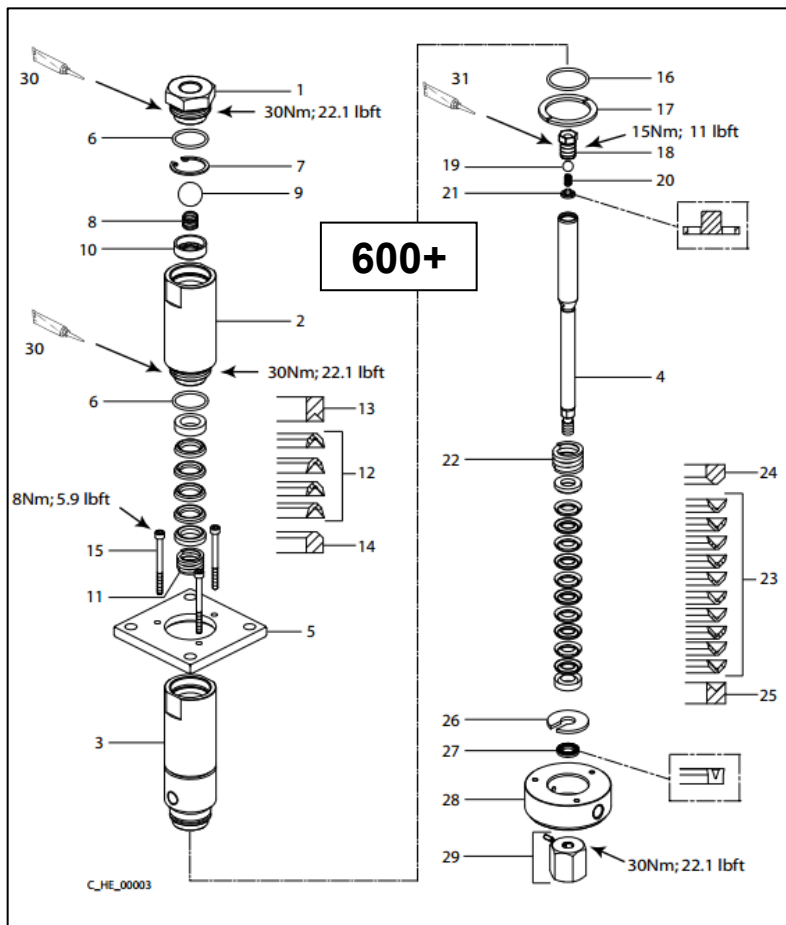

| Pos | K | Stk | Order No. | Designation            |
|-----|---|-----|-----------|------------------------|
| 1   | 1 | 1   | G498.00   | Reversing valve        |
| 2   | 6 | 6   | 9971123   | O-ring                 |
| 3   | 1 | 1   | G521.00   | Reversing valve gasket |
| 4   | 2 | 2   | G520.00   | Steamer                |

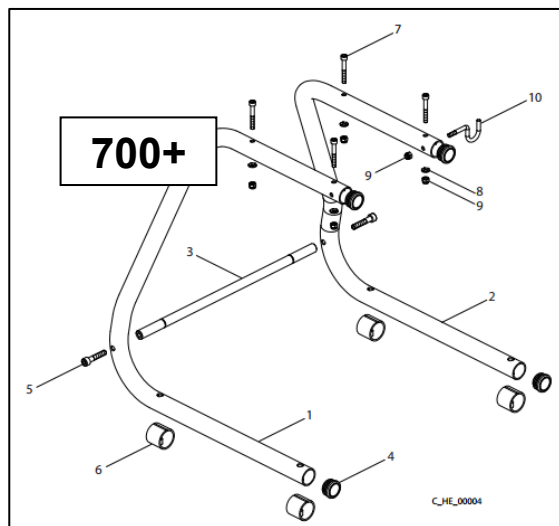

Replacement part list for fluid section 15 – Order No. U2B015AI03

| Pos | K   | Stk | Order No.  | Designation                  |
|-----|-----|-----|------------|------------------------------|
| 1   | ◆   | 1   | A660.03    | Pump foot                    |
| 2   |     | 1   | B534.03    | Cylinder 15                  |
| 3   |     | 1   | A658.03A   | Tube 15                      |
| 4   | ◆   | 1   | D201.53C   | Piston SSt 15                |
| 5   |     | 1   | B0555.62   | Flange                       |
| 6   | ◆ ★ | 2   | L107.06    | O-ring EPDM                  |
| 7   | ◆   | 1   | K609.03    | Ring                         |
| 8   |     | 1   | H232.03    | Valve spring                 |
| 9   | ◆   | 1   | K803.03    | Ball                         |
| 10  |     | 1   | B0553.03A  | Suction spring guide         |
| 11  |     | 1   | H203.03    | Spring                       |
| 12  | ◆ ★ | 1   | T9038.00E  | Package                      |
| 13  |     | 1   | A410.03    | Female thrust bearing        |
| 14  |     | 1   | A411.03    | Thrust bearing/exterior part |
| 15  |     | 3   | K126.62    | Socket screw M5x70           |
| 16  | ◆ ★ | 1   | L170.06    | O-ring EPDM                  |
| 17  |     | 1   | B0554.62   | Stop ring                    |
| 18  | ◆   | 1   | A169.03    | Rod valve body               |
| 19  | ◆   | 1   | K801.03    | Ball                         |
| 20  |     | 1   | H288.03    | Contact spring               |
| 21  |     | 1   | B0552.03   | Delivery spring guide        |
| 22  |     | 1   | H204.03    | Spring                       |
| 23  | ◆ ★ | 1   | T9037.00HE | Package                      |
| 24  |     | 1   | A172.03    | Thrust bearing/exterior part |
| 25  |     | 1   | A171.03    | Female thrust bearing        |
| 26  |     | 1   | B0557.03   | Rod seal washer              |
| 27  | ◆ ★ | 1   | L487.08    | Rod seal                     |
| 28  |     | 1   | B0556.03   | Flange                       |
| 29  |     | 1   | T6158.00   | Connector                    |
| 30  |     | 1   | 9992609    | Anti-seize paste             |
| 31  |     | 1   | 9992831    | Loctite® 542                 |
|     | ●   | 1   | T9039.00HE | Service set                  |

◆ = Wearing part

★ = Included in service set

● = Not part of the standard equipment but available as an accessory.

Complete replacement part list for frame – Order No. T6196.00A

| Pos | K | Stk | Designation                          | Order No. |
|-----|---|-----|--------------------------------------|-----------|
| 1   | 1 | 1   | Frame, left                          | E3107.92C |
| 2   | 1 | 1   | Frame, right                         | E3107.92B |
| 3   | 1 | 1   | Rod                                  | H1156.62  |
| 4   | 4 | 4   | Plug                                 | R204.07   |
| 5   | 2 | 2   | Hexagon socket head cap screw, M8x40 | 9900309   |
| 6   | 4 | 4   | Plastic support                      | R244.07   |
| 7   | 4 | 4   | Hexagon socket head cap screw, M6x45 | 9900389   |
| 8   | 4 | 4   | Contact washer, M08                  | 3155404   |
| 9   | 5 | 5   | Self-locking hexagon nut, M6         | 9910204   |
| 10  | 1 | 1   | Gun hook                             | H009.62   |